


Version 1.1

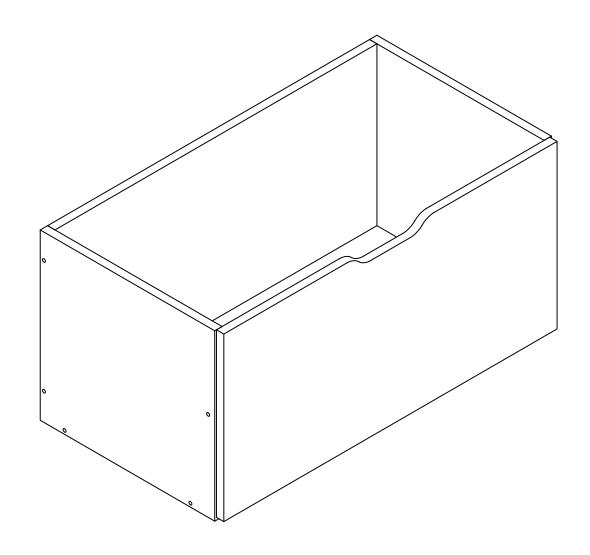



Enjoy

Your purchase from Australia's Best Value Furniture Store




Assembly checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

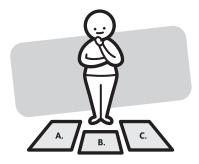

Identify and lay out all of the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


What you need

to assemble the product

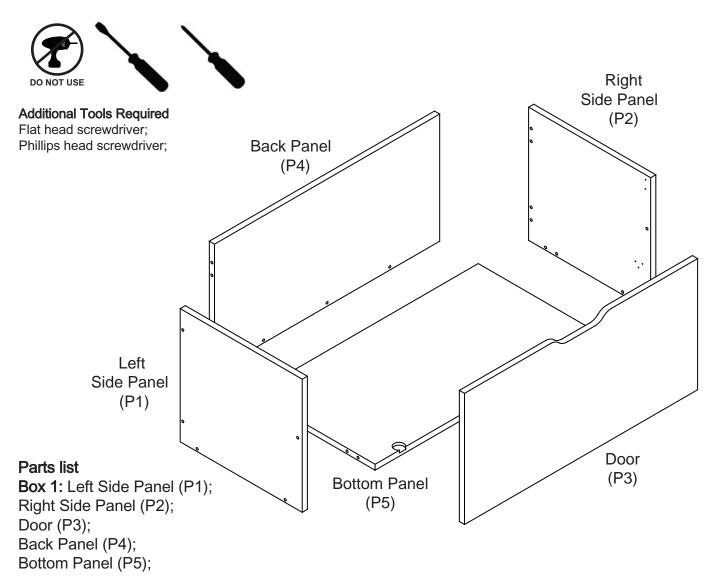


Hardware Pack

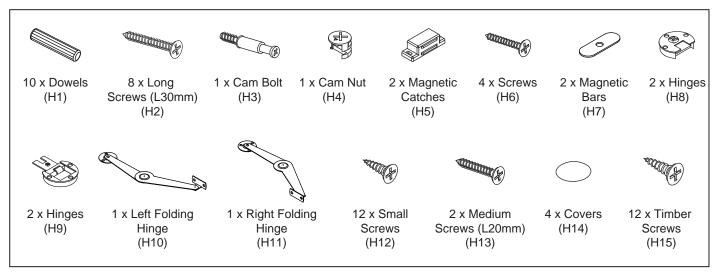

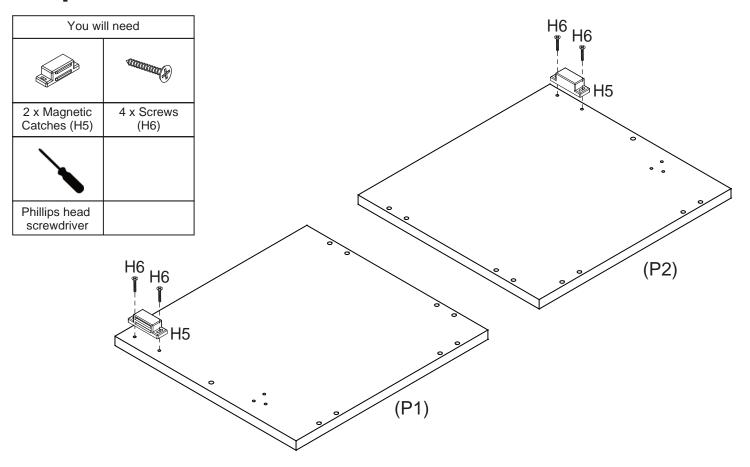


Attach 2 x Magnetic Catches (H5) to Side Panels (P1, P2) with 4 x Screws (H6) as shown.


Step 2

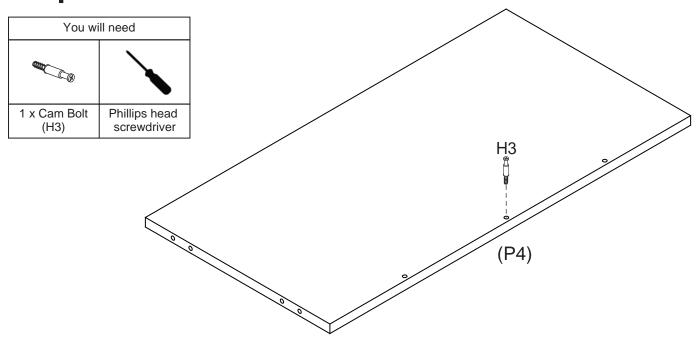





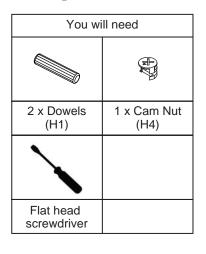


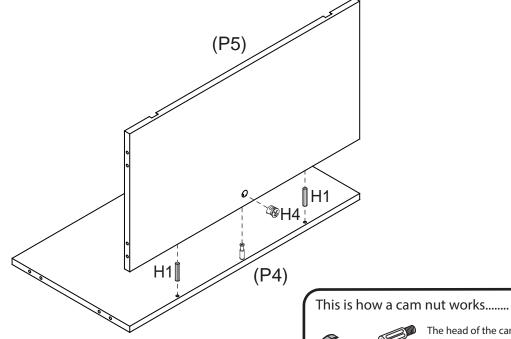

Insert 2 x Dowels (H1) into the holes of Back Panel (P4). Insert 1 x Cam Nut (H4) into the hole of Bottom Panel (P5).

Rotate the cam nut so the arrow point towards the incoming cam bolt.

Attach Bottom Panel (P5) to Back Panel (P4), then tighten the cam nut using a Flat head screwdriver.

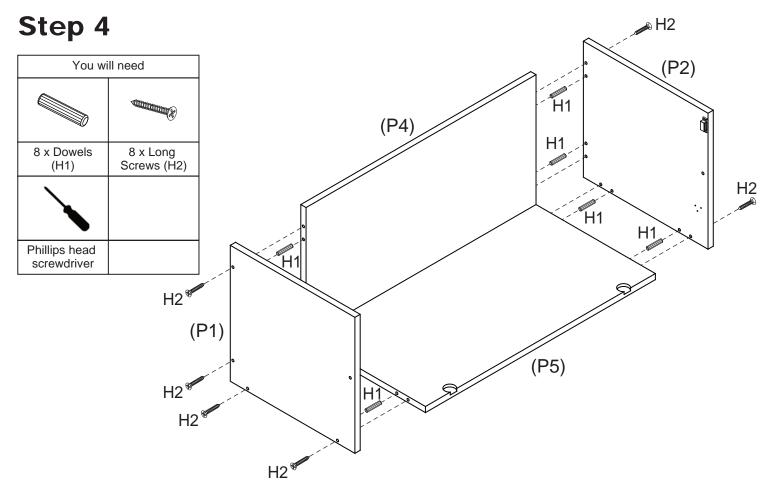


Insert 8 x Dowels (H1) into the holes of Back Panel (P4) and Bottom Panel (P5). Attach Side Panels (P1, P2) to Back Panel (P4) and Bottom Panel (P5) with 8 x Long Screws (H2) using a Phillips head screwdriver.




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over

the bolt.

www.fantasticfurniture.com.au

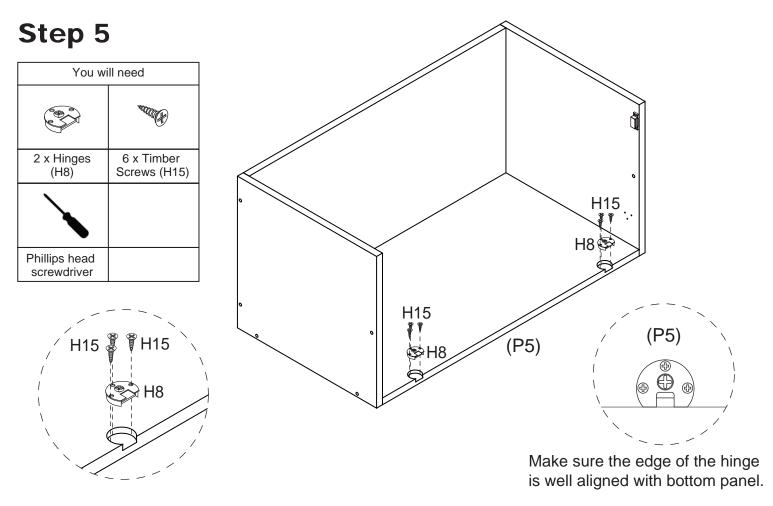


Attach 2 x Hinges (H8) to Bottom Panel (P5) with 6 x Timber Screws (H15). Tighten the screws with a Phillips head screwdriver.

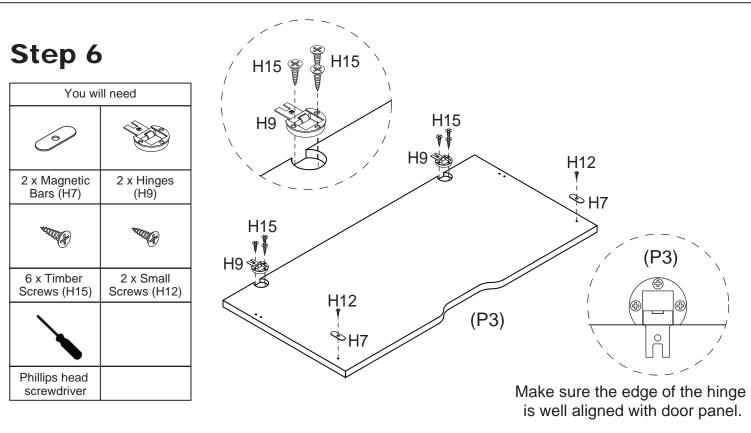


Attach 2 x Magnetic Bars (H7) to Door (P3) with 2 x Small Screws (H12). Attach 2 x Hinges (H9) to Door (P3) with 6 x Timber Screws (H15). Tighten the screws with a Phillips head screwdriver.



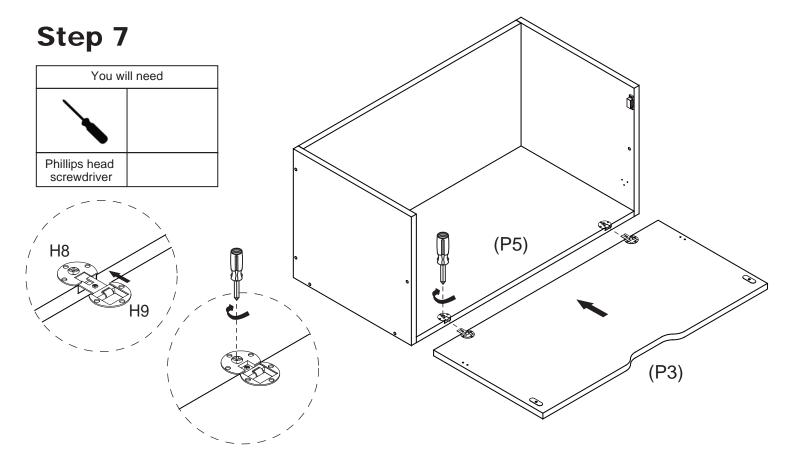


Attach Hinges (H9) to Hinges (H8), if they can't connect, loosen the screw indicated a little. Tighten the screws to connect the hinges on Door (P3) and Bottom Panel (P5).

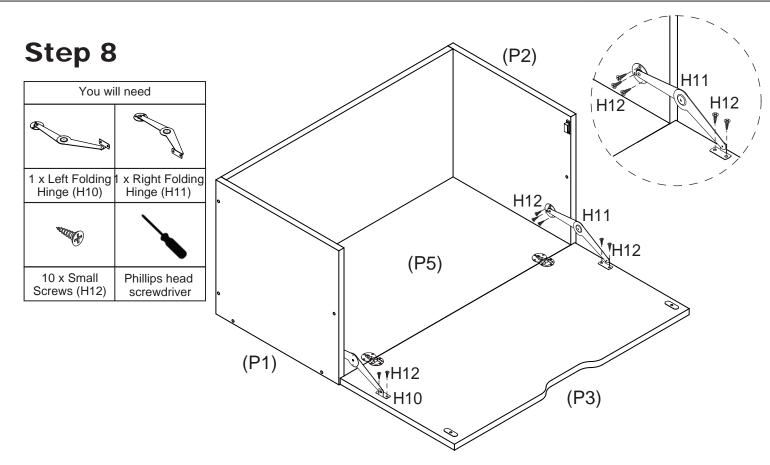

Attach 1 x Left Folding Hinge (H10) and 1 x Right Folding Hinge (H11) to Side Panels (P1, P2) with 6 x Small Screws (H12).


Then attach the Left Folding Hinge and the Right Folding Hinge to Door (P3) with 4 x Small Screws (H12).



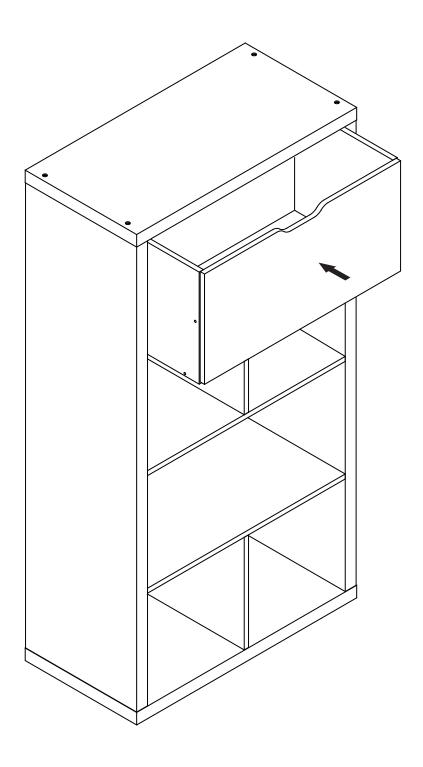

Put the insert cabinet into the bookcase, make sure the door of insert cabinet is flush with the edge of shelf.



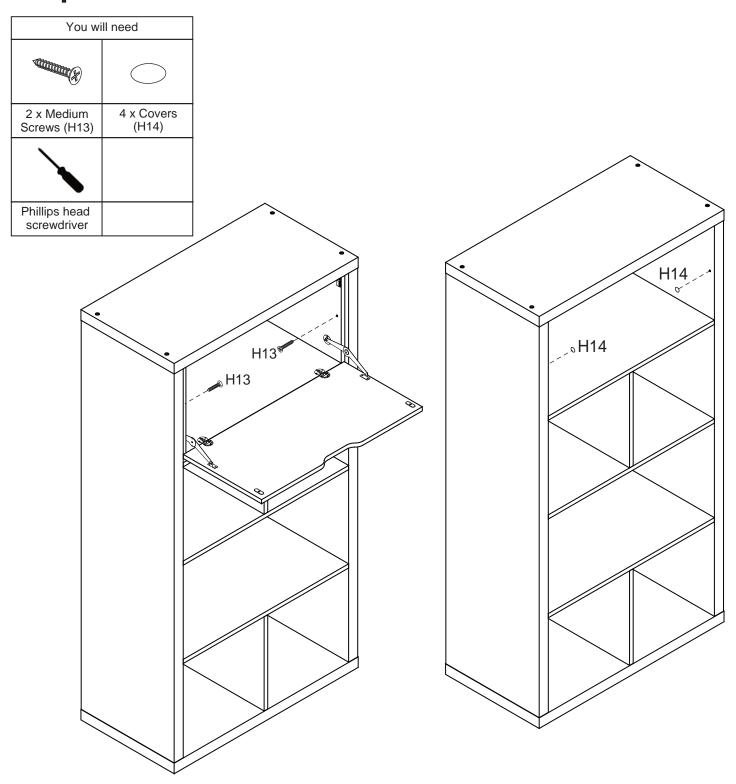

Open the door carefully.

Attach the cabinet to the bookcase with 2 x Medium Screws (H13) using a Phillips head screwdriver. If you'd like to adjust the insert cabinet or remove it, please seal the holes with the Covers (H14).

Recommended weight capacity: 5KG.


Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.




TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

STEP 1 Open the door

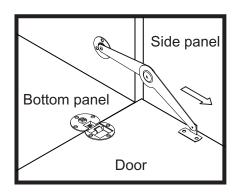


STEP 1
Adjust the door move in or out a little

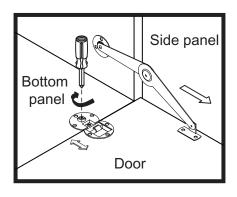


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & Step 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

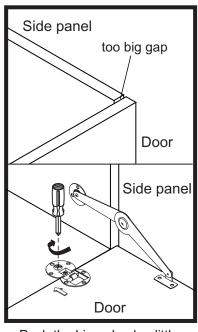


Push the hinge back a little.

STEP 2b MOVE DOOR OUT

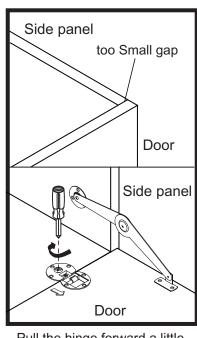


Pull the hinge forward a little.

STEP 3
Adjust the door move up or down a little

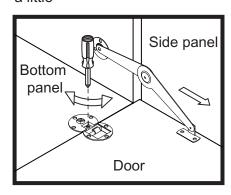


Loosen or tighten the screw indicated a little to adjust the door move up or down a little (see step 3a & Step 3b)

STEP 3a MOVE DOOR UP

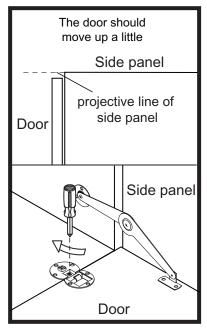

Turn the screw clockwise a little as shown to move door up.

STEP 3b MOVE DOOR DOWN

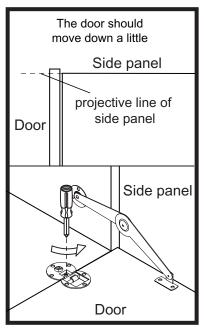

Turn the screw counterclockwise a little as shown to move door down.



PAGE 11