


Version 1.0

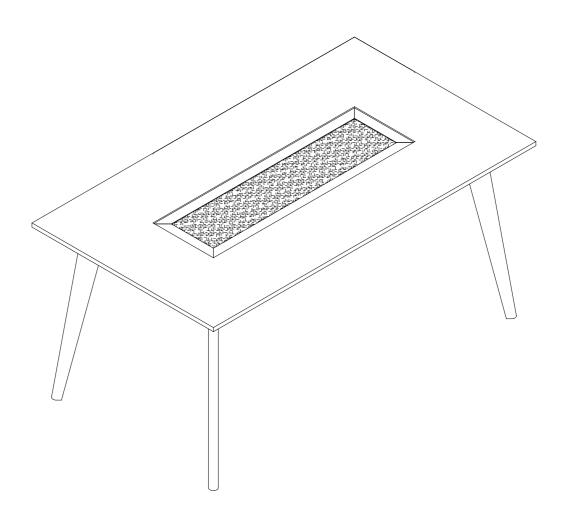





fantasticfurniture.com.au



Glass should always be handled with care.

Scratches, chips, sudden changes in temperature and hairline fractures may cause glass to break. This glass is designed to break into small, relatively harmless pieces and not sharp fragments.

Avoid placing hot or cold items directly onto the table unless using a thick insulation material such as placemats or coasters.

Avoid dropping objects onto the glass. Do not allow hard or pointed objects to come into contact with the glass. Never use the top area as a chopping surface. Do not sit or stand on the glass surface.

Rattan

Rattan is a natural material that will respond to humidity in the environment. Low humidity may cause the rattan to shrink. High humidity may cause the rattan to absorb moisture and expand, causing the weaving to look loose and wavy.

This is a natural phenomenon and not a defect.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly Checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




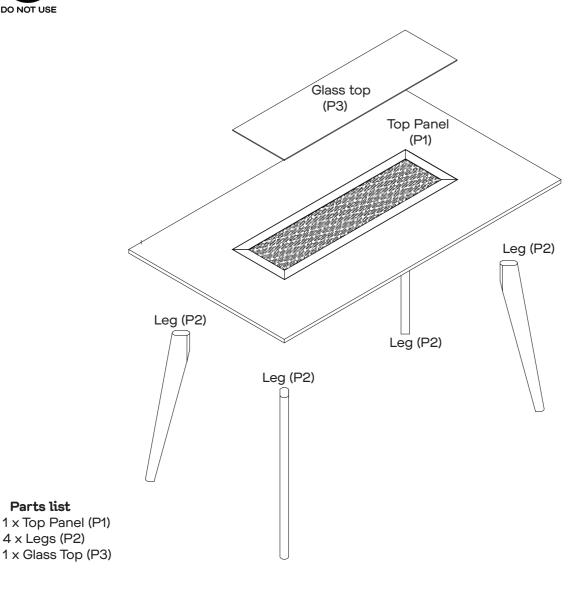


Hardware pack

Parts list



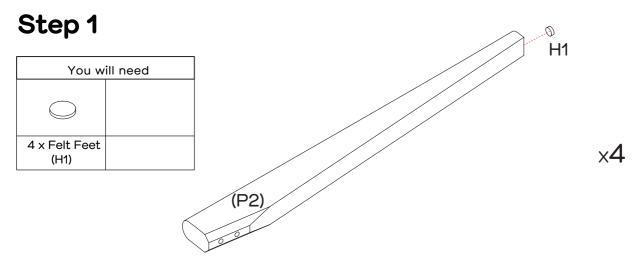


Attach 1 x felt foot (H1) onto each leg (P2) as shown.

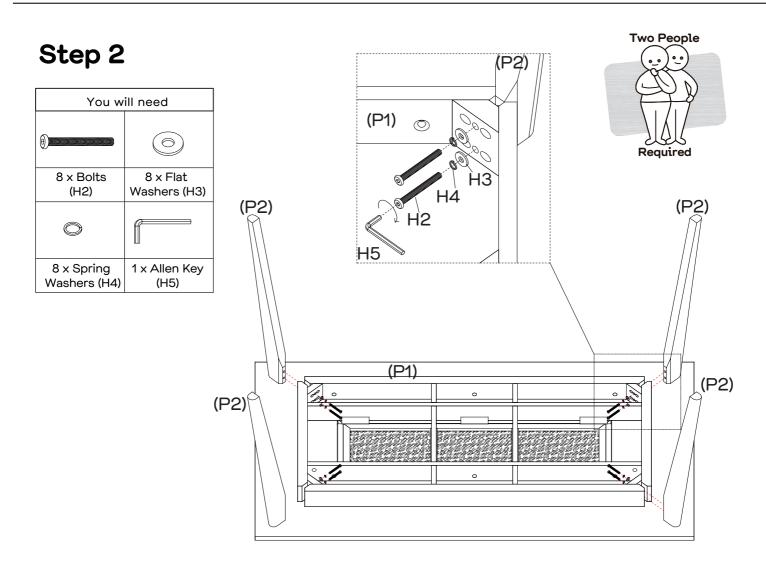

Attach 1 x leg (P2) onto top panel (P1), using 2 x bolts (H2), 2 x spring washers (H4) and 2 x flat washers (H3). Tighten the bolts with allen key (H5). Repeat this step for the other 3×10^{12} key (P2).


With assistance, carefully turn the table over.



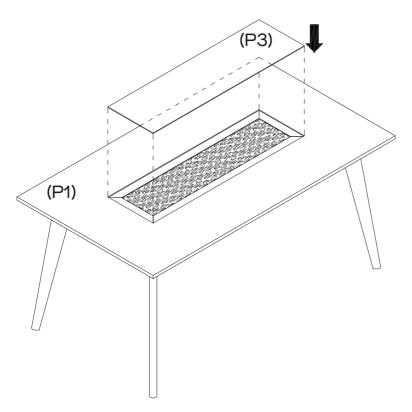

Position glass top (P3) onto rattan frame as shown.


Step 4

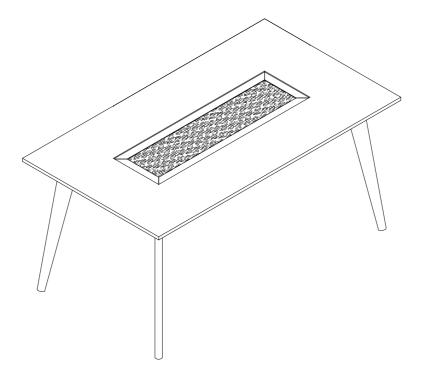

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.



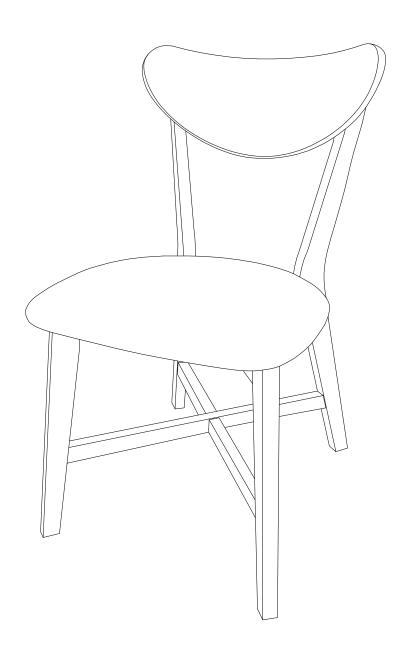

ELKE

CHAIR 1 STR WHITE

fantasticfurniture.com.au

CAUTION:

Do not stand on, or use this product as a step ladder.
Use this product for seating one person at a time.
This product should be checked periodically to ensure all components are secure and all hardware is tight.

RECOMMENDED WEIGHT CAPACITY 120 KG

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Assembly checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




What you need

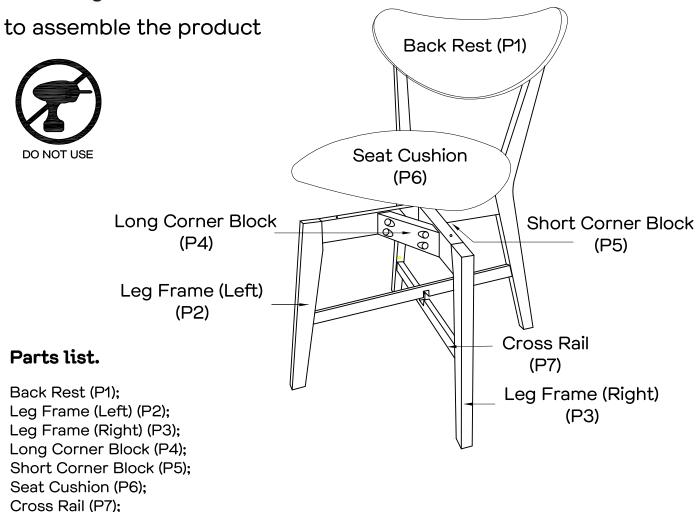

Hardware Pack.

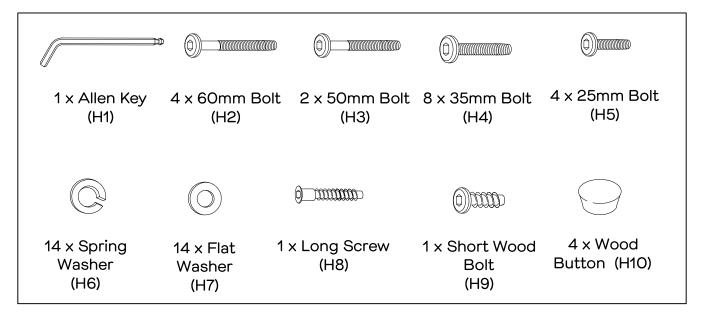




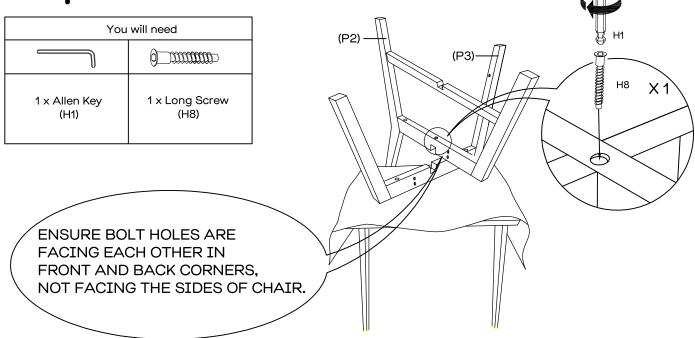

Attach Leg Frame (Right) (P3) to Leg Frame (Left) (P2) using $1 \times Long$ Screw (H8) by using Allen Key (H1).

DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.

Step 2

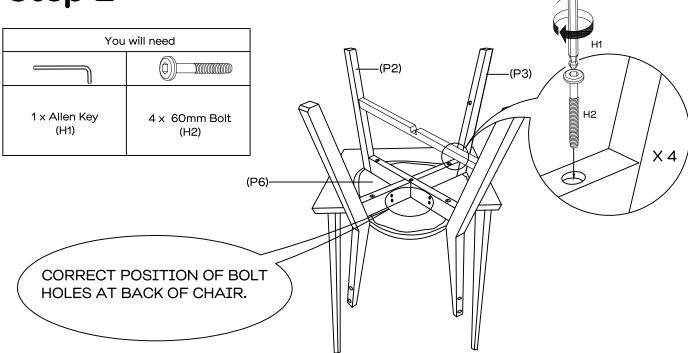


Attach Seat Cushion (P6) to Leg Frame (P2) & (P3) using 4 x 60mm Bolt (H2) by using Allen Key (H1).

DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.






You will need	
1 x Allen Key (H1)	4 × 35mm Bolt (H4)
@	0
4 x Spring Washer (H6)	4 x Flat Washer (H7)

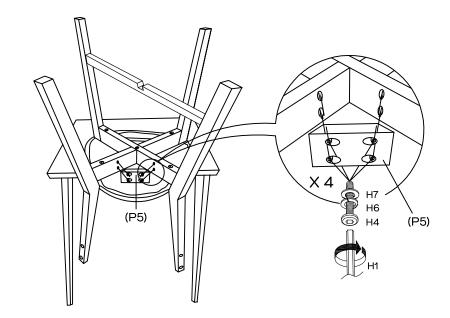

Attach Short Corner Block (P5) to leg Frame (P2) & (P3) using $4 \times \text{Spring Washer}$ (H6), $4 \times \text{Flat Washer}$ (H7) and $4 \times 35 \text{mm}$ Bolt (H4) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.


Step 4

You will need	
1 x Allen Key (H1)	4× 35mm Bolt (H4)
@	
4 x Spring Washer (H6)	4 × Flat Washer (H7)

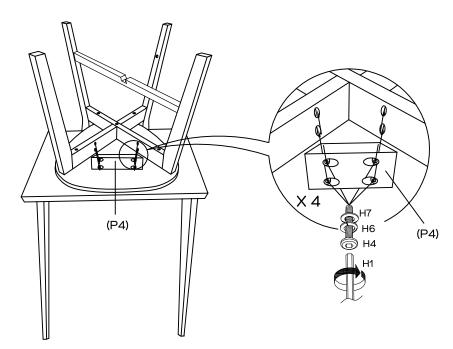

Attach Long Corner Block (P4) to Leg Frame (P2) & (P3) using $4 \times \text{Spring Washer}$ (H6), $4 \times \text{Flat Washer}$ (H7) and $4 \times 35 \text{mm}$ Bolt (H4) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.


Fantastic Furniture

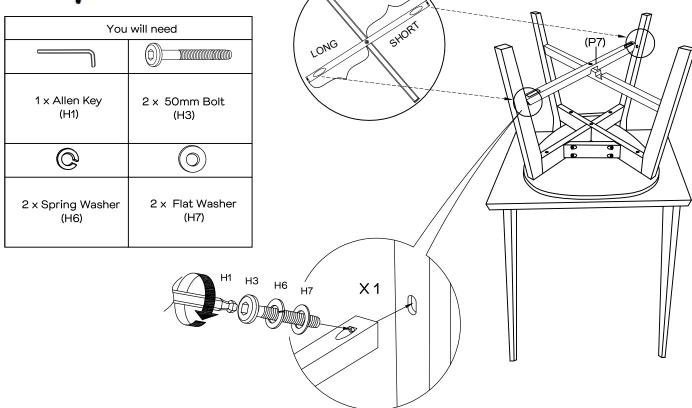

Top View


Attach Cross Rail (P7) to Leg Frame (Right) (P3) using 2×50 mm Bolt (H3), 2×5 Spring Washer (H6) and 2×5 Flat Washer (H7) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.



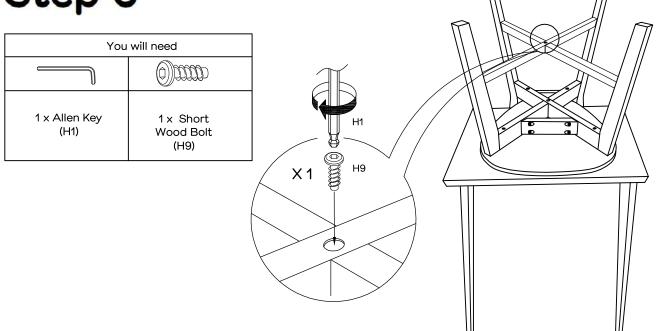

Secure Cross Rail (P7) using 1 x Short Wood Bolt (H9).
DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.




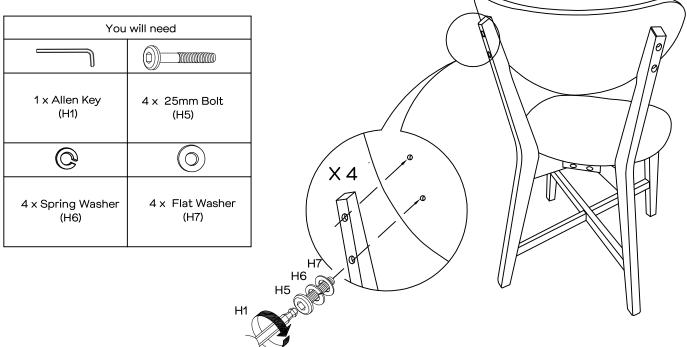


(Turn Chair upright)

Attach Back Rest (P1) to Leg Frame (P2) & (P3) using $4 \times \text{Flat Washer (H7)}$, $4 \times \text{Spring Washer (H6)}$, and $4 \times 25 \text{mm Bolt (H5)}$ by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.


Step 8

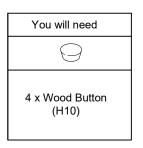

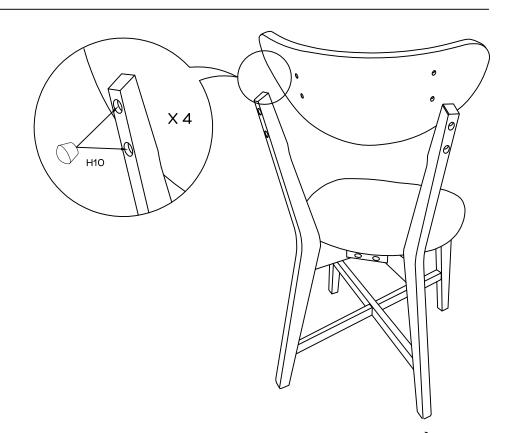

Place chair on a flat surface and press the seat to level the legs. Tighten all screws and bolts .Attach 4 X Wood Button (H10) to Leg Frame (P2) & (P3) by pushing into hole firmly.



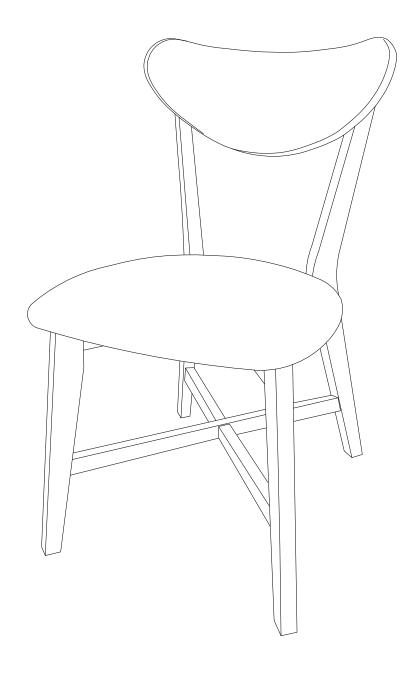

Job complete!

In the interest of our environment please dispose of all packaging thoughfully.

