

Version 1.0



Two People





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly checklist





Make sure you have all the required tools.

Never use power tools unless instructed.

Read through the instructions carefully before you begin.






before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- [!] The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



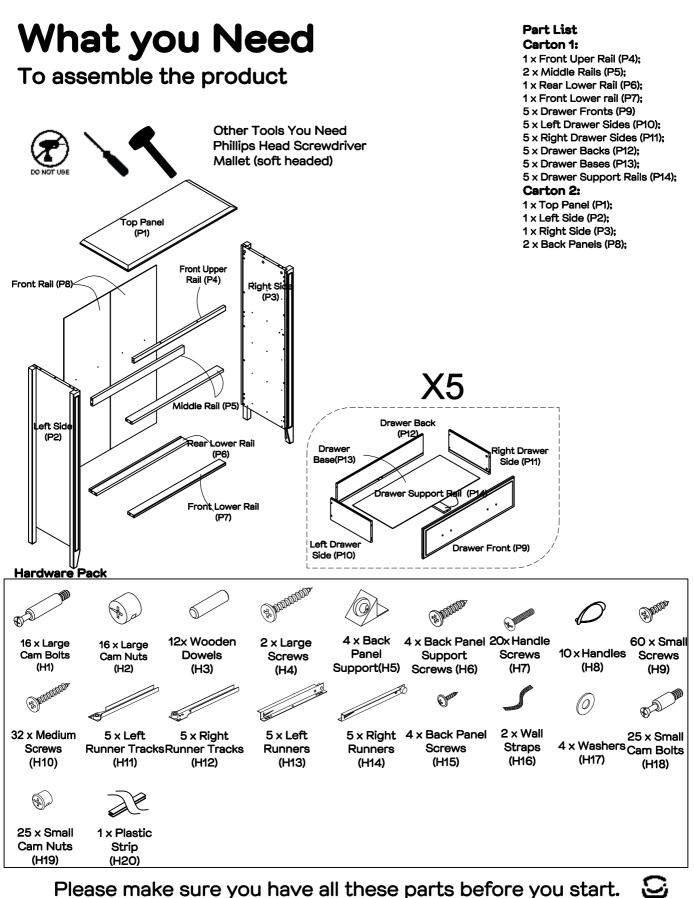


Fontastic Furniture



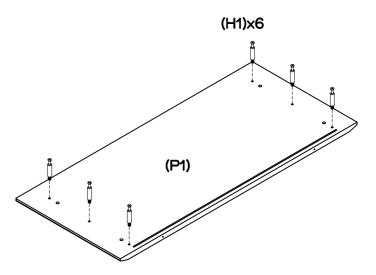

Attach 6 \times large cam bolts (H1) to top panel (P1) using a phillips head screwdriver.

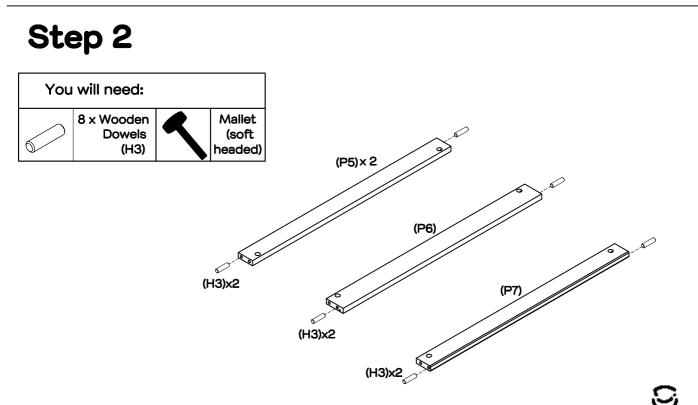


Insert 8 x wooden dowels (H3) into 2 x middle rails (P5), rear lower rail (P6) and front lower rail (P7).

fantasticfurniture.com.au


Page 5

Fontastic Furniture

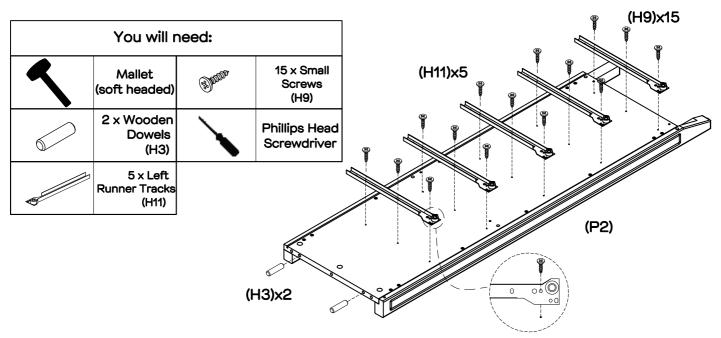

Insert 2 x wooden dowels (H3) into left side (P2). Attach 5 x left runner tracks (H11) to left side (P2) using 15 x small screws (H9), tightening using a phillips head screwdriver. Ensure the screws are inserted into the holes on the tracks (H11) as shown above.

Step 4

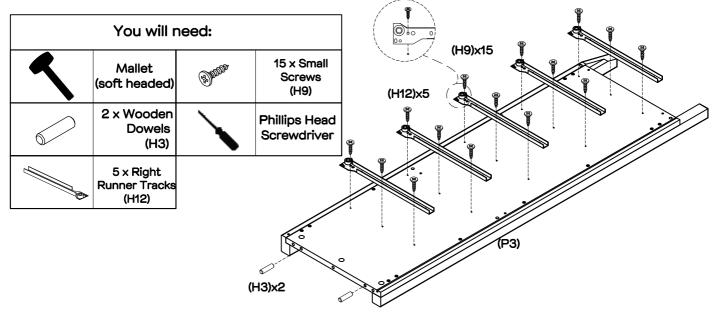


Insert 2 x wooden dowels (H3) into right side (P3). Attach 5 x right runner tracks (H12) to right side (P3) using 15 x small screws (H9), tightening using a phillips head screwdriver. Ensure the screws are inserted into the holes on the tracks (H12) as shown above.



Furniture Page 6


antastic



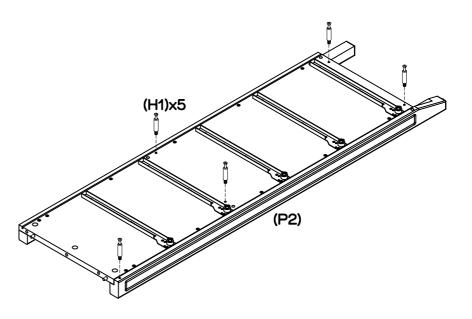


Attach 5 \times large cam bolts (H1) into left side (P2) using a phillips head screwdriver.

Step 6

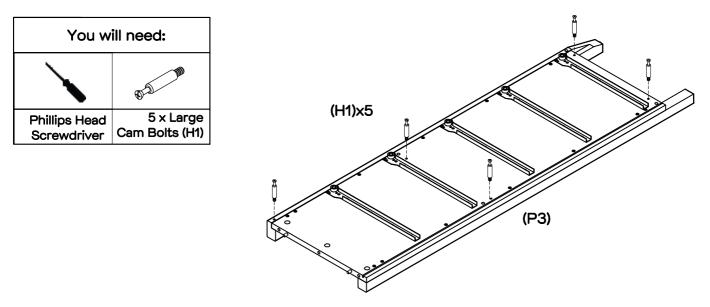


Attach $5 \times$ large cam bolts (H1) into right side (P3) using a phillips head screwdriver.



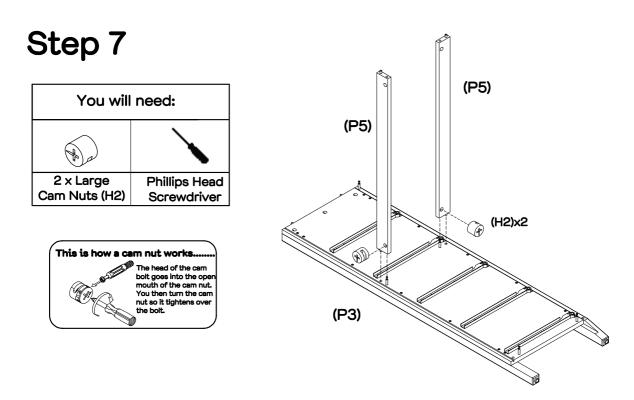


Attach 2 x middle rails (P5) to right side (P3), ensuring the sides with the cam nut holes are facing outwards. Using a phillips head screwdriver, rotate the cam nuts (H2) so the arrow points towards the incoming cam bolt. Turn clockwise to lock.

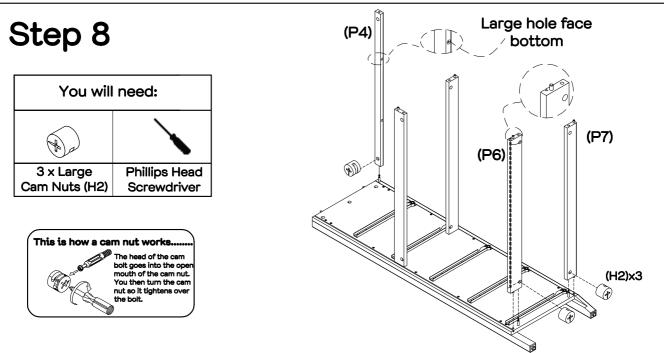


Attach front upper rail (P4) to right side (P3), ensuring the side with the cam nut hole faces inwards. Attach the rear lower rail (P6) and front lower rail (P7) to right side (P3), ensuring the sides with the cam nut holes faces outwards. Insert 3 × large cam nuts into the rails (P4, P6, P7). Using a phillips head screwdriver, rotate the cam nuts (H2) so the arrow points towards incoming cam bolts. Turn clockwise to lock. fantasticfurniture.com.au

Furniture Page 8

Fantastic

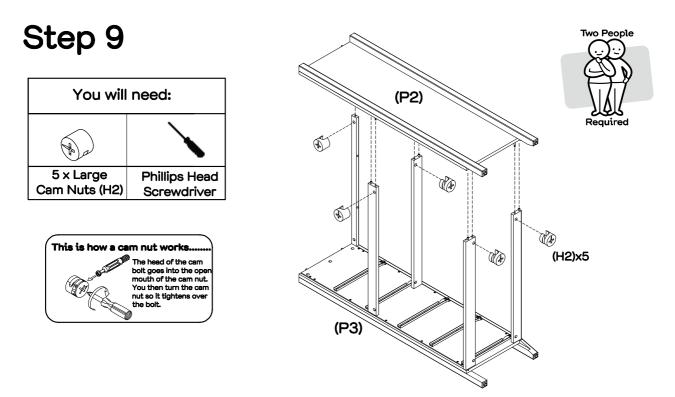

With assistance, attach left side (P2) to assembled unit. Insert 5×1 arge cam nuts into rails (P4, P5, P6, P7). Using a phillips head screwdriver, rotate the cam nuts (H2) so the arrows point towards the incoming cam bolt. Turn clockwise to lock.

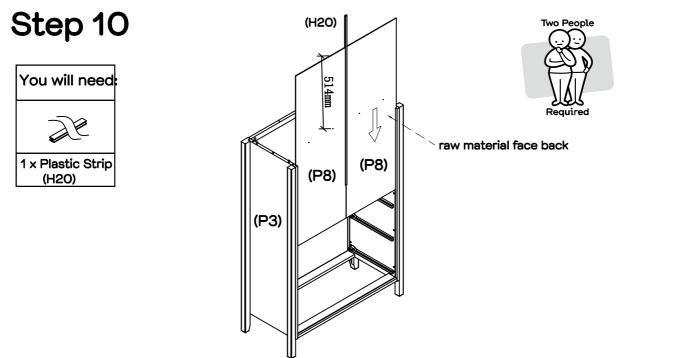

With assistance, carefully turn the unit upright. Slide the 2 x back panels (P8) into the grooves on the side panels (P2, P3) and rear lower rail (P6). Ensure the informative label is positioned as shown. Insert the plastic strip (H2O) between the 2 x back panels (P8) as shown.



fantasticfurniture.com.au





Attach top panel (P1) to unit as shown. Insert 6 x large cam nuts (H2) into the left and right side (P2, P3). Using a phillips head screwdriver, rotate the cam nuts (H2) so the arrow points towards incoming cam bolts. Turn clockwise to lock.

Step 12



Attach top panel (P1) to assembled unit using 2 x large screws (H4), tightening using a phillips head screwdrier.

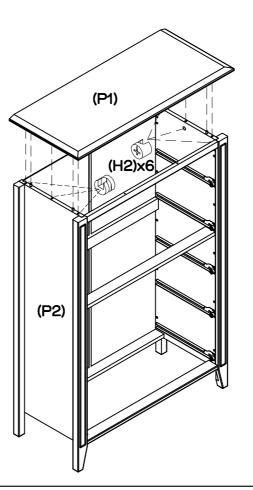

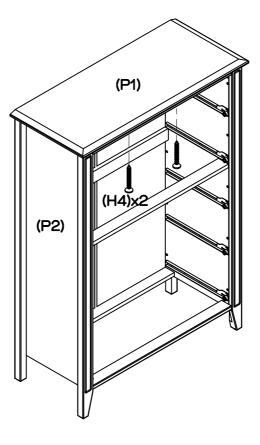





fantasticfurniture.com.au

You will need:	
4 x Back Panel Support(H5)	Phillips Head Screwdriver
S Manuar	Opp
4 x Back Panel Support Screws (H6)	4 x Back Panel Screws (H15)

Secure the 2 x back panels (P8) to middle rail (P5) using 4 x back panel screws (H15), tightening with a phillips head screwdriver. Insert 4 x back panel supports (H5) into each corner of the unit and attach using 4 x back panel support screws (H6), tightening with a phillips head screwdriver.

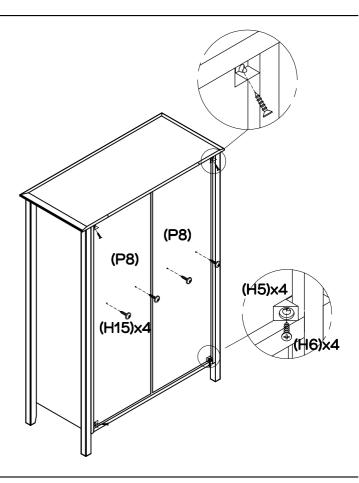


Step 14

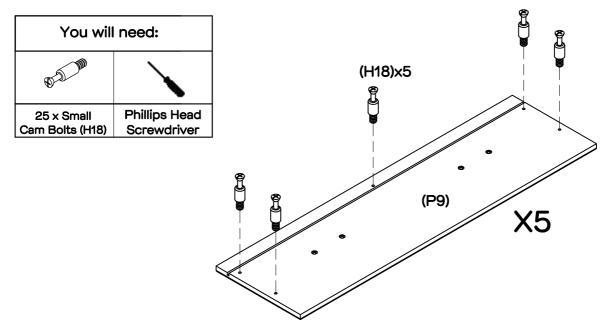


Attach 5 x small cam bolts (H18) to 1 x drawer front (P9) using a phillips head screwdriver. Repeat this step for the other 4 x drawer fronts (P9).



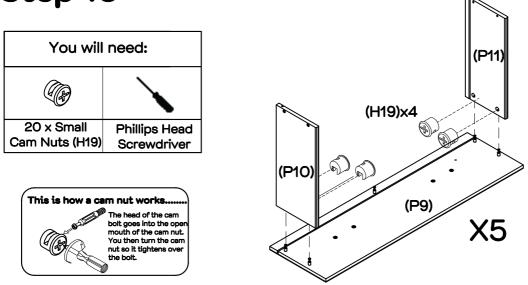

Attach 1 x drawer left side (P10) and 1 x drawer right side (P11) to 1 x drawer front (P9), ensuring the grooves on all the panels align. Insert 4 x small cam nuts (H19) into the drawer sides (P10,P11). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards the incoming cam bolts. Turn clockwise to lock.Repeat this process for the other 5 x drawer side panels (P10, P11).

Step 16

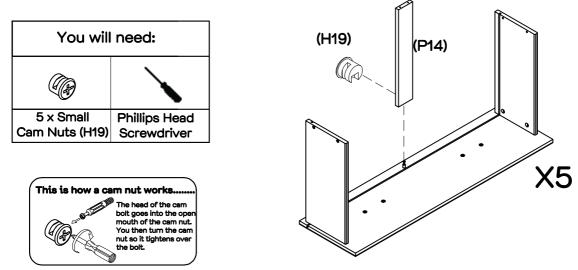


Attach 1 x drawer support rail (P14) to 1 x drawer front (P9), ensuring the side with the cam nut holes faces outwards. Insert 1 x small cam nut (H19) into the drawer support rail (P14). Using a phillips head screwdriver, rotate the cam nut so the arrows faces incoming cam bolt. Turn clockwise to lock. Repeat this process for the other 4 x support rails (P14).



fantasticfurniture.com.au


Slide 1 x drawer base (P13) into the grooves on the drawer sides (P10, P11) and drawer front (P9). Repeat this process for the other $4 \times drawer$ bases (P15).

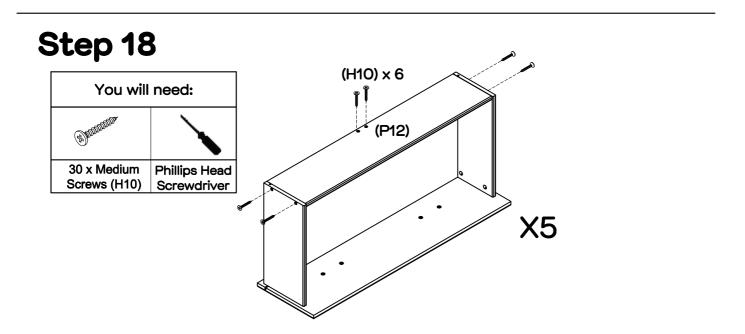


Attach 1 x drawer back panel (P12) to the side panels (P10, P11) and drawer support rail (P14) using 6 x medium screws (H10), tightening with a phillips head screwdriver. Repeat this process for the other 4 x drawer back panels (P12).

Fantastic Furniture Page 13


Note: Ensure the stoppers on the tracks (H13, H14) are positioned at the back of the drawer.

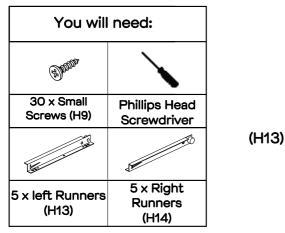

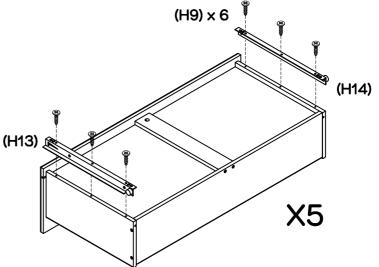

Attach 1 x left runner (H13) to the left drawer side (P10) and 1 x right runner (H14) to the right drawer side (P11) using 6 x small screws (H9), tightening with a phillips head screwdriver. Repeat this process for the other 4 x assembled drawers.


Step 20

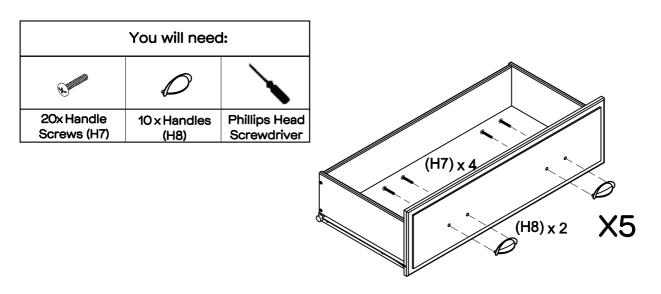

Attach 2 x handles (H8) to 1 x drawer front (P9) using 4 x handle screws (H7), tightening with a phillips head screwdriver. Repeat this process for the other $4 \times assembled$ drawers.






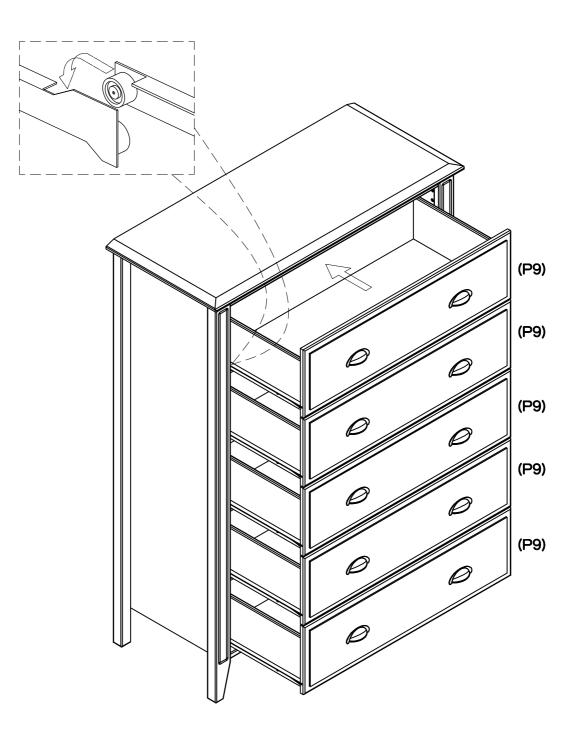

Slide the drawers into the tallboy.




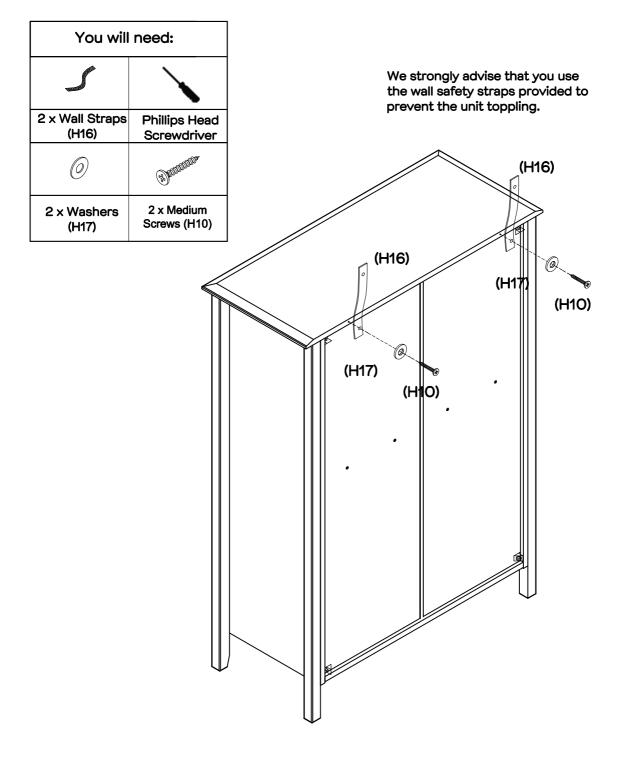


Attach 2 x wall straps (H16) to the back of top panel (P1) using 2 x medium screws (H1O) and 2 x washers (H17), tightening using a phillips head screwdriver.



fantasticfurniture.com.au

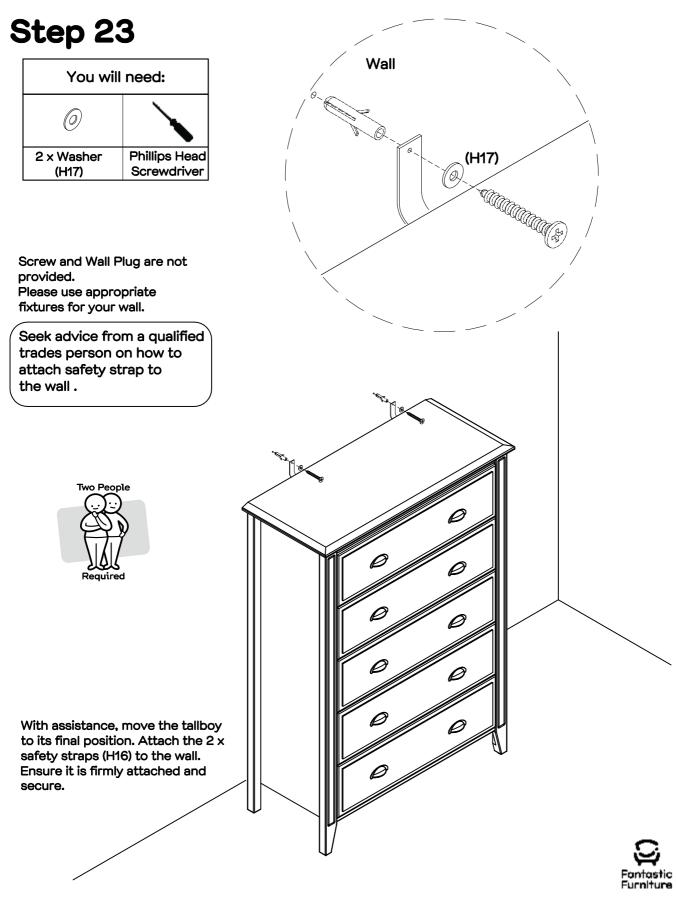

fantasticfurniture.com.au

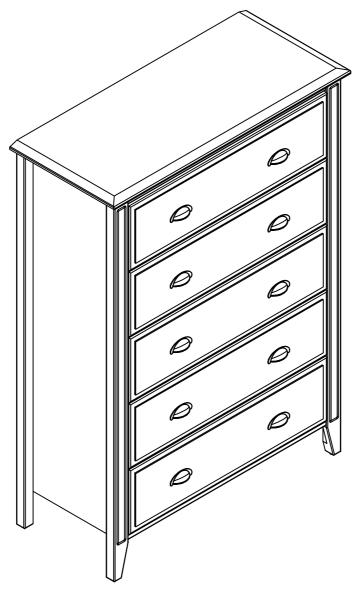

Job Complete!

In the interest of our environment please dispose of all packing thoughtfully.



fantasticfurniture.com.au