


Version 1.0

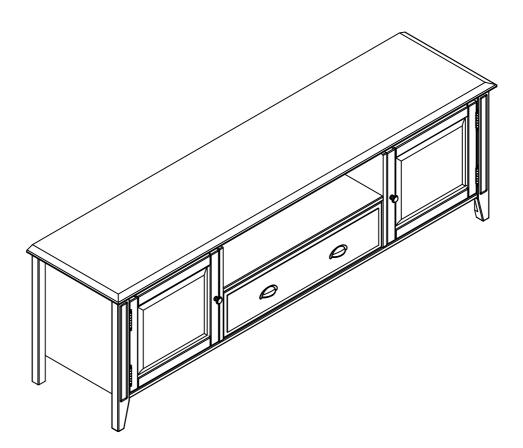





#### WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



#### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



## Assembly checklist





Make sure you have all the required tools.

Never use power tools unless instructed.

Read through the instructions carefully before you begin.





before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.


#### **Useful Information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- <sup>!</sup> The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.




## What you Need

To assemble the product

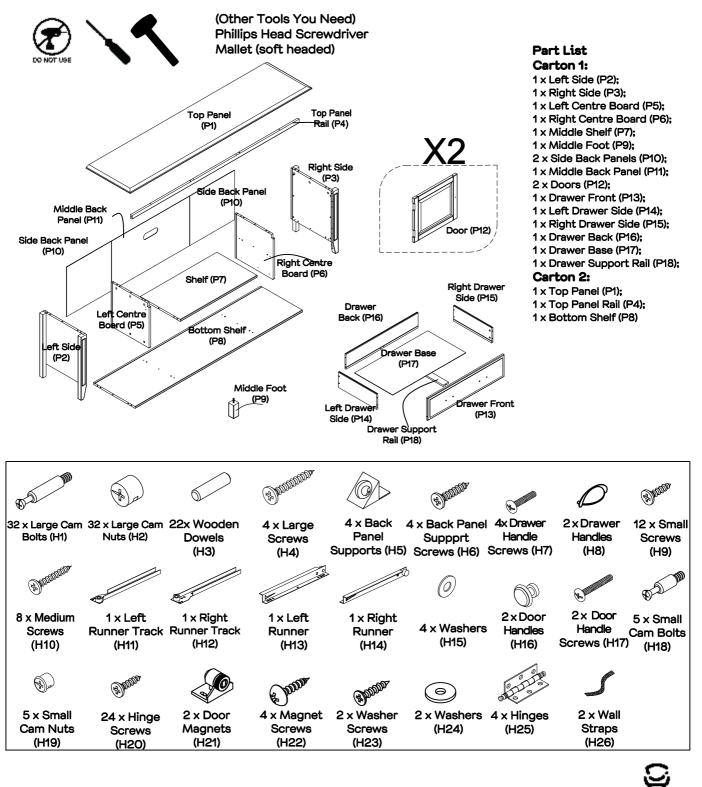


**Fontastic** Furniture Page 4

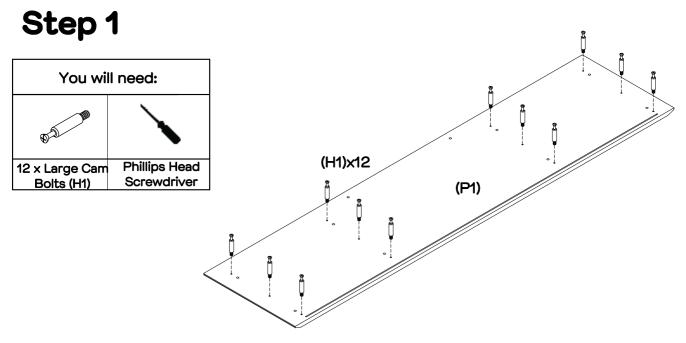


Attach 12 x large cam bolts (H1) to top panel (P1) using a phillips head screwdriver.

#### Step 2

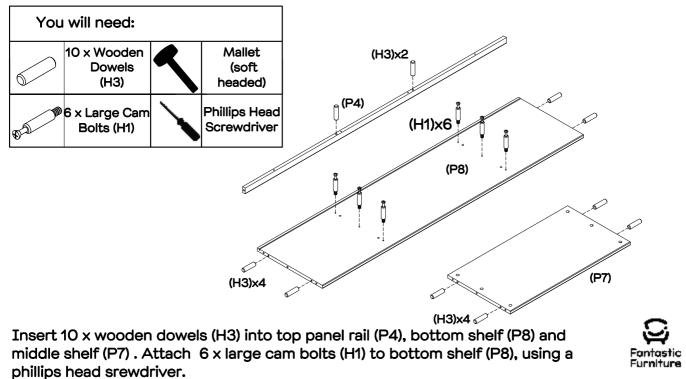


fantasticfurniture.com.au

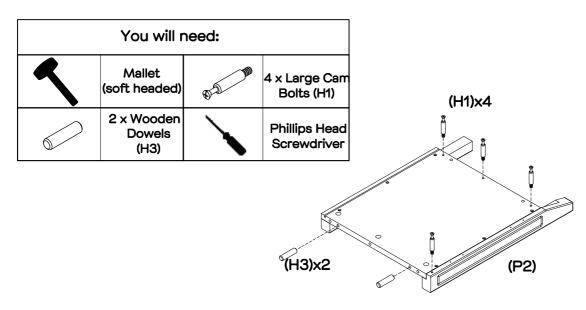

Insert 2 x wooden dowels (H3) into left side (P2).


Attach 4 x large cam bolts (H1) to left side (P2) using a phillips head screwdriver.

## Step 4

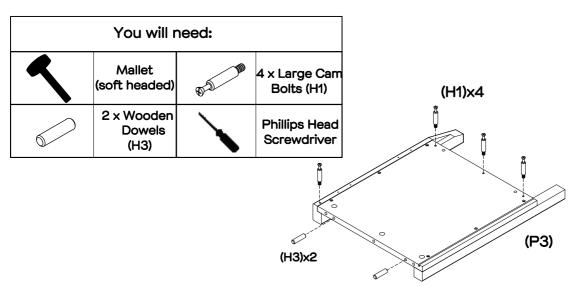

Insert 2 x wooden dowels (H3) into right side (P3). Attach 4 x large cam bolts (H1) to right side (P3) using a phillips head screwdriver.




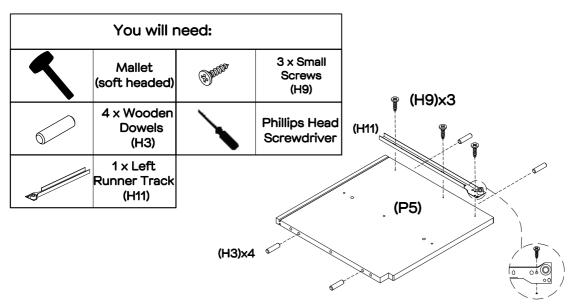

Insert 4 x wooden dowels (H3) into left centre board (P5).


Attach 1 x left runner track (H11) to left centre board (P5) using 3 x small screws (H9), tightening with a phillips head screwdriver. Ensure you insert the the screws (H9) into the holes on the track (H11) as shown.

#### Step 6

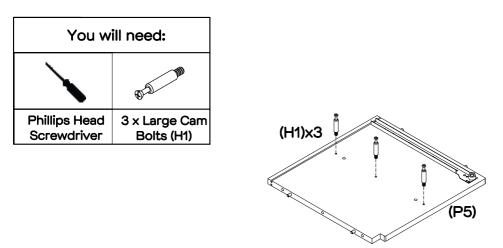

Attach  $3 \times 1$  arge cam bolts (H1) to left centre board (P5) using a phillips head screwdriver.




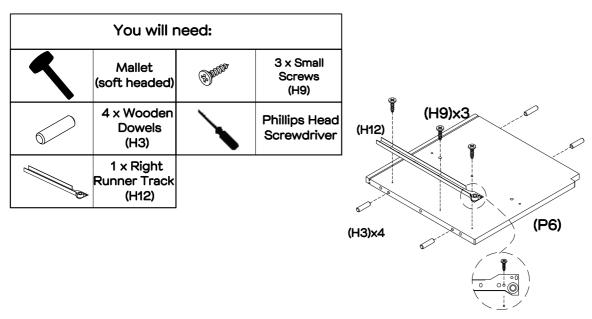

Insert 4 x wooden dowels (H3) into right centre board (P6). Attach 1 x right runner track (H12) to right centre board (P6) using  $3 \times 3$  small screws (H9), tightening with a phillips head screwdriver. Ensure you insert the


#### the screws (H9) into the holes on the track (H12) as shown.

#### Step 8

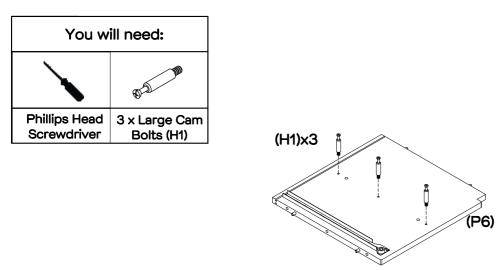


Attach  $3 \times 1$  arge cam bolts (H1) to right centre board (P6) using a phillips head screwdriver.



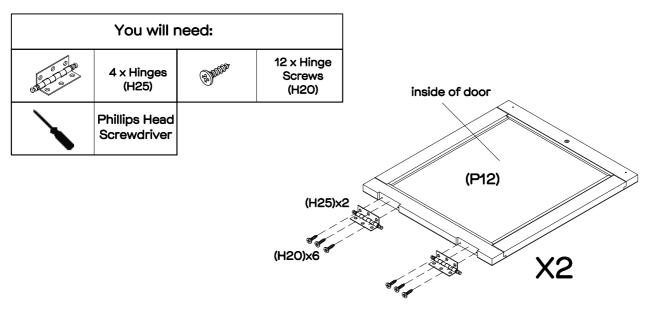

Attach 2 x hinges (H25) to 1 x door (P12) with 6 x hinge screws (H2O), tightening with a phillips head screwdriver. Repeat process for the other door (P12).

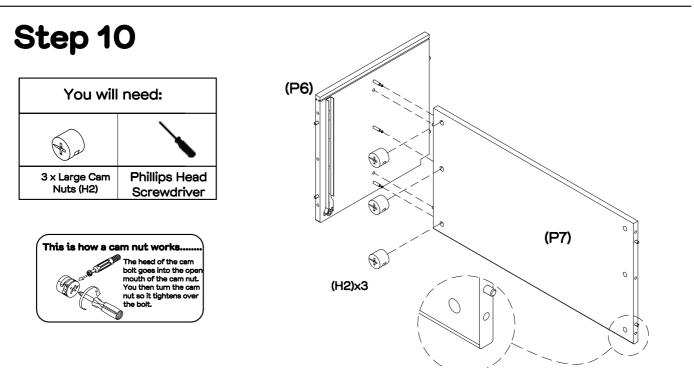


Attach middle shelf (P7) to the right centre board (P6). Insert  $3 \times$  large cam nuts (H2) into the middle shelf (P7) as shown, ensuring the arrow on the cam nuts (H2) face the incoming cam bolts.

Using a phillips head screwdriver, turn the large cam nuts (H2) clockwise to lock.

fantasticfurniture.com.au


Page 9

Fontastic Furniture

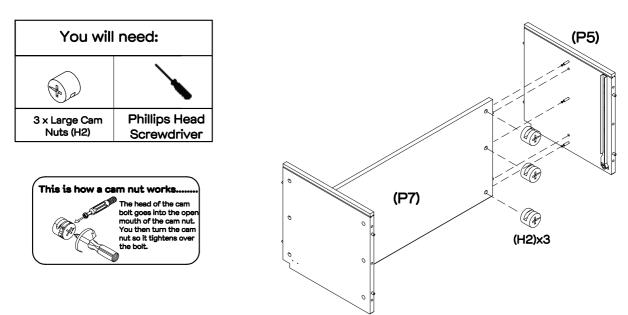

Attach shelf (P7) to the left centre board (P5). Insert 3 x large cam nuts (H2) into the middle shelf (P7) as shown, ensuring the arrow on the cam nuts (H2) face the incoming cam bolts.


Using a phillips head screwdriver, turn the large cam nuts (H2) clockwise to lock.

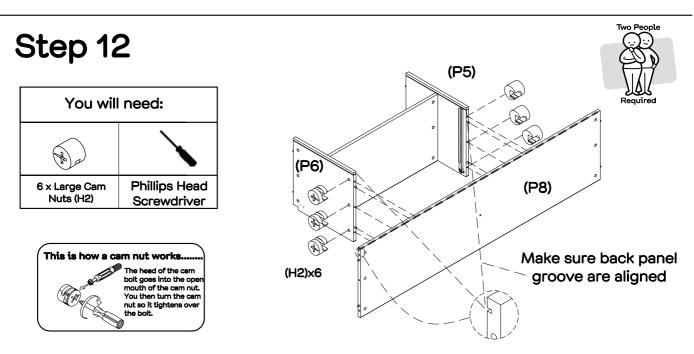


With assistance, attach the bottom shelf (P8) to the centre boards (P5, P6). Insert  $6 \times 1$  arge cam nuts (H2) into the centre boards (P5, P6), ensuring the arrows on the large cam nuts (H2) point towards the incoming cam bolts. Using a phillips head screwdriver, turn the large cam nuts (H2) clockwise to lock.



fantasticfurniture.com.au

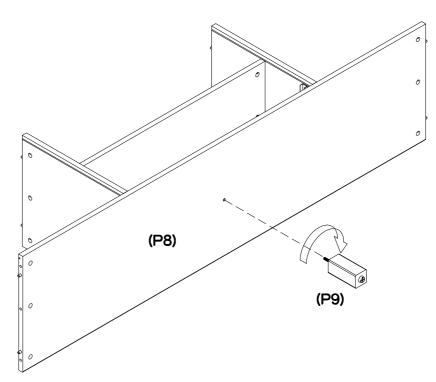


Attach middle foot (P9) to bottom shelf (P8) by turning clockwise as shown.

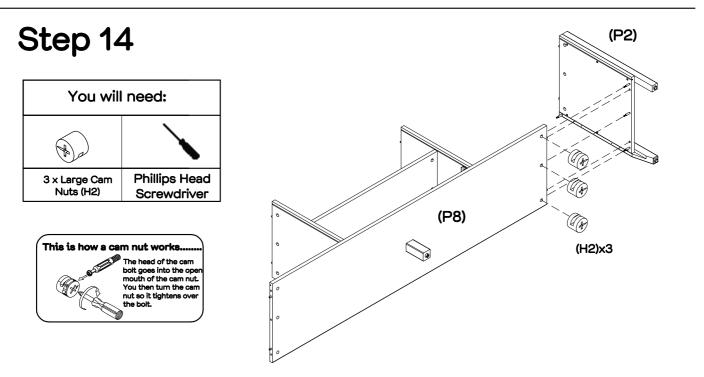

Attach left side (P2) to the unit as shown. Insert 3 x large cam nuts (H2) into the bottom shelf (P8), ensuring the arrows on the large cam nuts (H2) face incoming cam bolts. Using a phillips head screwdriver, turn large cam nuts (H2) clockwise to lock.


fantasticfurniture.com.au

Fantastic Furniture Page 11

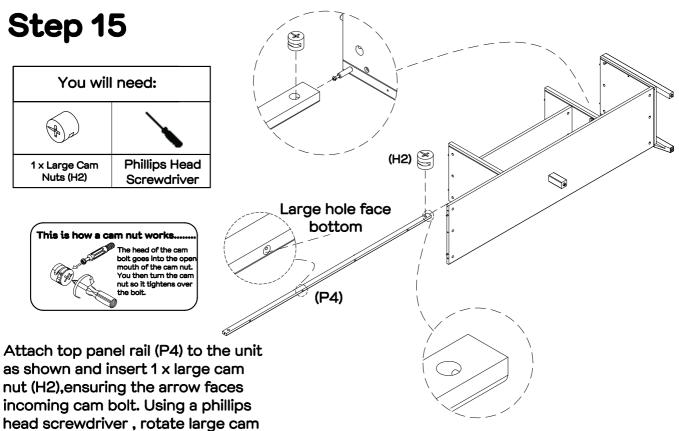

nut (H2) clockwise to lock.


#### Step 16

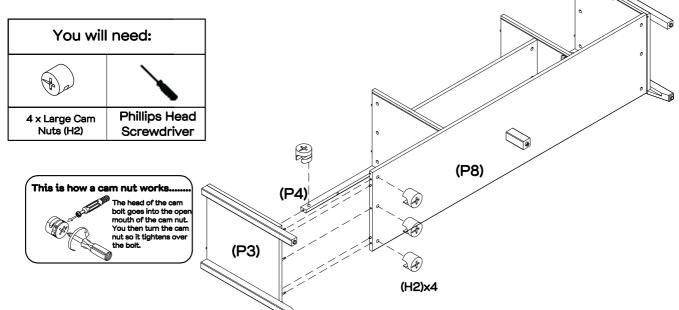

Attach right side (P3) to the unit as shown. Insert  $4 \times \text{large cam nuts}$  (H2) into the top panel rail (P4) and bottom shelf (P8), ensuring the arrows on the large cam nuts (H2) face incoming cam bolts. Using a phillips head screwdriver, turn large cam nuts (H2) clockwise to lock.

fantasticfurniture.com.au


Fantastic Furniture Page 12

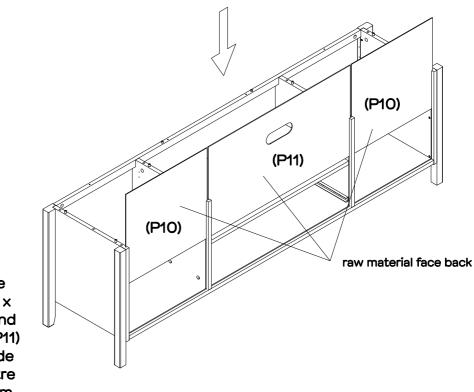

With assistance, turn the unit upright. Slide the  $2 \times$ side back panels (P10) and the middle back panel (P11) in the grooves on the side panels (P2, P3) and centre board (P5,P6) and bottom shelf (P8).






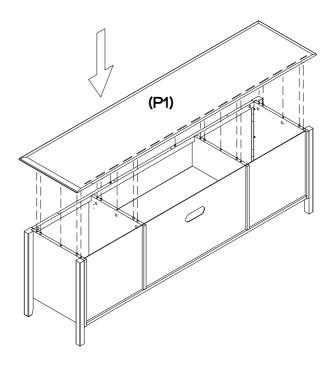


With assistance, attach top panel (P1) to the assembled unit as shown.



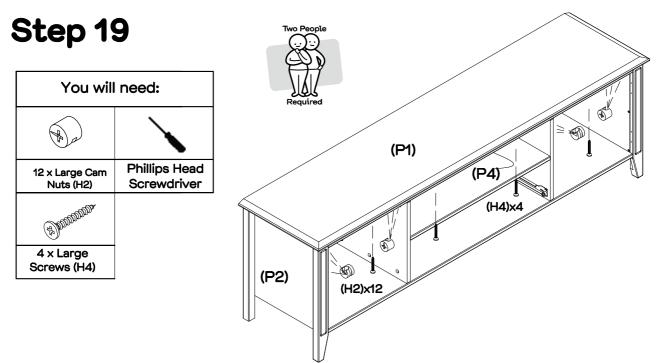

Insert 12 x large cam nuts (H2) into the side panels (P2, P3) and centre boards (P5, P6), ensuring the arrows point towards incoming cam bolts. Using a phillips head screwdriver, turn the cam nuts (H2) clockwise to lock.


Attach the top panel rail (P4) to top panel (P1) using 4 x large screws (H4).

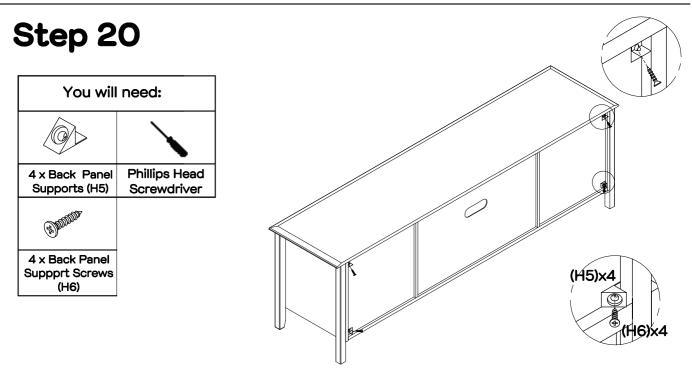

Insert 4 x back panel supports (H5) into each corner of the unit using  $4 \times back$  panel support screws (H6), tightening with a phillips head screwdriver.



fantasticfurniture.com.au

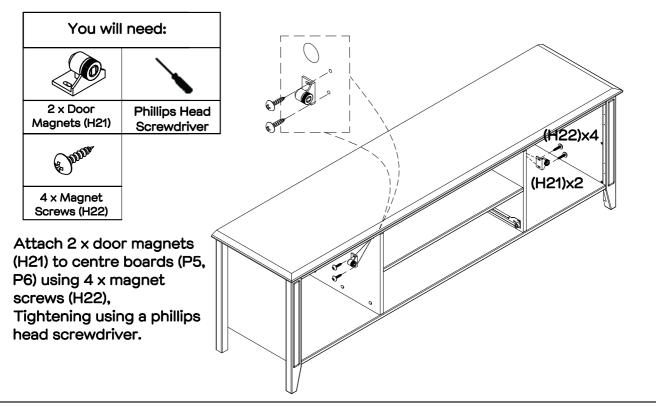


#### Step 22

You will need:				
AMM	2 x Washer Screws (H23)	E Marine	12 × Hinge Screws (H2O)	(P12) (H20)x12 (H22)x2 (H17)x2 (H16)x2
0	2 × Washers (H24)		Phillips Head Screwdriver	
0p	2×Door Handles (H16)			
R Managana	2 x Door Handle Screws (H17)			

Attach the hinges (H25) on the 2 x doors (P12) to the side panels (P2, P3) using 12 x hinge screws (H20), tightening with a phillips head screwdriver. Attach 2 x washers (H24)to the corners of the 2 x doors (P12) as shown using 2 x washer screws (H23), tightening with a phillips head screwdriver. Attach 2 x Door handles (H16) to the 2 x doors (P12) using 2 x door handle screws (H17), tightening with a phillips head screwdriver. fantasticfurniture.com.au






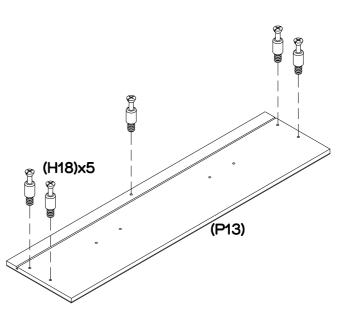


Attach 5 x small cam bolts (H18) to  $1 \times drawer$  front (P13) using a phillips head screwdriver.


#### Step 24

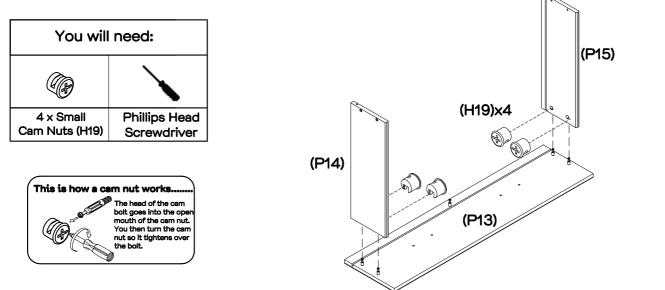


Attach 1 x left drawer side (P14) and 1 x right drawer side (P15) to 1 x drawer front (P13), ensuring the grooves on all panels align. Insert 4 x small cam nuts (H19) into the drawer sides (P14, P15), ensuring the arrow on the small cam nuts (H19) faces the incoming cam bolts. Using a phillips head screwdriver, turn the cam nuts (H19) clockwise to lock.

 
Fontastic Furniture

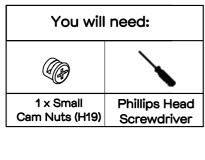




Attach drawer support rail (P18) to the drawer front (P13), Insert 1 x small cam nuts (H19) into the drawer support rail (P18), ensuring the arrow on the small cam nuts (H19) faces the incoming cam bolts. Using a phillips head screwdriver, turn the cam nuts (H19) clockwise to lock.

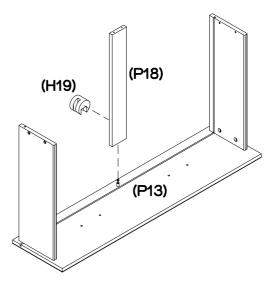


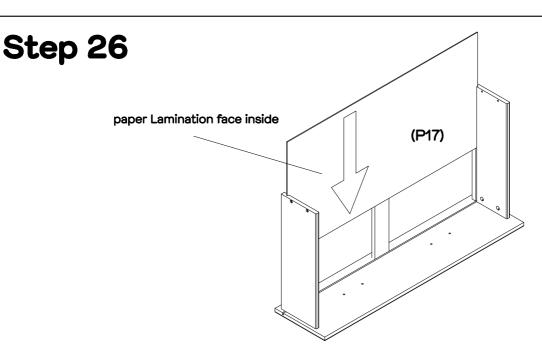

Insert 1  $\times$  drawer base (P17) into the grooves on the drawer sides (P14, P15) and drawer front (P13).



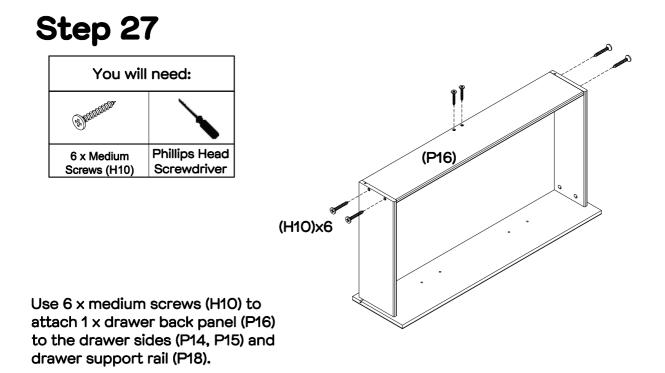


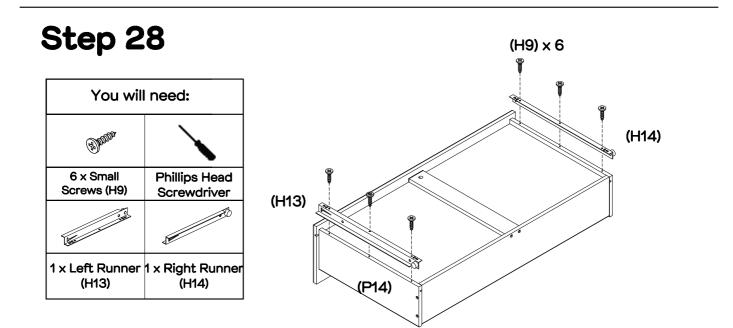


Attach 1 x left runner (H13) to left drawer side (P14) and 1 x right runner (H14) to right drawer side (P15) using 6 x small screws (H9), tightening with a phillips head screwdriver.



fantasticfurniture.com.au

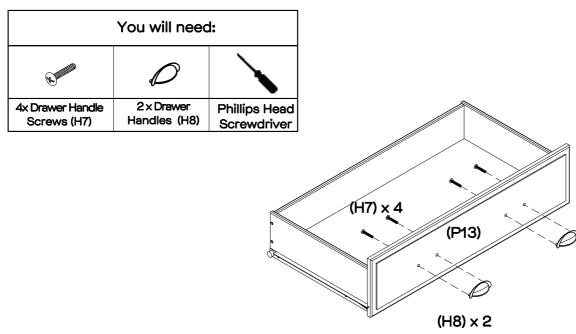


Attach 2 x drawer handles (H8) to 1 x drawer front (P13) using  $4 \times$  drawer handle screws (H7), tightening with a phillips head screwdriver.

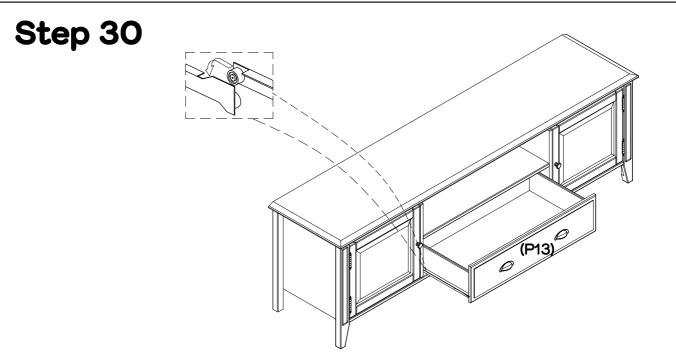



Slide the assembled drawer into the lowline as shown.



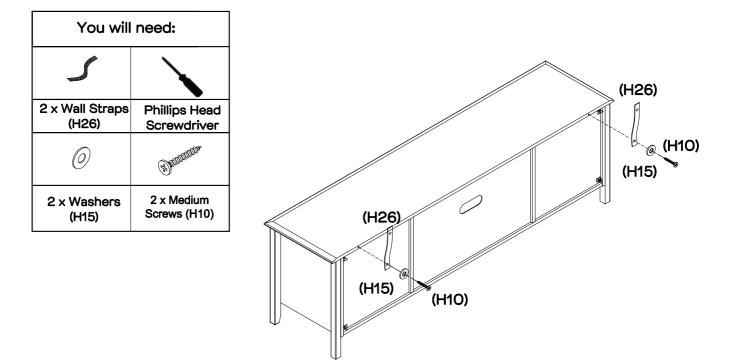

Attach 2 x wall straps (H26) to the back of the top panel (P1) using 2 x large screws (H1O) and  $2 \times$  washers (H15).

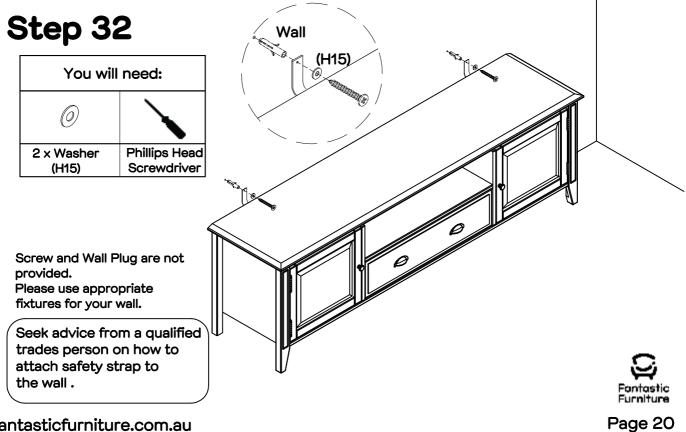

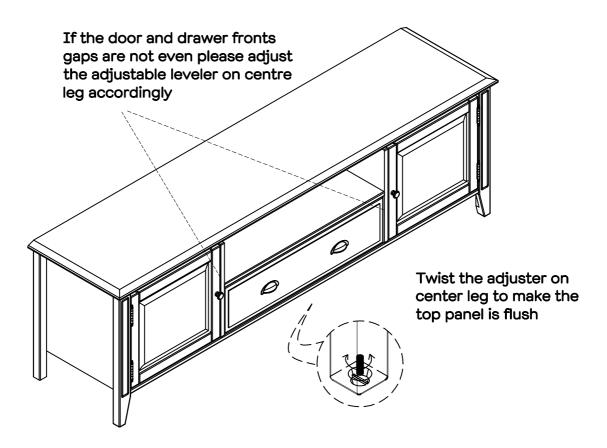

## Job Complete!

In the interest of our environment please dispose of all packing thoughtfully.



fantasticfurniture.com.au