







 

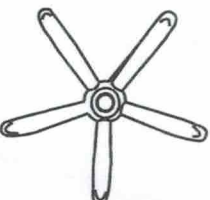







AX1 	GX5 
BX1 	HX4 
CX1(L)X(R) 	IX6 
DX1 	JX4 
EX1 	KX8 
FX1 	LX6 
	MX1 




Insert five castors (G) into base (F), push hard until you feel the castors snap into place.

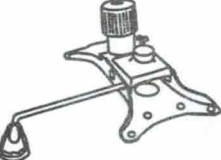

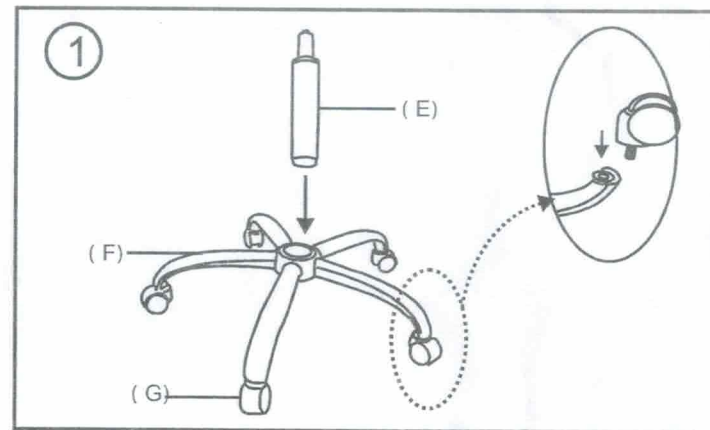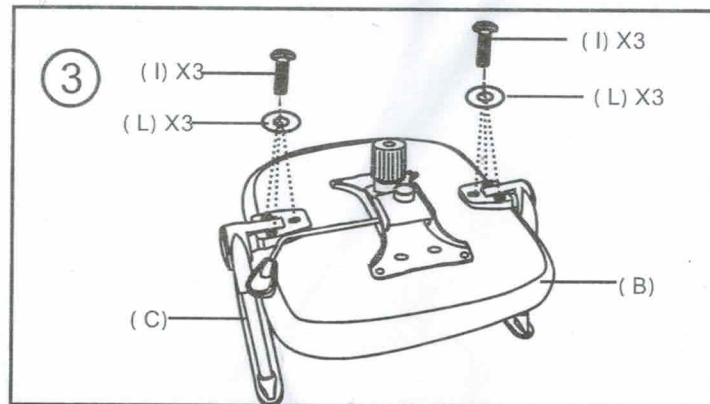
Attach arms (C) to seat cushion (B) using screws (I) and flat washers (L). Fully tighten screws.

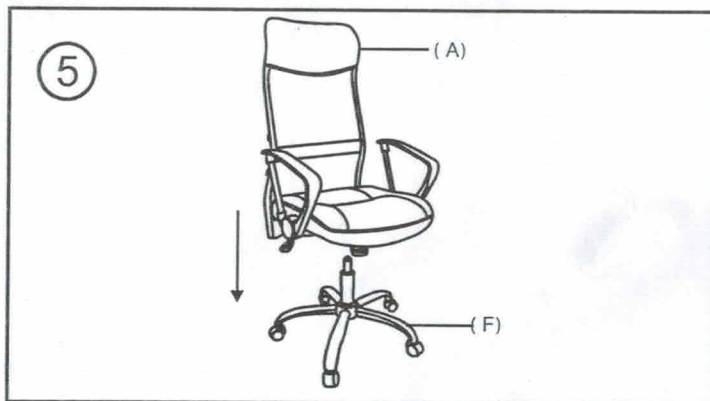

With base (F) upright and castors (G) on the floor, insert pneumatic cylinder (E) into base (F). Place the assembled seat on top of pneumatic cylinder (E) and apply downward pressure.

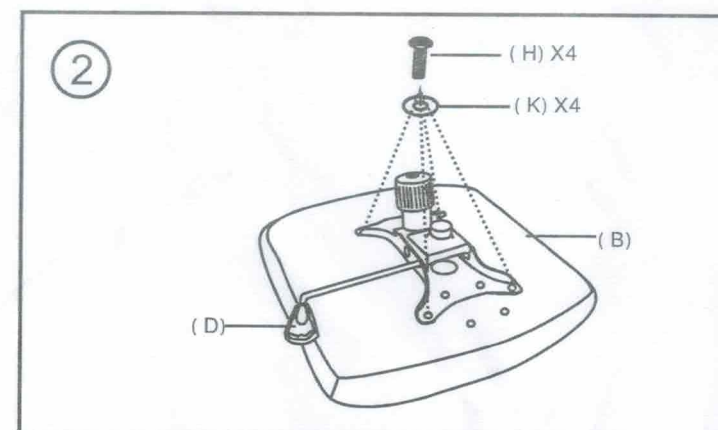

Attach seat plate (D) to seat cushion (B), using screws (H) and flat washers (K). Fully tighten screws.

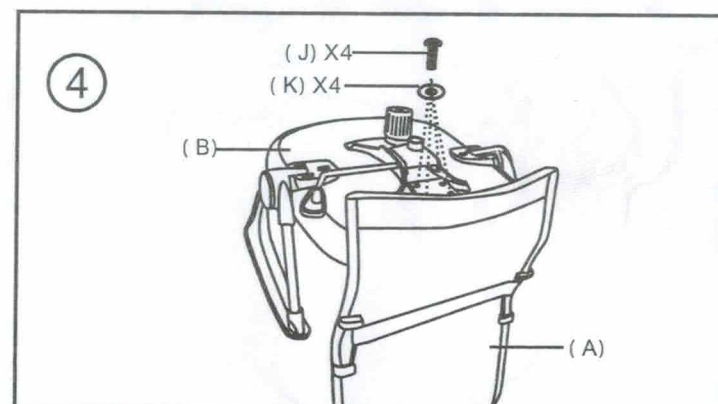

Attach back support (A) into seat plate (D) using screws (J) and flat washers (K). Fully tighten screws.



Make sure all screws are fully tightened before using the chair.