


Version 2.0

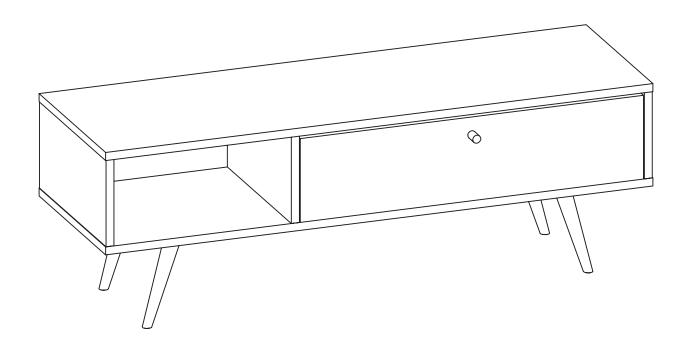







# WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

# **Enjoy**

#### Your purchase from Australia's Best Value Furniture Store





## **Assembly checklist**




Read through the instructions carefully before you begin.



Identify and lay out all of the components before you begin assembly.



Make sure you have all the required tools. Never use power tools unless instructed.

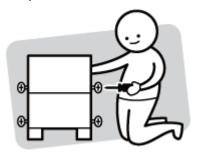

Unless instructed, do not fully tighten screws until the item is fully assembled.

#### **Useful Information**


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



# What you need

#### to assemble the product




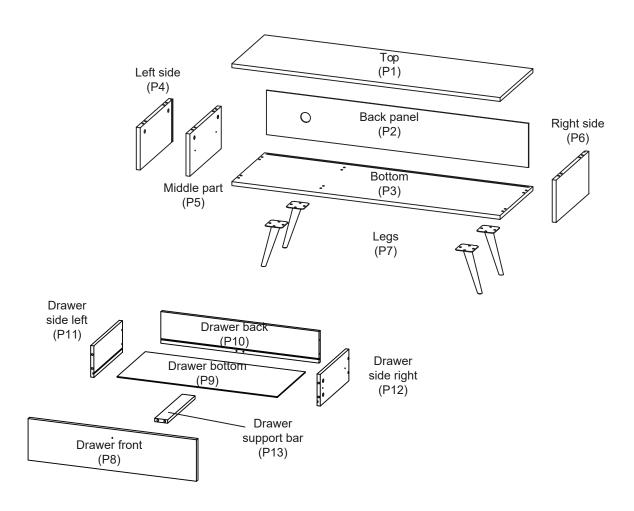



Box 1: Top (P1), Back panel (P2), Bottom (P3), left side (P4), Middle part (P5), Right side (P6), Legs (P7), Drawer front (P8), Drawer bottom (P9), drawer back (P10), Drawer side left (P11), Drawer side right (P12) and Drawer support bar (P13)

# What you need

 
to assemble the product

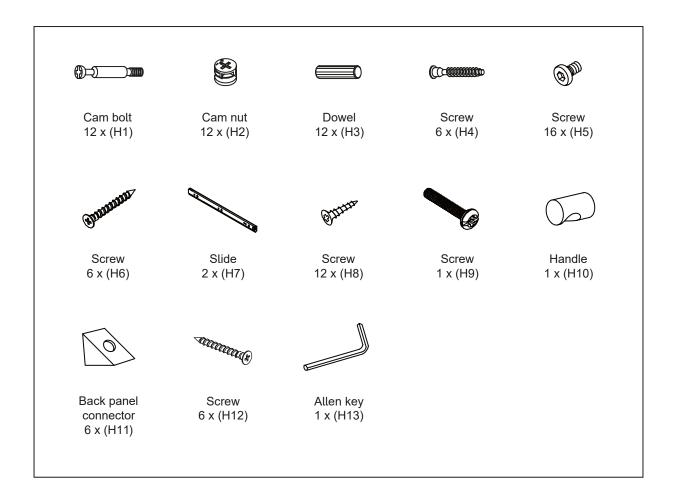



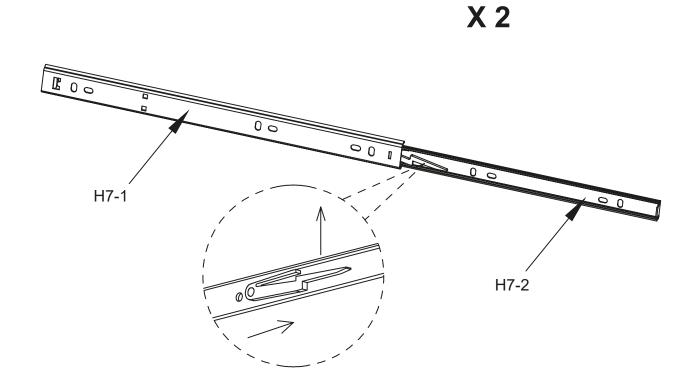

Separate the Drawer Slide Runners (H7-2) and Slide Tracks (H7-1) from Slide (H7) by following the step below. Extend the Slide Runner (H7-2) all the way forwards. Press the plastic release lever of the slide down and the pull the slide runner (H7-2) completely out.

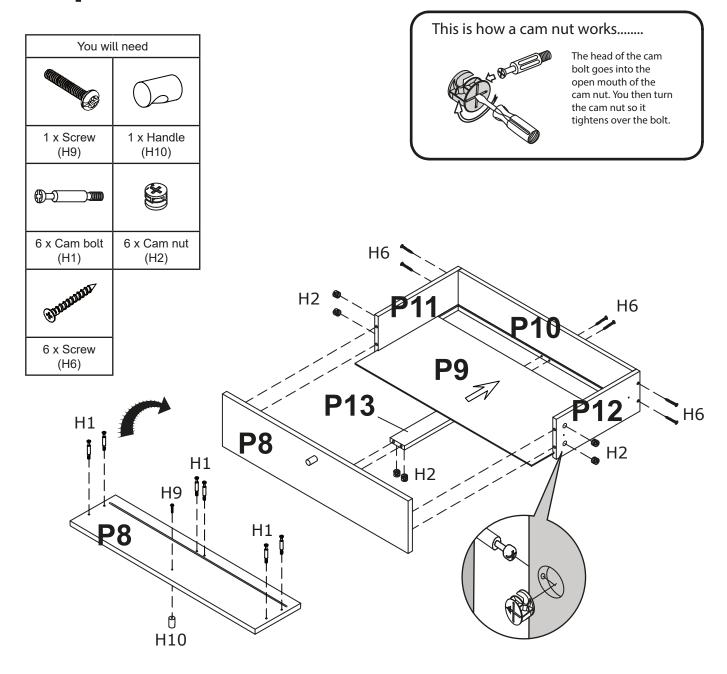



Screw cam bolts (H1) to the drawer front (P8).

Mount the handle (H10), by using screw (H9), Push the drawer bottom (P9) into the drawer sides.

Insert cam nut (H2) into drawer sides and drawer support bar (P13), rotate the cam nut, so that the arrow is facing towards the incomming cam bolts (H1). Attach drawer front (P8) to drawer box by tightening the cam nuts clockwise.




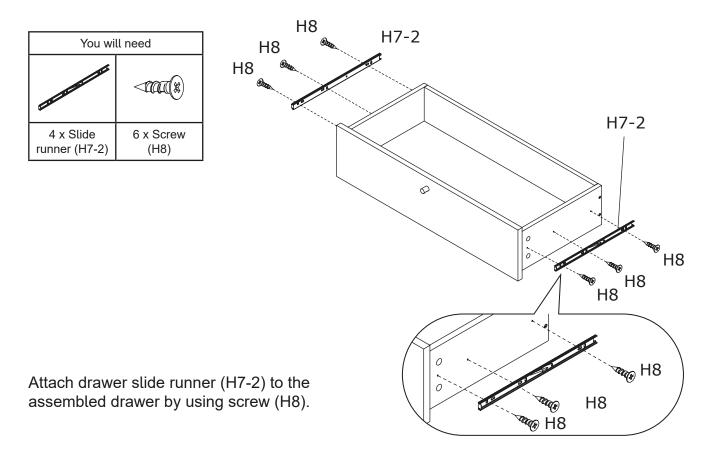

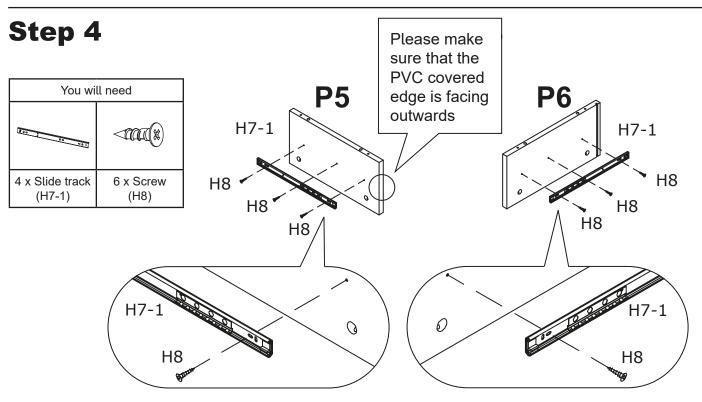


Add the drawer slide tracks (H7-1) to the right side (P6) and the middle part (P5), by using screw (H8).


You will need	
6 x Cam bolt (H1)	6 x Dowel (H3)

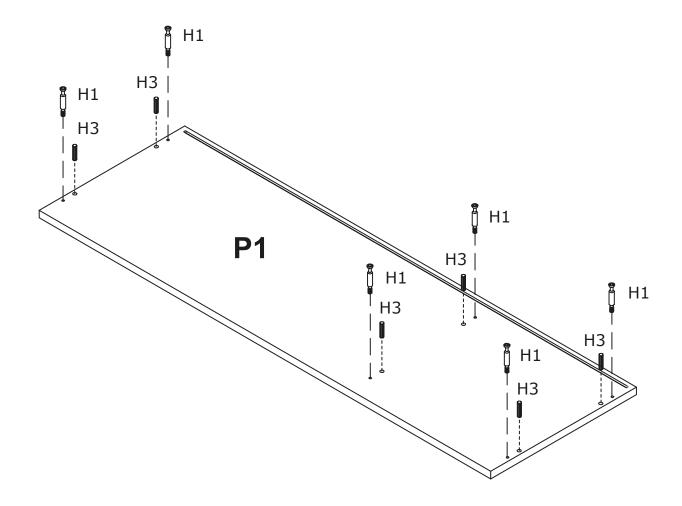


Attach cam bolts (H1) to top panel as shown, insert wooden dowels (H3) to top panel.

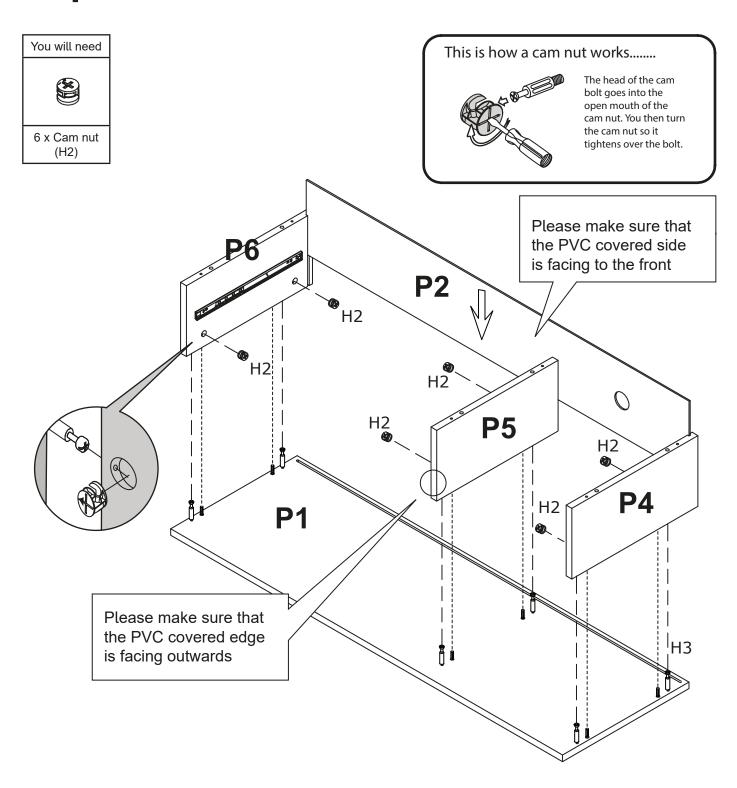

Put cam nut (H2) into the middle part, right and left sides (P4, P5 and P6), rotate the cam nut, so that the arrow is facing towards the incomming cam bolts (H1). Attach the middle part, right and left sides (P4, P5 and P6) to the top (P1), by tightening the cam nut (H2) clockwise. Push the back panel (P2) into the lowline frame.

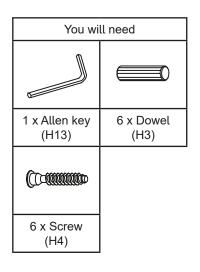


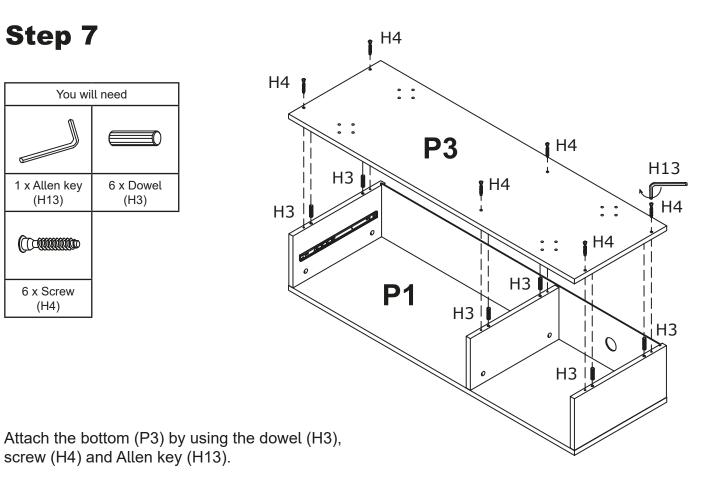


Step 8




screw (H4) and Allen key (H13).

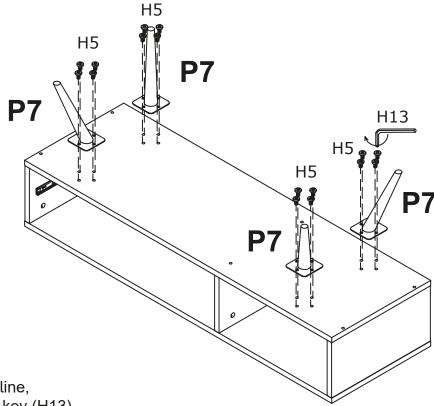


Attach the legs (P7) to the lowline, by using screw (H5) and Allen key (H13).

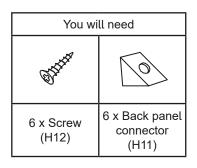


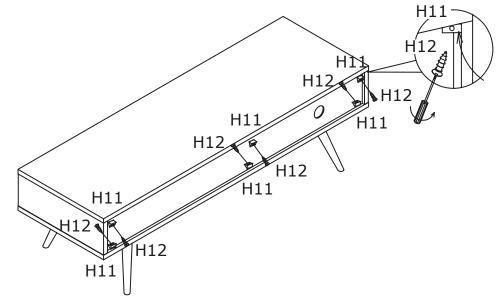


 
Turn the lowline upright. If necessary, gently adjudt the top panel sideways in either direction until xx and yy are equal. Fix back panel connector (H11) to grooves as shown by using screw (H12), fix backpanel to middle part by using screw (H12) as shown.



#### Step 10

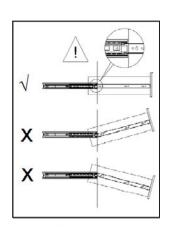


 

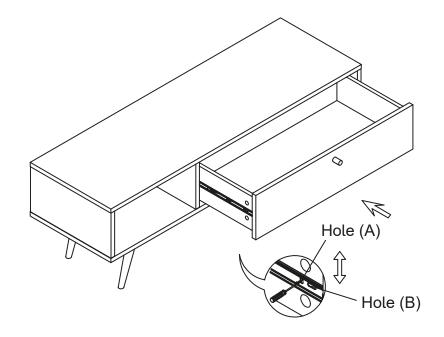

Position drawer so that slide runner (H7-2) aligns with slide track (H7-1) as shown, gently push drawer into closed position. The drawer can be adjusted upwards or downwards by re-installing the screw from hole (A) to hole (B).



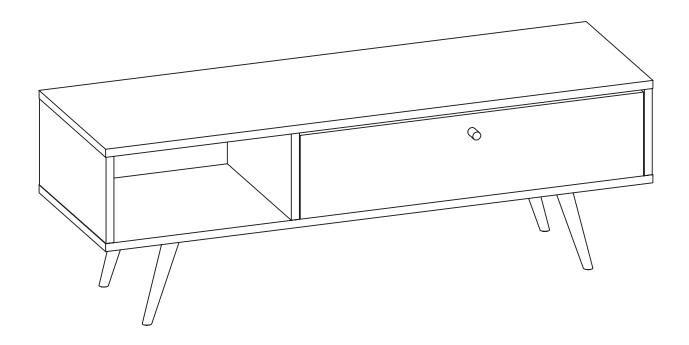

# **Job Complete!**

In the interest of our environment please dispose of all packaging thoughtfully .