

ELKE CHAIR 1 STR WALNUT

CAUTION:

Do not stand on, or use this product as a step ladder. Use this product for seating one person at a time. This product should be checked periodically to ensure all components are secure and all hardware is tight.

RECOMMENDED WEIGHT CAPACITY 120 KG

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



 
Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly checklist





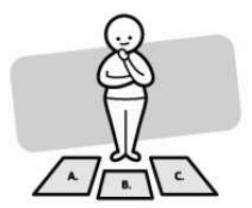

Identify and lay out all the components before you begin assembly.

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.


! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


! Please see page 2 for any safety requirements or weight restrictions.



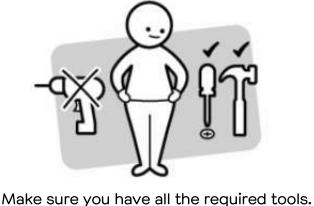

Never use power tools unless instructed.


What you need

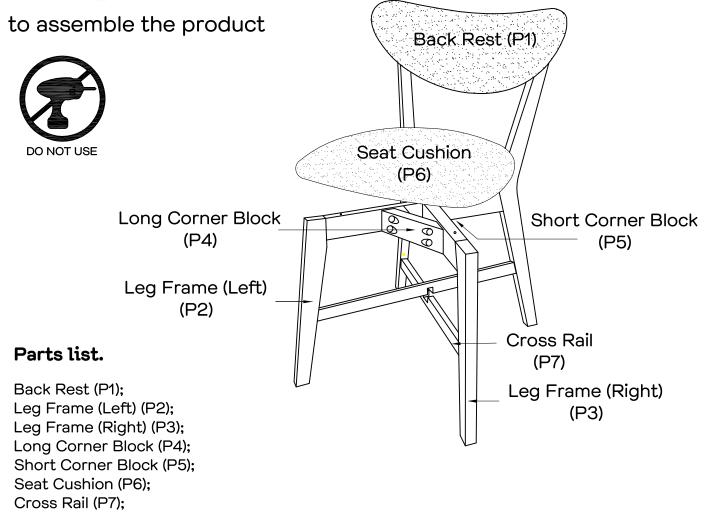

Hardware Pack.


	; ;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;;			
1 x Allen Key (H1)	4 x 60mm Bolt (H2)	: 2 x 50mm Bolt (H3)	8 x 35mm Bolt (H4)	4 x 30mm Bolt (H5)
Q	\bigcirc			\bigcirc
14 x Spring Washer (H6)	14 x Flat Washer (H7)	1 x Long Screw (H8)	1 x Short Wood Bolt (H9)	4 x Wood Button (H1O)



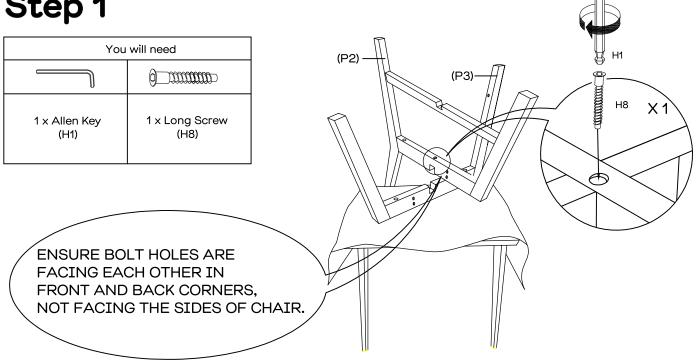

Attach Leg Frame (Right) (P3) to Leg Frame (Left) (P2) using 1 x Long Screw (H8) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.


Step 2

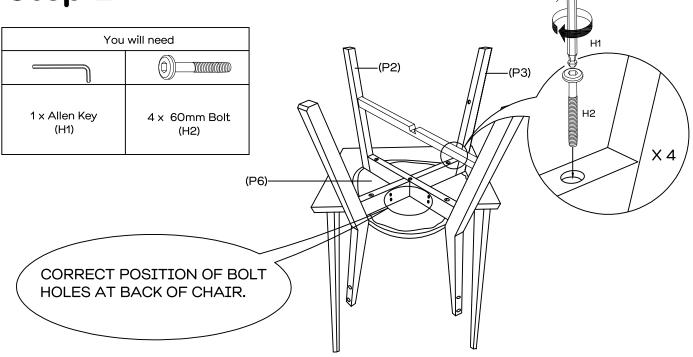

Attach Seat Cushion (P6) to Leg Frame (P2) & (P3) using 4 x 60mm Bolt (H2) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8. fantasticfurniture.com.au




You will need			
1 x Allen Key (H1)	4 x 35mm Bolt (H4)		
Q	\bigcirc		
4 x Spring Washer (H6)	4 x Flat Washer (H7)		

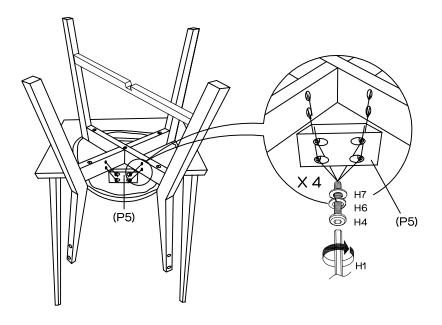


Attach Short Corner Block (P5) to leg Frame (P2) & (P3) using 4 x Spring Washer (H6), $4 \times$ Flat Washer (H7) and 4×35 mm Bolt (H4) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.


Step 4

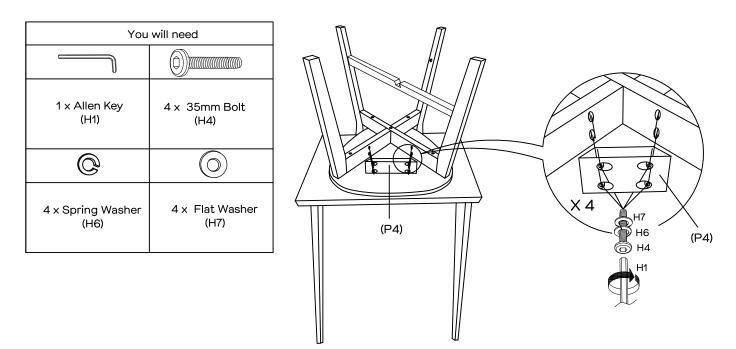

 Attach Long Corner Block (P4) to Leg Frame (P2) & (P3) using 4 x Spring Washer (H6),4 x Flat Washer (H7) and 4 x 35mm Bolt (H4) by using Allen Key (H1).






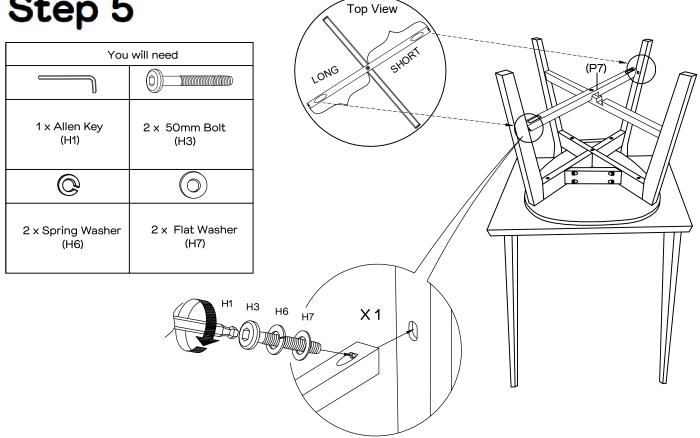


Attach Cross Rail (P7) to Leg Frame (Right) (P3) using 2 x 50mm Bolt (H3), 2 x Spring Washer (H6) and 2 x Flat Washer (H7) by using Allen Key (H1). DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.

Step 6

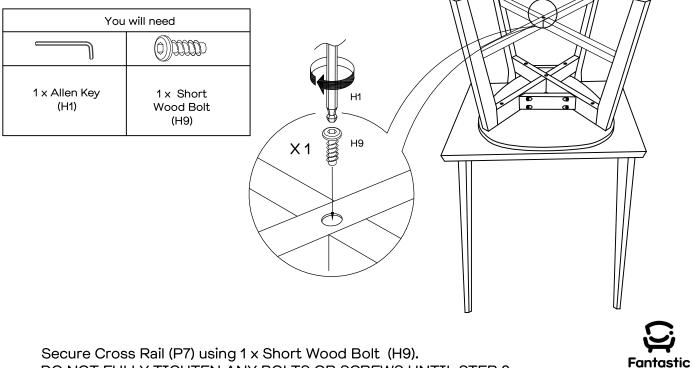



DO NOT FULLY TIGHTEN ANY BOLTS OR SCREWS UNTIL STEP 8.



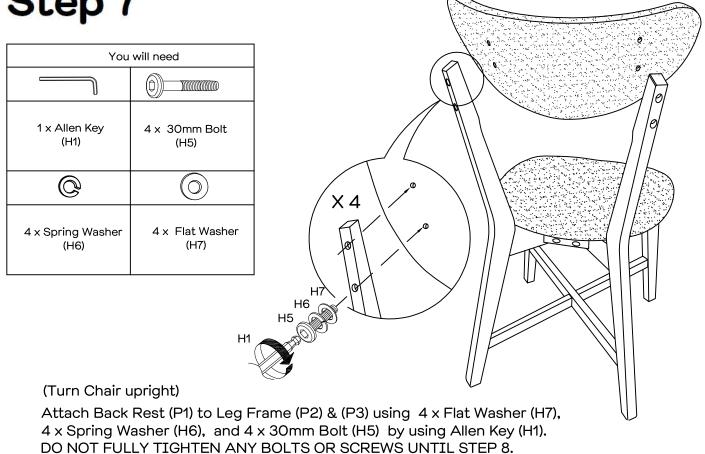

Step 8

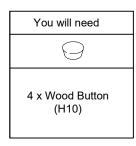

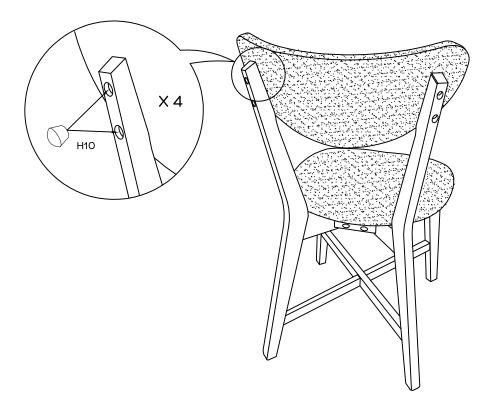

Place chair on a flat surface and press the seat to level the legs. Tighten all screws and bolts .Attach 4 X Wood Button (H10) to Leg Frame (P2) & (P3) by pushing into hole firmly.

Fantastic Furniture





In the interest of our environment please dispose of all packaging thoughfully.



fantasticfurniture.com.au

Page 9



Version 1.0





WARNING : For safety any straps used to secure hardware or furniture parts must be removed before this product is used.

Enjoy

Your purchase from Australia's Best Value furniture






Assembly checklist



Read through the instructions carefully before you begin.

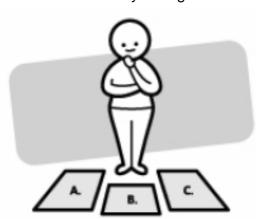

Identify and lay out all the components before you begin assembly.



Make sure you have all the required tools. Never use power tools unless instructed.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.


! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help centre for further assistance.




What you need

to assemble the product

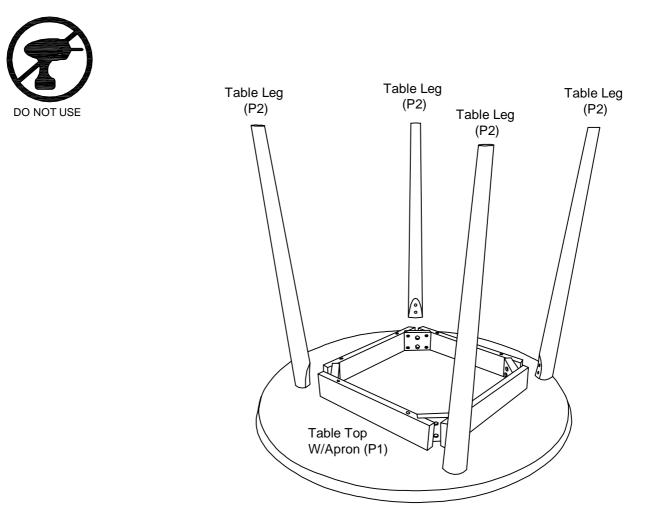


Parts list Table Top (P1); Table Leg (P2); Hardware Pack.

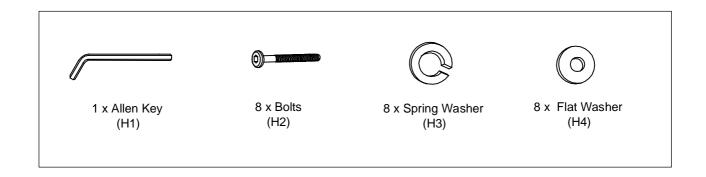



You will need			
	•		
8 x Bolts (H2)	1 x Allen Key (H1)		
Q	\bigcirc		
Spring Washer (H3)	Flat Washer (H4)		

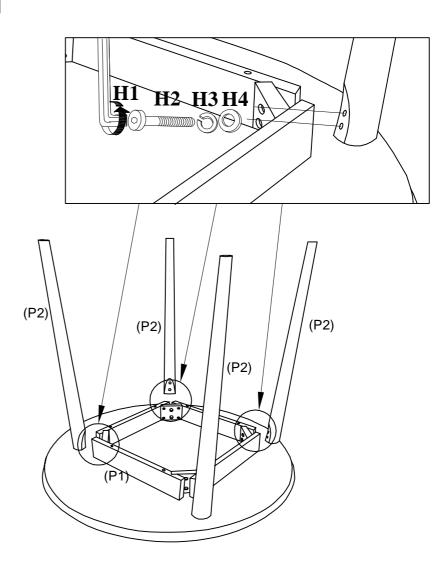

Attach table legs to table apron using Bolts (H2) and Washers (H3) & (H4). Note : Do not tighten bolts until table is on flat surface.





Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.



www.fantasticfurniture.com.au

PAGE 6