



Version 1.0

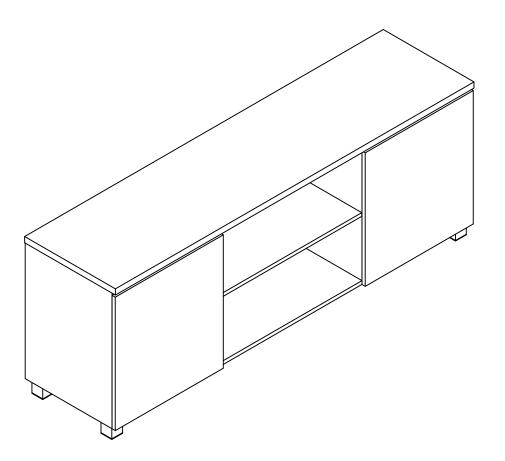

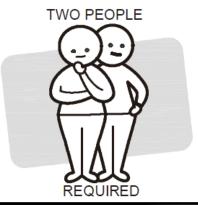

VERONA LOWLINE MEDIUM

www.fantasticfurniture.com.au

WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy

Your purchase from Australia's Best Value Furniture Store




Assembly checklist



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

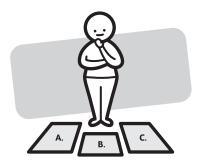

Identify and lay out all of the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


What you Need


to assemble the product

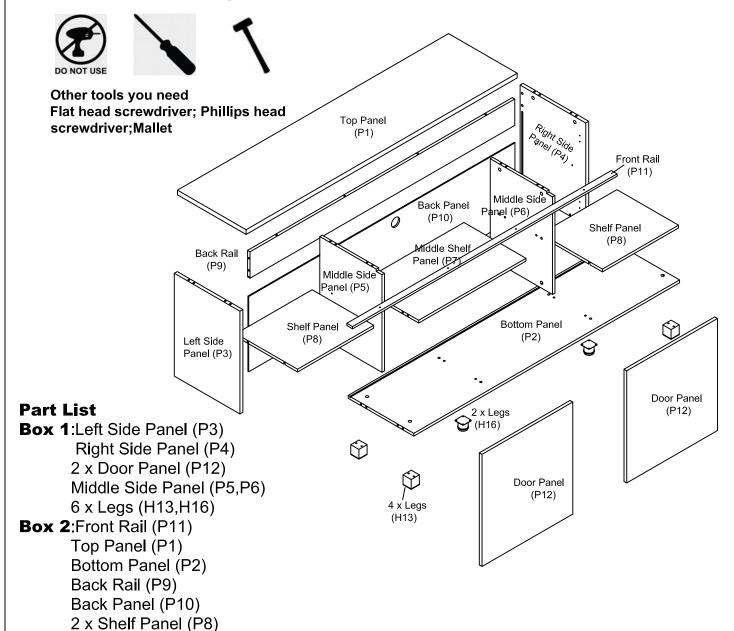

Hard list


Middle Shelf Panel (P7)

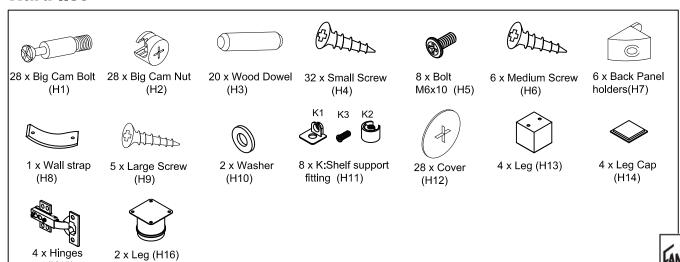

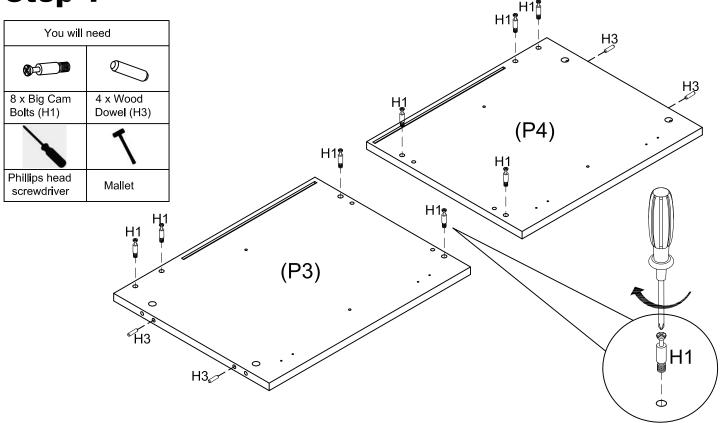

Using a mallet if needed, Insert 4 x Dowel (H3) onto the Left Side Panel (P3) and Right Side Panel (P4). Screw 8 x Big Cam Bolt (H1) onto the Left Side Panel (P3) and Right Side Panel (P4).


Step 2

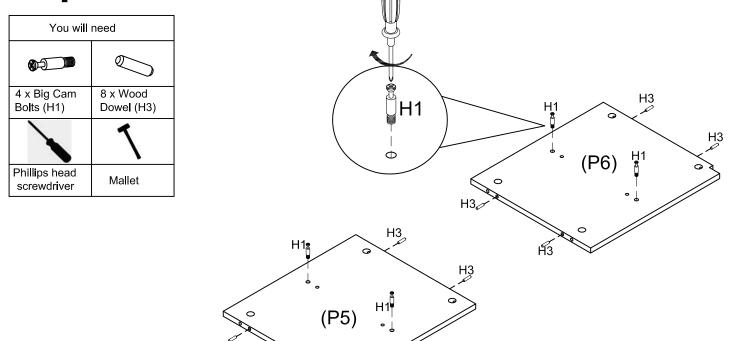

Using a mallet if needed, Insert 8 x Dowel (H3) onto the Middle Side Panel (P5,P6). Screw 4 x Big Cam Bolt (H1) onto the Middle Side Panel (P5,P6).

H3 **⊘**




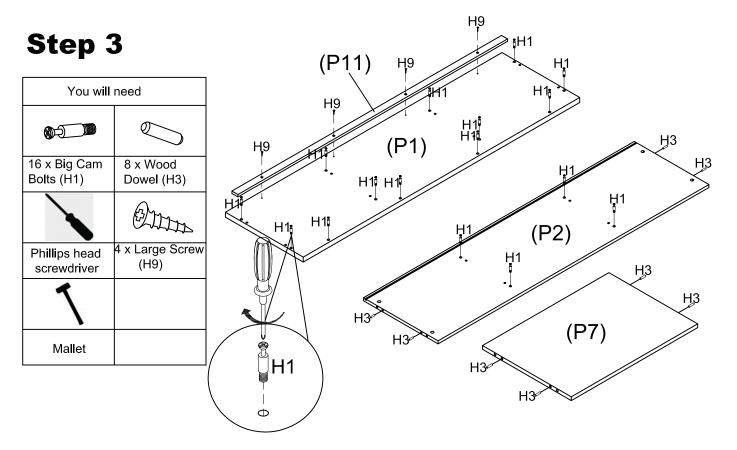

Using a mallet if needed, Insert 8 x Dowel (H3) onto the Bottom Panel (P2) and Middle Shelf Panel (P7).

Screw 16 x Big Cam Bolt (H1) onto the Top Panel (P1) and Bottom Panel (P2). Tighten the Front Rail (P11) to the Top Panel (P1) with 4 x Large Screw (H9)

Step 4

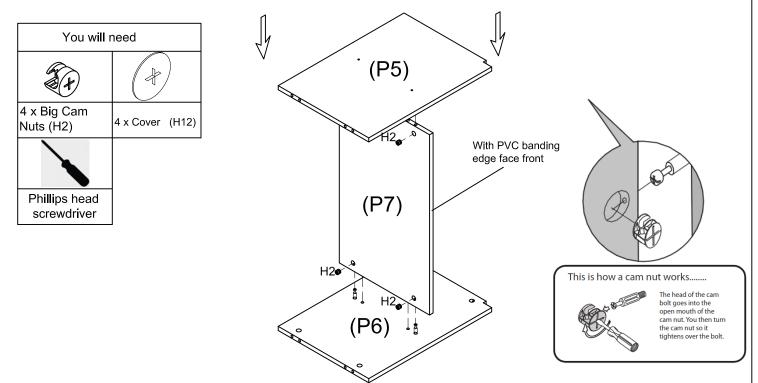


Position the Middle Panel (P5,P6) to the Middle Shelf Panel (P7) .


Insert the 4 x Big Cam Nuts (H2) to the Middle Shelf Panel (P7) make sure the opening on nuts is facing incoming cam bolt,turn clockwise to lock.

Insert the 4 x Covers (H12) onto the Big Cam Nuts (H2). www.fantasticfurniture.com.au



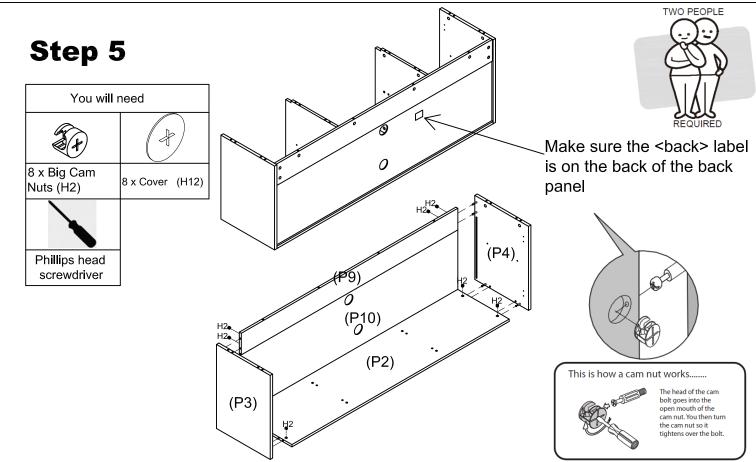


Position the Side Panel (P3,P4) to the Bottom Panel (P2) and Back Rail (P9) and Back Panel (P10). Insert the 8 x Big Cam Nuts (H2) to the Bottom Panel (P2) and Back Rail (P9) make sure the opening on nuts is facing incoming cam bolt,turn clockwise to lock. Insert the 8 x Covers (H12) onto the Big Cam Nuts (H2).

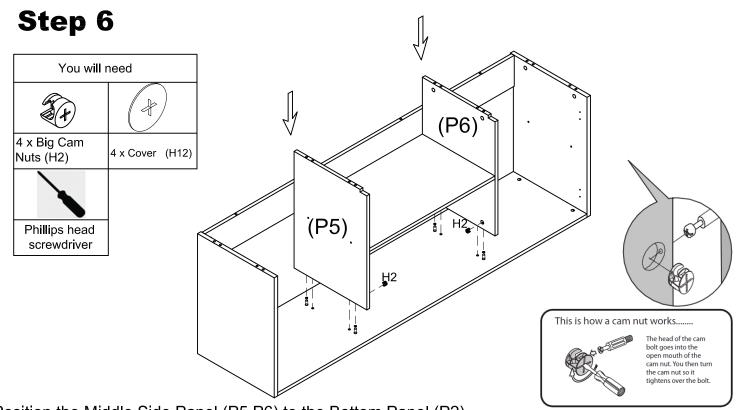

Position the Middle Side Panel (P5,P6) to the Bottom Panel (P2).

Insert the 4 x Big Cam Nuts (H2) to the Middle Side Panel (P5,P6) make sure the opening on nuts is facing incoming cam bolt,turn clockwise to lock. Insert the 4 x Covers (H12) onto the Big Cam Nuts (H2).




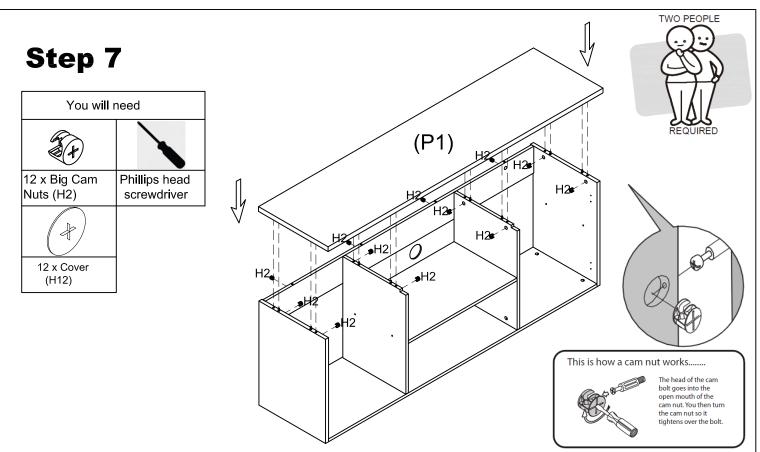


Position the Top Panel (P1) to the Left Side Panel (P3) and Right Side Panel (P4) and Middle Side Panel (P5,P6) and Back Rail (P9).

Insert the 12 x Big Cam Nuts (H2) to the Left Side Panel (P3) and Right Side Panel (P4) and Middle Side Panel (P5,P6) and Back Rail (P9) make sure the opening on nuts is facing incoming cam bolt,turn clockwise to lock. Insert the 12 x Covers (H12) onto the Big Cam Nuts (H2).


Step 8

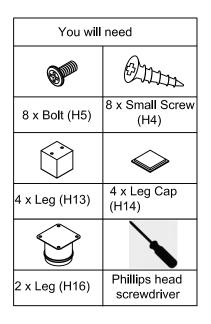

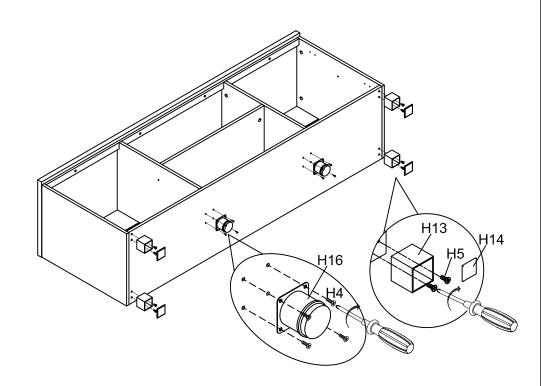


Attach 4 x Leg (H13) to Bottom Panel by using 8 x Bolt (H5), then insert 4 x Leg Cap (H14) onto Leg (H13).attach 2 x Leg (H16) to Bottom Panel by using 8 x Small Screw (H4).



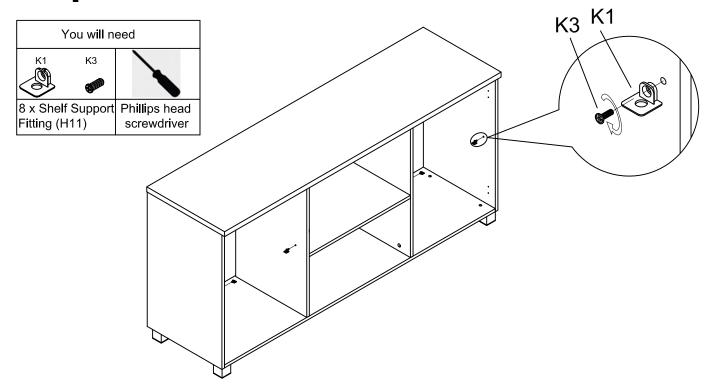


Insert 8 x Shelf Support Fitting (H11-K1) onto the Left Side Panel (P3) and Right Side Panel (P4) and Middle Side Panel (P5,P6) by using 8 x Shelf Support Fitting (H16-K3).

Step 10

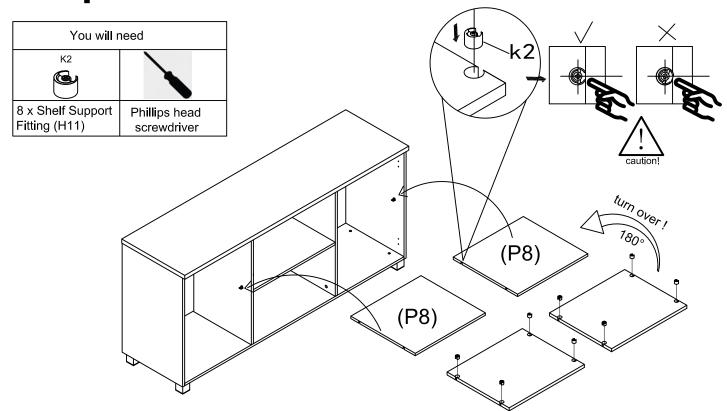


Insert 8 x Shelf Support Fitting (H11-K2) onto the Shelf Panel (P8) make sure the opening on Shelf Support Fitting is facing to the panel edge.turn the panel down then position to the Shelf Support Fitting (H11-K1).



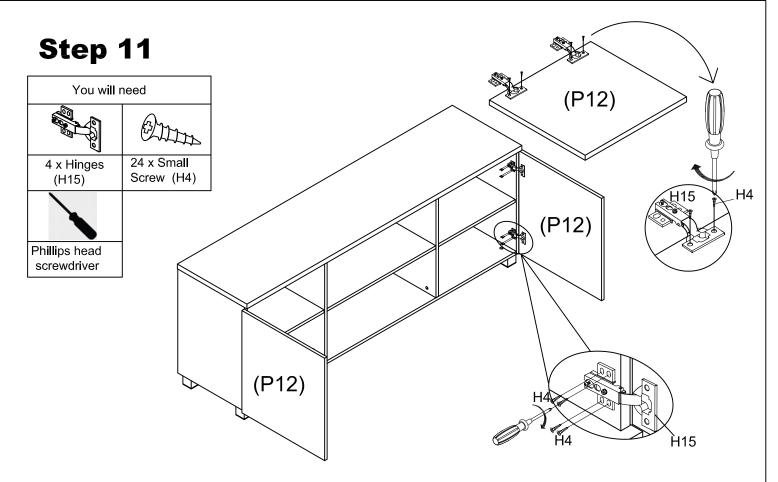


Attach 4 x Hinges (H15) onto the Door Panel (P12) by using 8 x Small Screw (H4) then attach the Hinges (H15) onto the Side Panel (P3,P4) by using 16 x Small Screw (H4).

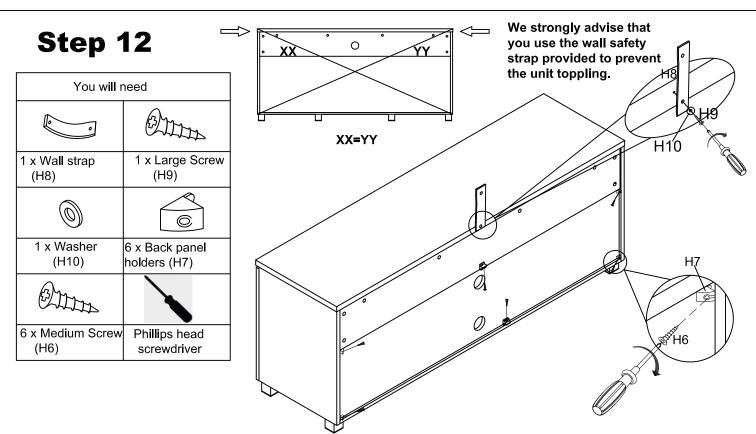

If necessary, gently adjust the Top Panel (P1) sideway in either direction untill XX and YY are equal Slide 6 x Back Panel holders (H7) into the grooves as shown. Insert 6 x Medium Screw (H6) to fix them into place. Tighten the Screw (H6) with a Phillips Head Screwdriver Tighten the Wall Strap (H8) to the Top Panel (P1) with Large Screw (H9) and Washer (H10).


www.fantasticfurniture.com.au

 
PAGE 10



TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).

 STEP 13.1 Open the door.




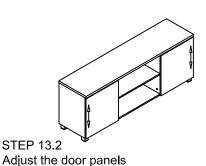

MOVE DOOR UPWARD


OR DOWNWARD Unscrew 2 screws in round holes Loosen 2 screws in oval holes a bit.

Tighten 2 screws in oval holes. Screw in 2 screws in round holes

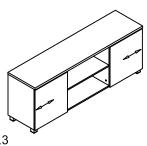

STEP 13.3 Adjust the flush between door panel and side panel

upward or downward

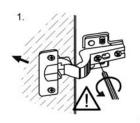


MOVE DOOR OUTWARD by turning this screw counter-clockwise




KEEP DOOR IN RIGHT **POSITION**



MOVE DOOR OUTWARD by turning this screw clockwise

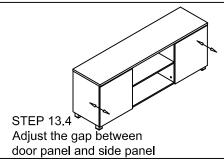

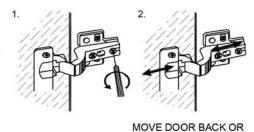


FORTH Loosen this screw a bit.



Re-tighten this screw.


Step 14

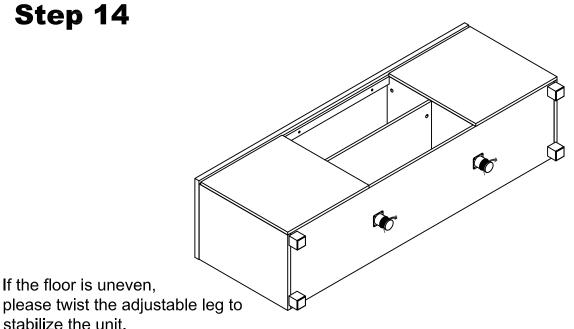


stabilize the unit. www.fantasticfurniture.com.au

If the floor is uneven,

PAGE 11

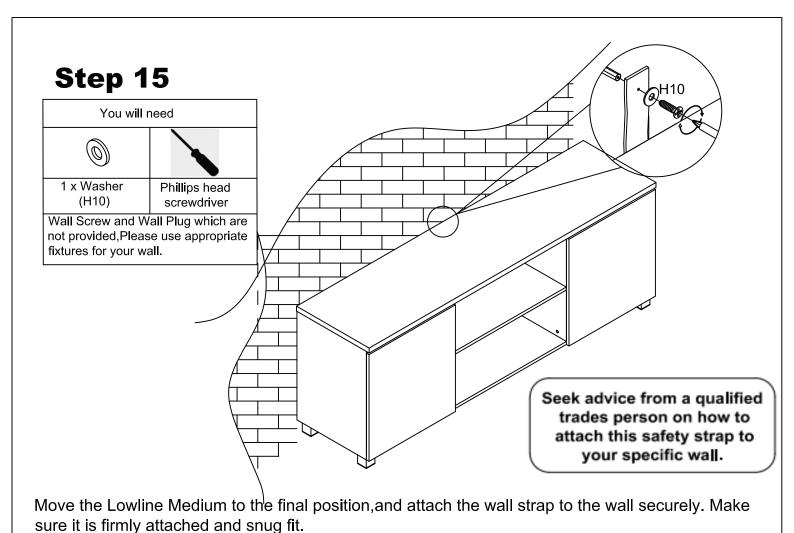

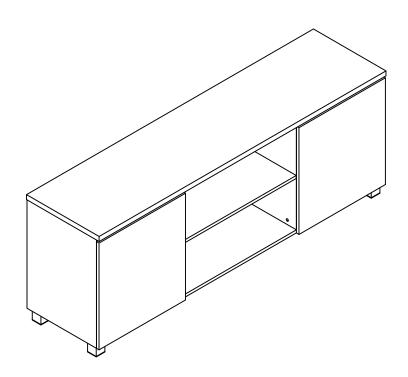

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.





THIS TOP IS FINISHED WITH A CLEAR PU LACQUER

Avoid placing hot items directly onto the surface unless using a thick insulation material such as placemats or coasters. Heat may lead to discolouration or other damage to the surface of the product.

Use a soft cloth that has been dampened in water to clean the surface of this product. Do not use abrasive cleaners, furniture wax or polish on the surface of this product, as it may damage the surface.

CAUTION: FREQUENT EXPOSURE TO DIRECT SUNLIGHT OR SIMILAR SOURCES MAY CAUSE THE SURFACE TO DISCOLOUR OR FADE.