Assembly Instructions

HOME ROBE

2 Door 870mm

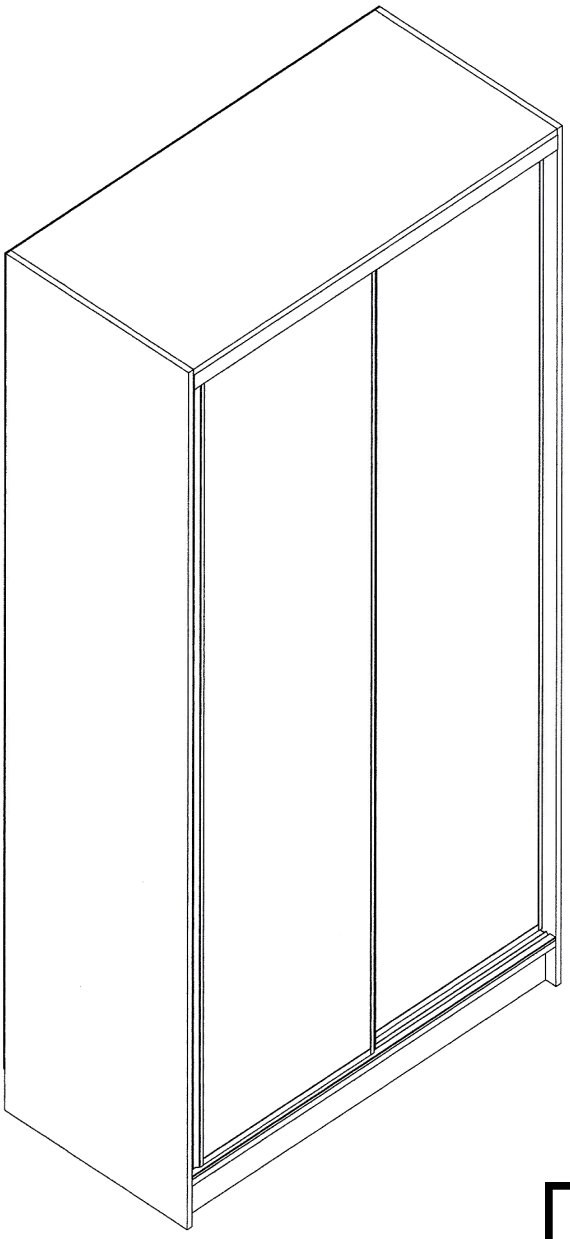

2 PEOPLE REQUIRED

PROUDLY MADE IN AUSTRALIA

FANTASTIC FURNITURE

WARNING

FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

Read Instructions carefully.
Check no parts are missing.

2

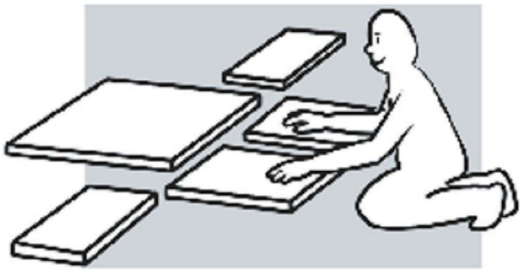

Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.

3

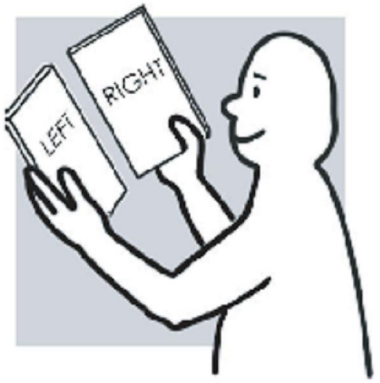

Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

4

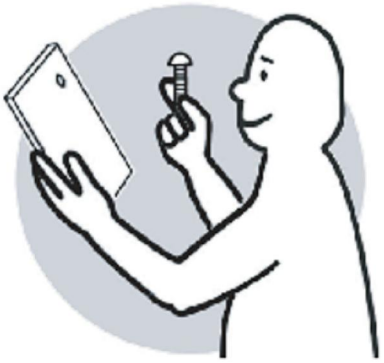

Separate and identify each component from the hardware pack and rest each one in its proper **location before fastening.**

5

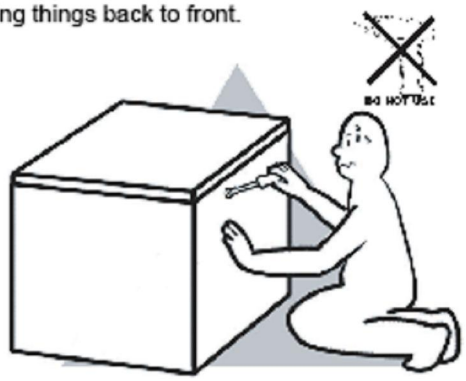

DO NOT fully tighten screws (leave slightly loose).When the item is fully assembled tighten the screws - but do not over tighten.

6

If glue is required DO NOT set until you are certain that the parts belong together.

<u>It is recommended the wardrobe is assembled in the room that it is intended for.</u>

(CLEAR FLOOR SPACE IN ROOM IF REQUIRED)

What You Need

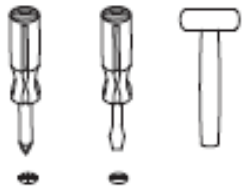

(tools not provided)
Phillips Head Srewdriver
Flat Head Screwdriver
Mallet
Hammer

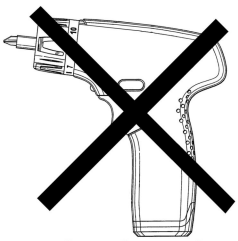

DO NOT USE

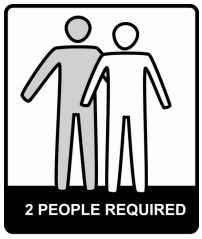

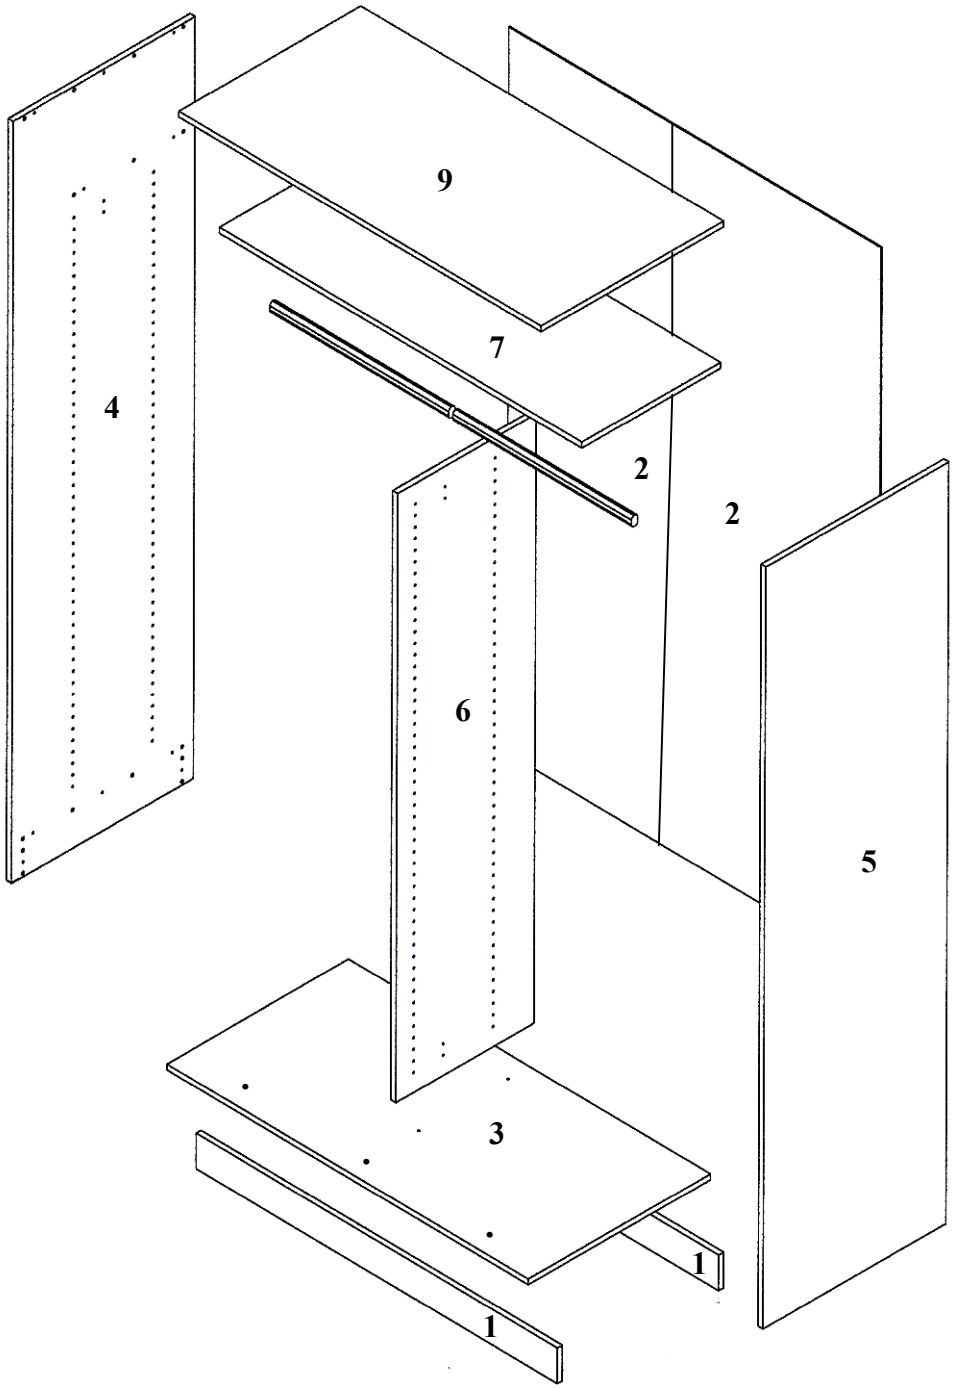

---

24 x CONFIRMAT SCREWS

6 x 5/8 PAN HEAD SCREWS

20 X CONFIRMAT SCREW CAPS

3 x BAGS OF NAILS

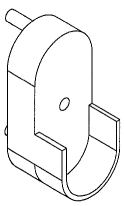

4 x Hanging Rail Brackets

2 x Hanging Rails

4 x 1/2 6g C/S SCREWS

2 x Wall Fixing Brackets

STEP 1

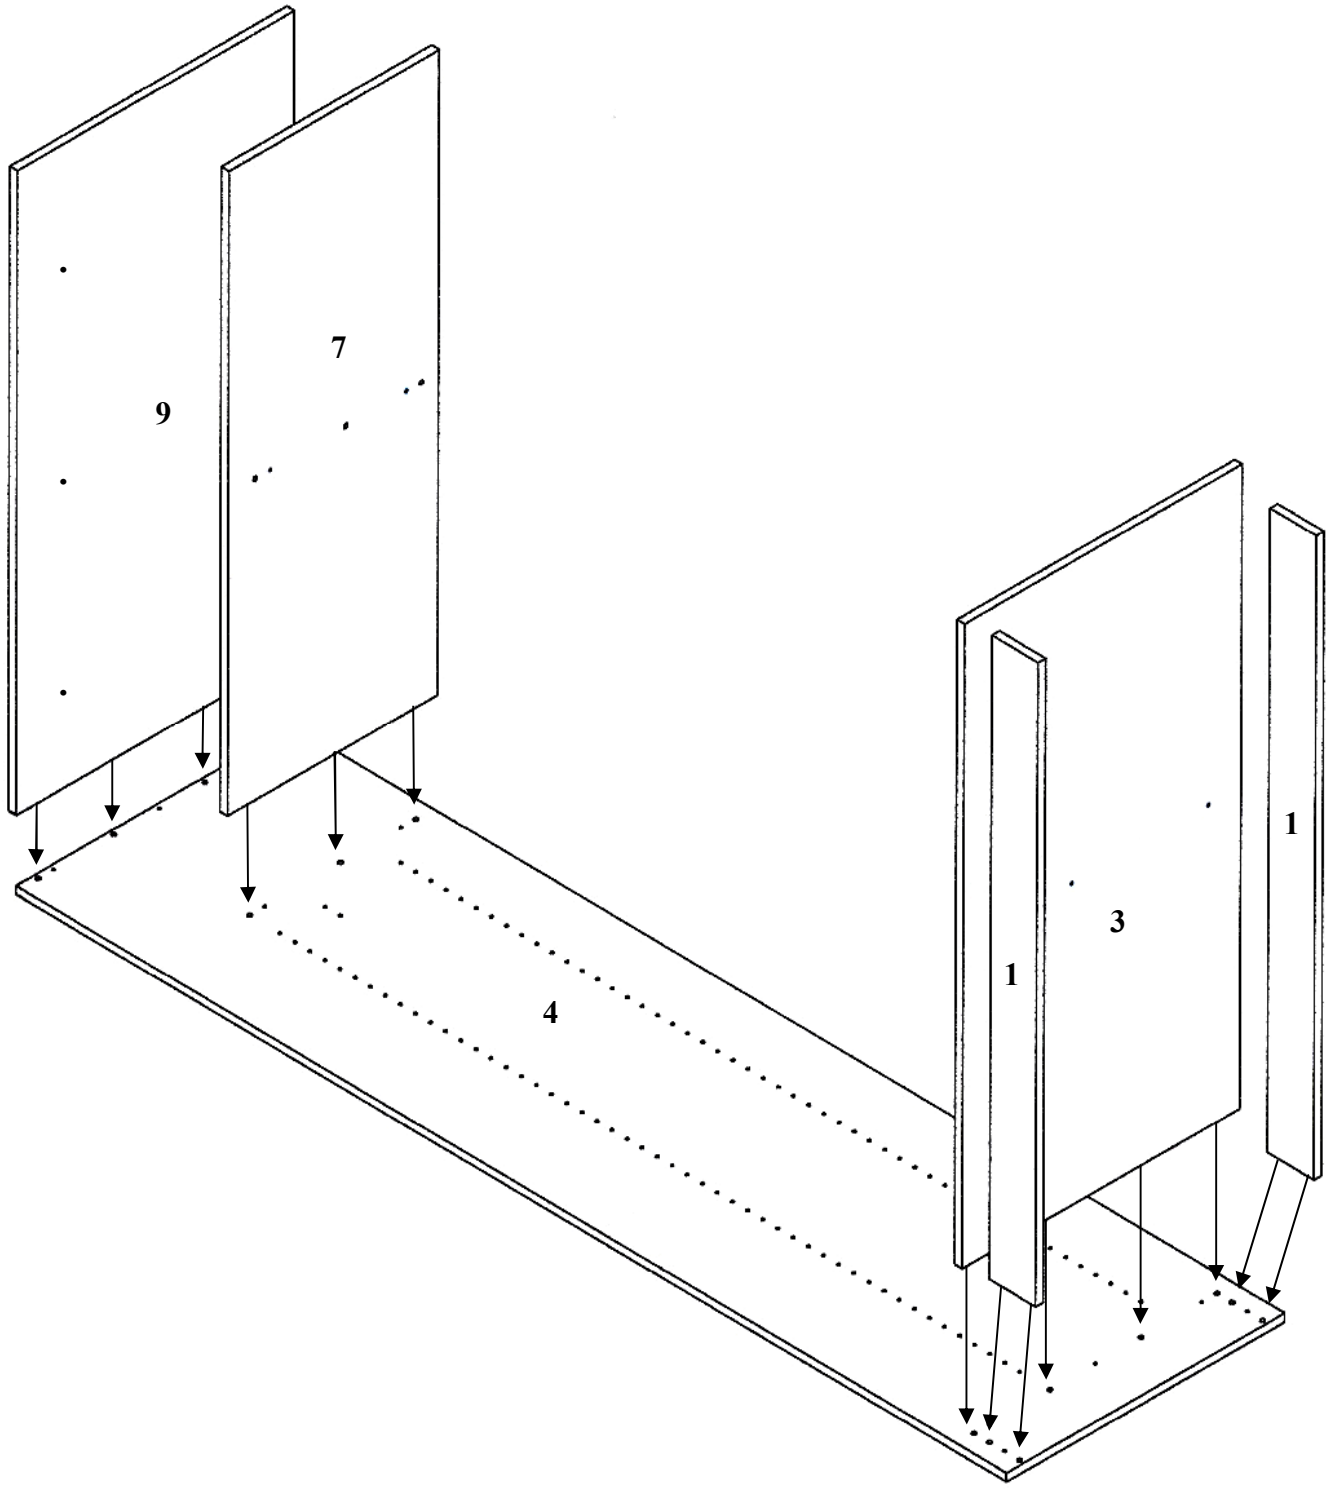

INSERT THE PANELS ONTO PART 4 AS SHOWN IN PICTURE

STEP 2

CONFIRMAT SCREWS THROUGH PART 7 USING THE HOLES PROVIDED INTO PART 6

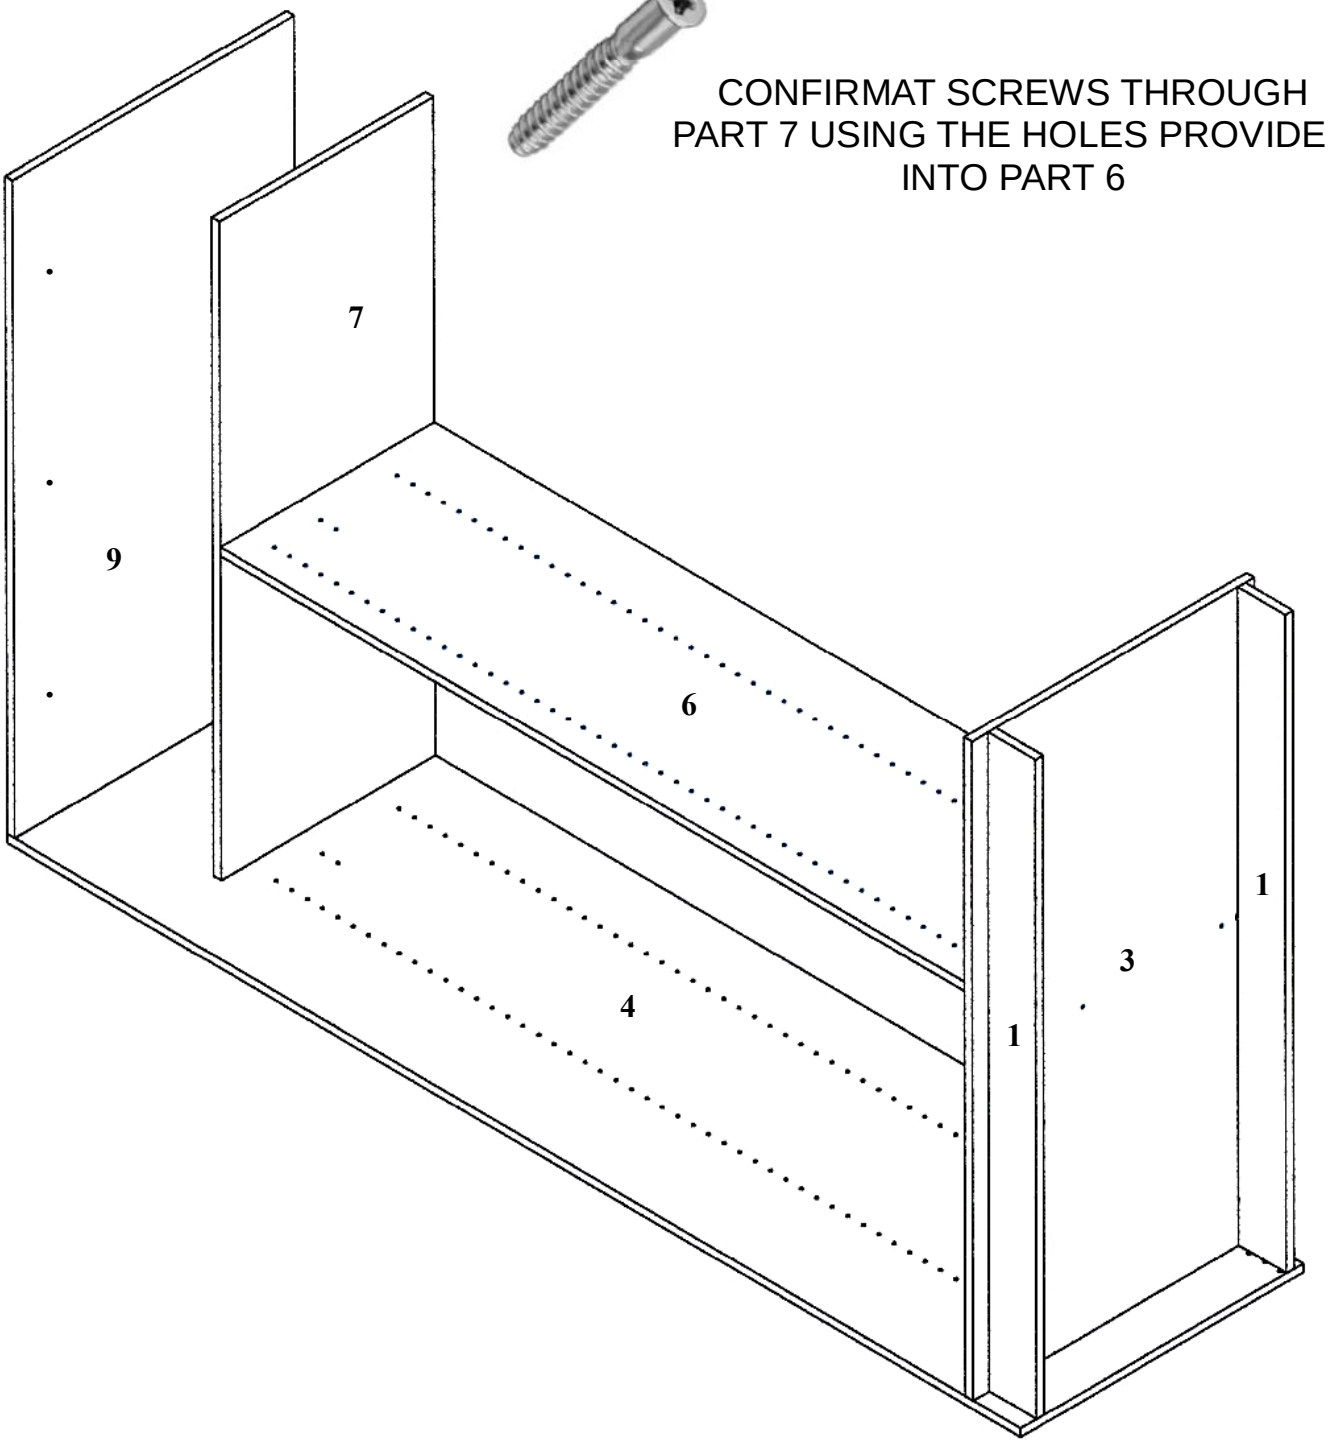

INSERT THE PANELS 6 BETWEEN PARTS 3 & 7 AS SHOWN IN PICTURE.

STEP 3

CONFIRMAT SCREW & CAP

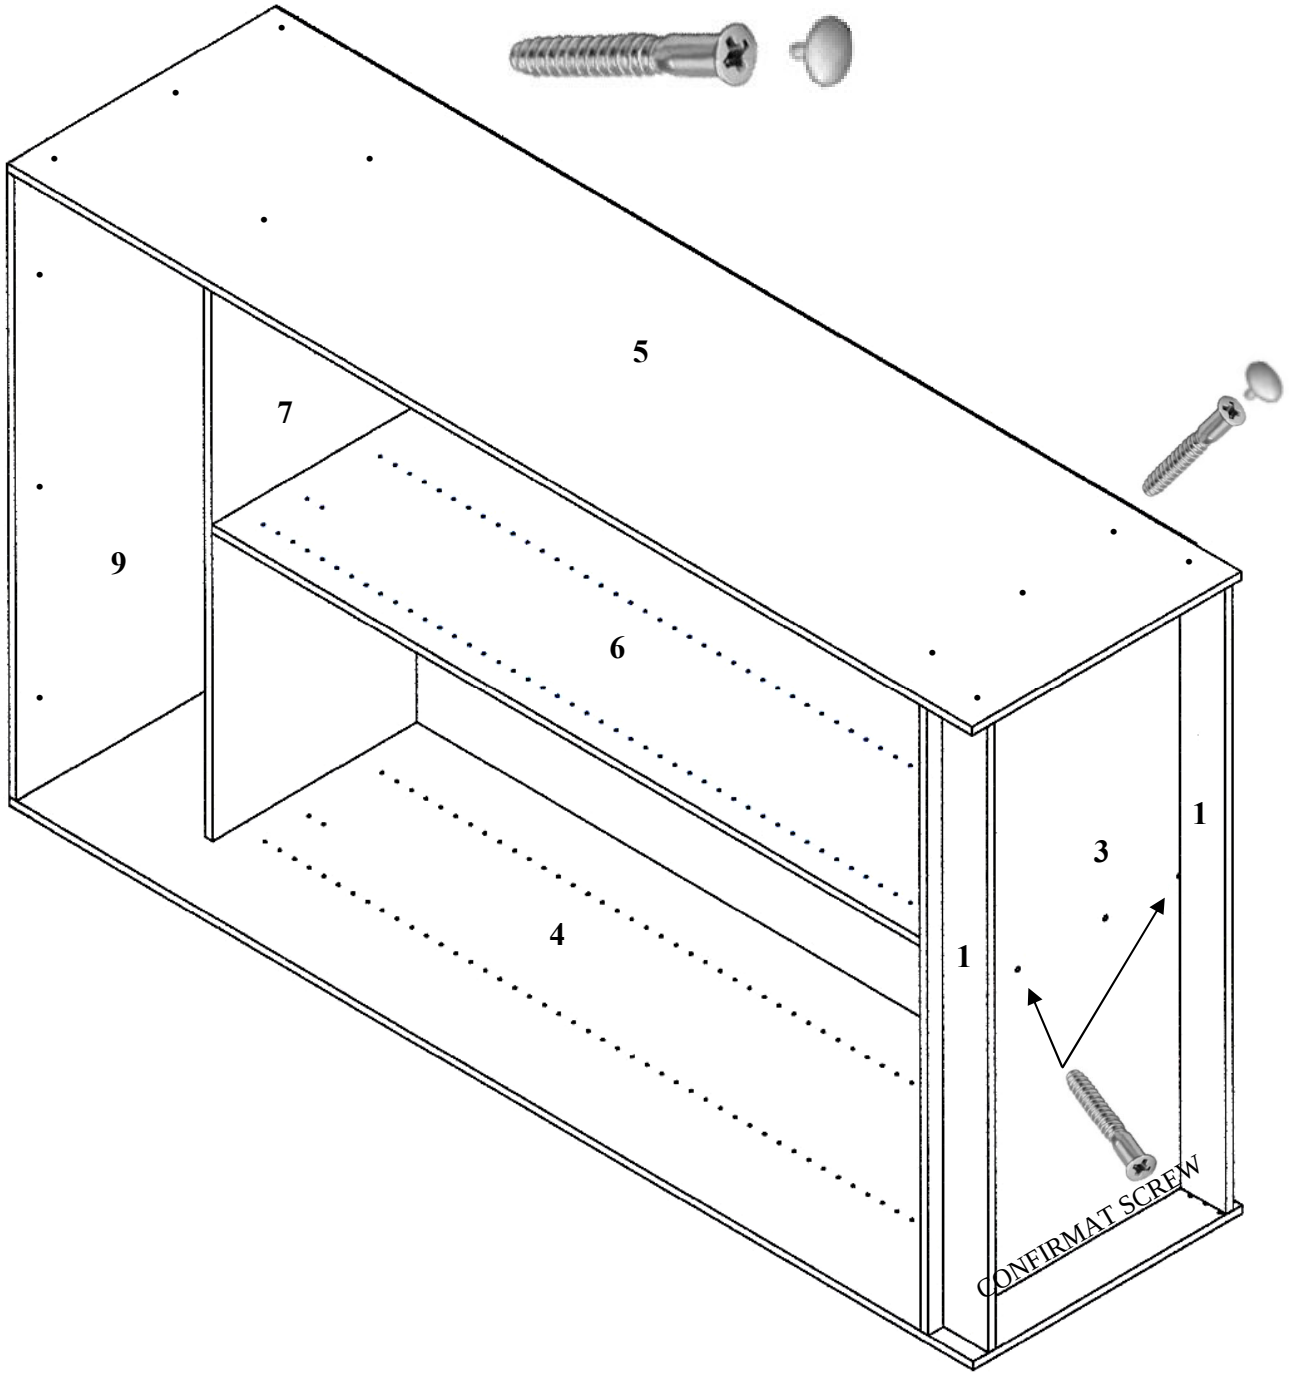

INSERT THE GABLE (5) INTO THE GUIDE HOLES OF PANEL 3, 7 & 9 TO COMPLETE THE MAIN CARCASS.

INSERT ALL CONFIRMAT SCREWS AND CAPS INTO THE CARCASS USING THE HOLES PROVIDED.

NOTE: THE CONFIRMAT SCREWS USED ON THE BOTTOM AND THE SHELF OF THE UNIT DO NOT NEED CAPS.

STEP 4

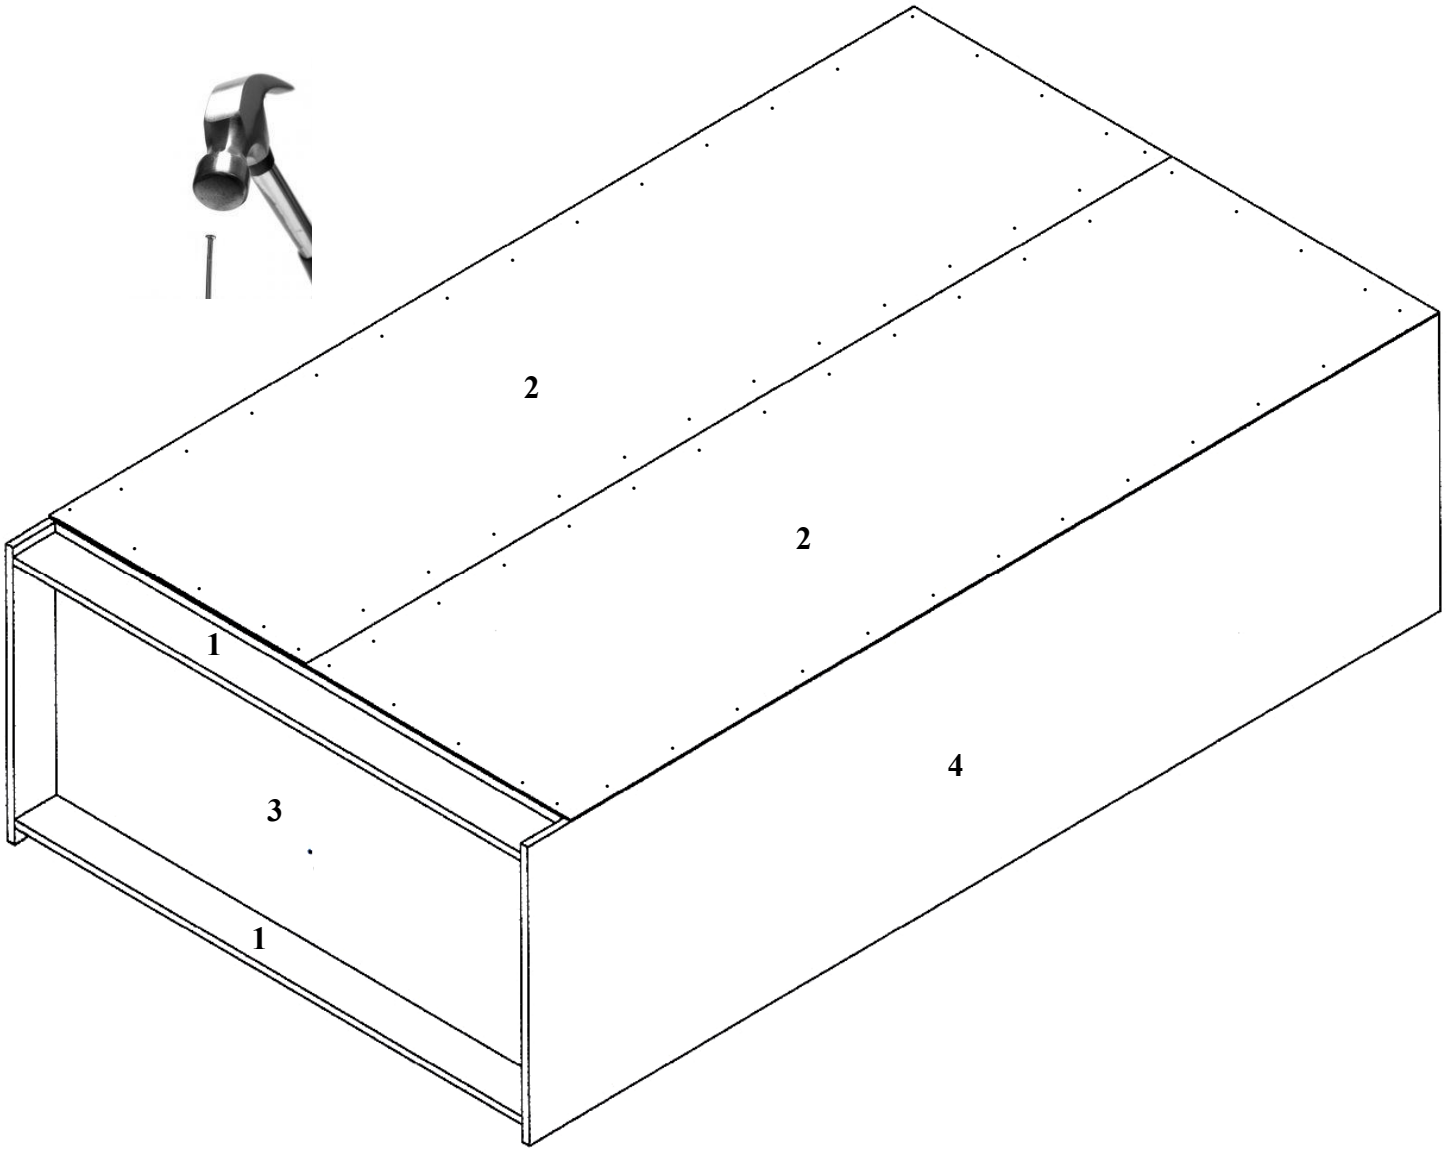

MAKE SURE THE UNIT IS “SQUARE” WHEN NAILING BACK PANELS

USING THE BAGS OF NAILS, NAIL ON THE BACK PANELS TO THE MAIN CARCASS.

MAKING SURE TO NAIL CLOSE TO THE EDGES SO THE NAIL GOES INTO THE PARTICLE BOARD BEHIND IT.

STEP 5

USING THE GUIDE HOLES PROVIDED IN PANELS 4,5 & 6 INSERT THE HANGING RAIL BRACKETS AND SCREW IN BRACKETS WITH 1/2 6g C/S SCREWS AT THE TOP OF THE UNIT AND IN TURN INSERT THE HANGING RAIL INTO THESE BRACKETS

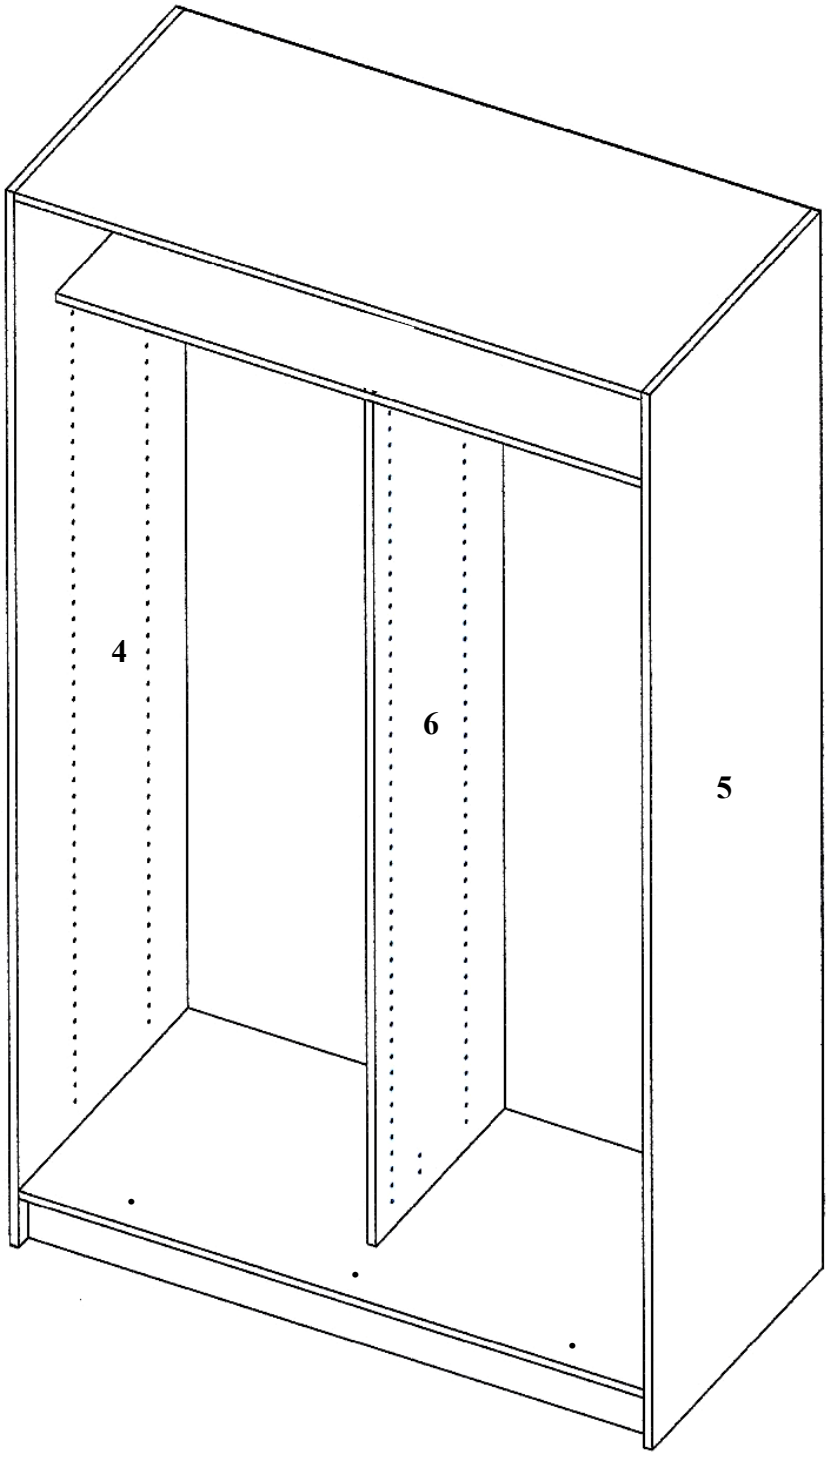

YOUR CARCASS IS NOW COMPLETE

In the interest of our environment
Please dispose of all packaging thoughtfully.

DOOR ASSEMBLY

Philips Head Screwdriver
(Not Supplied)

6 x 5/8 PAN HEAD SCREWS

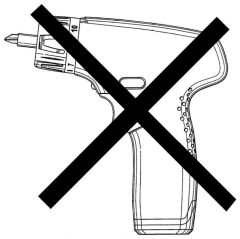

DO NOT USE

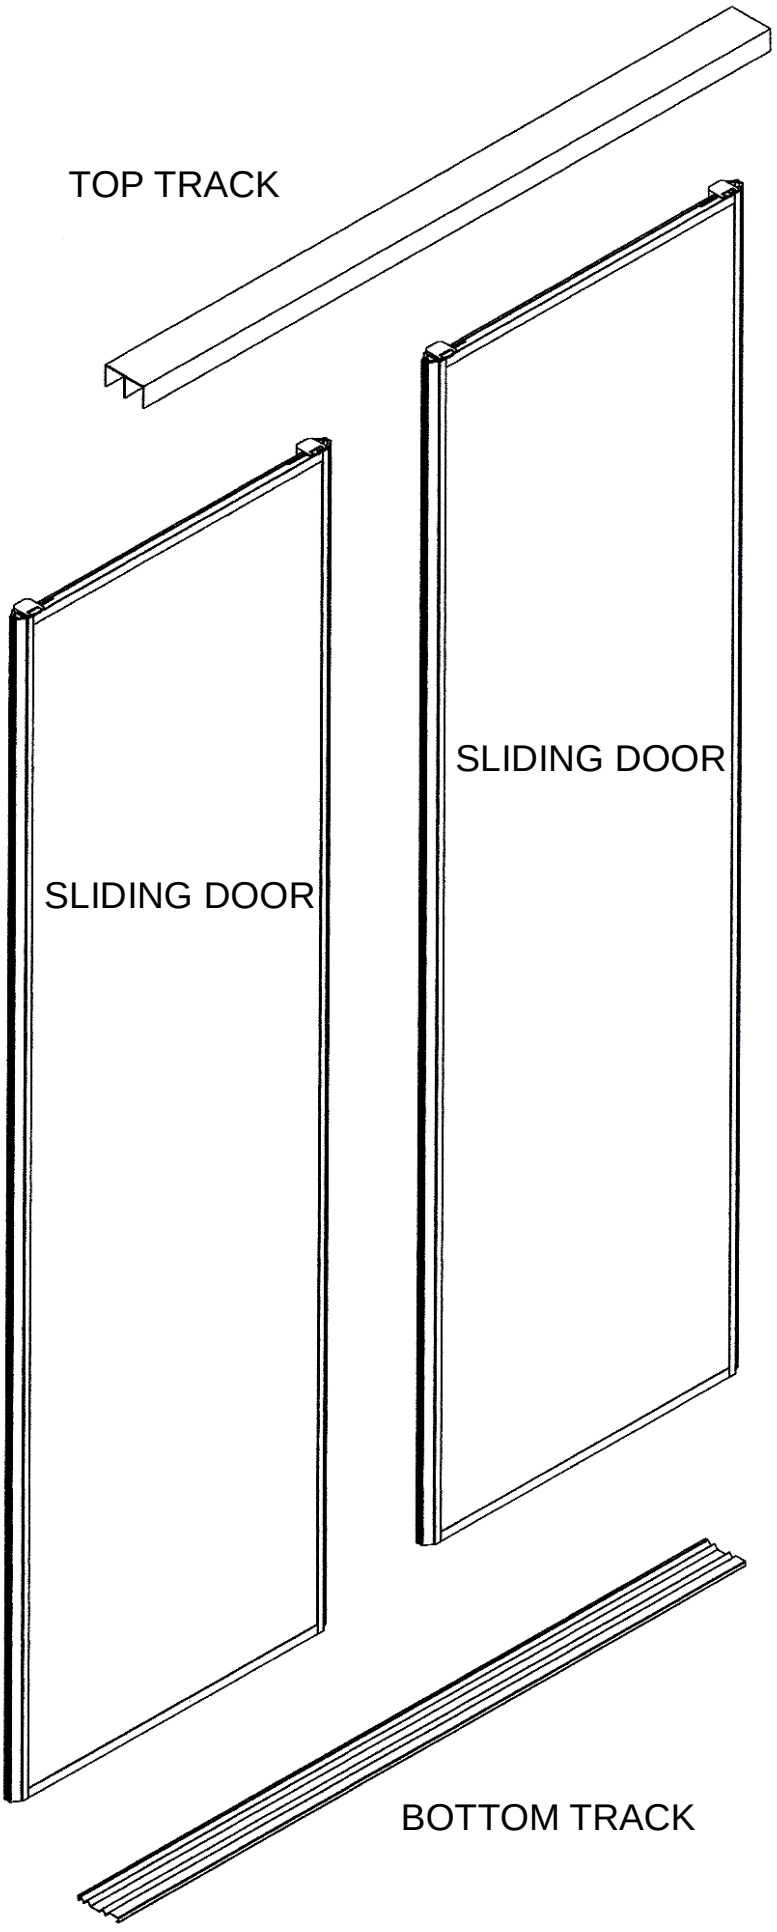

STEP 6

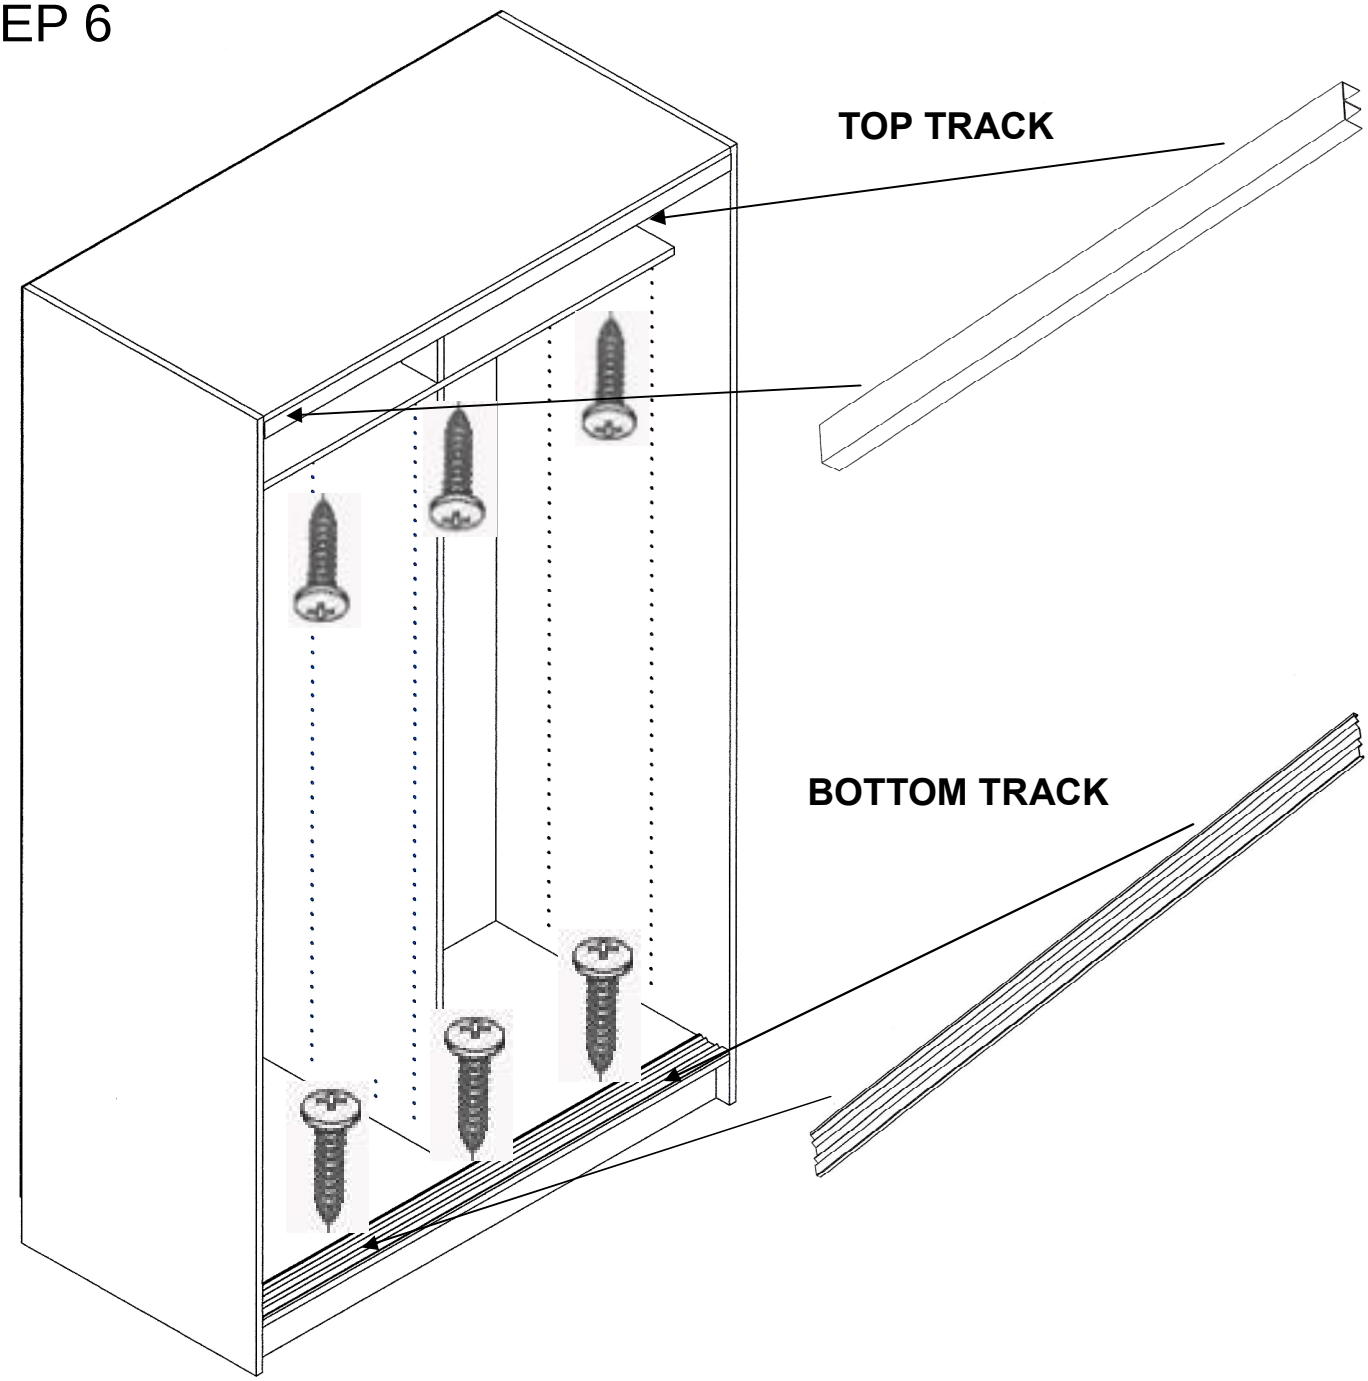

USING THE 5/8 PAN HEAD SCREWS PROVIDED, SCREW IN THE TOP AND BOTTOM TRACK, USING THE HOLES PROVIDED IN THE TRACK.

MAKE SURE THAT THE FRONT EDGE OF THE WARDROBE AND THE FRONT EDGE OF THE TRACK LINE UP (AS SHOWN).

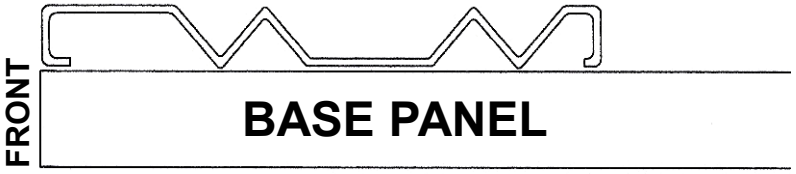

STEP 7

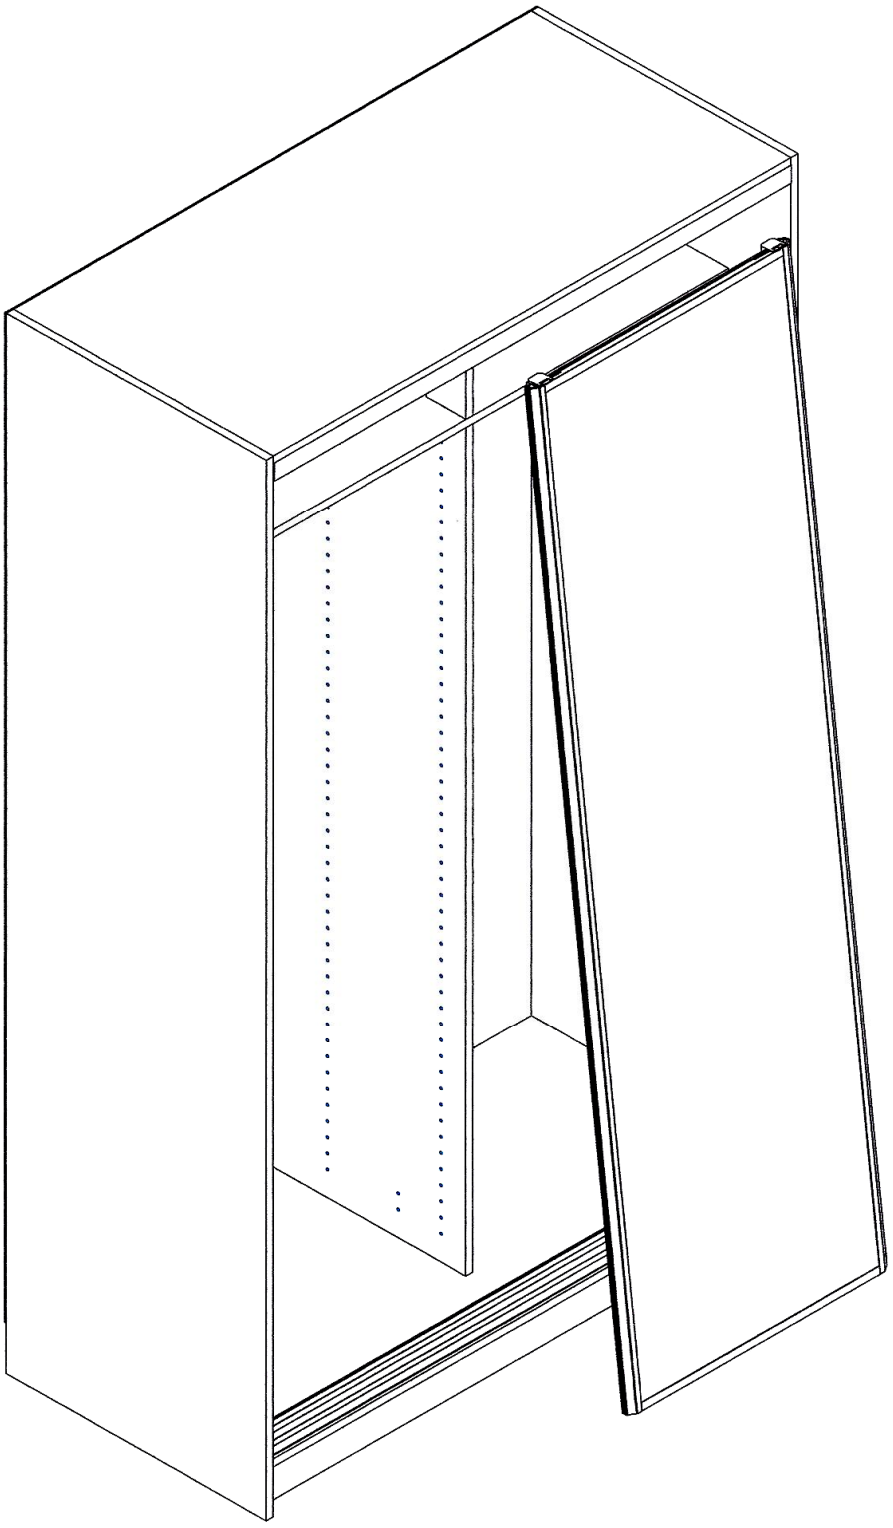

TO FIT THE DOORS INTO THE UNIT HOLD THE ASSEMBLED DOOR BY THE SIDES AND LINE UP THE TOP INTO THE BACK GROVE OF THE TOP TRACK. THEN CONTINUE TO INSERT THE DOOR INTO THE BOTTOM TRACK, **MAKING SURE THE WHEELS ON THE DOOR SLIDE INTO THE BACK GROVE OF THE BOTTOM TRACK (AS SHOWN IN PICTURE)**

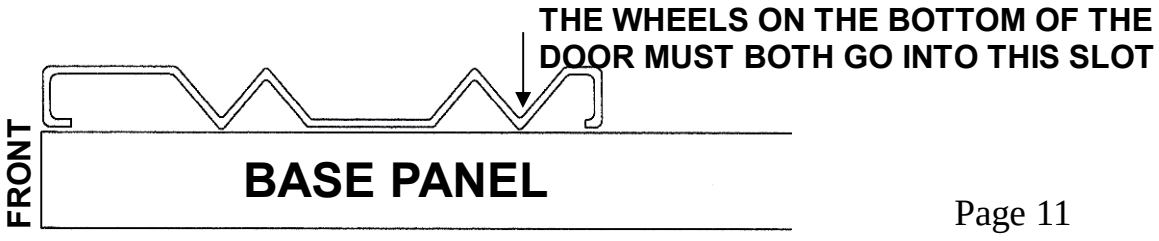

STEP 8

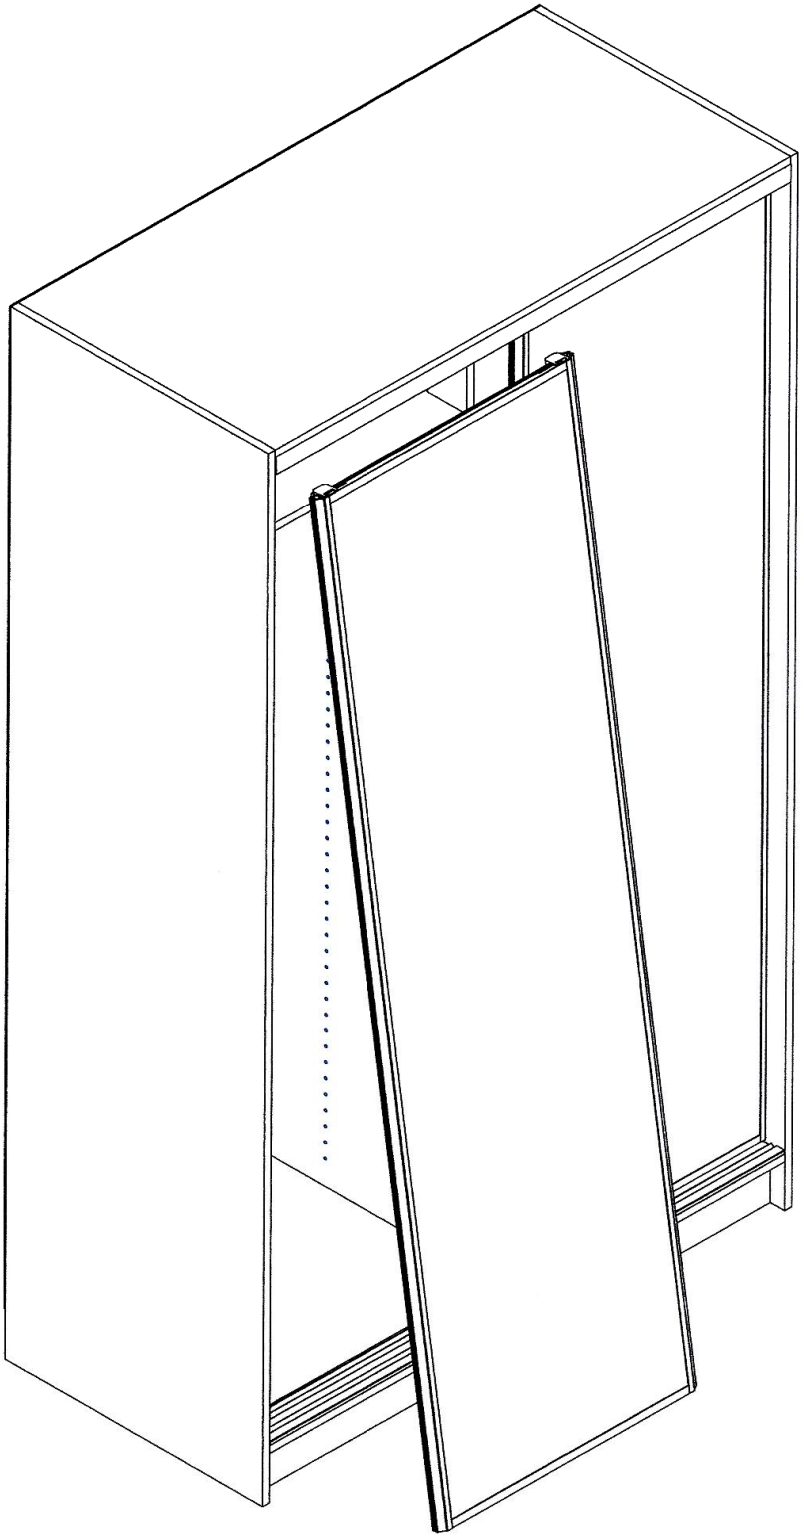

TO FIT THE DOORS INTO THE UNIT HOLD THE ASSEMBLED DOOR BY THE SIDES AND LINE UP THE TOP INTO THE FRONT GROVE OF THE TOP TRACK. THEN CONTINUE TO INSERT THE DOOR INTO THE BOTTOM TRACK, **MAKING SURE THE WHEELS ON THE DOOR SLIDE INTO THE FRONT GROVE OF THE BOTTOM TRACK (AS SHOWN IN PICTURE)**

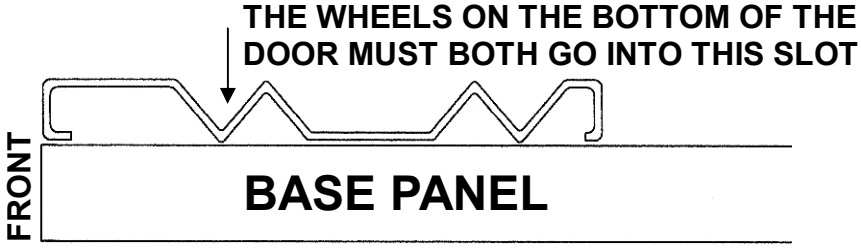

STEP 9 IF YOU NEED TO ADJUST THE DOORS

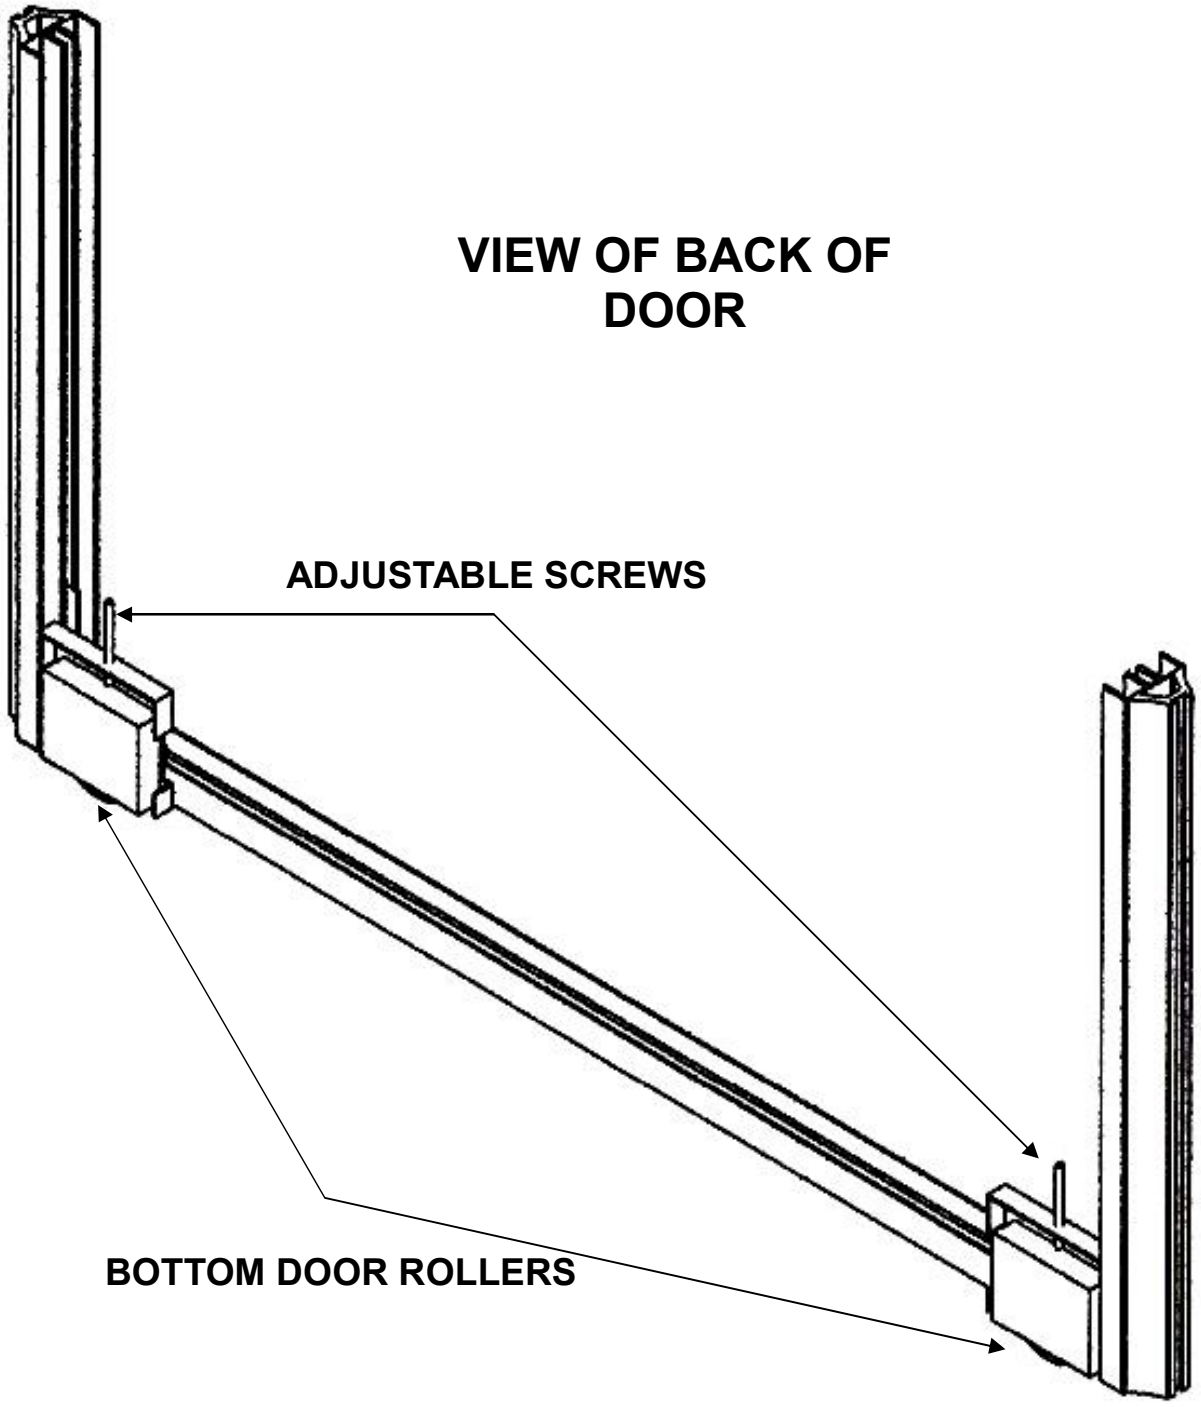

IF YOUR DOORS DO NOT SIT FLUSH AGAINST THE SIDE OF THE WARDROBE YOU WILL NEED TO ADJUST THE DOORS.
USING A PHILLIPS HEAD SCREW DRIVER, SCREW FROM THE BACK THE ADJUSTABLE SCREW UP OR DOWN TO SQUARE UP THE DOOR

YOUR UNIT IS NOW COMPLETE

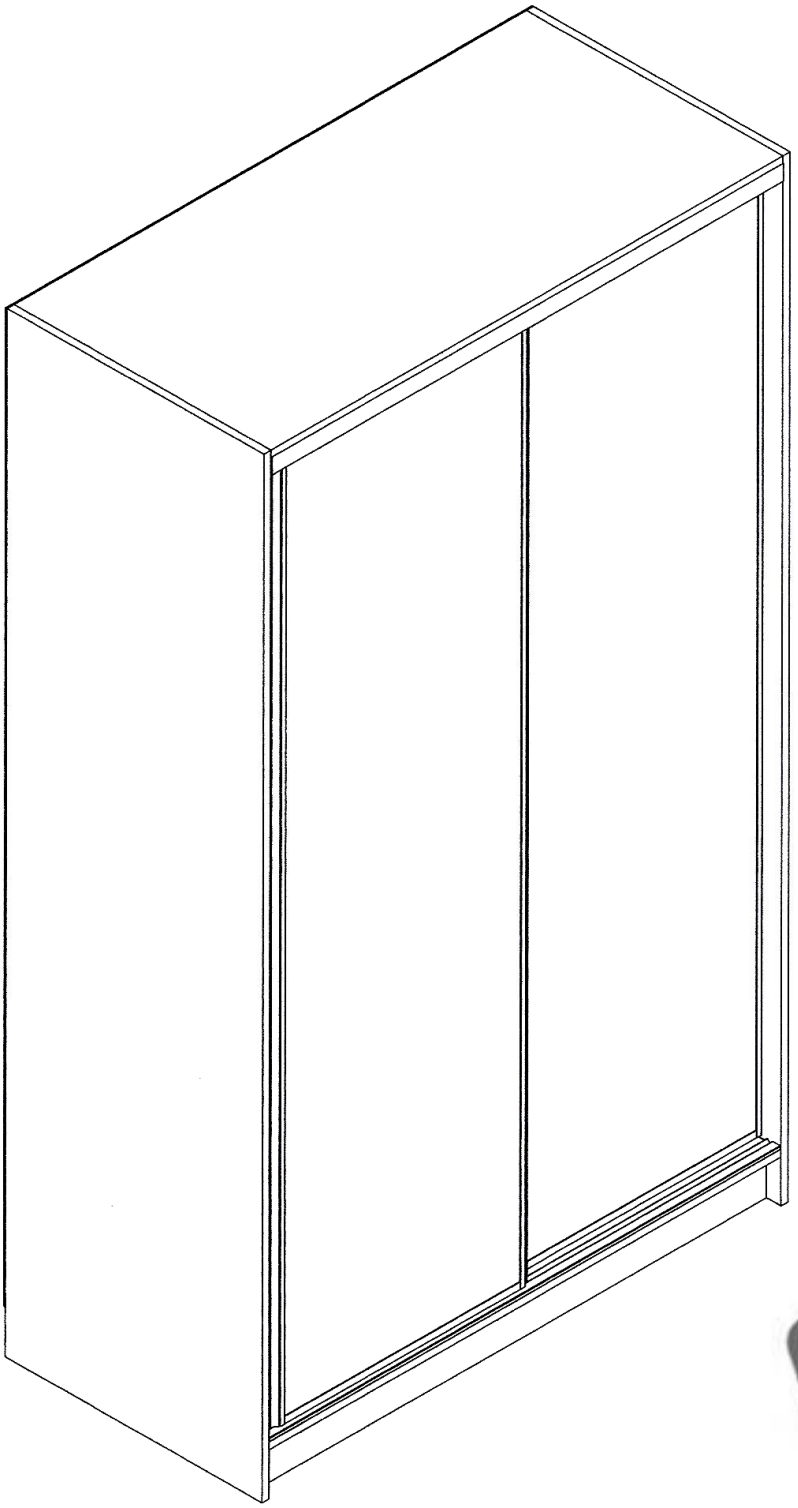

In the interest of our environment
Please dispose of all packaging thoughtfully.

CAUTION

- We recommend all units to be screwed to the wall using the wall brackets supplied.
  Consult your hardware specialist for which fastener is recommended.