




Version 1.0

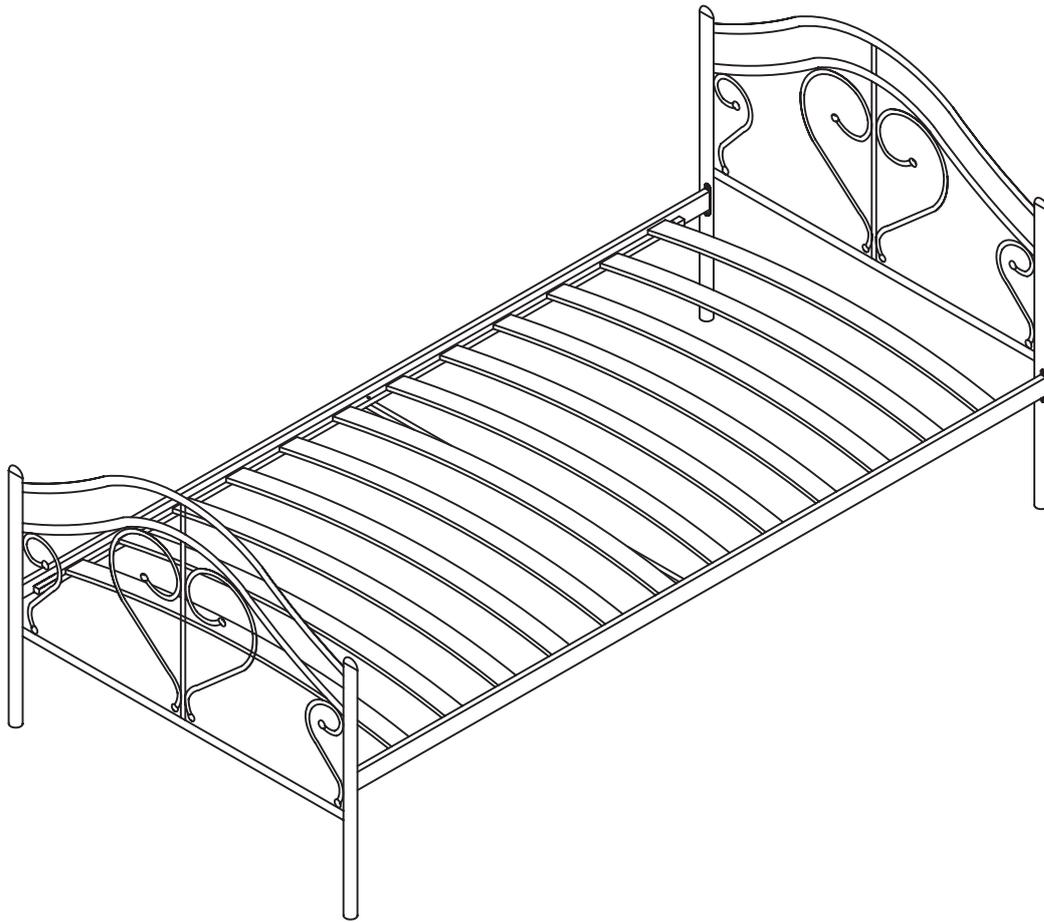

ELSA
BED SINGLE

www.fantasticfurniture.com.au

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

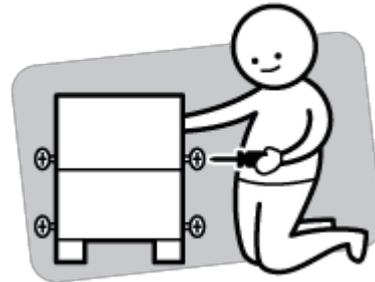

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you Need


To Assemble the Body



DO NOT USE



Use Allen Key Provided

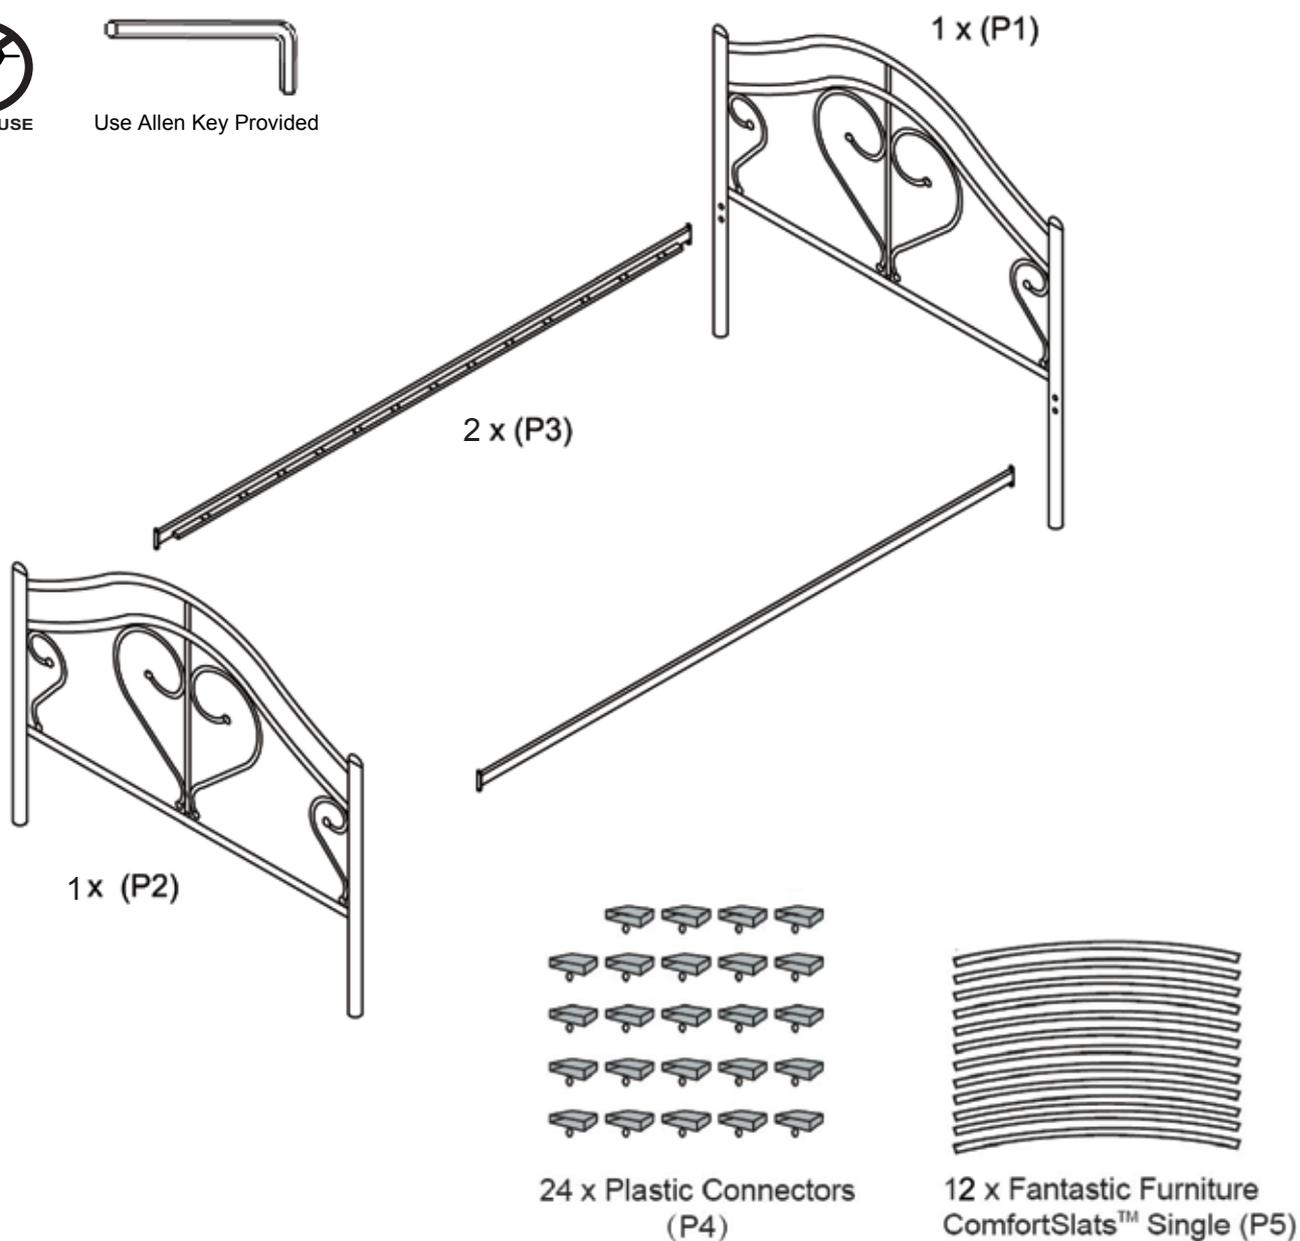

Part List:

Box 1: Bed Head (P1), Bed Foot (P2);

Box 2: Siderails (P3);

Box 3: Plastic Connectors (P4), Fantastic Furniture ComfortSlats Single (P5).



8 x Bolts
(H1)

Please make sure you have all these parts before you start.




PAGE 4

Step 1

You will need

4x M6*20
Bolts
(H1)

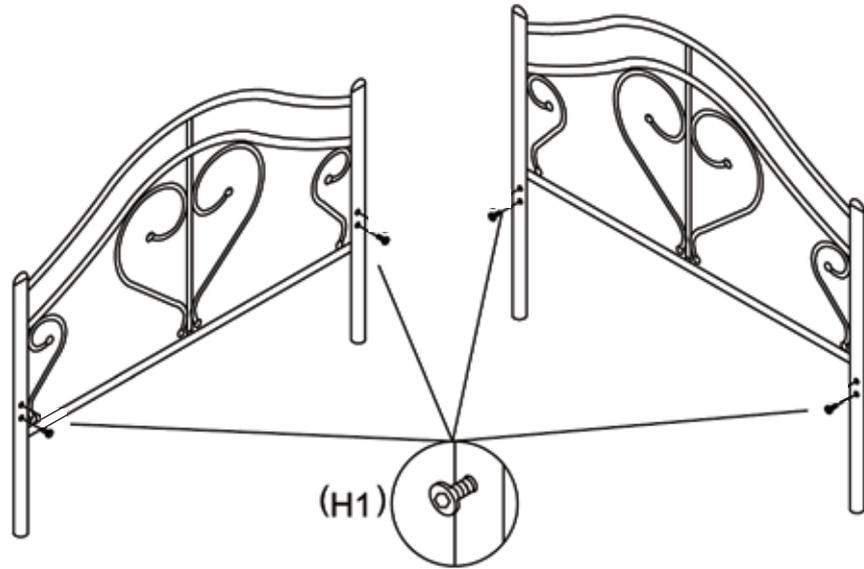


Insert 4 x Bolts (H1) into the lower holes in Bed Head (P1) and Bed Foot (P2) using Allen Key provided. Do not fully tighten Bolts.

Step 2

You will need

4x M6*50
Bolts
(H2)

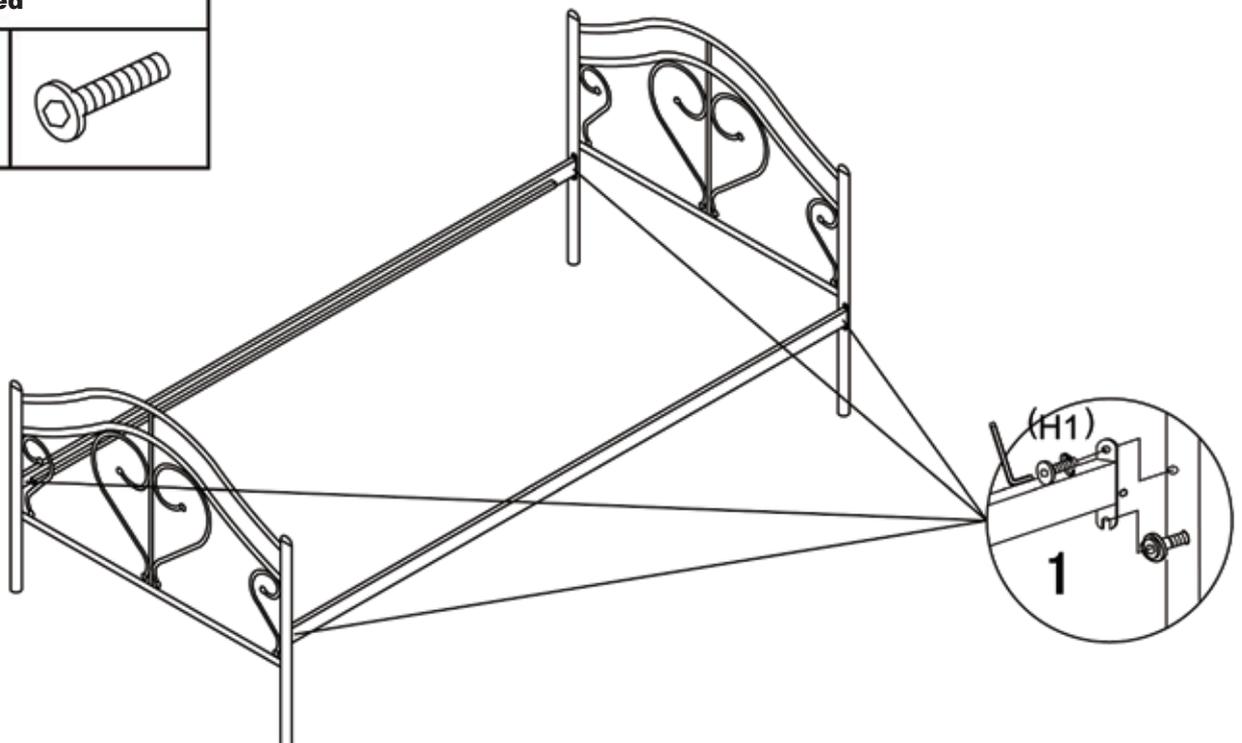


Attach one Side Rail (P3) to the Bed Head (P1) with Bolt (H1).




Step 3

You will need	
26 x Plastic Connectors (P4)	
13 x Fantastic Furniture ComfortSlats™ Single (P5)	

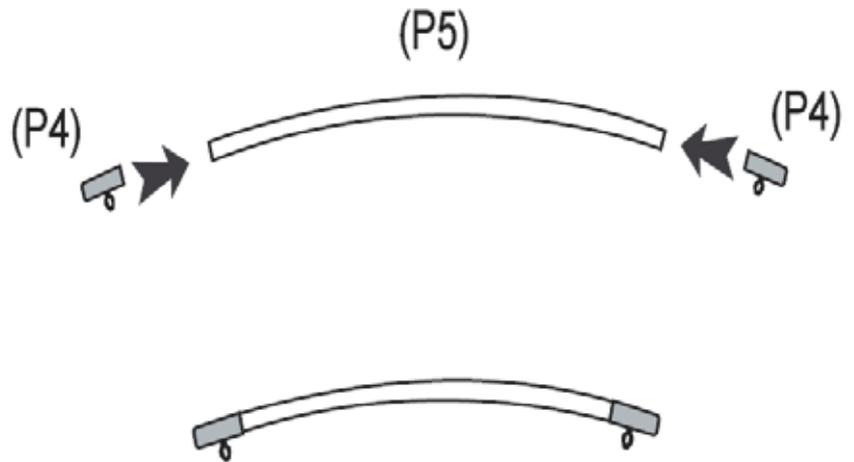


Push 26 x Plastic Connectors(P4) firmly onto 13 x Fantastic ComfortSlats Single(P5)

Step 4a

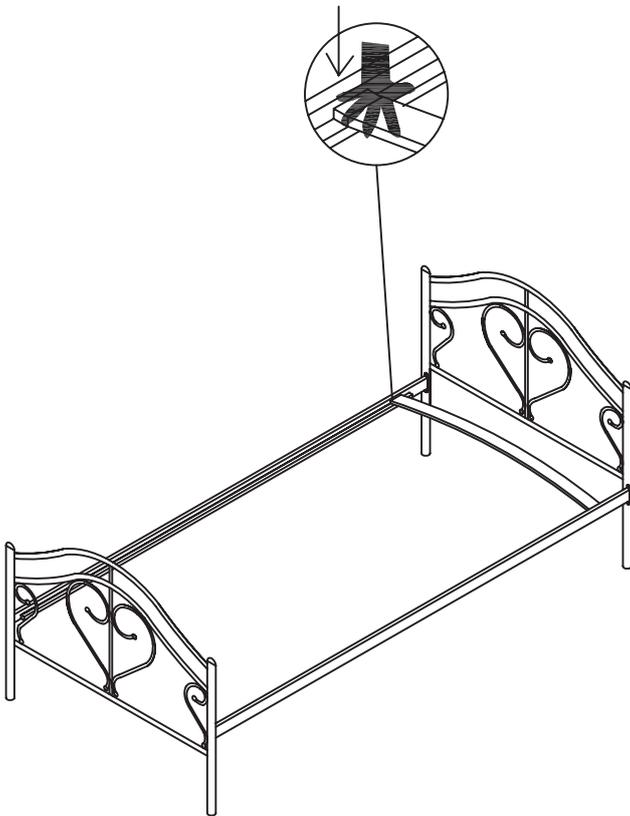


Place the slats in position then push down on the slat to flatten it out the slat. Make sure the plastic prong line up with the holes. Then push the prong firmly into the holes.

Step 4b

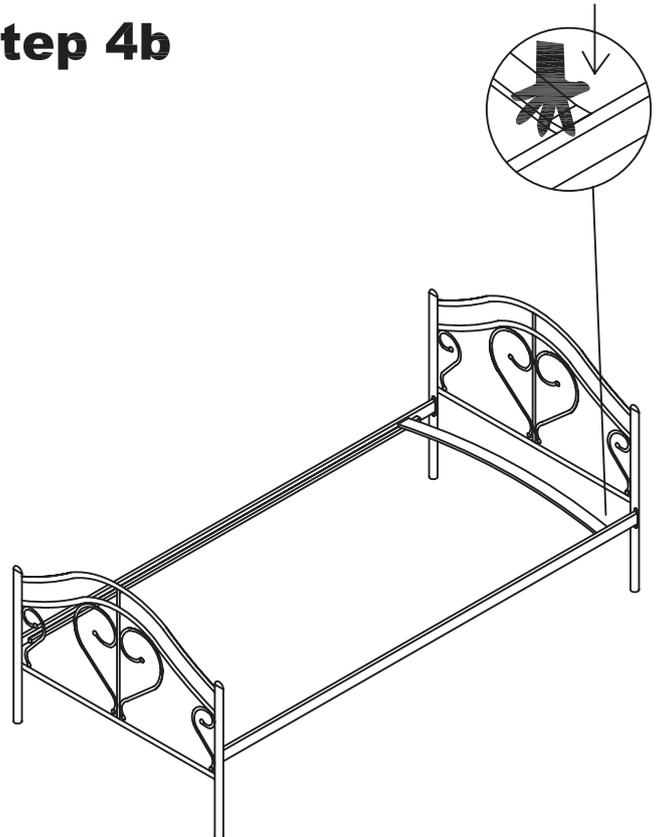

Repeat the same process for the other end of slat.


Step 5

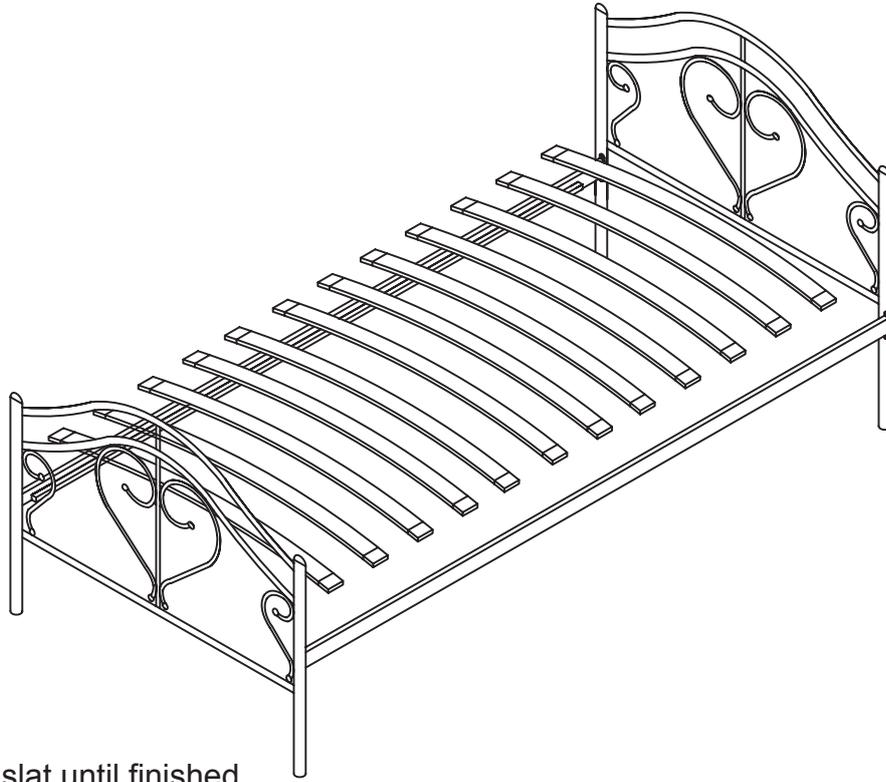

Repeat for every bed slat until finished



1 x Allen Key

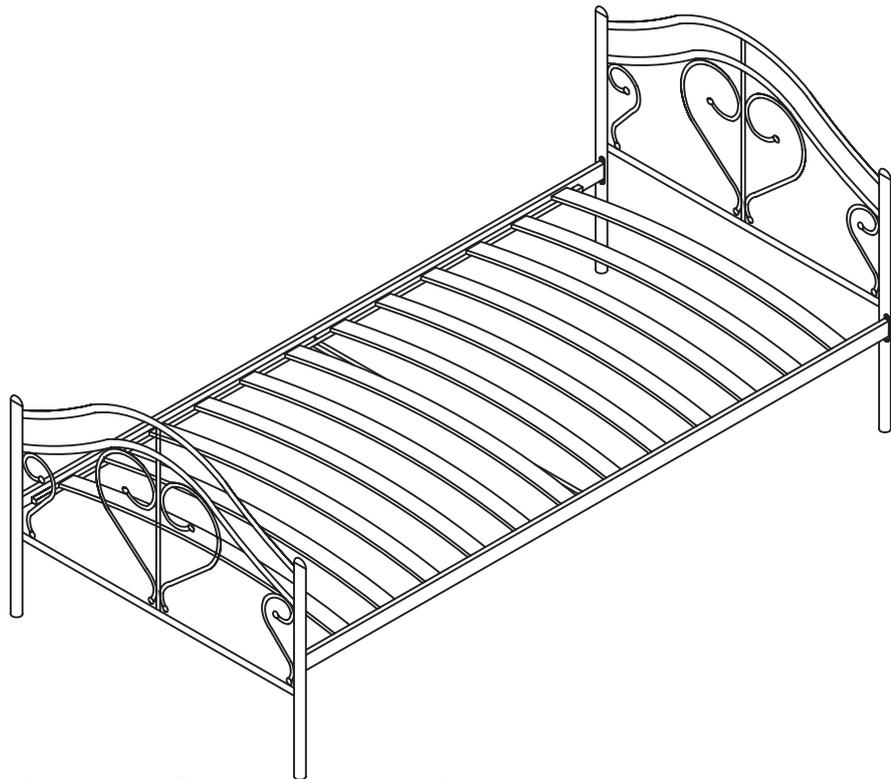

IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully