



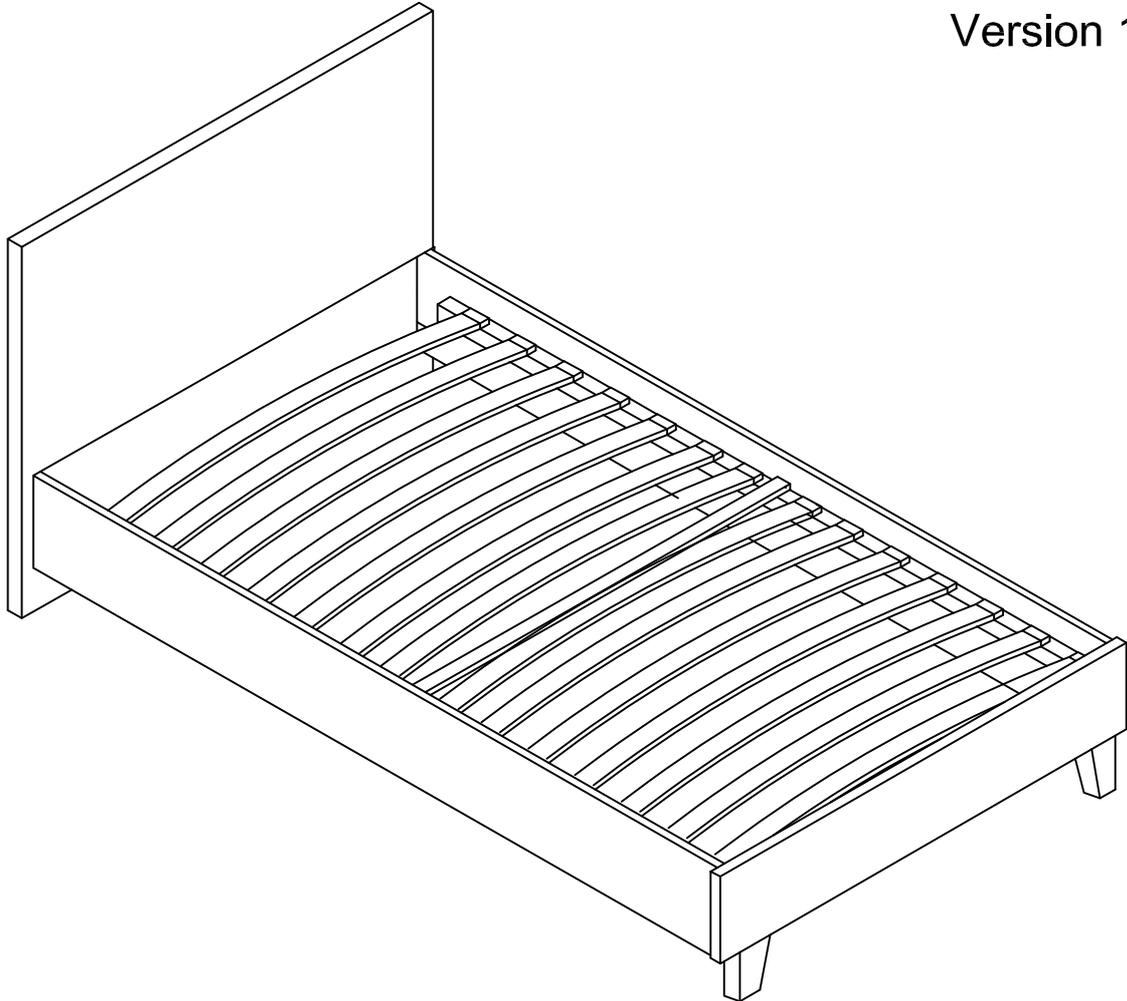

Version 1.0

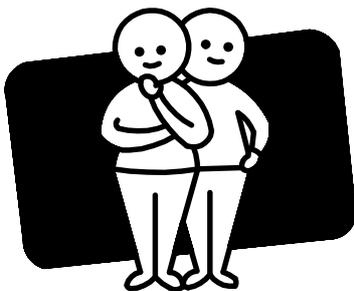

TWO PEOPLE



REQUIRED

JERVIS

SINGLE BED

www.fantasticfurniture.com.au

www.fantasticfurniture.com.au



PAGE 1

Enjoy

Your purchase From
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

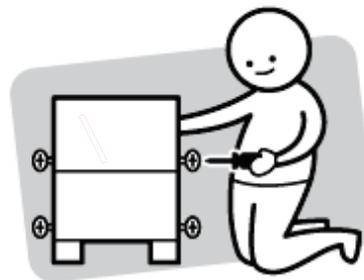

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need


to assemble the product



DO NOT USE



Other tools you need
Phillips head screwdriver

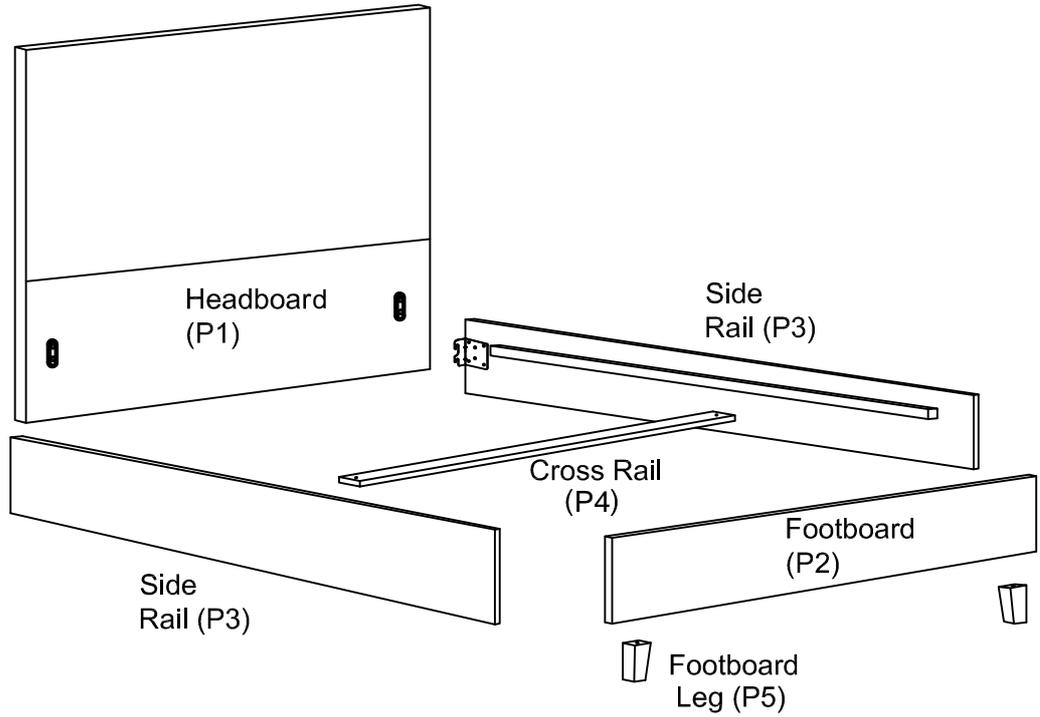


Parts list


Box 1 : Headboard (P1) ;

Box 2 : Footboard(P2) ; Side Rail (P3) ; Cross Rail (P4) ; Footboard Leg (P5)


28 x End Connectors

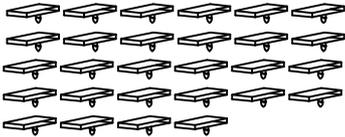

14 x Fantastic Furniture
Comfort Slat™ Single




4 x M8x18mm



1 x M5(Allen Key)




2 x M8x90mm(Bolt)



12 x M8x19mm




8 x M8x20mm(Bolt)



2 x M8 (Nut)




4 x M6x35mm(Bolt)



2 x Brackets



1 x Spanner




2 x Legs


Please make sure you have all these parts before you start


Step 1

TWO PEOPLE

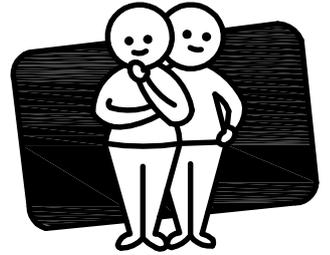

REQUIRED


You will need			
			
4 x Washers (H4)	2 x Bolt 90mm (H3)	2 x M8 (Nut) (H6)	1 x Spanner (H9)
			
2 x Brackets (H8)	Phillips head screwdriver		

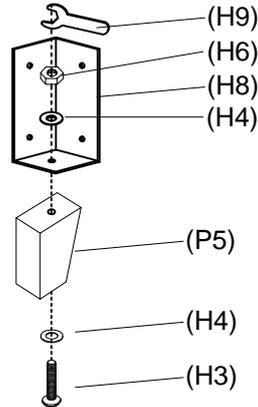

Use 2 x bolts(H3) and 2 x legs (P5) and screw into 2 x Brackets (H8) by spanner (H9)
With 4 x washers (H4) and 2 x nuts(H6)

Step 2

You will need		
		
4 x Washers (H4)	4 x Bolt 20mm (H5)	Phillips head screwdriver

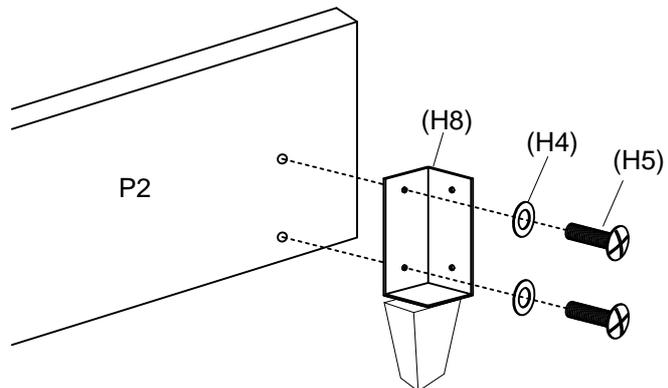



Attach Brackets (H8) to the side of footboard (P2)
With 4 x washers (H4) and 4 x Bolts 20mm (H5)

www.fantasticfurniture.com.au



Step 3


You will need	
	
1 x M5(Allen Key) (H2)	4x Bolt M8x18mm (H1)

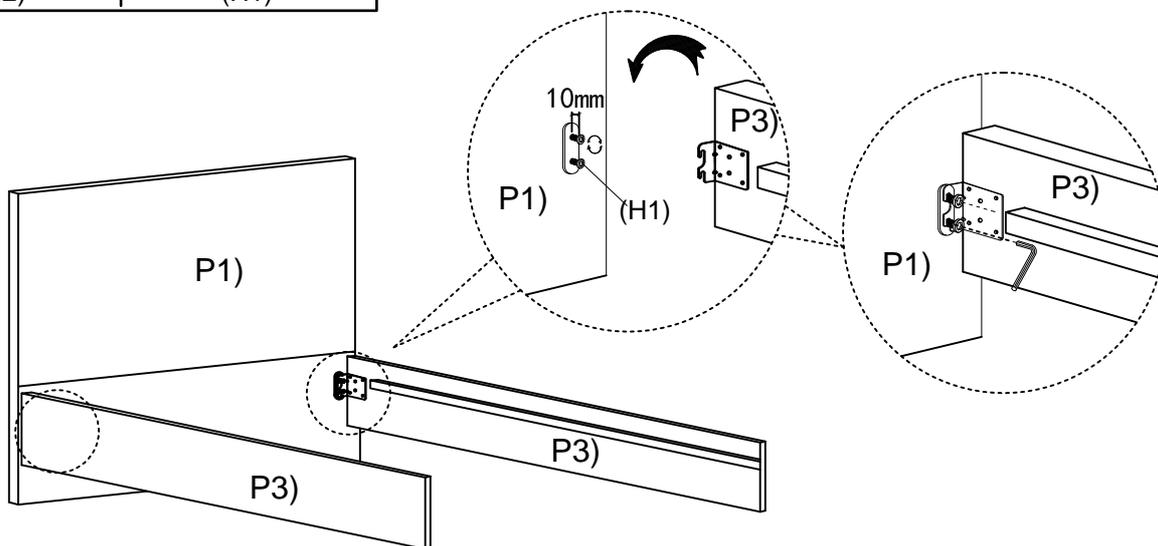

Loosen the bolts about 8mm by using allen key (H2) as shown.
Then attach side rail (P3) to headboard (P1) over the bolt as shown.

Step 4

You will need		
		
4 x Washers (H4)	4 x Bolt 20mm (H5)	Phillips head screwdriver

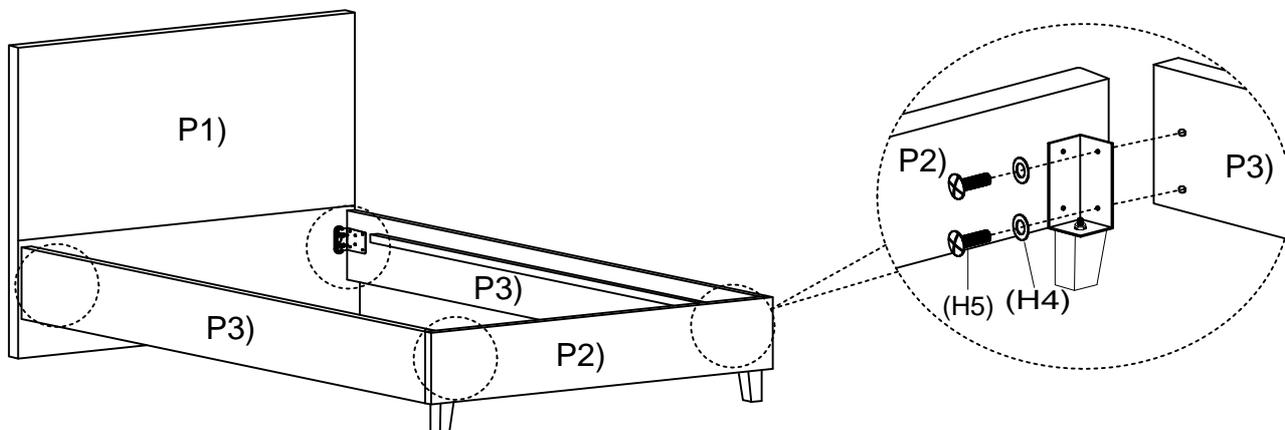


Attach Brackets (H8) to the side rails (P3) of the bed as shown.
With 4 x washers (H4) and 4 x Bolts 20mm (H5)

Step 5


You will need	
	
28 x End Connectors	14 x Fantastic Furniture Comfort Slat™ Single

5a

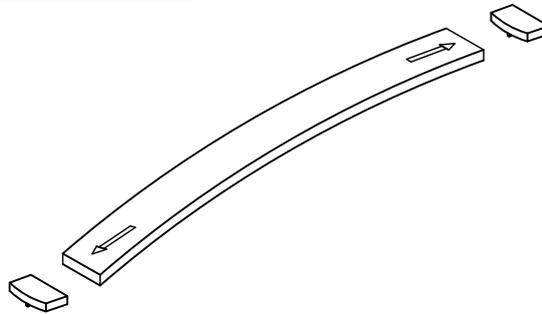

Push 2 End Connectors, 2 Fantastic Furniture Comfort Slat™ Single and a Centre Connector together.

5b

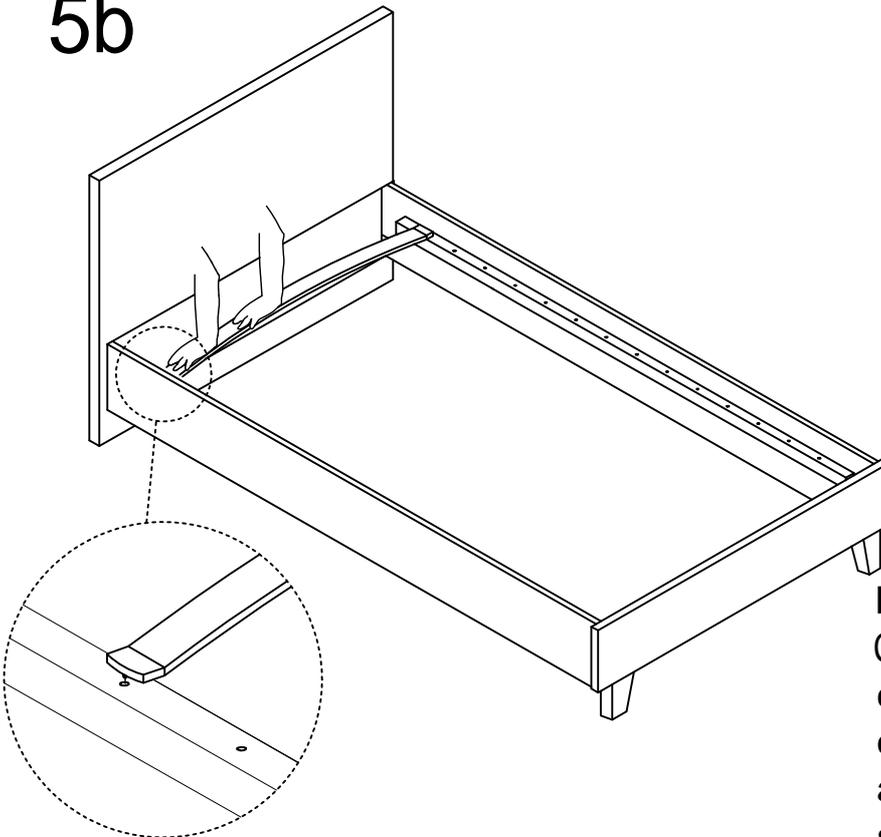


Lower **slat** and end Connectors to side rail (P3) ensuring locators are in place over holes in side rail and apply downward pressure on **slat** until end plastic cap is fully inserted into side rail.



Repeat steps 5a to 5b for the remainder of the slats.


5c

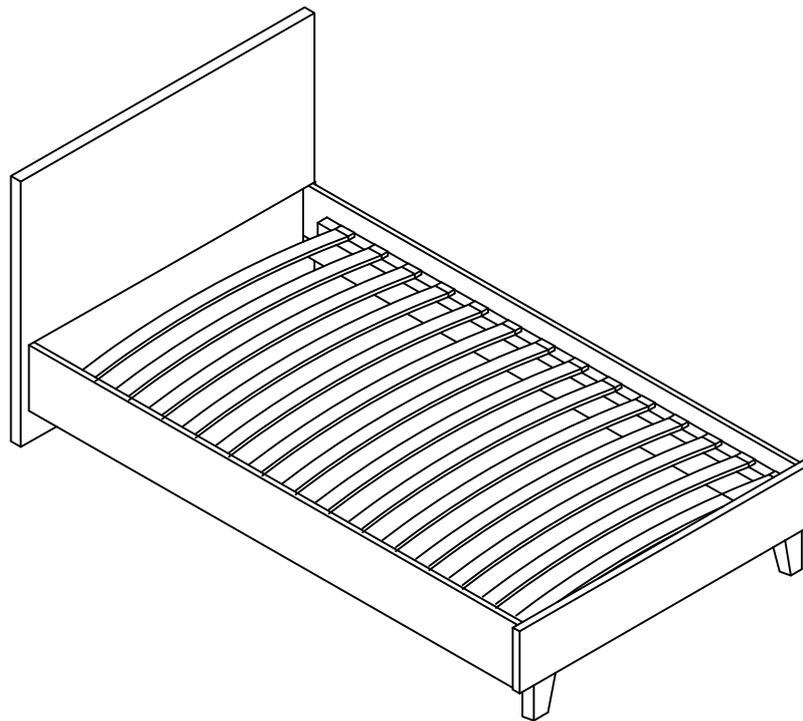

Repeat steps 5a to 5b for the remainder of the slats.


Step 6

You will need	
	
2 x M6x35mm (H7)	Phillips head screwdriver

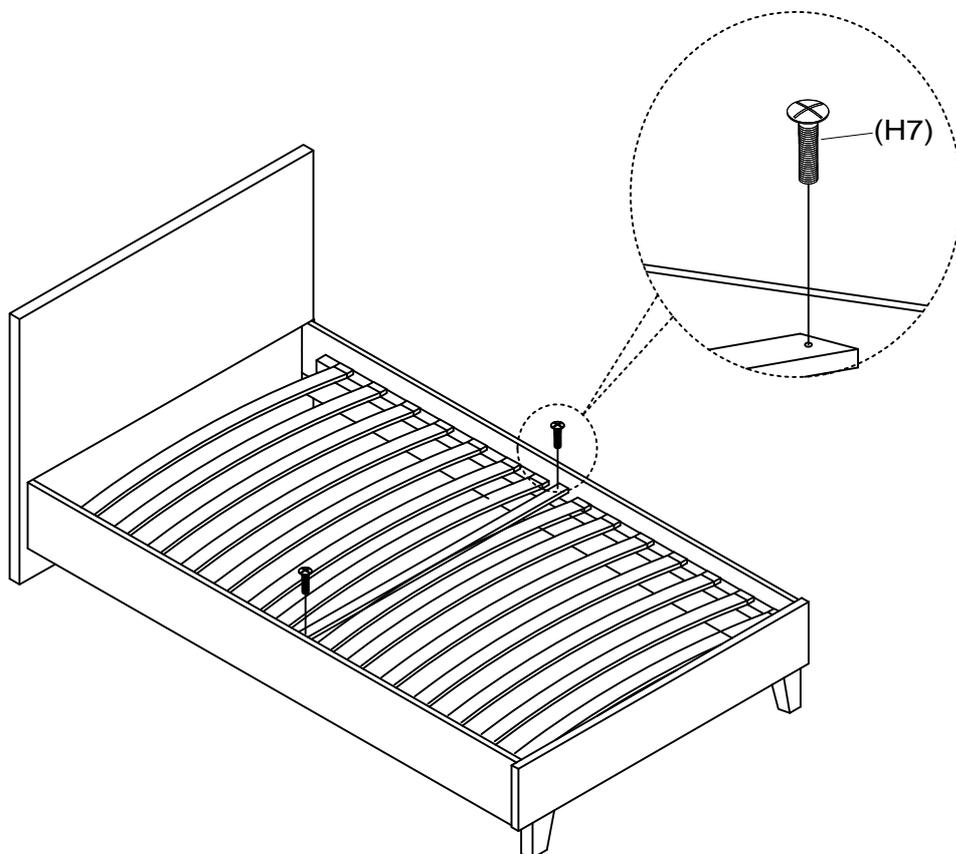

Insert cross rail (P4) and tighten using bolts(H7)

Step 7

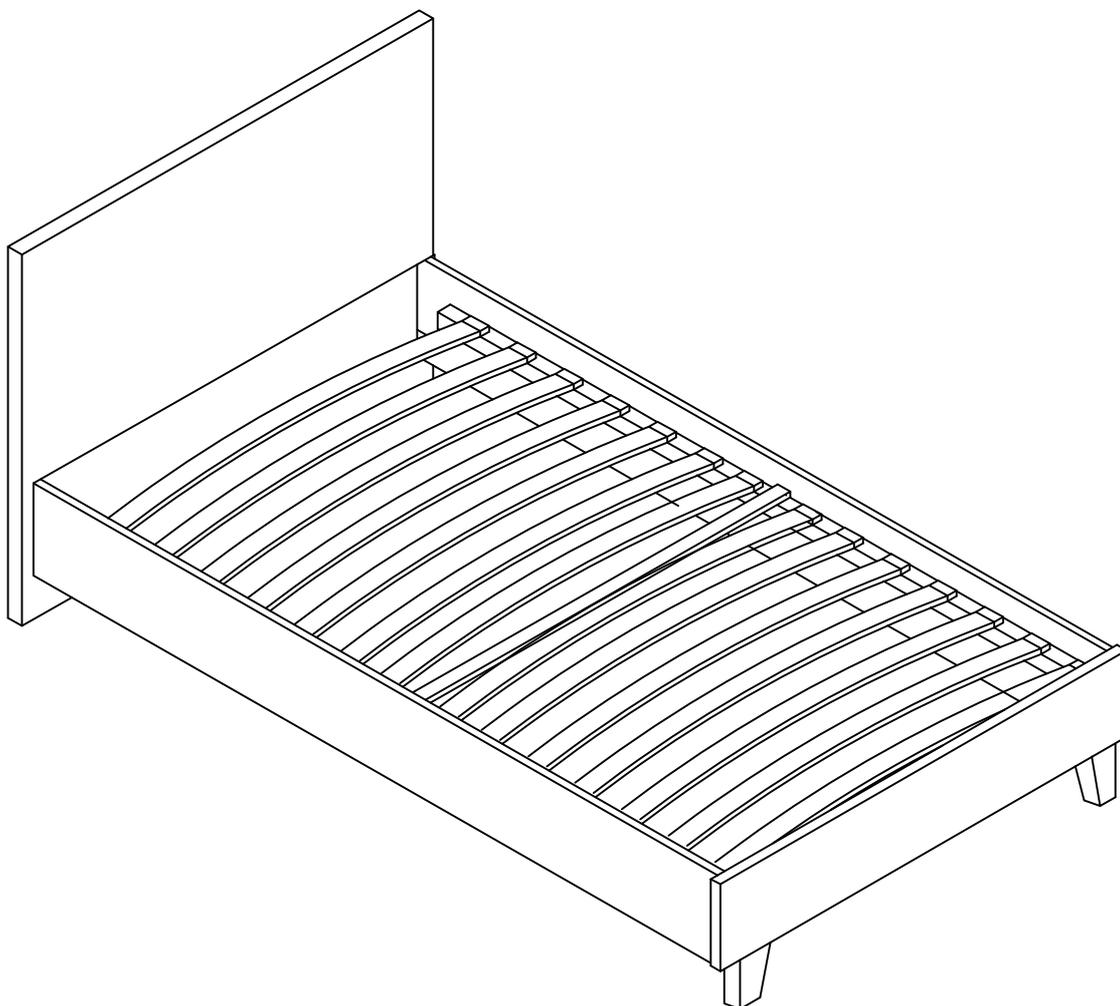

Job Complete

In the interest of our environment please dispose of all packaging thoughtfully.