


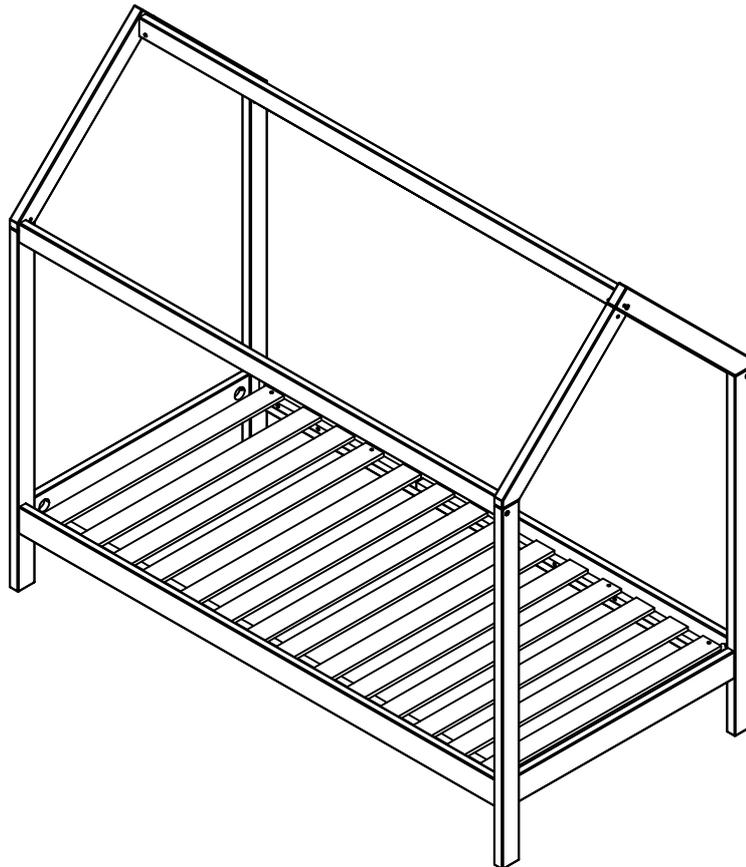

Version 1.0



TWO PEOPLE



REQUIRED

# House Bed

Single

[www.fantasticfurniture.com.au](http://www.fantasticfurniture.com.au)


**Enjoy**  
Your purchase from  
Australia's Best Value Furniture Store




# Assembly checklist




Read through the instructions carefully before you begin.

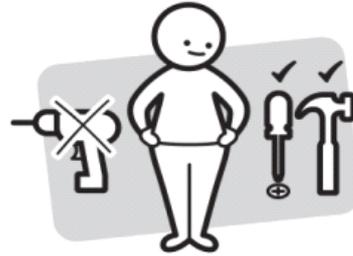

Make sure you have all the required tools. Never use power tools unless instructed.

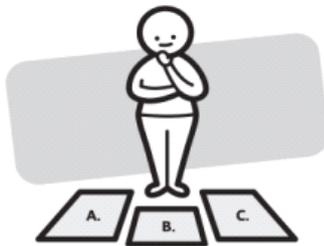

Identify and lay out all of the components before you begin assembly.

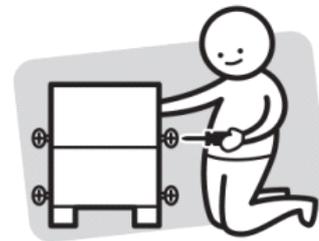

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

# What you Need


## To Assemble the Product



DO NOT USE



(Additional Tools Required)  
Phillips Head Screwdriver  
Mallet

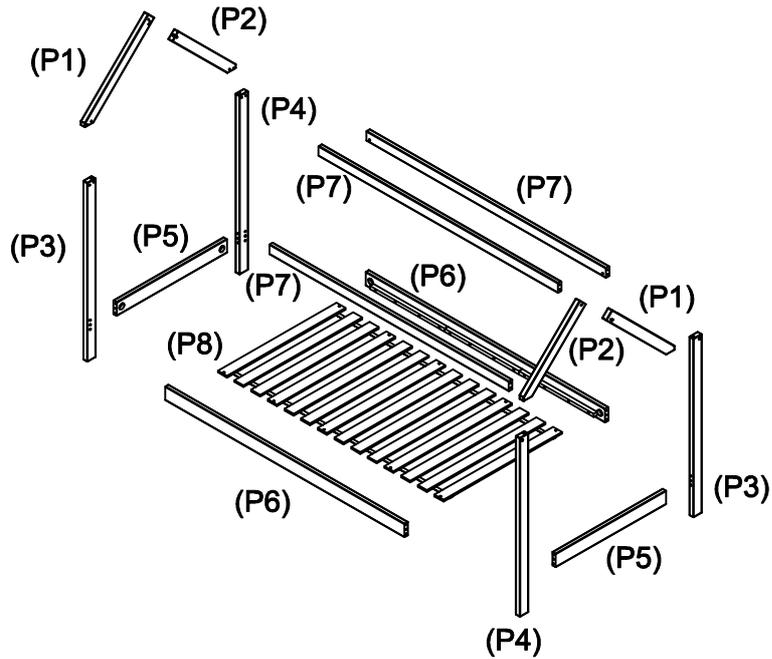

### Parts List:

Box 1: Legs (P3,P4),Slat (P8), Hardware Pack  
Box 2: Rails (P1,P2,P5,P6,P7)



6 x Steel Dowels (H1)



8x20mm  
12 x Bolts (H2)



3.5x20mm  
10 x Wood Screws (H3)



6 x Bolts (H4)



6 x Nuts (H5)



22 x Wooden Dowels (H6)



8 x Locking Pin (H7)



1 x Large Spanner (H8)



1 x Allen Key (H9)



8 x Locking Nuts (H10)



8 x Locking Screws (H11)



8 x Locking Lids (H12)

Please make sure you have all these parts before you start.


# Step 1

You will need:

2 x Steel Dowels (H1)



4 x Bolts (H2)

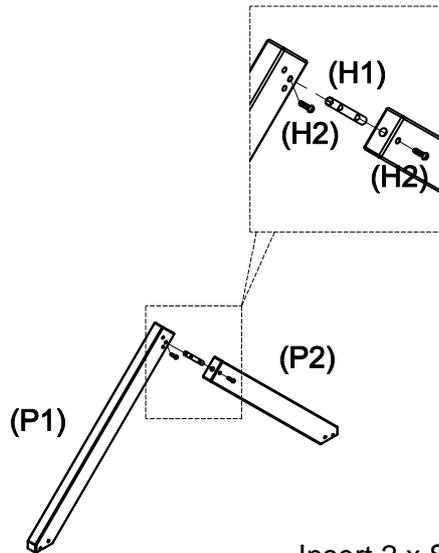

X2

Fixing Kit: How to screw steel dowel?

Make sure the opening of steel dowels face incoming bolt. Screw one bolt into dowel, keep it loose, then screw another bolt. Screw both sides until tight.

Insert 2 x Steel Dowels (H1) into the Rails (P1 and P2). Attach 4 x Bolts (H2) by using a Phillips head screwdriver.

# Step 2

You will need:

4 x Locking Pin (H7)



4 x Locking Nuts (H10)



4 x Locking Screws (H11)



1 x Large Spanner (H8)




8 x Wooden Dowels (H6)



4 x Locking Lids (H12)



Insert 4 x Wooden Dowels (H6) and 2 x Locking Pin (H7) to Legs (P3,P4)  
Insert 2 x Locking Nuts (H10) and 2 x Locking Screws (H11),  
Screw the Locking Nuts by using Large Spanner (H8). Put 4 x Locking Lids (H12) on opening hole.

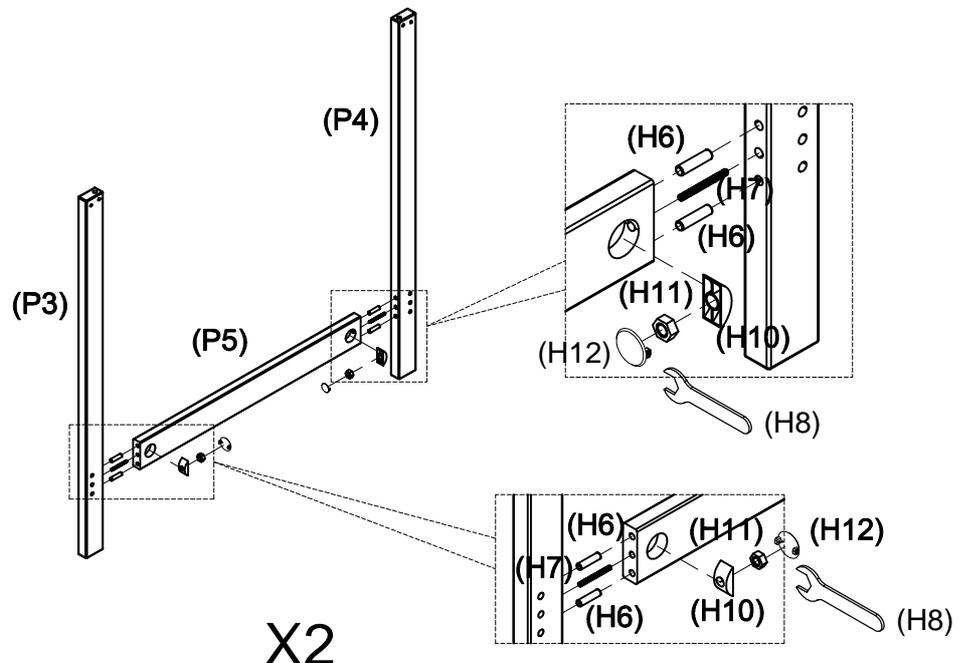

X2


### Step 3

You will need:

4 x Steel  
Dowels  
(H1)



8 x Bolts  
(H2)

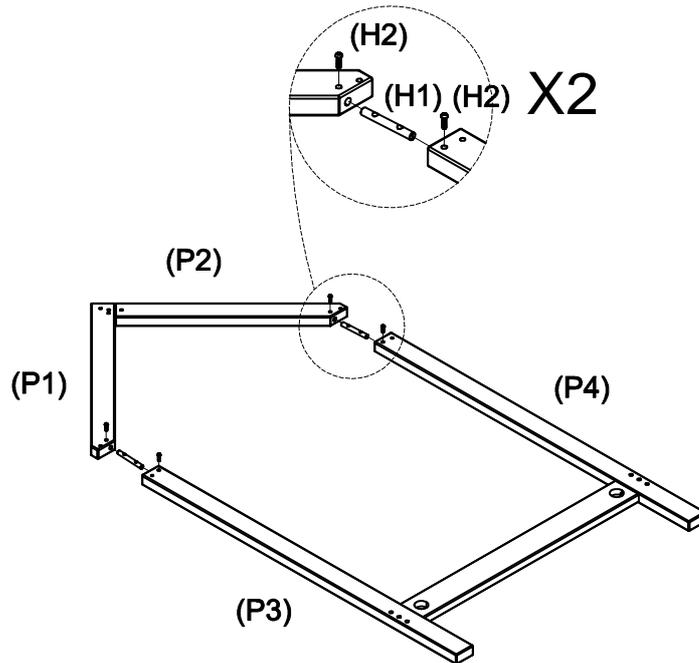


Insert 2 x Steel Dowels (H1) into the Legs and Rails (P1 and P3; P2 and P4). Attach 4 x Bolts (H2) by using a Phillips head screwdriver.

### Step 4

You will need:

14 x Wooden  
Dowels  
(H6)

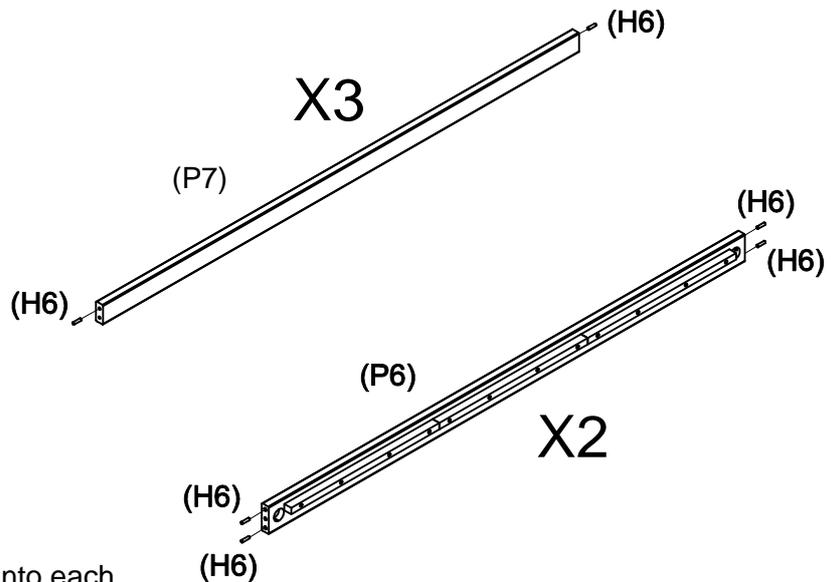


Insert 2 x Wooden Dowels (H6) into each roof bar (P7).  
Insert 4 x Wooden Dowels (H6) into each Side Rail (P6).

## Step 5

You will need:

2 x Locking Pin (H7)	
2 x Locking Nuts (H10)	
2 x Locking Screws (H11)	

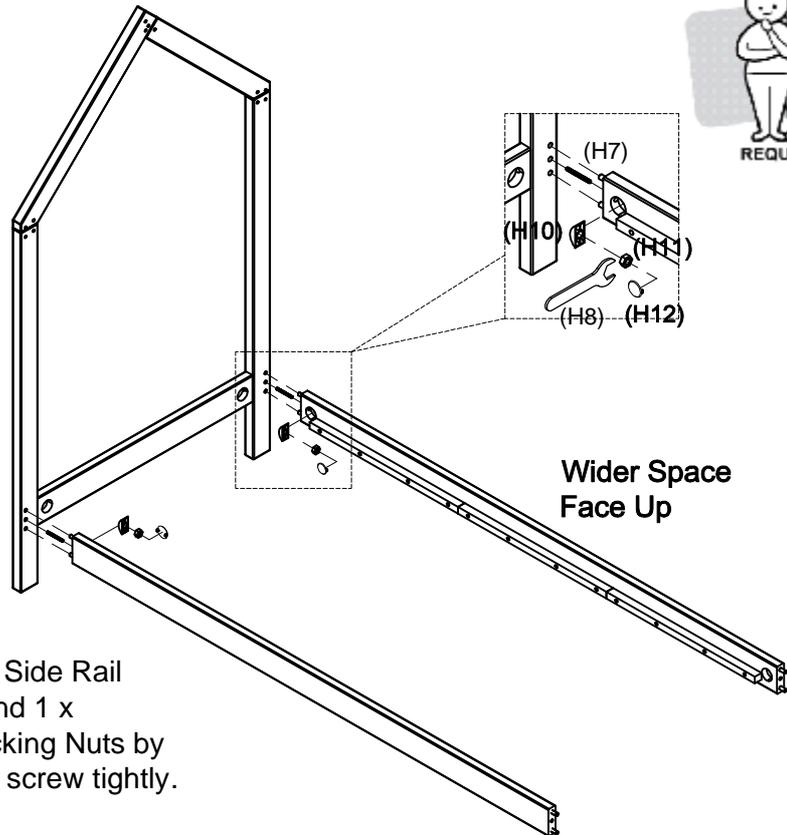


Insert 1 x Locking Pins (H7) to each Side Rail (P6). Insert 1 x Locking Nut (H10) and 1 x Locking Screw (H11), screw the Locking Nuts by using Large Spanner (H8), but don't screw tightly.

## Step 6


You will need:

2 x Locking Pin (H7)	
2x Locking Nuts (H10)	
2 x Locking Screws (H11)	

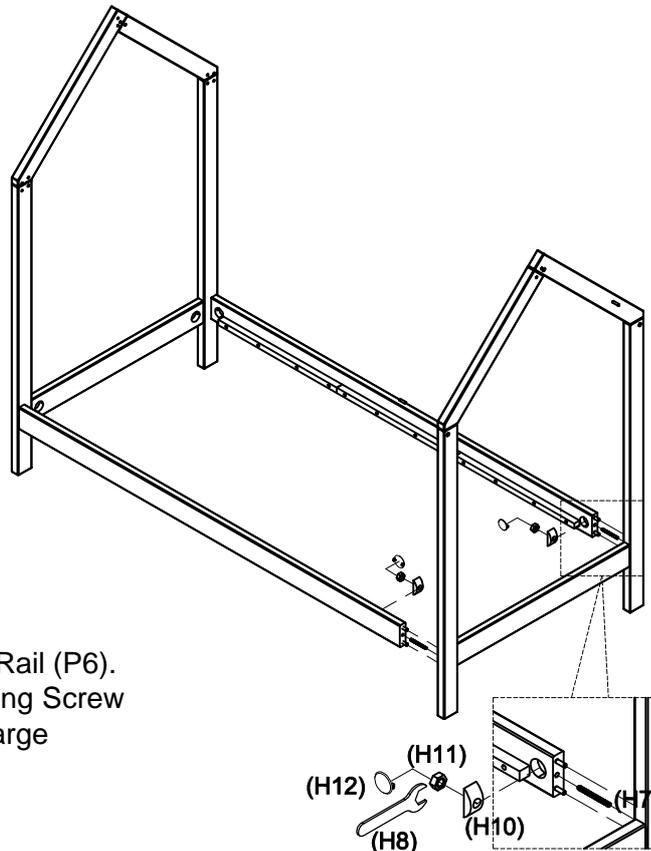

Insert 1 x Locking Pins (H7) to each Side Rail (P6). Insert 1 x Locking Nut (H10) and 1 x Locking Screw (H11), screw the Locking Nuts by using Large Spanner (H8), but don't screw tightly.

## Step 7

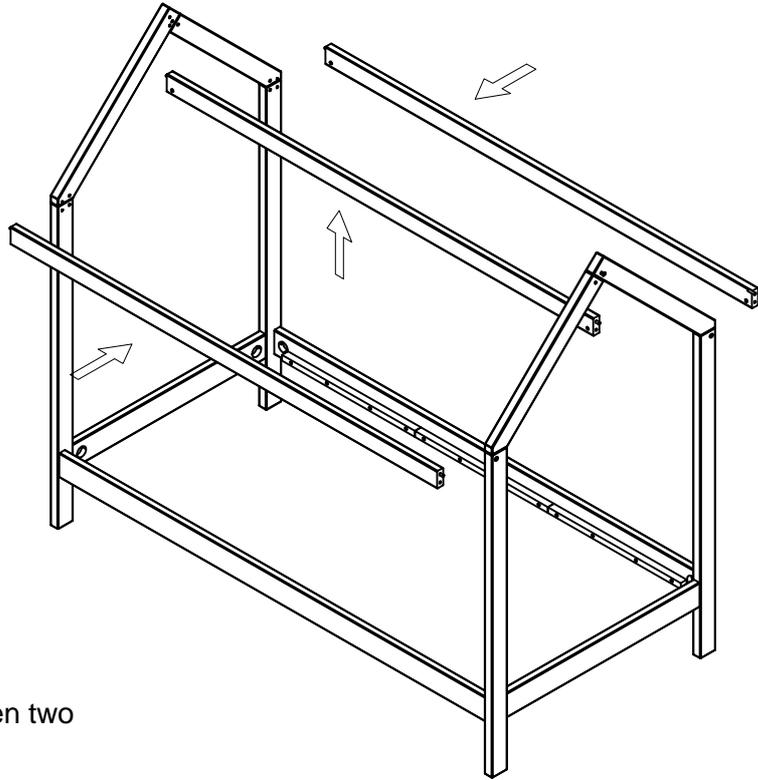


Insert 3 x Roof Bars (P7) between two Sides.

## Step 8

You will need:

6 x Bolts (H4)	
6 x Nuts (H5)	
1 x Allen Key (H9)	

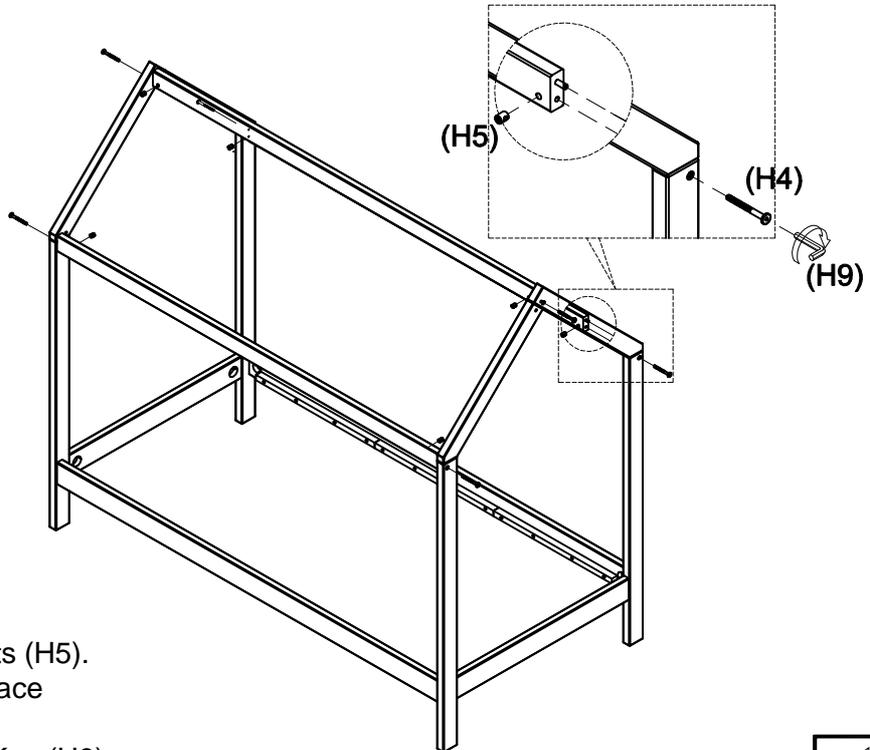

Insert 6 x Bolts (H4) and 6 x Nuts (H5).  
Make sure the opening of nuts face  
incoming bolts.  
Screw the Bolts by using Allen Key (H9).



## Step 9

You will need:


10 x Wood  
Screws  
(H3)



4 x Locking  
Lids  
(H12)

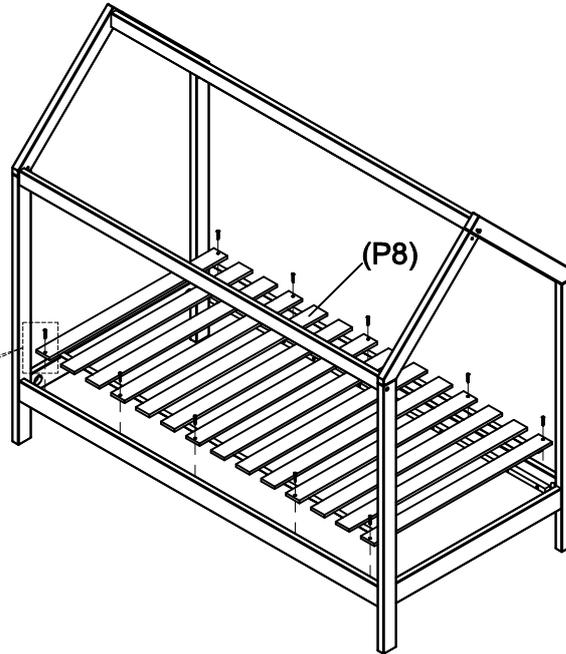

Make sure the inner space of bed frame is square, screw the locking nuts on side rails until tight, put the Slat (P6) on slat holder, use 10 x Wood Screws (H3) to fix the slat. Put 4 x Locking Lids (H12) on opening hole of side rails.

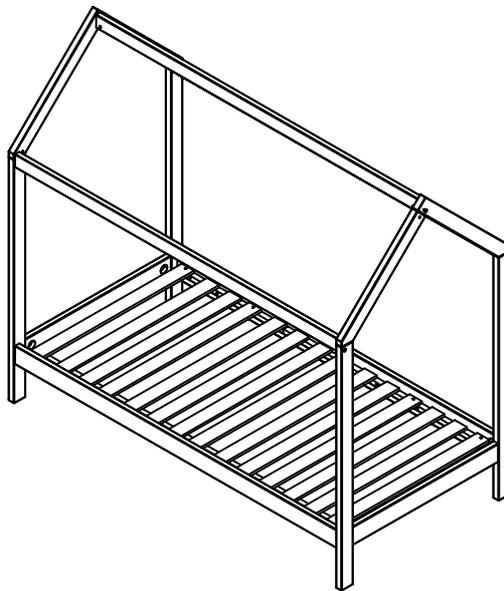

### Job Complete!

In the interest of our environment  
please dispose of all packing thoughtfully.