




Version 1.1

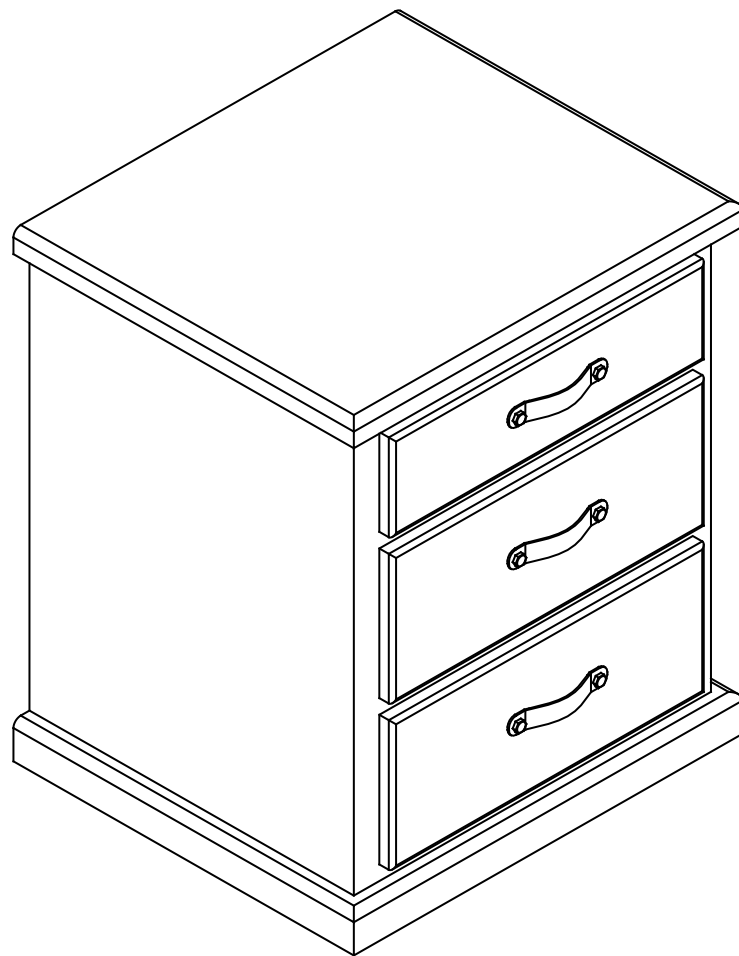

LONGREACH

Bedside 3 Drawer Maple

www.fantasticfurniture.com.au



**WARNING: ENSURE THE WALL STRAP IS ATTACHED TO
AVOID SERIOUS INJURY.**

To avoid any serious or fatal injury, this product has been fitted with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist



Read through the instructions carefully before you begin



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

To assemble the product



DO NOT USE





Other tools you need

Phillips head screwdriver

Parts list

Bedside 3 Drawer Maple


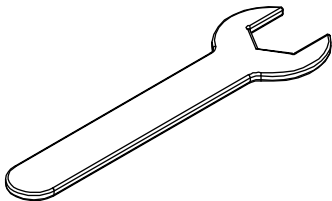
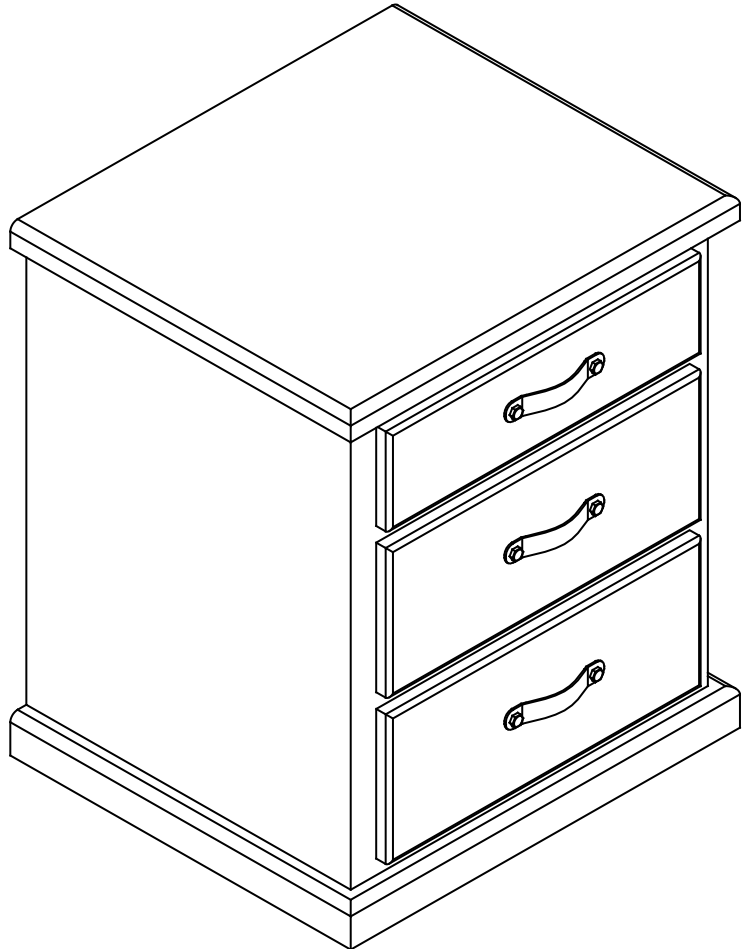


1 x Spanner
(H1)

Please make sure you have all these parts before you start.

Step 1

You will need	
1 x Spanner (H1)	

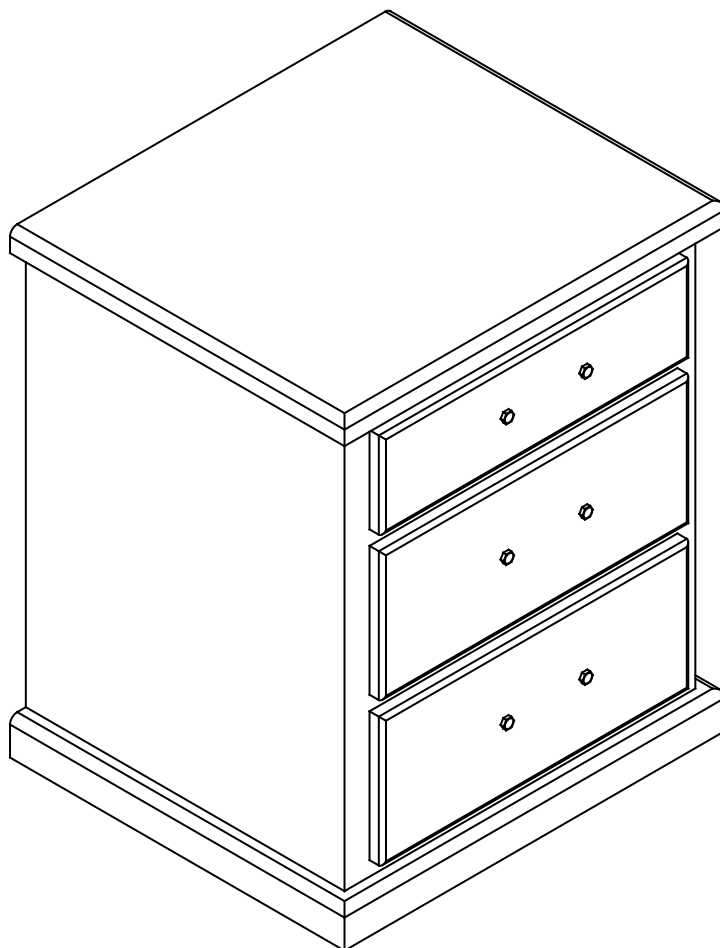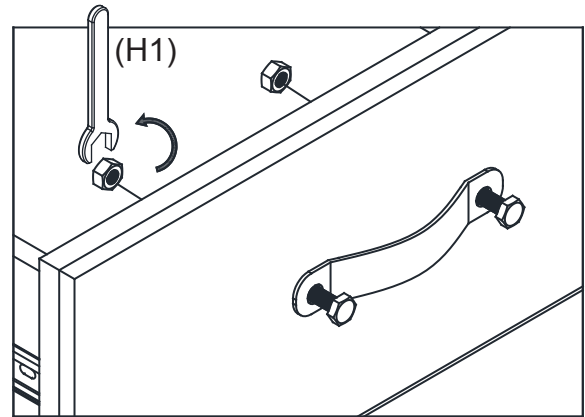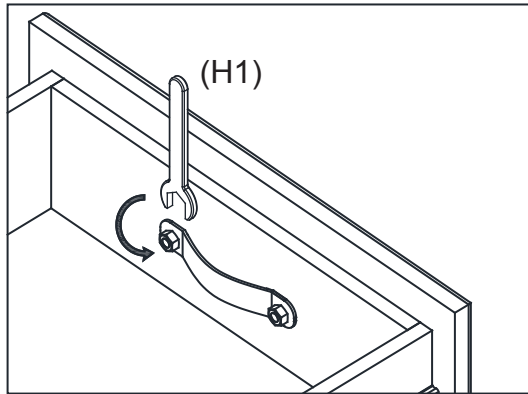


Use a spanner (H1) to change handles to outside of drawers.


Step 2


You will need

Phillips head
screwdriver

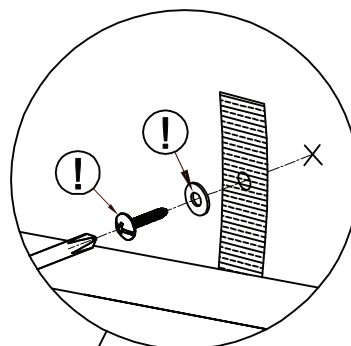

Note: The correct type of wall screws must be used for your wall. Please seek professional advice if in doubt.

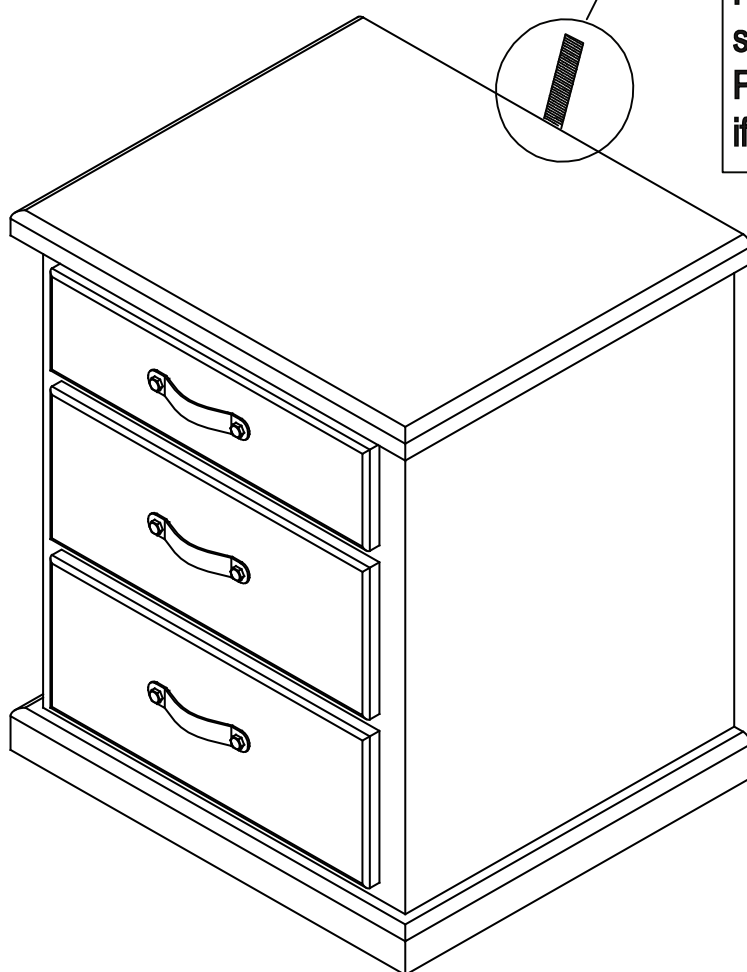

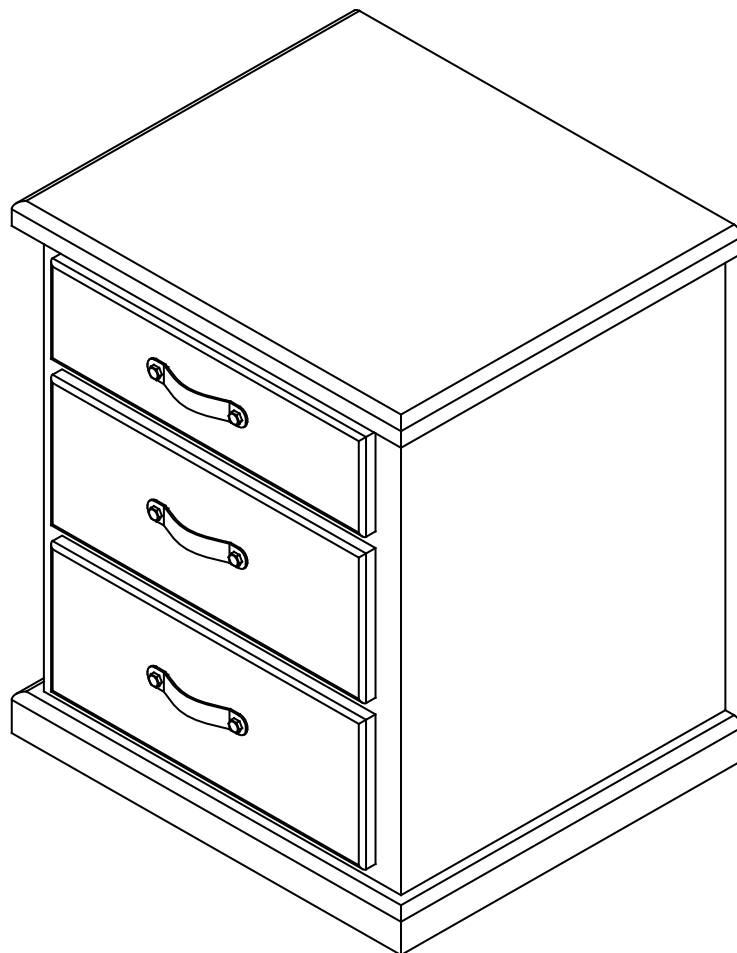


Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.



Version 1.1

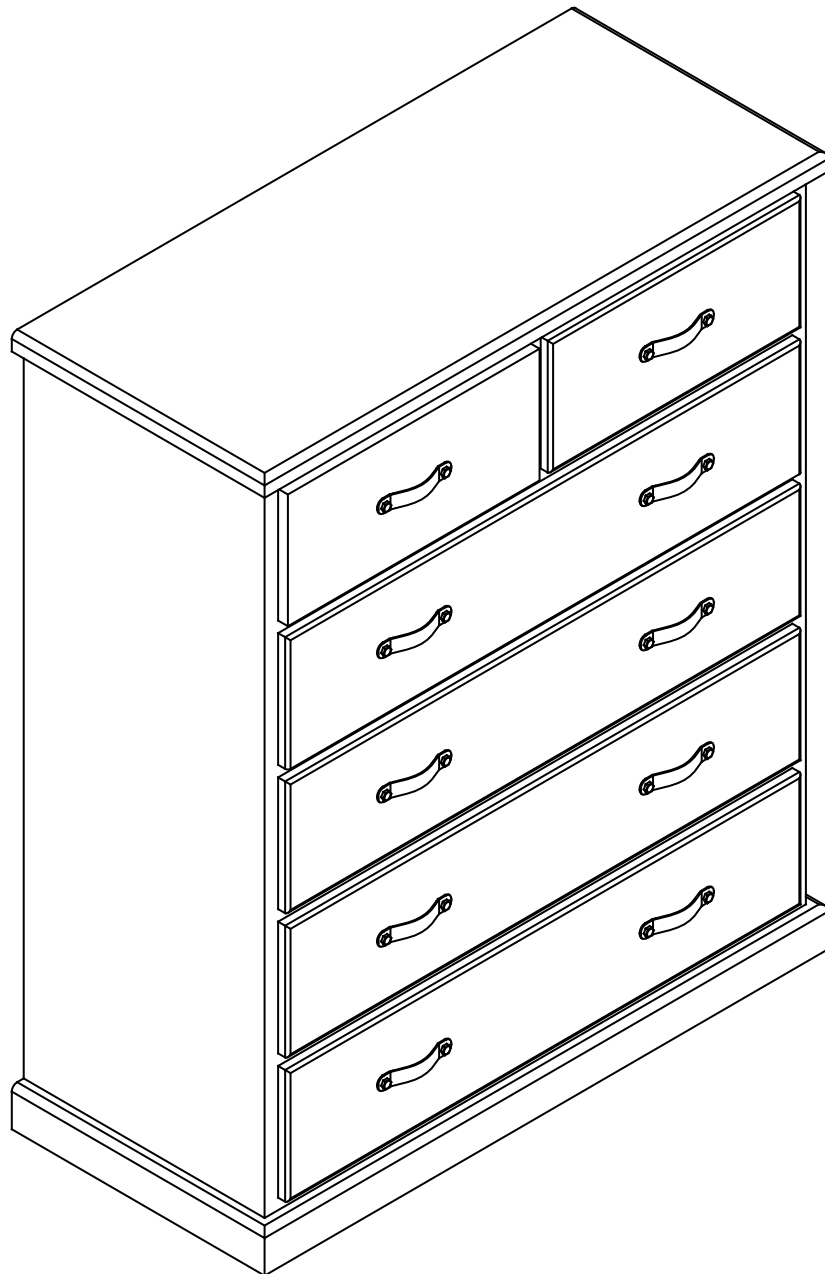

LONGREACH

Tallboy 6 Drawer Maple

www.fantasticfurniture.com.au



**WARNING: ENSURE THE WALL STRAP IS ATTACHED TO
AVOID SERIOUS INJURY.**

To avoid any serious or fatal injury, this product has been fitted with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist



Read through the instructions carefully before you begin



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.



Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

To assemble the product



DO NOT USE





Other tools you need

Phillips head screwdriver

Parts list

Tallboy 6 Drawer Maple


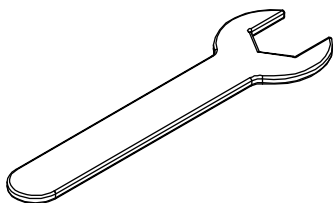
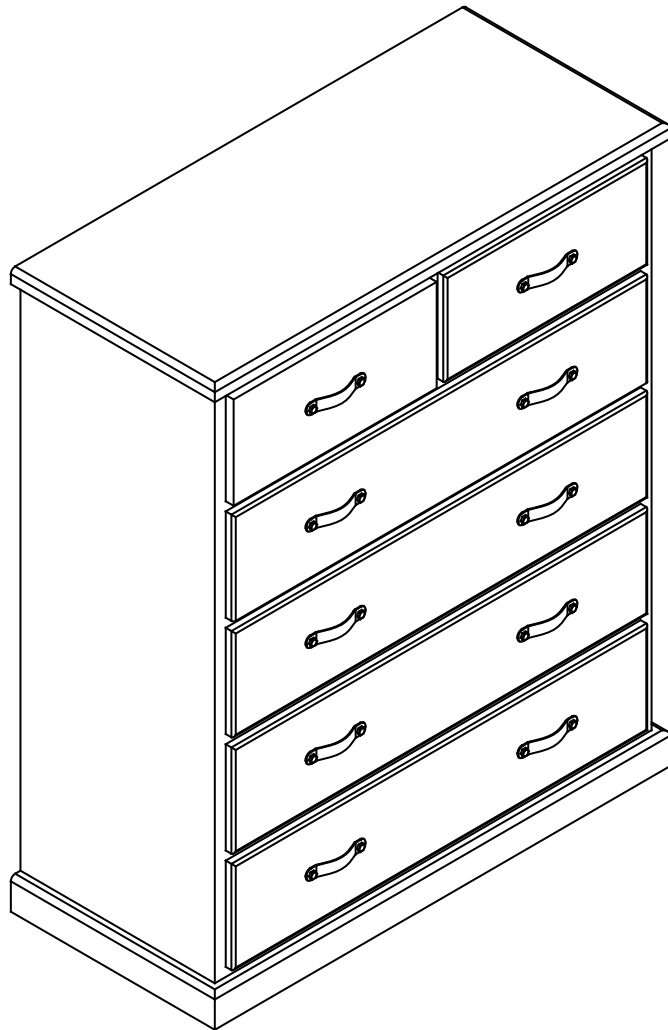


1 x Spanner
(H1)

Please make sure you have all these parts before you start.

Step 1

You will need	
1 x Spanner (H1)	

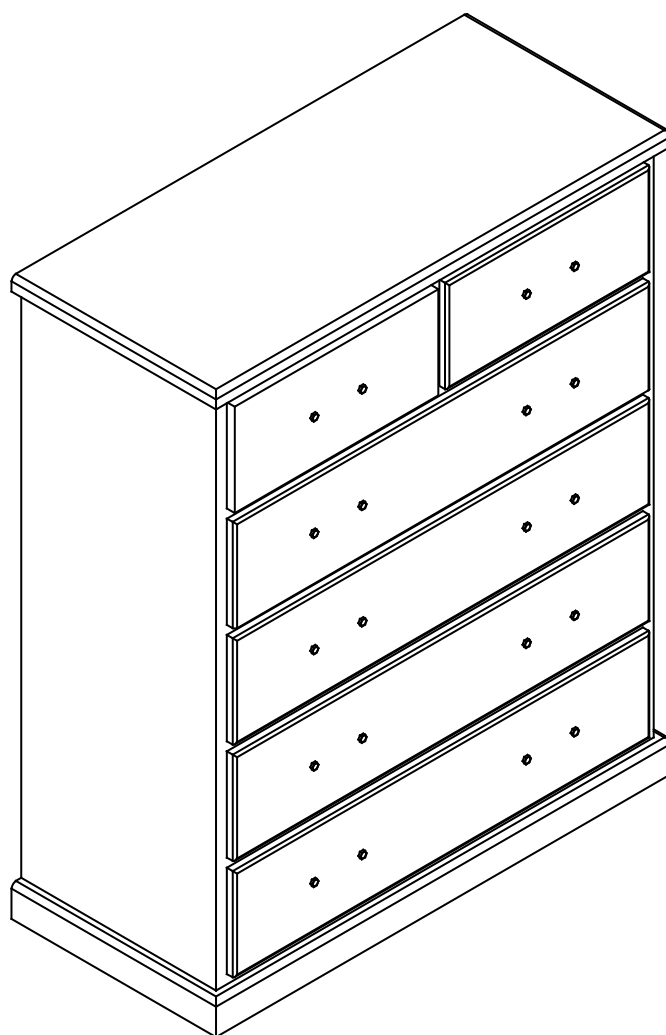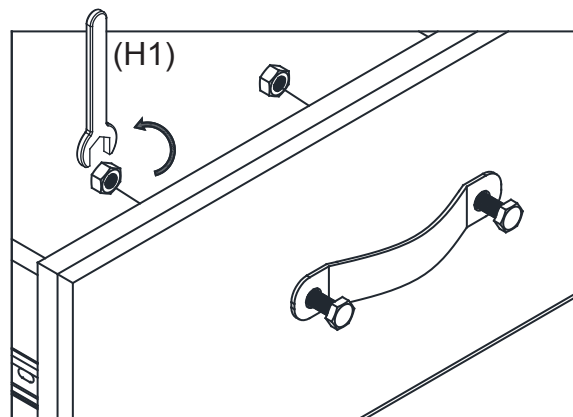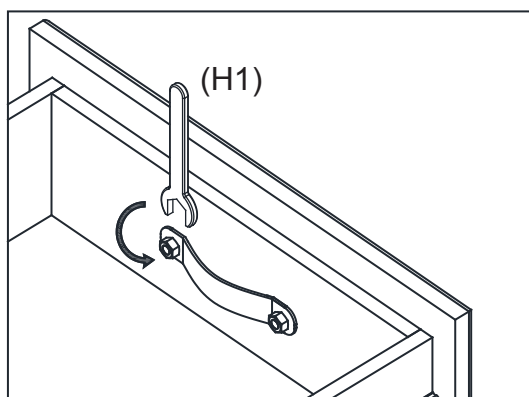


Use a spanner (H1) to change handles to outside of drawers.


Step 2

You will need

Phillips head
screwdriver

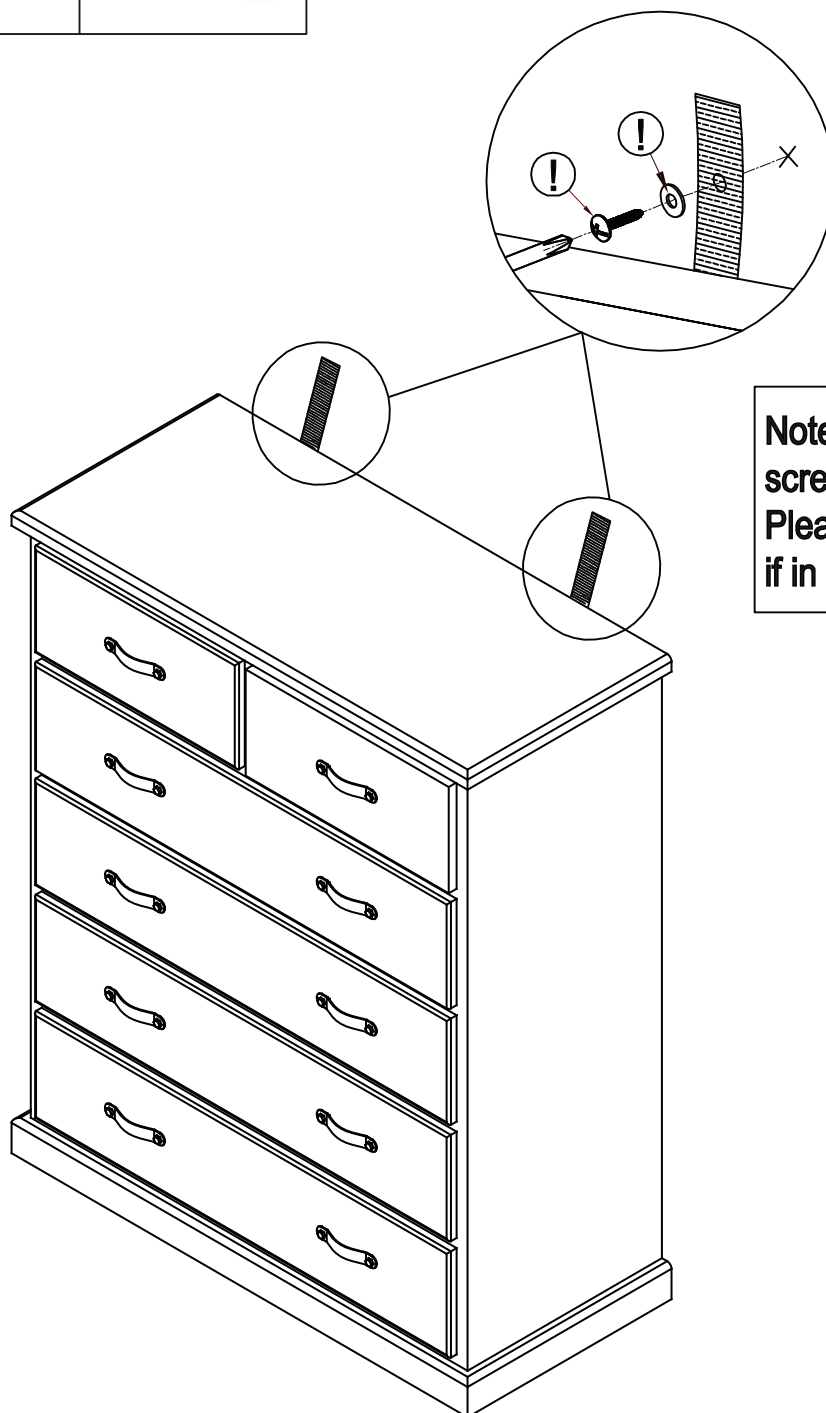

Note: The correct type of wall screws must be used for your wall. Please seek professional advice if in doubt.

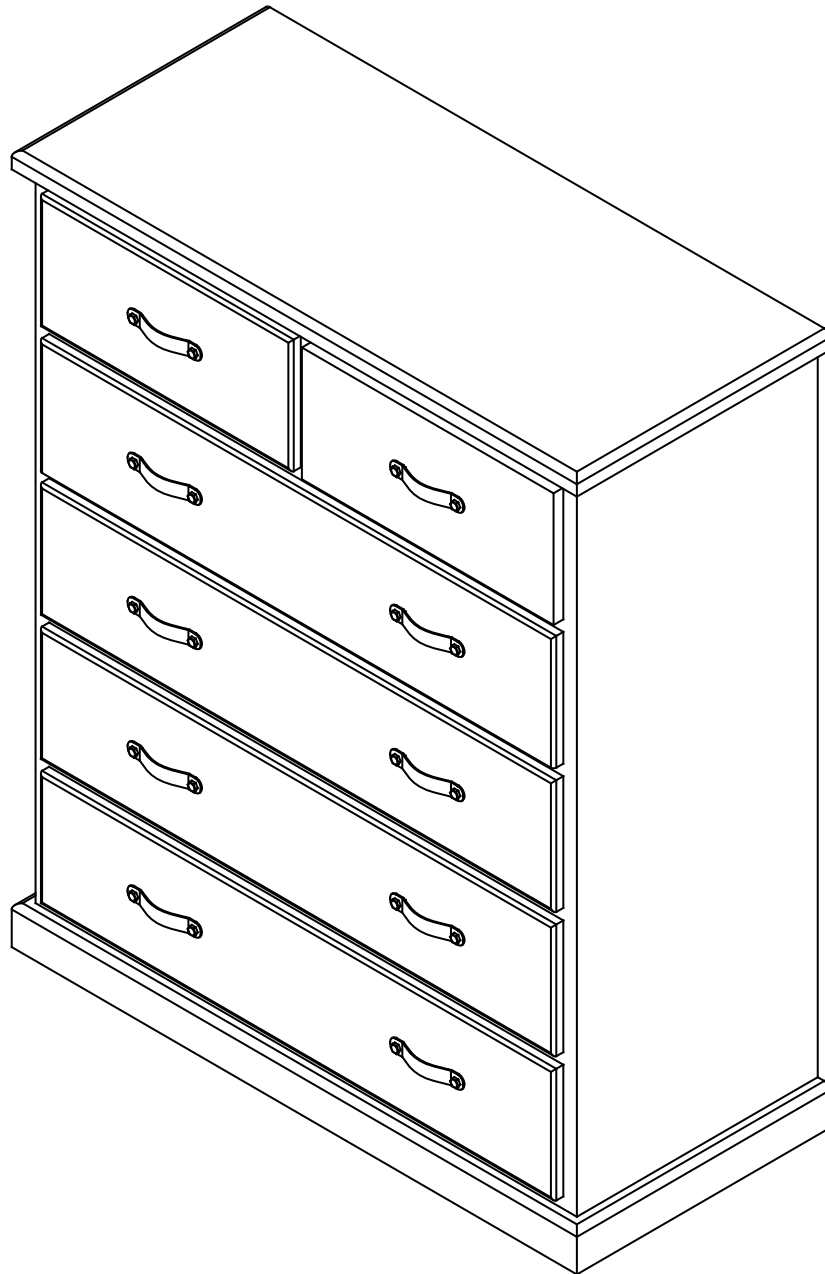

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.