


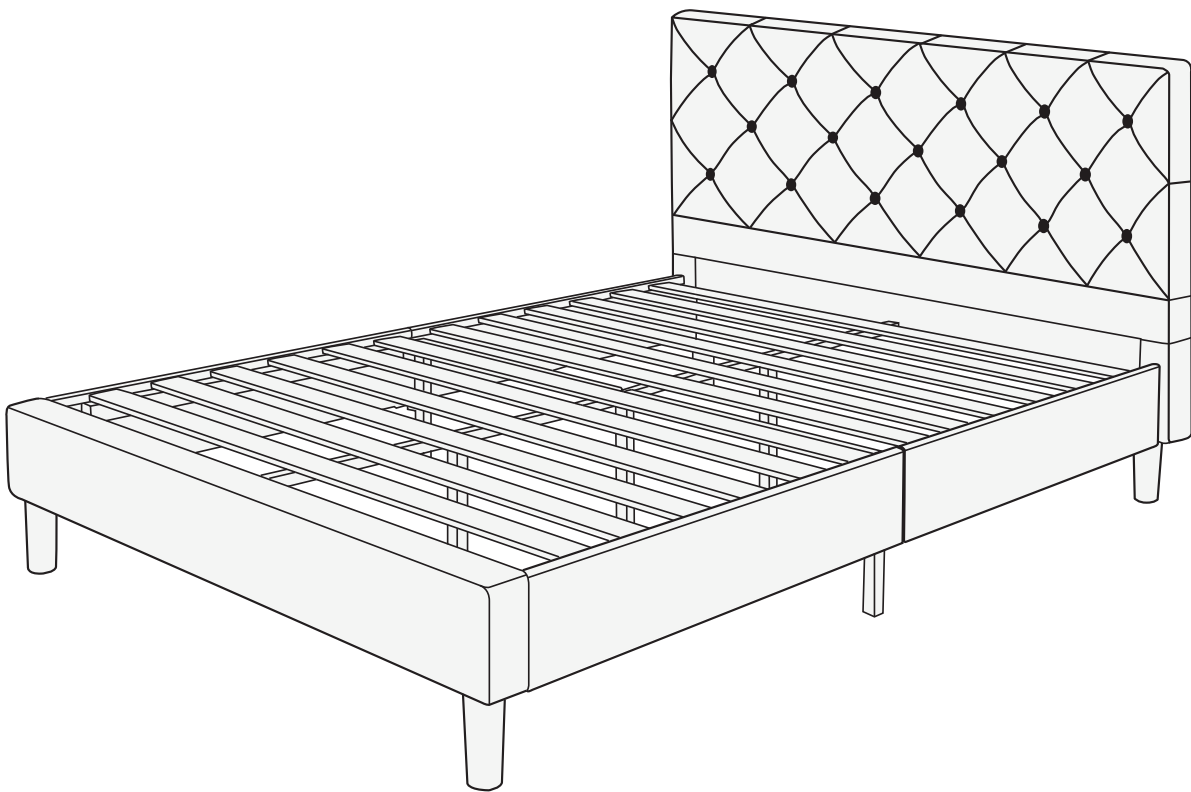

**Fantastic  
Furniture**

Version 1.0



**Two People**



**Required**

# Rackham

Bed Queen Beige

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



## Fantastic Furniture


### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!  
[@fantasticfurniture](#)


# Assembly checklist




Read through the instructions carefully before you begin.

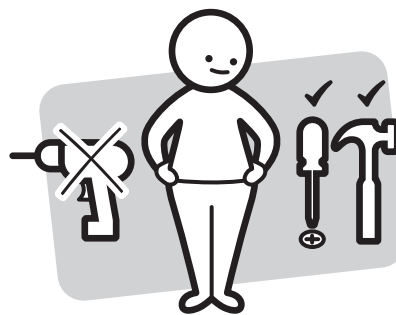

Make sure you have all the required tools. Never use power tools unless instructed.

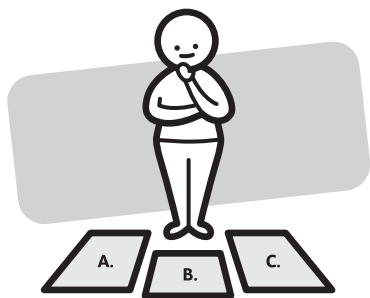

Identify and lay out all of the components before you begin assembly.

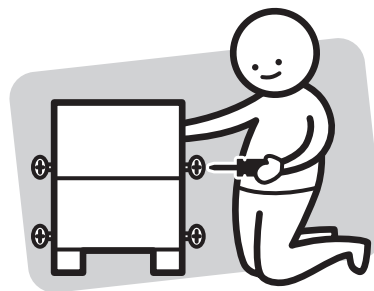

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need

to assemble the product




DO NOT USE

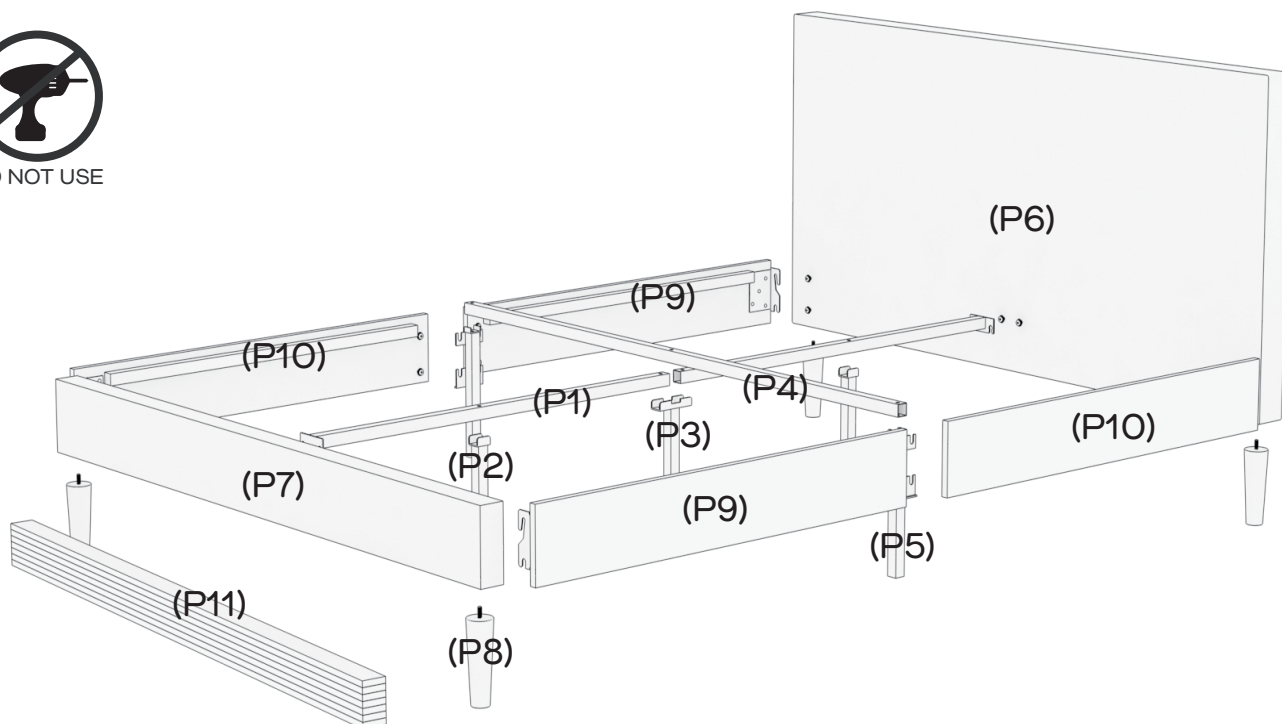


## Parts list

- 2 X Centre Rails (P1)
- 2 X Support Legs (P2)
- Centre Support Leg (P3)
- Cross Rail (P4)
- 2 X Side Support Legs (P5)
- Head Board (P6)
- Foot Board (P7)
- 4 X Feet (P8)
- 2 X Side Boards A (P9)
- 2 X Side Boards B (P10)
- 2 X Sets of Wooden Slats (P11)

## Hardware pack

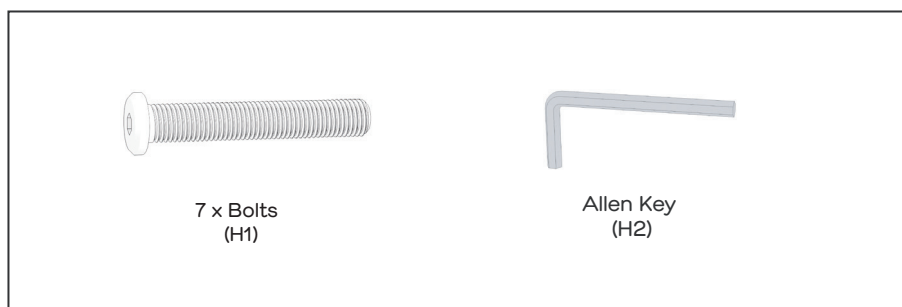

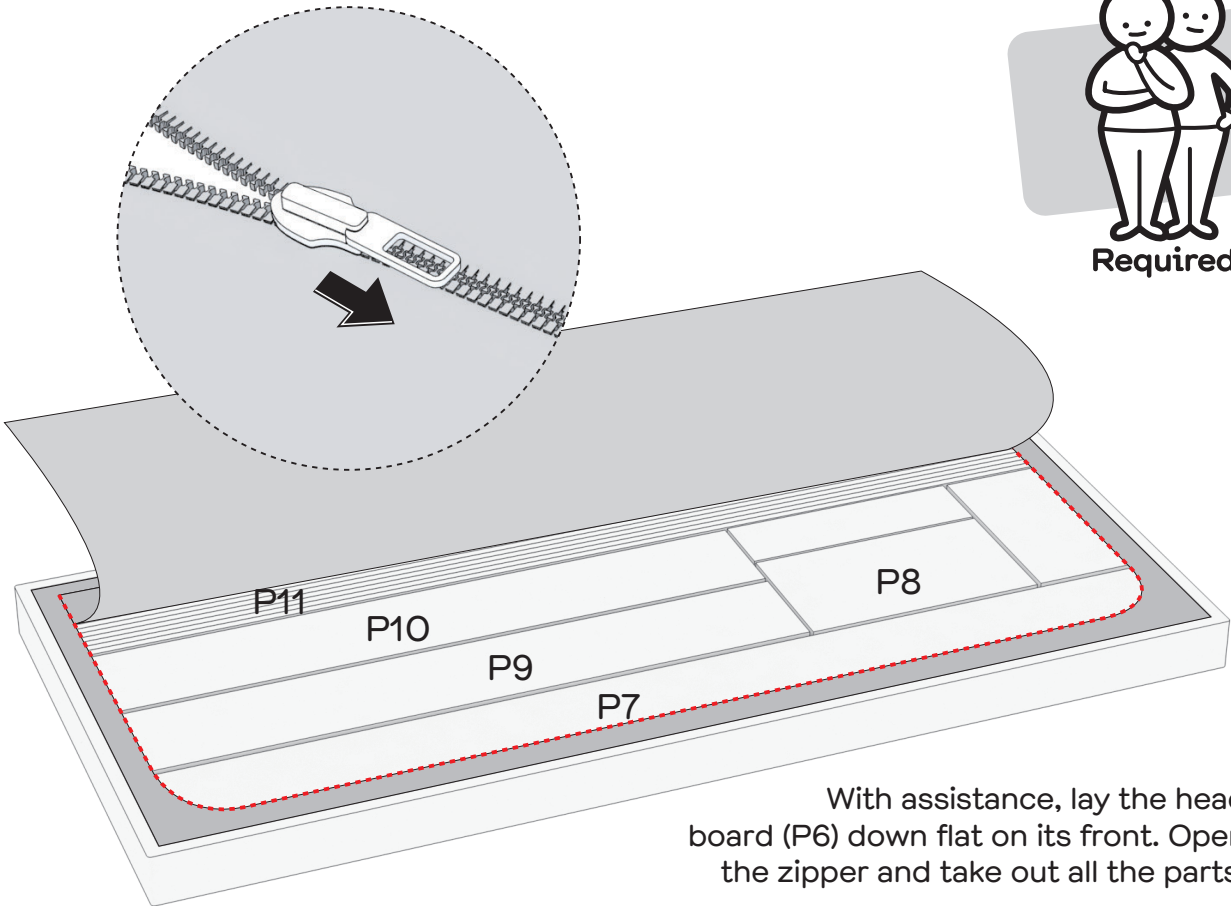

# Step 1




With assistance, lay the head board (P6) down flat on its front. Open the zipper and take out all the parts.

# Step 2

You will need	
	
2 x Bolts (H1)	Allen Key (H2)

x2

Attach 1 x support leg (P2) to 1 x centre rail (P1) using 1 x bolt (H1) as shown, tightening with allen key (H2). Repeat this step for the other 1 x centre rail (P1) and 1 x support leg (P2).

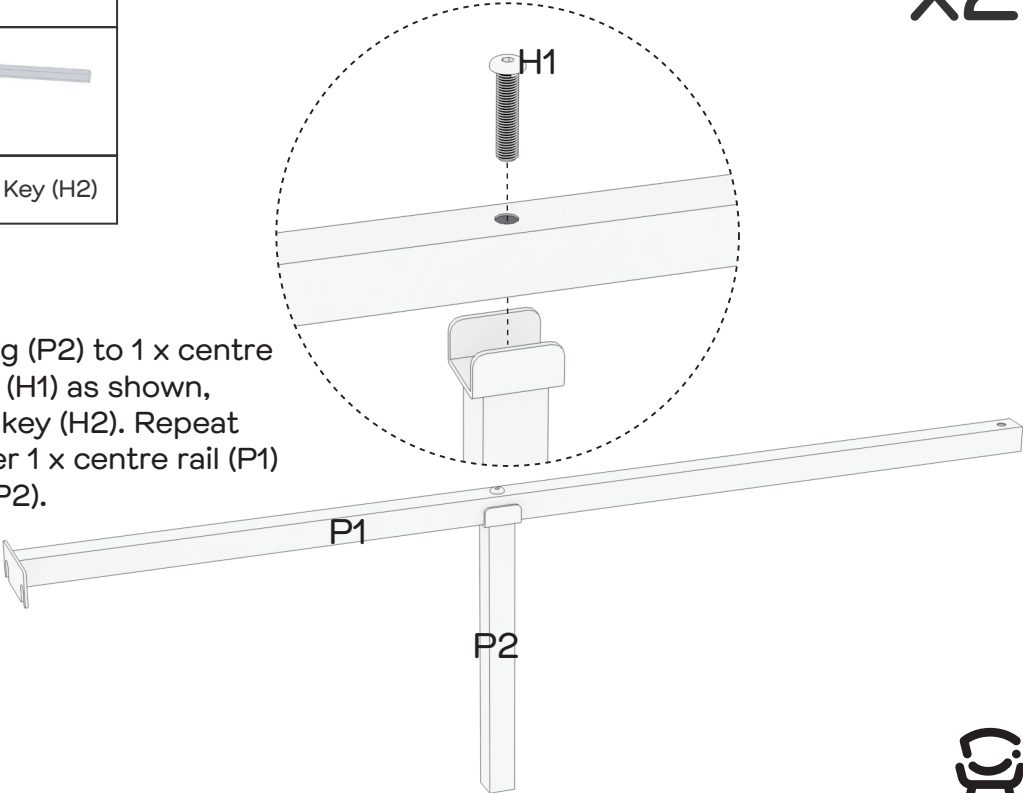



## Step 3


Two People





Required


You will need	
	
2 x Bolts (H1)	Allen Key (H2)

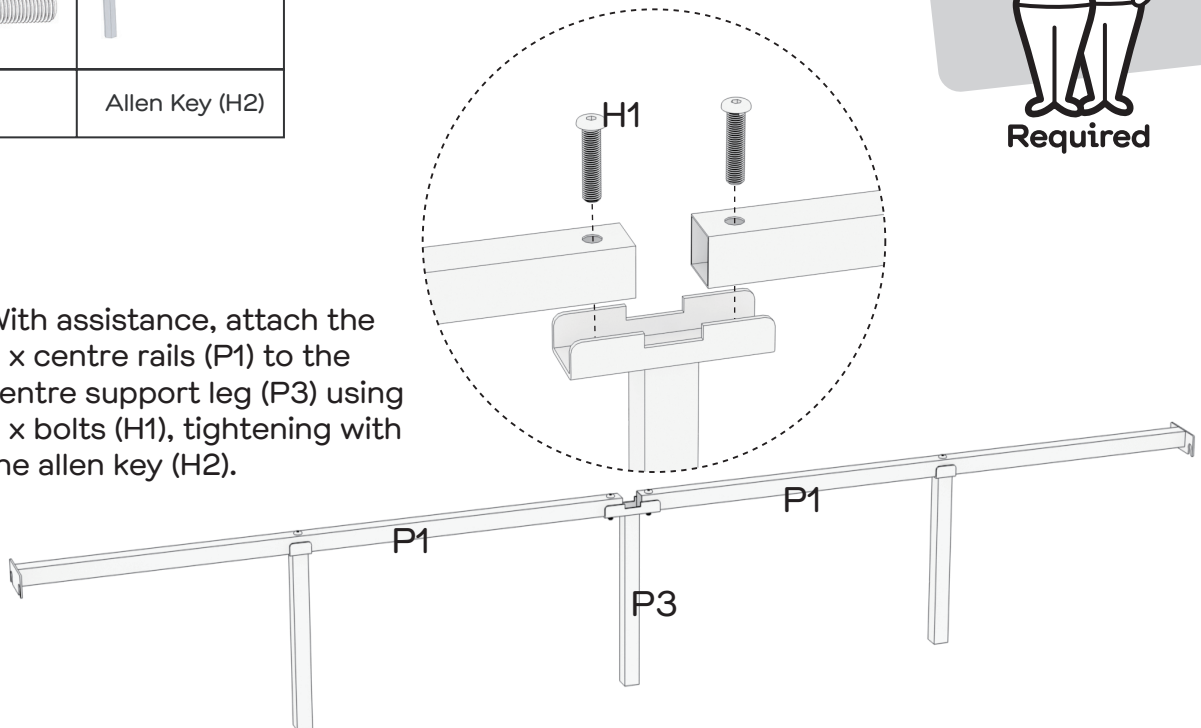With assistance, attach the 2 x centre rails (P1) to the centre support leg (P3) using 2 x bolts (H1), tightening with the allen key (H2).





## Step 4

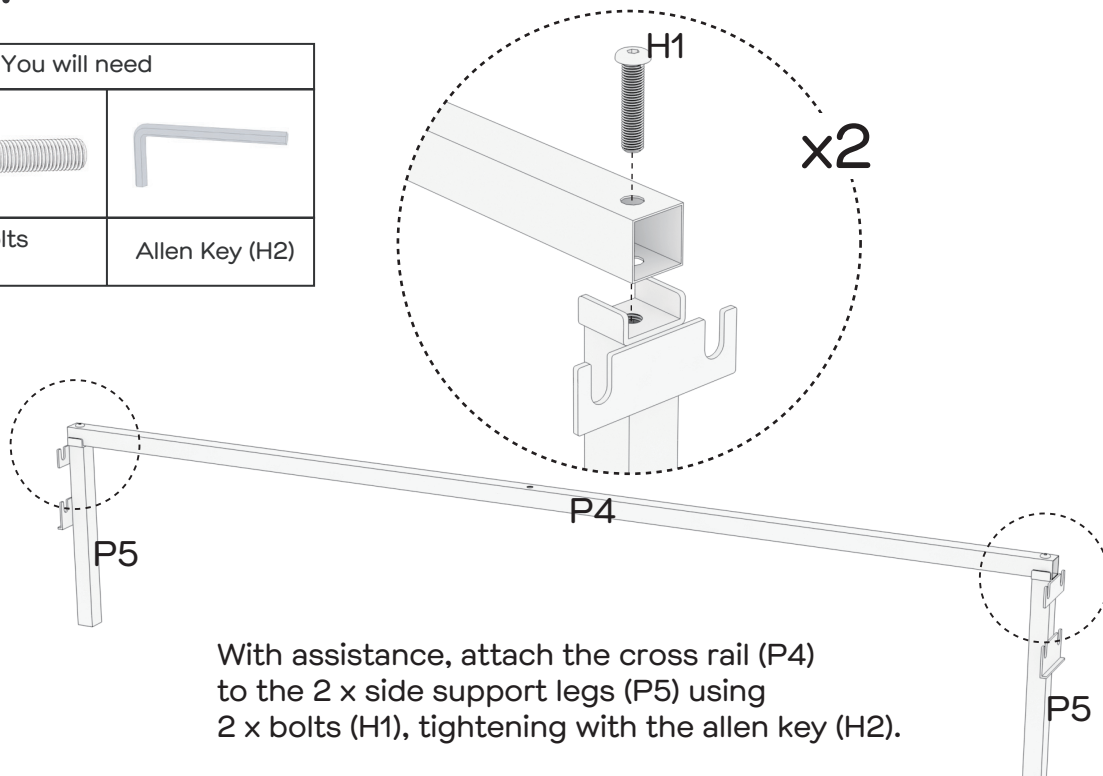You will need	
	
2 x Bolts (H1)	Allen Key (H2)




With assistance, attach the cross rail (P4) to the 2 x side support legs (P5) using 2 x bolts (H1), tightening with the allen key (H2).

# Step 5


You will need	
	
1 x Bolt (H1)	Allen Key (H2)



With assistance, attach cross rail (P4) to centre support leg (P3) using 1 x bolt (H1) tightening with allen key ( H2).

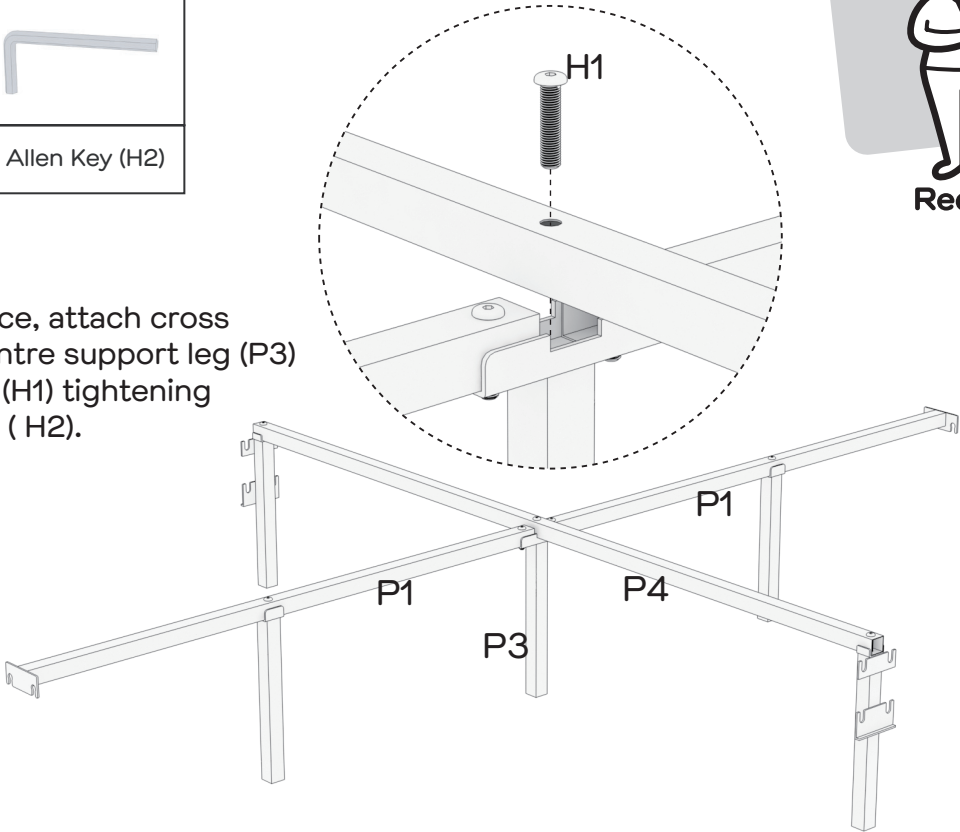

# Step 6

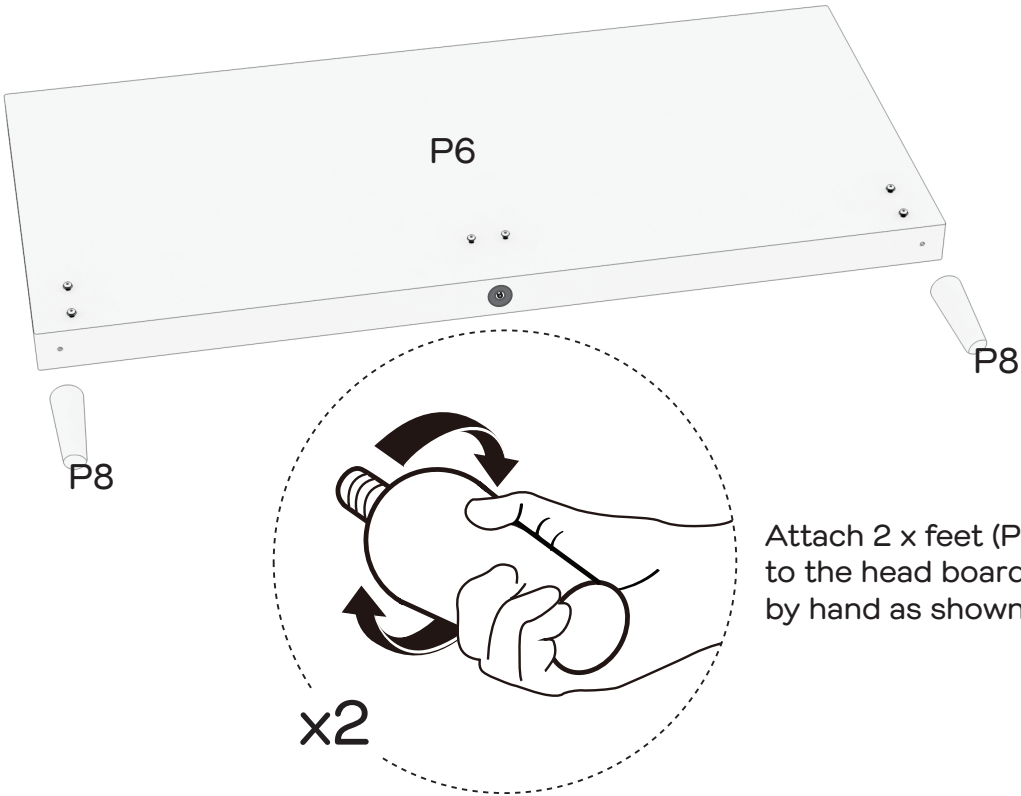

Attach 2 x feet (P8) to the head board (P6) by hand as shown.

## Step 7

You will need




Allen Key (H2)

Two People




Required

Loosen the bolts attached to the centre of the head board (P6) so they are protruding about 15mm. With assistance, attach the centre rail (P1) to the head board (P6) as shown. Use the allen key (H2) to tighten the bolts so the centre rail (P1) is secure. Do not fully tighten the bolts.

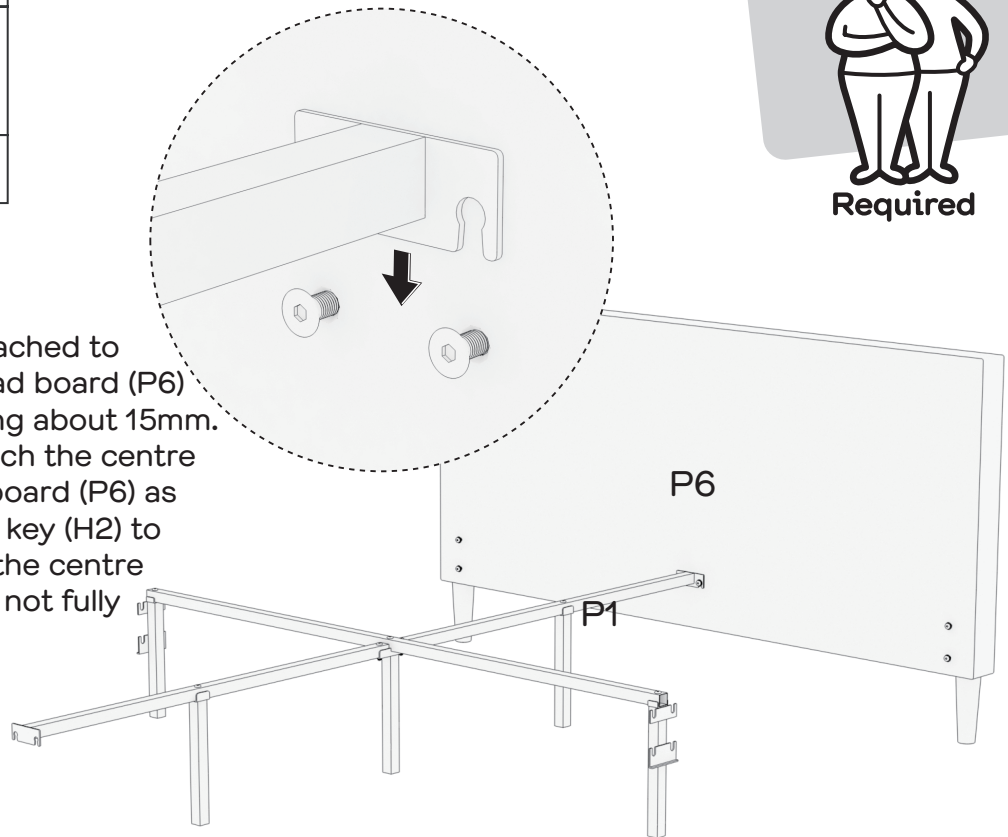

## Step 8

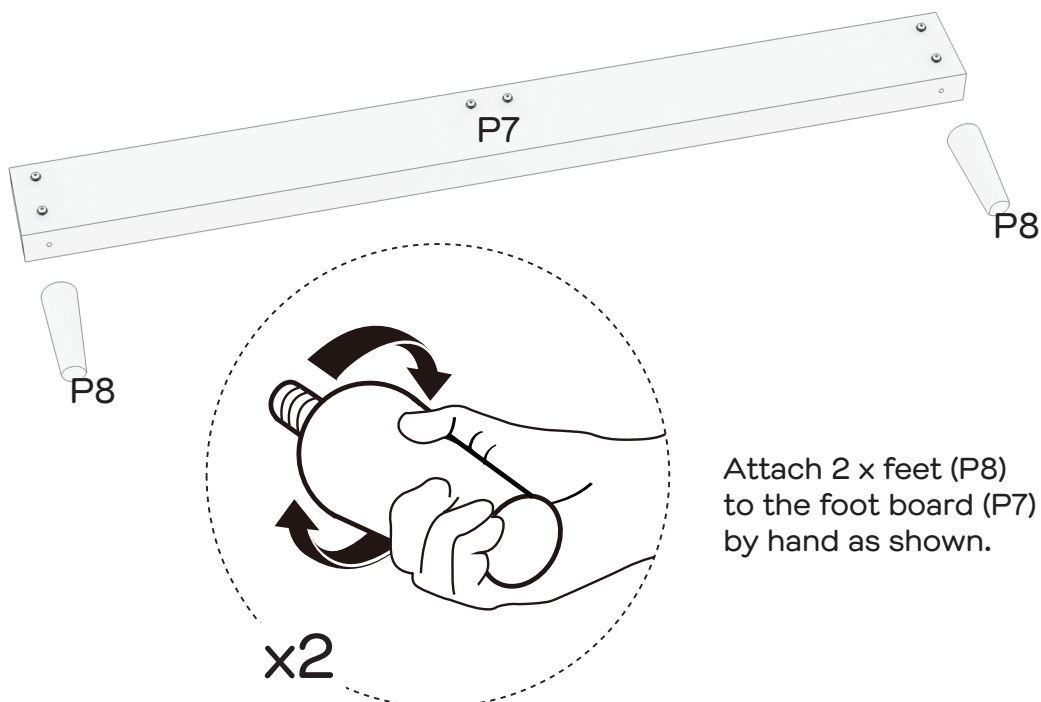

Attach 2 x feet (P8) to the foot board (P7) by hand as shown.




## Step 9

Two People



Required

You will need
Allen Key (H2)

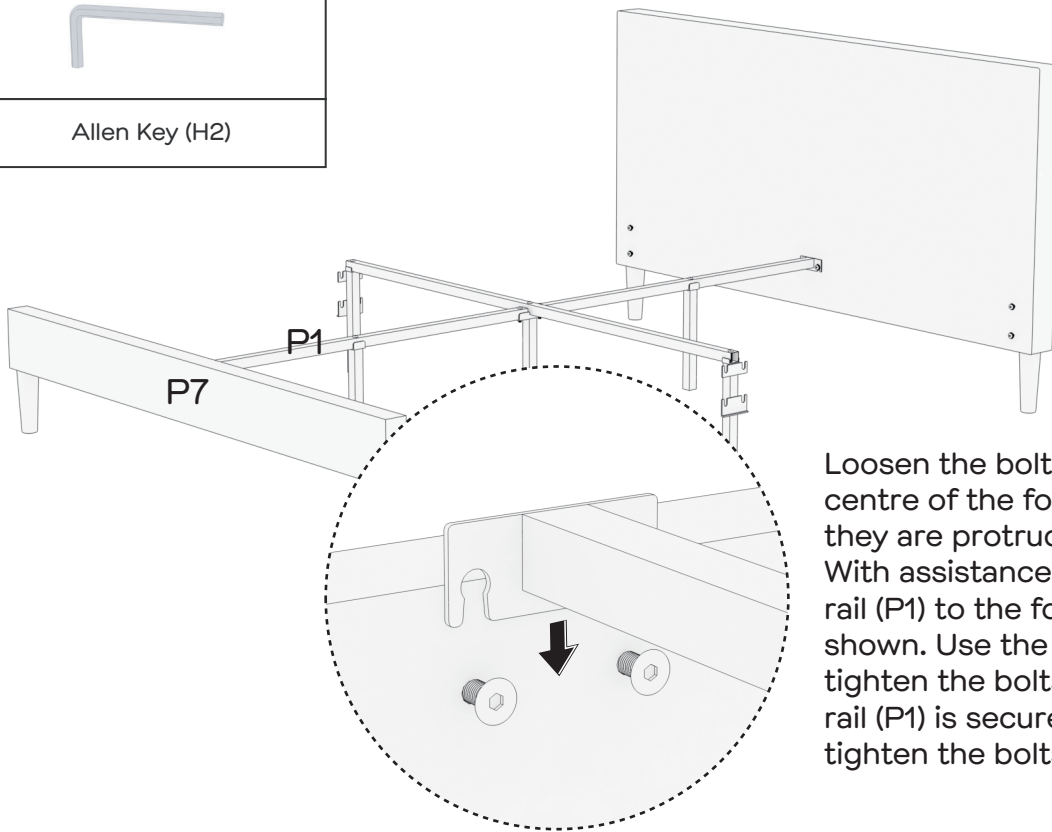


Loosen the bolts attached to the centre of the foot board (P7) so they are protruding about 15mm. With assistance, attach the centre rail (P1) to the foot board (P7) as shown. Use the allen key (H2) to tighten the bolts so the centre rail (P1) is secure. Do not fully tighten the bolts.

## Step 10

You will need
Allen Key (H2)

Loosen the bolts attached to the left side of head board (P6) and on 1 x side board A (P9) so they are protruding about 15mm. With assistance, attach side board A (P9) to the head board (P6) and to the side support leg (P5) as shown. Use the allen key (H2) to tighten the bolts so that side board A (P9) is secure. Do not fully tighten the bolts.

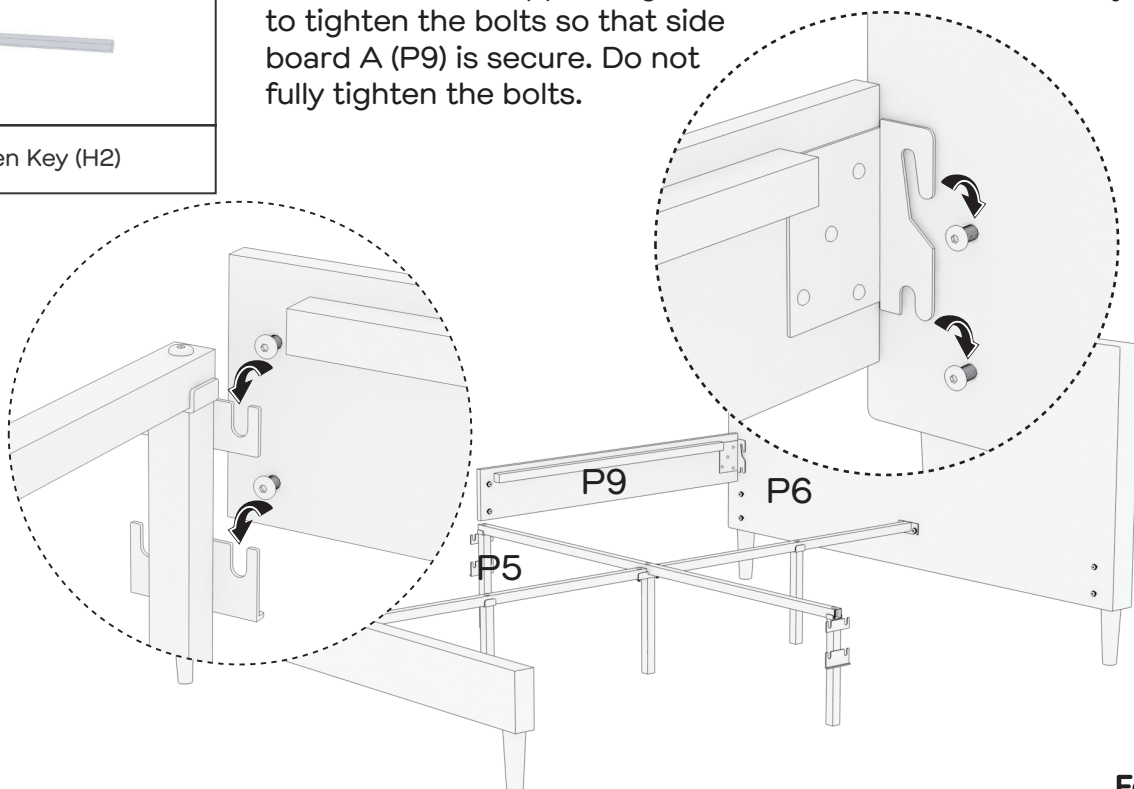

## Step 11

You will need




Allen Key (H2)

Two People



Required

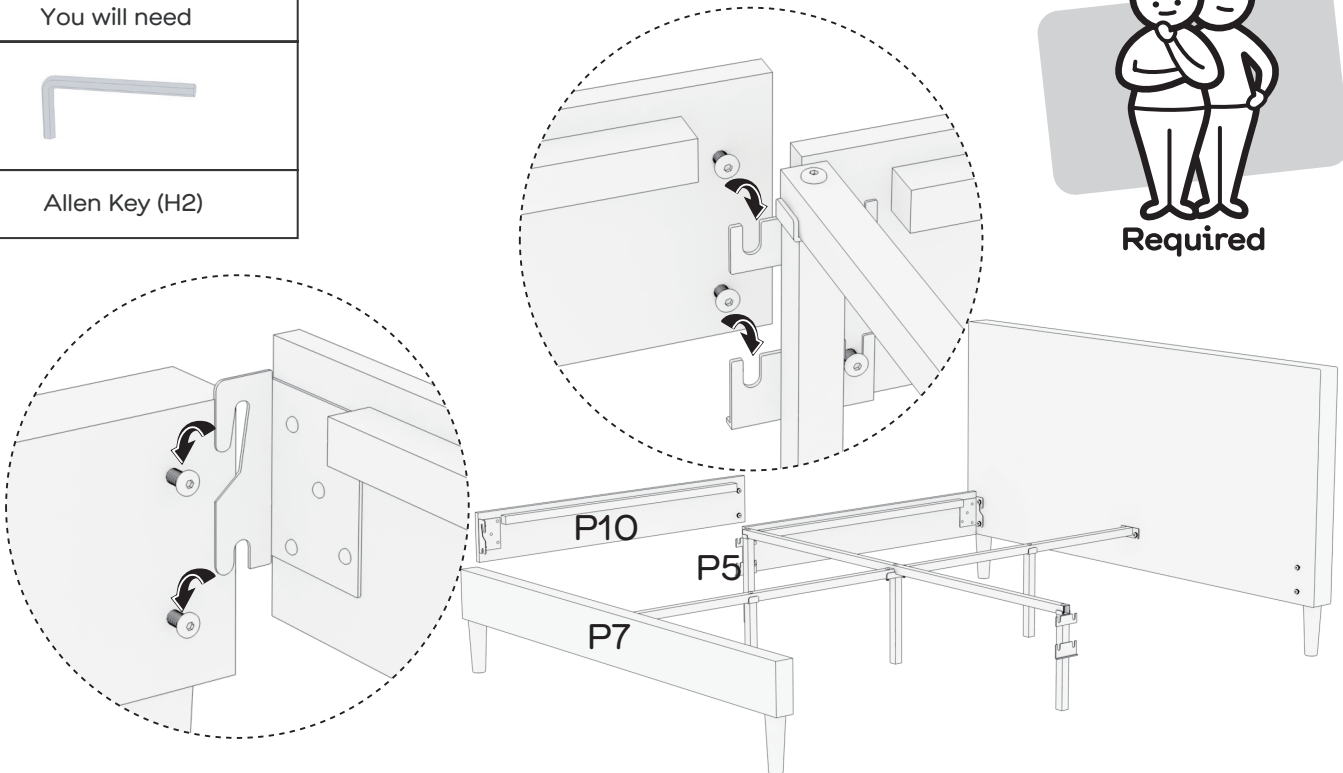

Loosen the bolts attached to the left side of foot board (P7) and on 1 x side board B (P10) so they are protruding about 15mm. With assistance, attach side board B (P10) to the foot board (P7) and to the side support leg (P5) as shown. Use the allen key (H2) to tighten the bolts so that side board B (P10) is secure. Do not fully tighten the bolts.


## Step 12

You will need




Allen Key (H2)

Loosen the bolts attached to the right side of head board (P6) and on 1 x side board B (P10) so they are protruding about 15mm. With assistance, attach side board B (P10) to the head board (P6) and to the side support leg (P5) as shown. Use the allen key (H2) to tighten the bolts so that side board B (P10) is secure. Do not fully tighten the bolts.

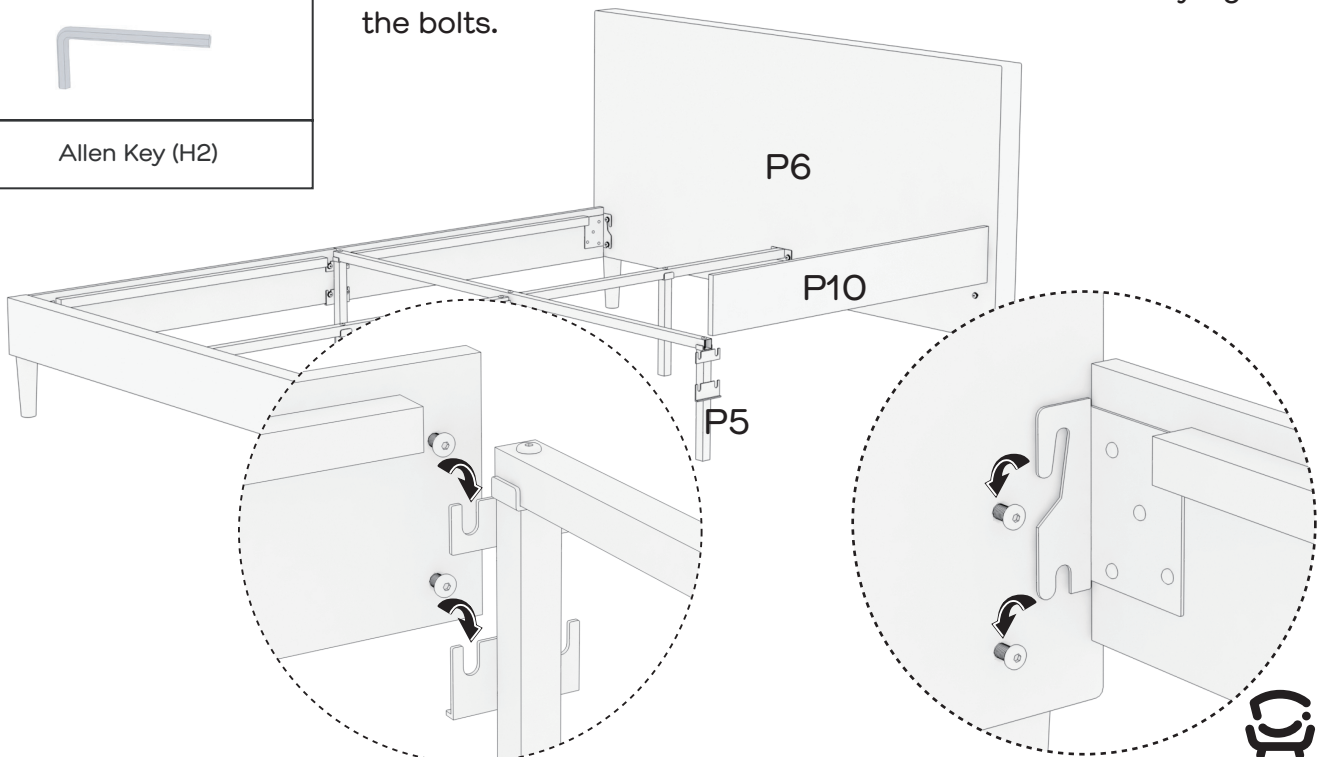

Fantastic  
Furniture


## Step 13

You will need

Allen Key (H2)

Two People

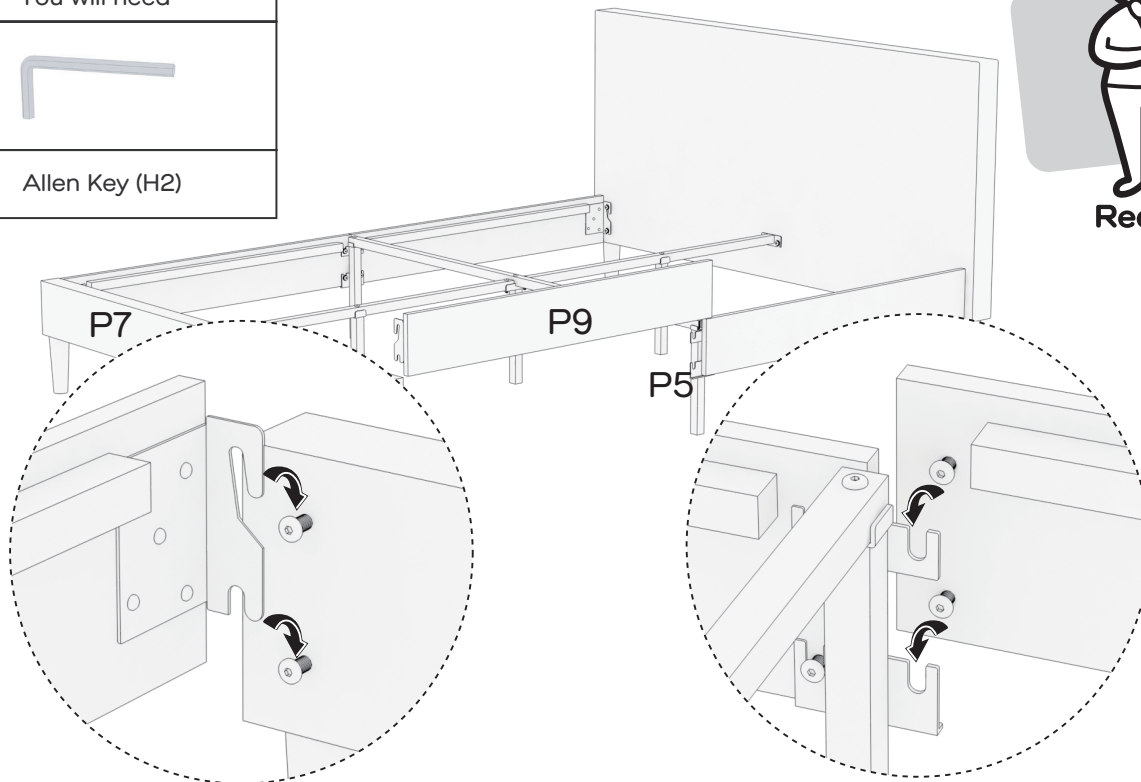

Required



Loosen the bolts attached to the right side of foot board (P7) and on 1 x side board A (P9) so they are protruding about 15mm. With assistance, attach side board A (P9) to the foot board (P7) and to the side support leg (P5) as shown. Use the allen key (H2) to tighten the bolts so that side board A (P9) is secure. Do not fully tighten the bolts.


## Step 14

Two People



Required

With assistance, lay down 2 x sets of wooden slats (P11) and attach the velcro strips on the side boards (P9, P10) and centre rails (P1).

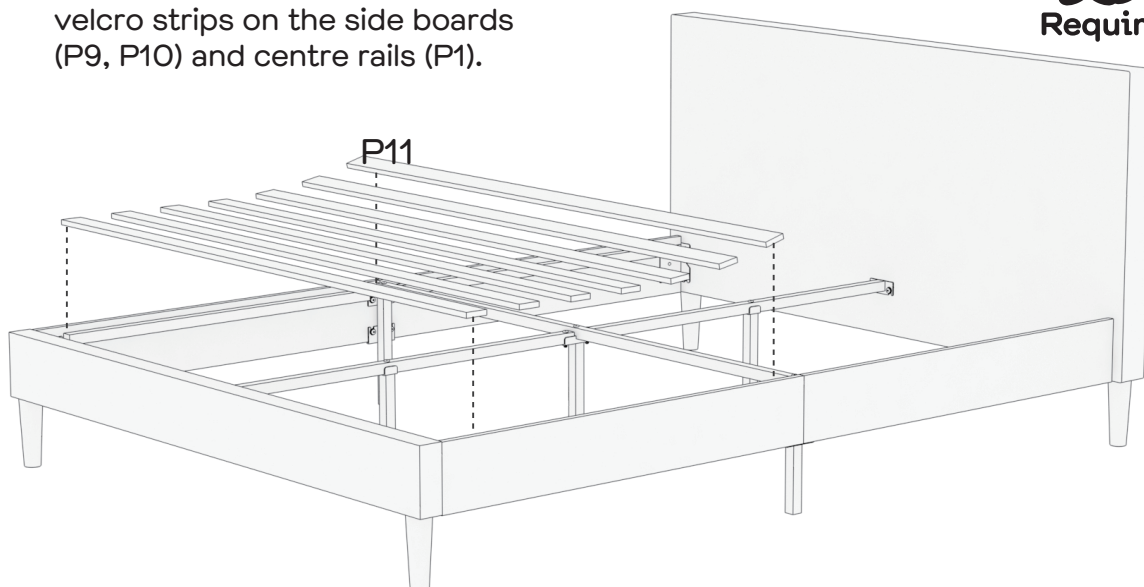

## Step 15



## Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.