


Assembly Instructions


Bar Stool 1 Seater Chrome

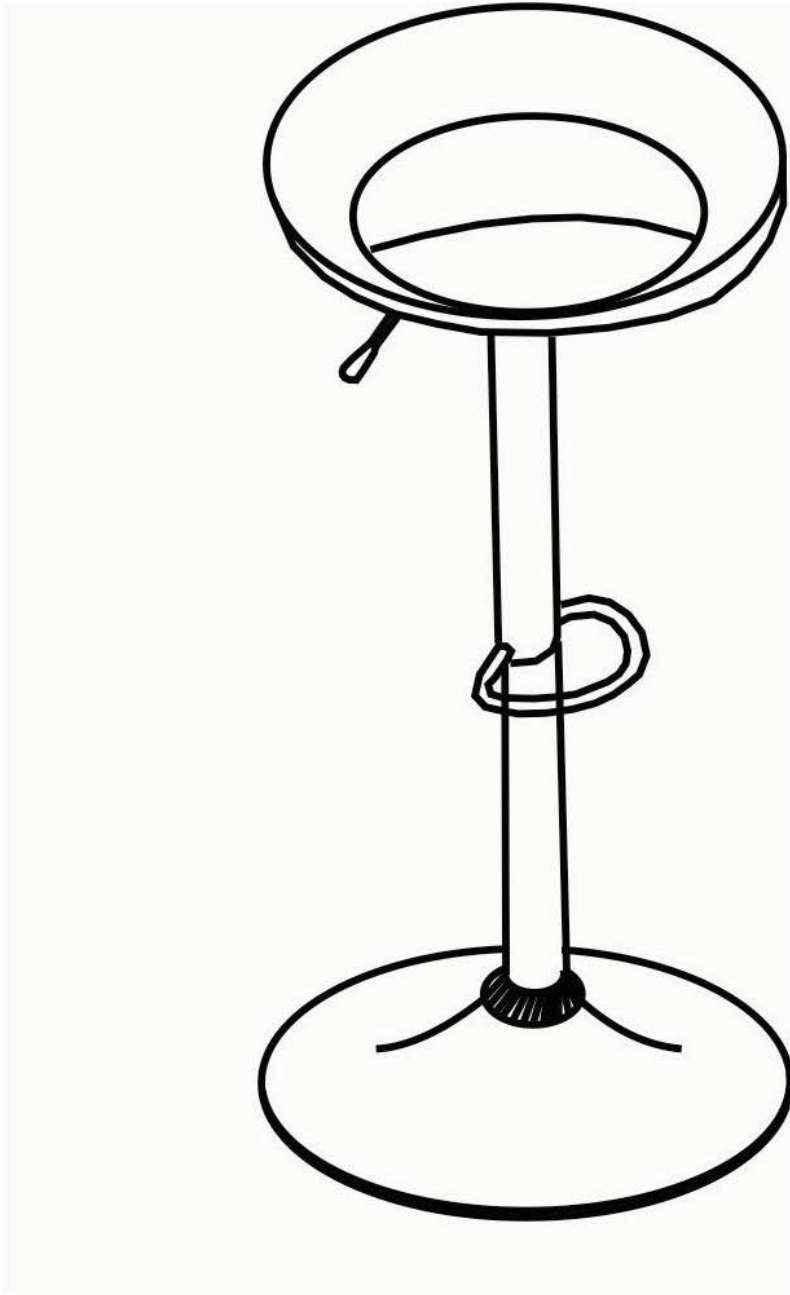

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

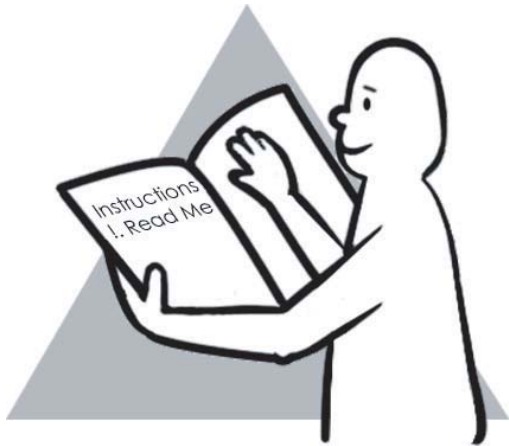


Read Instructions carefully.
Check no parts are missing.

2

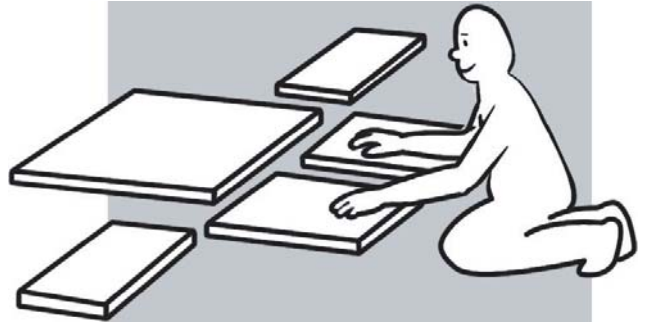


Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.

3

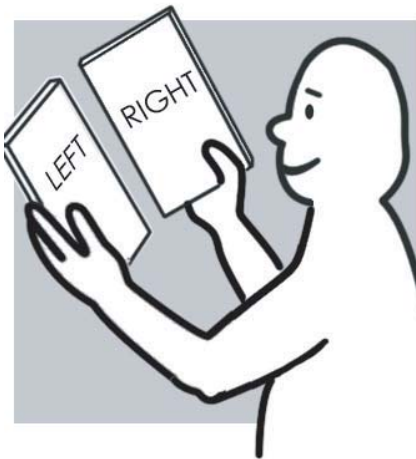


Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

4

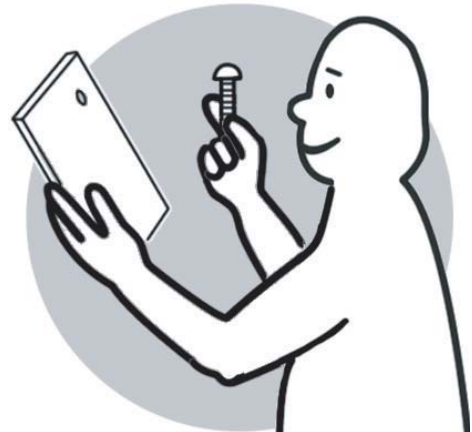


Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

5

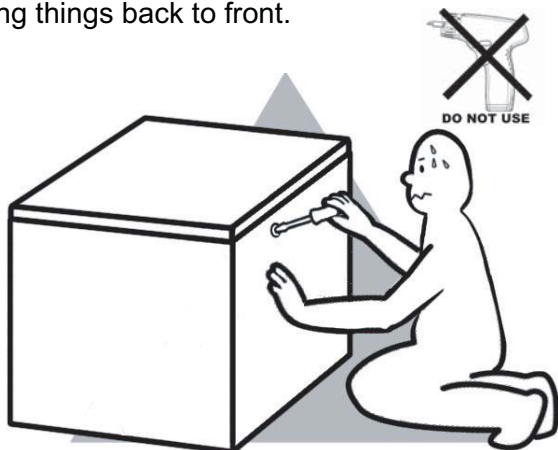

DO NOT fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

6

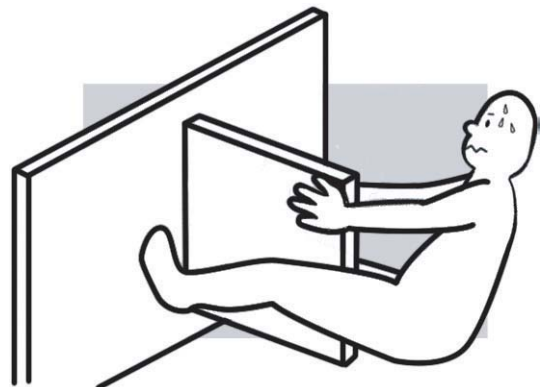

If glue is required **DO NOT** set until you are certain that the parts belong together.

What you Need


To Assemble the Body



Allen key provided




DO NOT USE

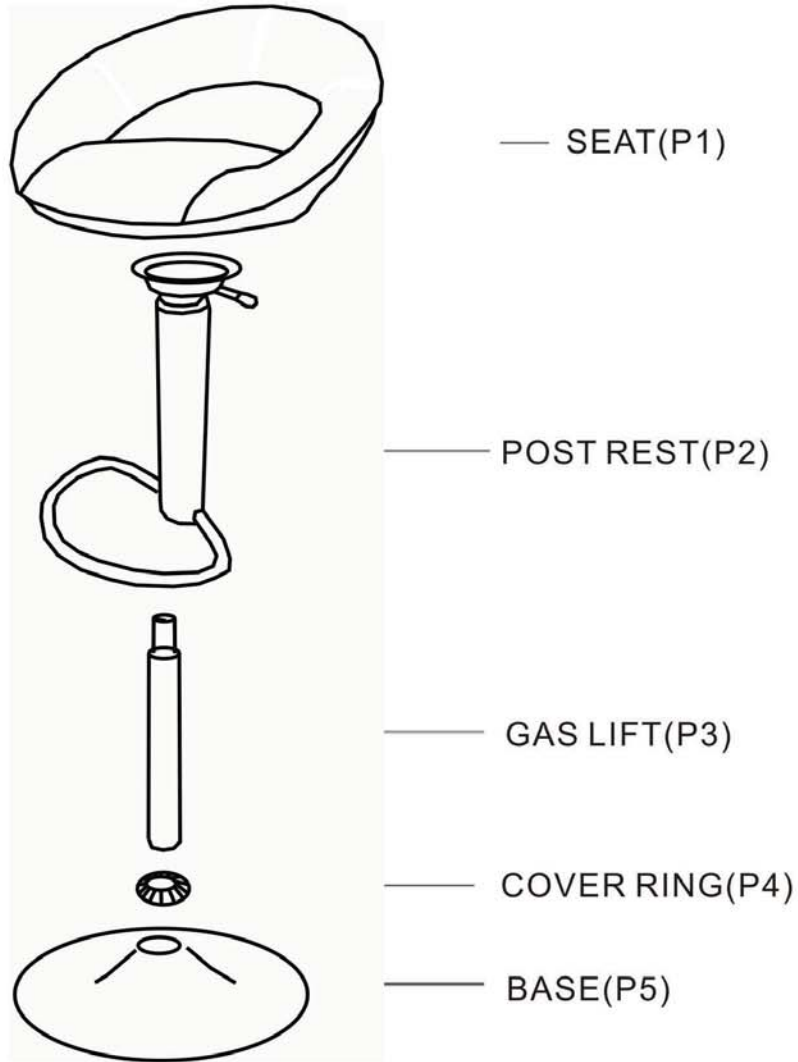

4xBolts
(H1)

please make sure you have all these parts before you start.


Step 1

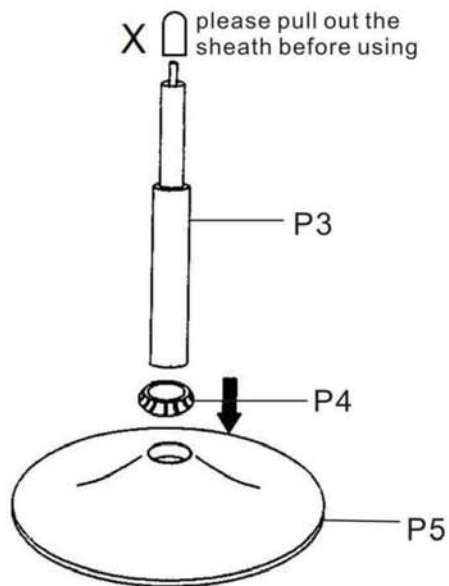


Insert gas lift (P3) through Cover Ring (P4) into the Base (P5).

Step 2


You will need:

4xBolts (H1)	
--------------	---

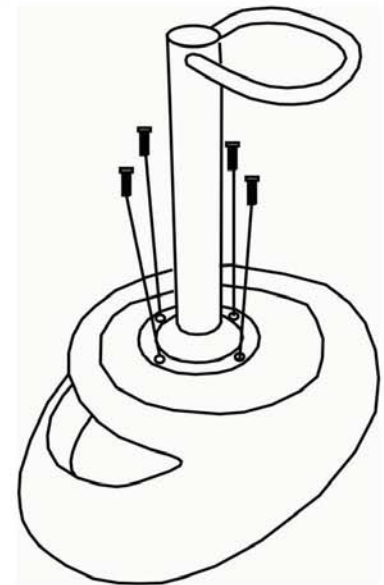


Attach Post Rest (P2) to the seat (P1) with 4 x Bolts (H1). Tighten Firmly.

Step 3

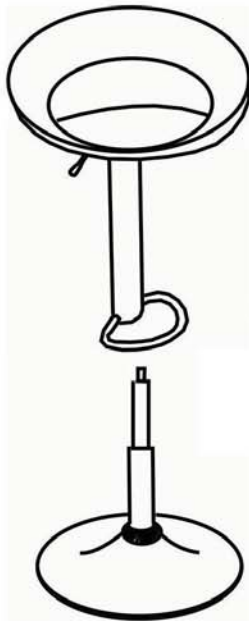

Place Postrest over gaslift.

Step 4

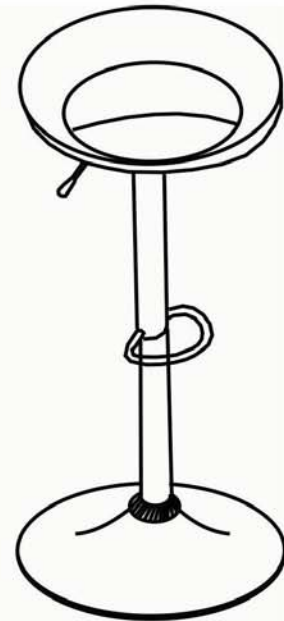

The job is now complete!

In the interest of our environment
Please dispose of all packaging thoughtfully.