


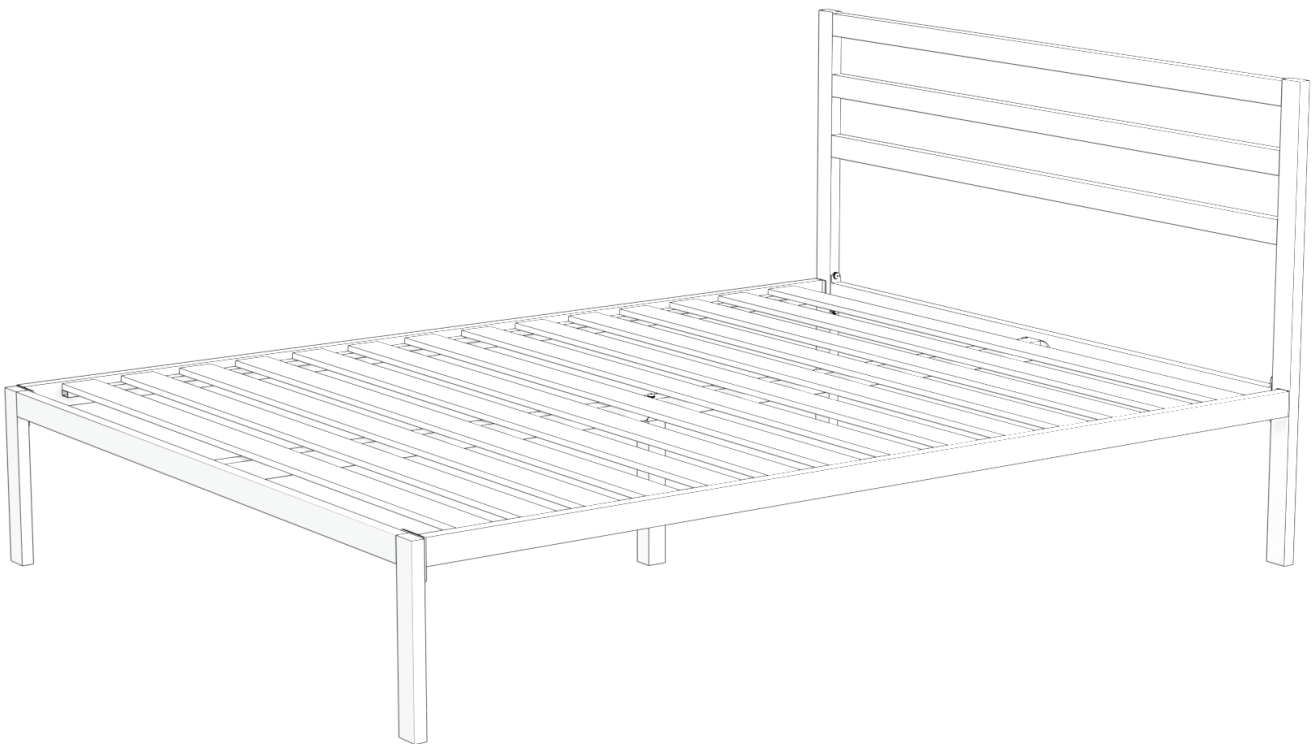


**Fantastic  
Furniture**

Version 1.0



**Two People**

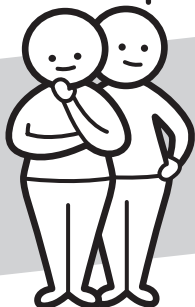

**Required**

**Vane**  
Bed White

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



## Fantastic Furniture


### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!  
**@fantasticfurniture**


# Assembly checklist




Read through the instructions carefully before you begin.

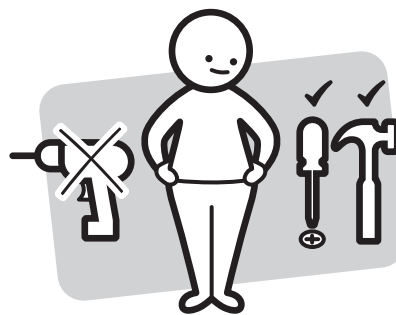

Make sure you have all the required tools. Never use power tools unless instructed.

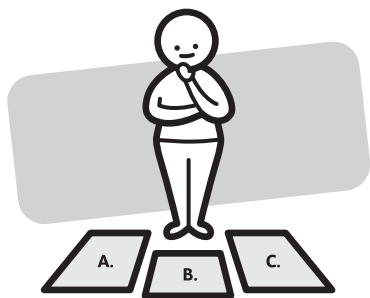

Identify and lay out all of the components before you begin assembly.

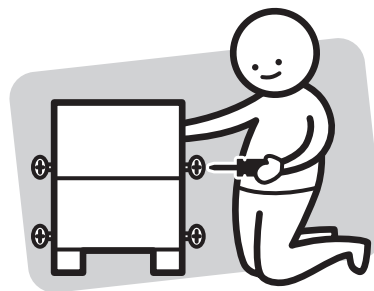

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need

to assemble the product




DO NOT USE

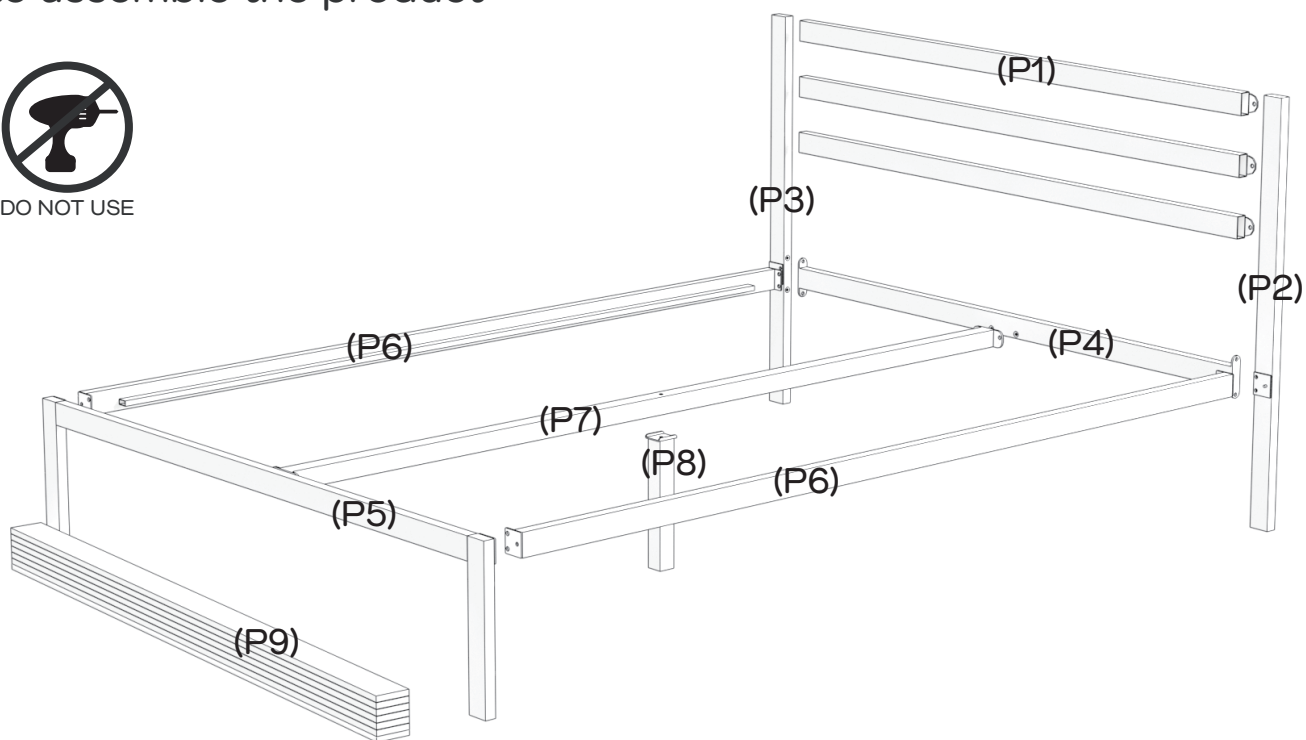



## Parts list


- 3 x Bedhead Centre Rails(P1)
- Bedhead Rail (P2/P3)
- Head Rail (P4)
- Footboard (P5)
- 2 x Side Rails (P6)
- Centre Rail (P7)
- Support Leg (P8)
- 2 x Sets of Wooden Slats (P9)
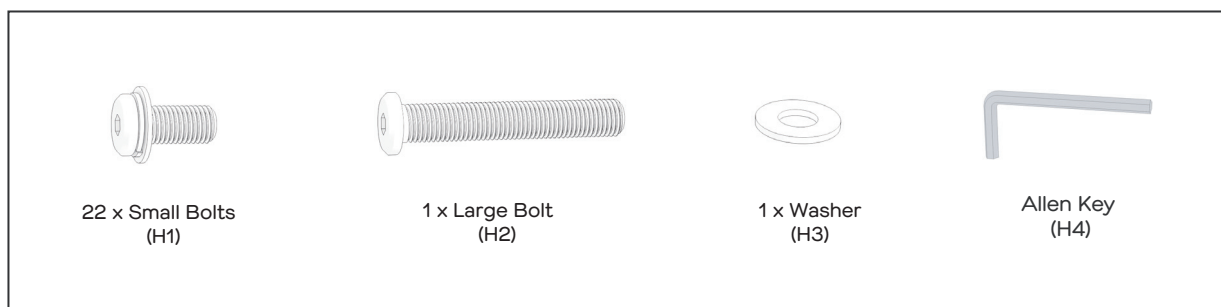
## Hardware pack





# Step 1

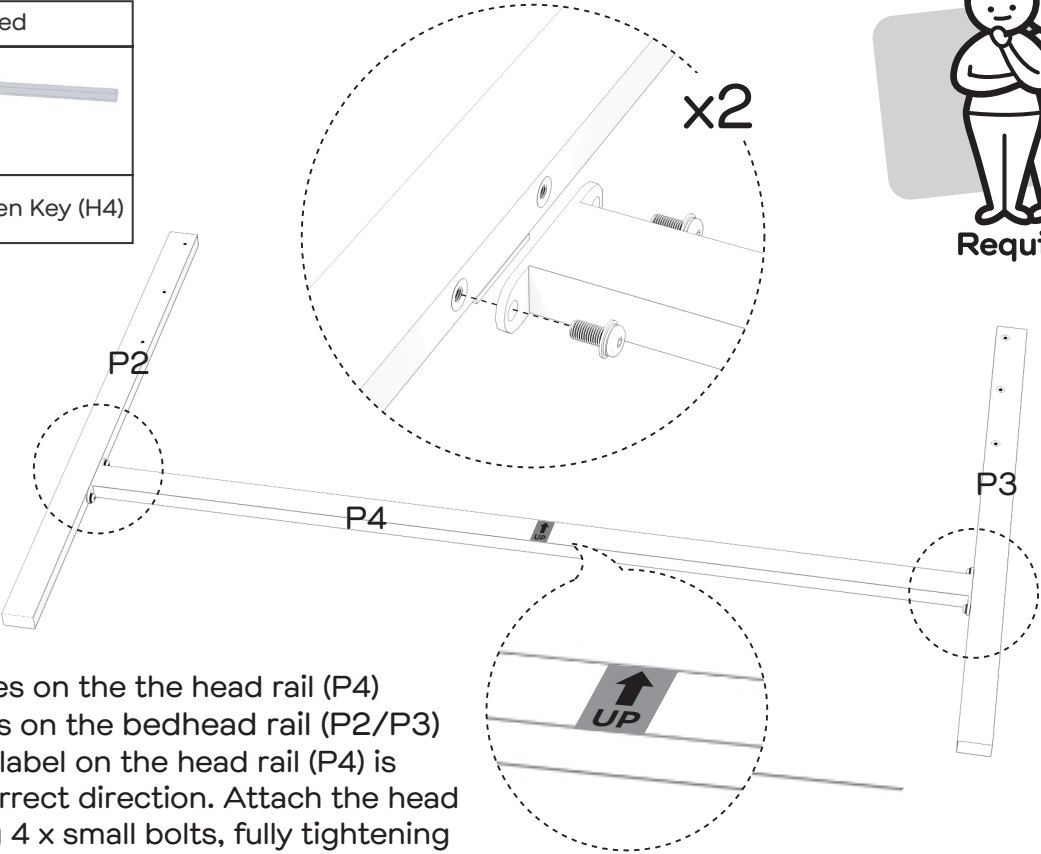
You will need	
	
4 x Small Bolts (H1)	Allen Key (H4)




Align the holes on the the head rail (P4) with the holes on the bedhead rail (P2/P3) ensuring the label on the head rail (P4) is facing the correct direction. Attach the head rail (P4) using 4 x small bolts, fully tightening with allen key (H4).

# Step 2

You will need	
	
6 x Small Bolts (H1)	Allen Key (H4)

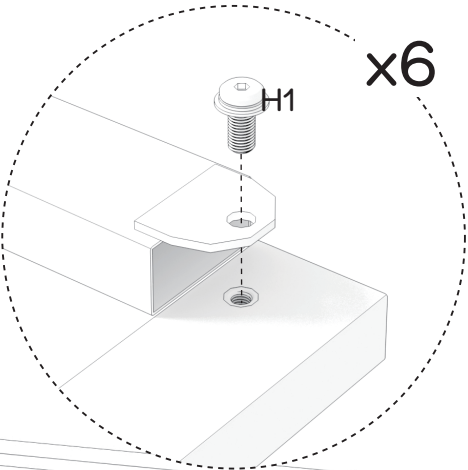

With assistance, align the holes on the 3 x bedhead centre rails (P1) to the holes on the bedhead rail (P2/P3). Attach the 3 x bedhead centre rails (P1) using 6 x small bolts (H1), fully tightening using allen key (H4).

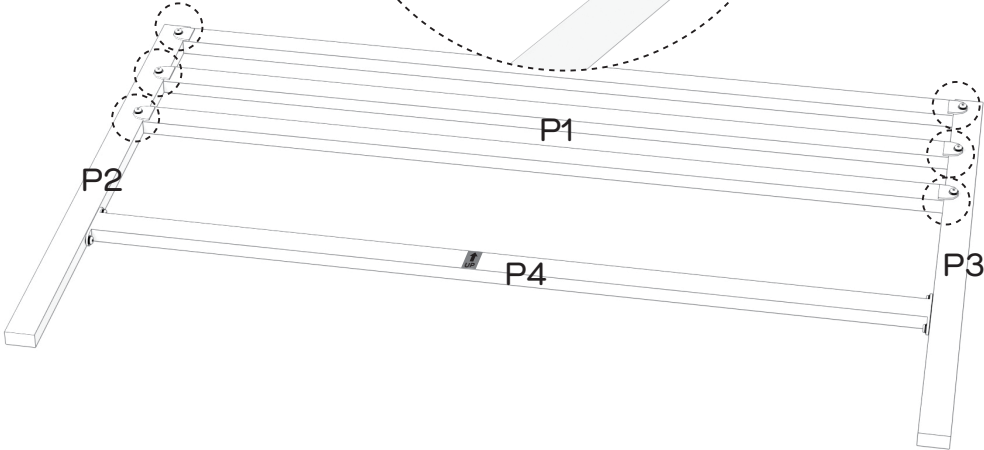




## Step 3

Two People





Required


You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)

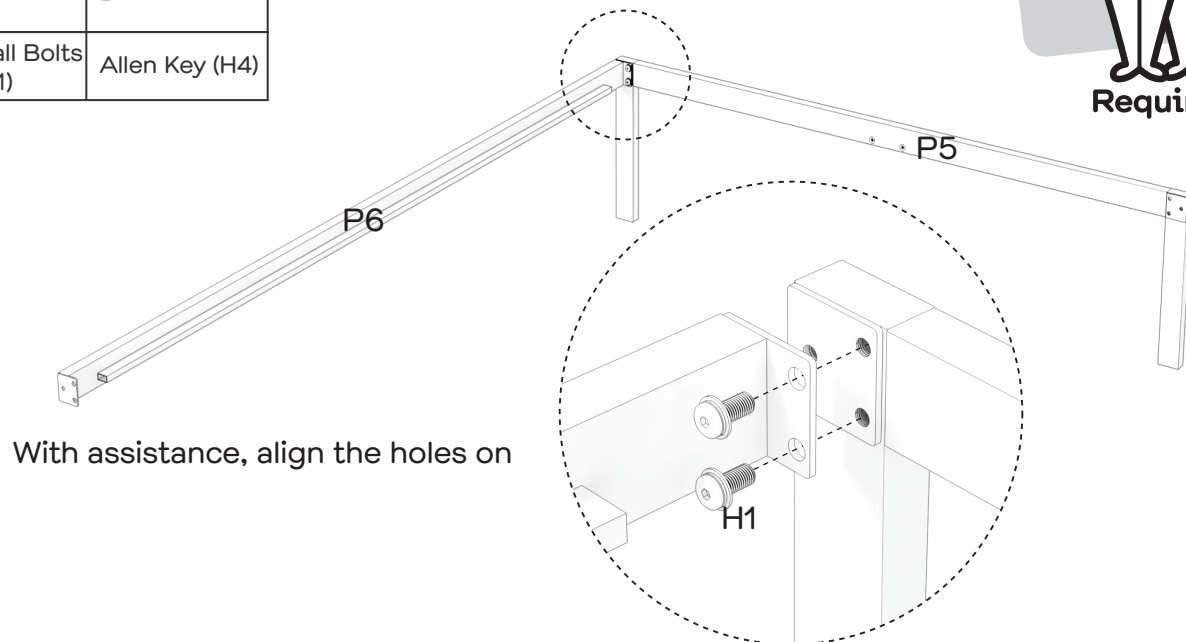

## Step 4


You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)

With assistance, align the holes on the side rail (P6) with the holes on the footboard (P5). Make sure the side with the velcro strip is facing up. Attach the side rail (P6) using 2 x small bolts (H1), tightening with allen key (H4). Do not fully tighten the bolts.

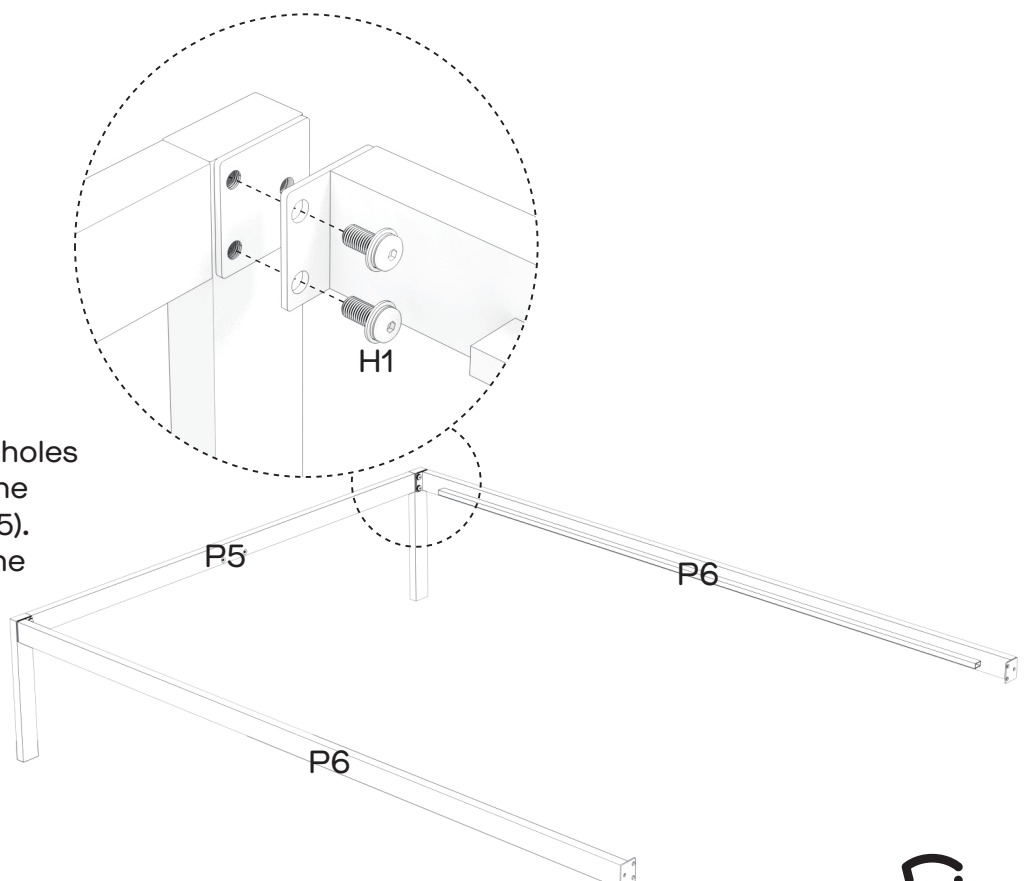



# Step 5

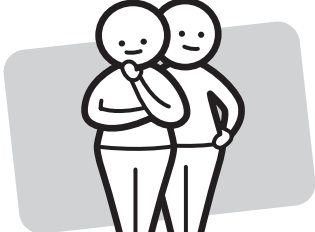Two People




Required



You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)


With assistance, align the holes on the side rail (P6) with the holes on the bedhead rail (P3).

2 x small bolts (H1), tightening with allen key (H4). Do not fully tighten the bolts.

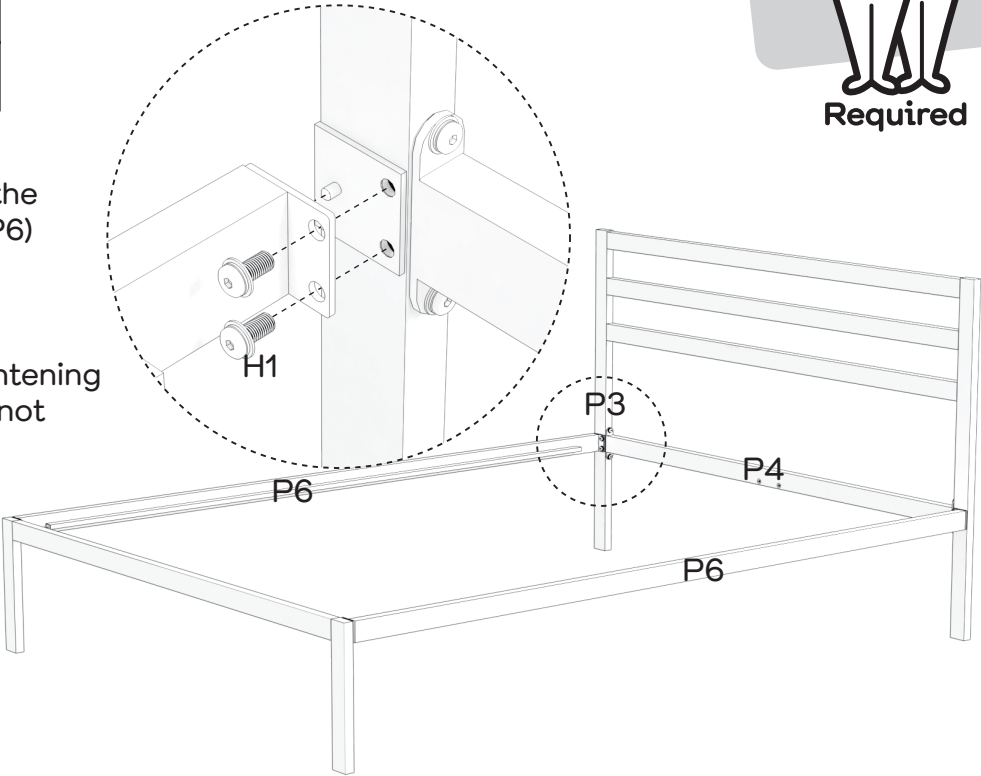


# Step 6

You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)

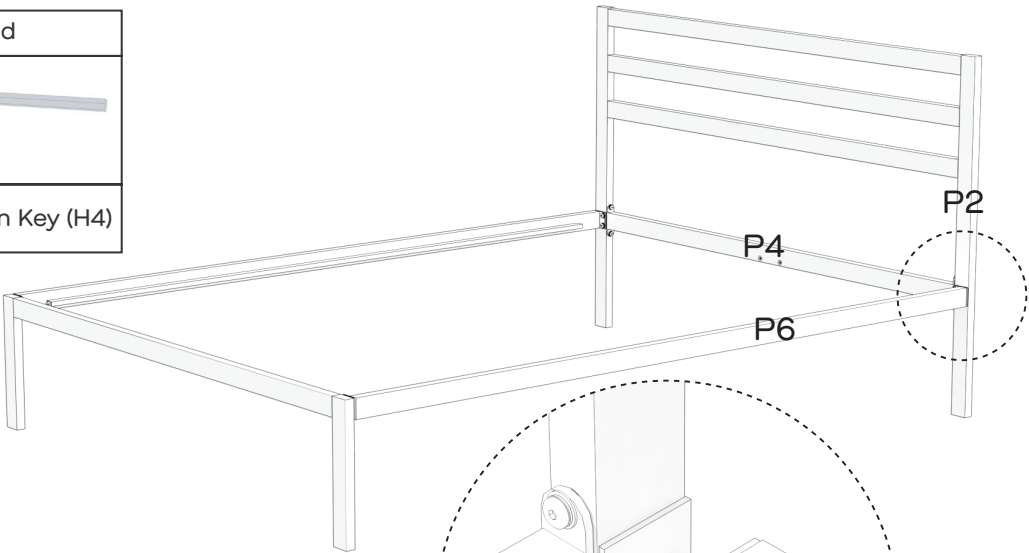


With assistance, align the holes on the side rail (P6) with the holes on the bedhead rail (P2). Attach the side rail (P6) with 2 x small bolts (H1), tightening with allen key (H4).

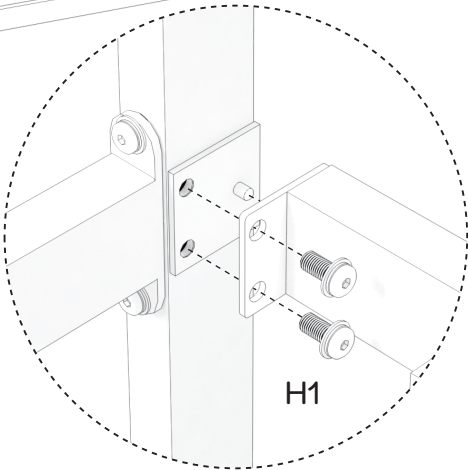




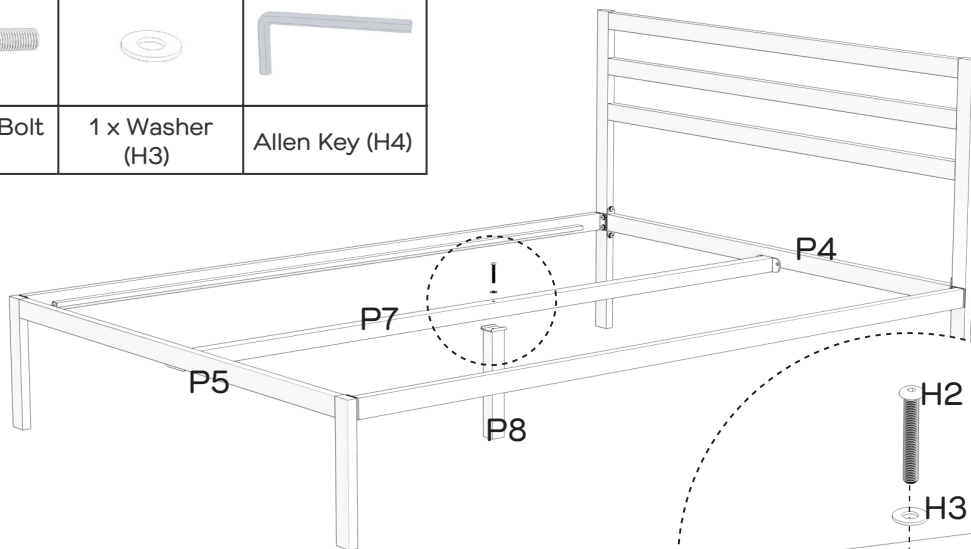
## Step 7

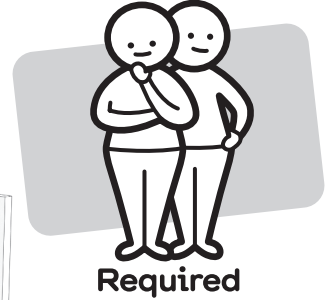Two People




Required



You will need		
		
1 x Long Bolt (H2)	1 x Washer (H3)	Allen Key (H4)

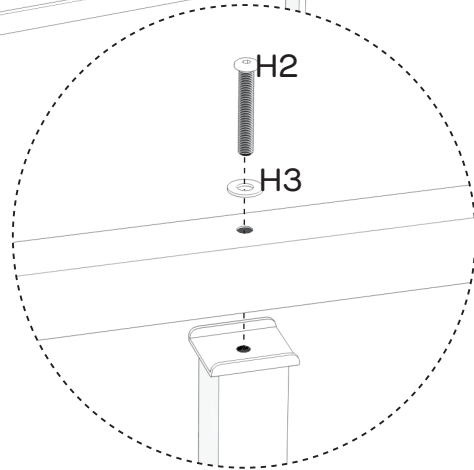


With assistance, insert the centre rail (P7) between the head rail (P4) and footboard (P5). Attach the support leg (P8) to centre rail (P7) using 1 x long bolt (H2) and 1 x washer (H3), fully tightening using allen key (H4).




## Step 8

You will need	
	
4 x Small Bolts (H1)	Allen Key (H4)

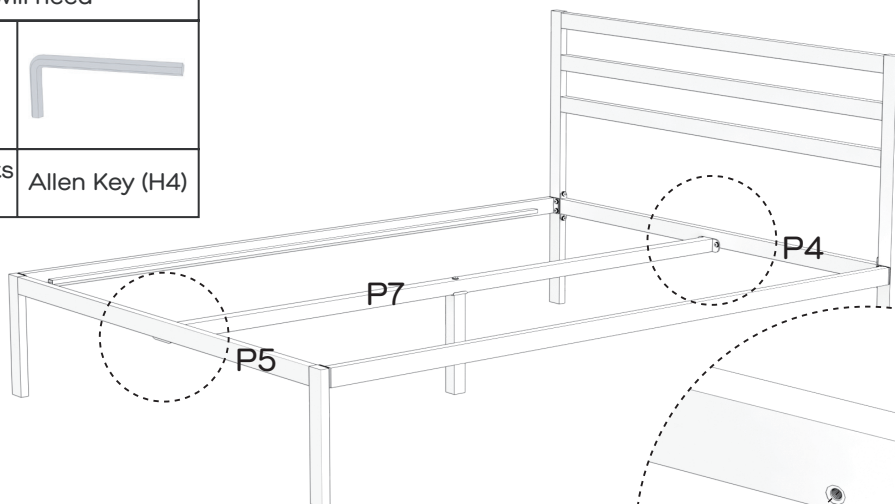



With assistance, align the holes on the centre rail (P7) with the holes on the head rail (P4) and footboard (P5). Attach the centre rail (P7) using 4 x bolts, fully tightening with allen key (H4). You may now fully tighten all bolts (H1) securing the footboard (P5) and head rail (P4) to the 2 x side rails (P6).

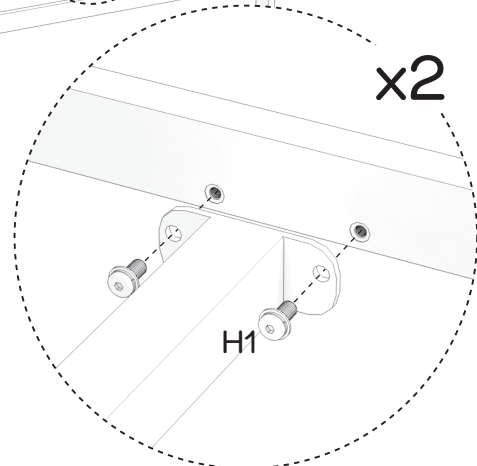



## Step 9

Two People

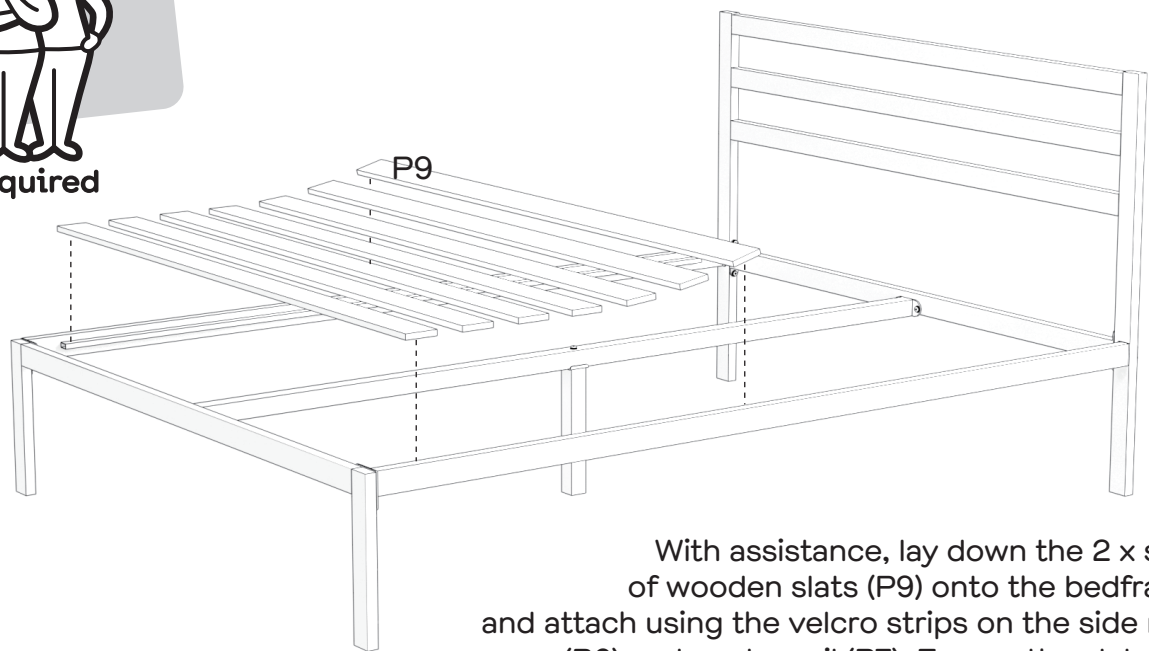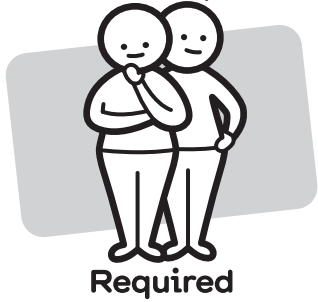

With assistance, lay down the 2 x sets of wooden slats (P9) onto the bedframe and attach using the velcro strips on the side rails (P6) and centre rail (P7). Ensure the slats are evenly spaced apart.

## Step 10



# Job complete!



In the interest of our environment please dispose of all packaging thoughtfully.

# Step 5

Two People




Required



You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)


With assistance, align the holes on the side rail (P6) with the holes on the bedhead rail (P3).

2 x small bolts (H1), tightening with allen key (H4). Do not fully tighten the bolts.

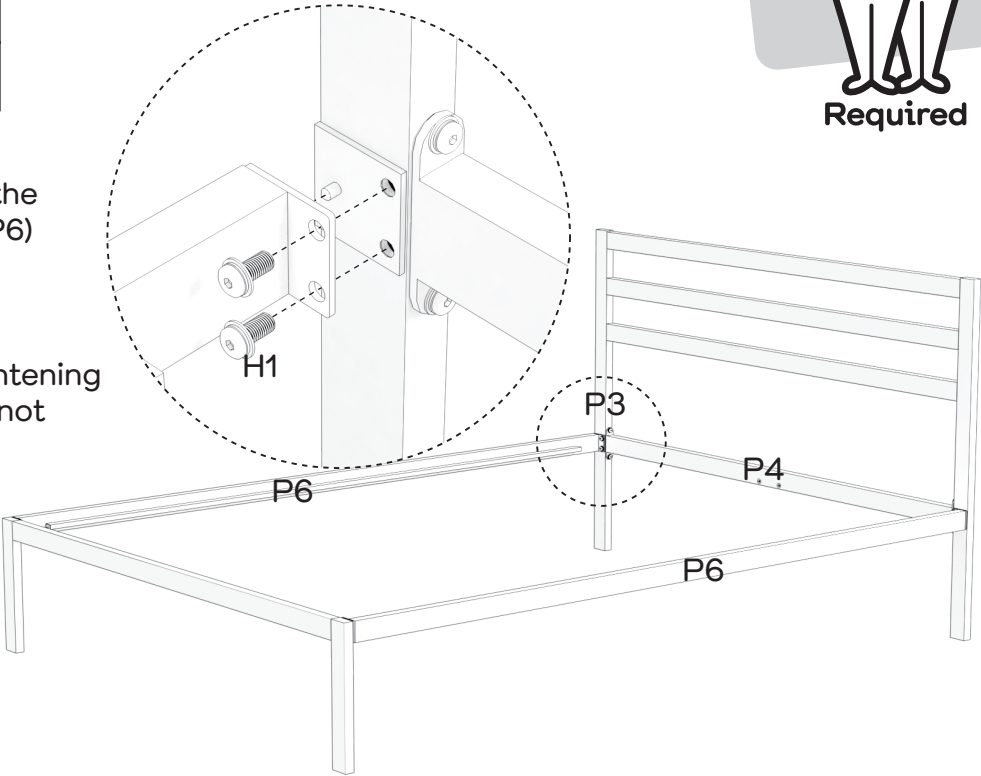

# Step 6

You will need	
	
2 x Small Bolts (H1)	Allen Key (H4)

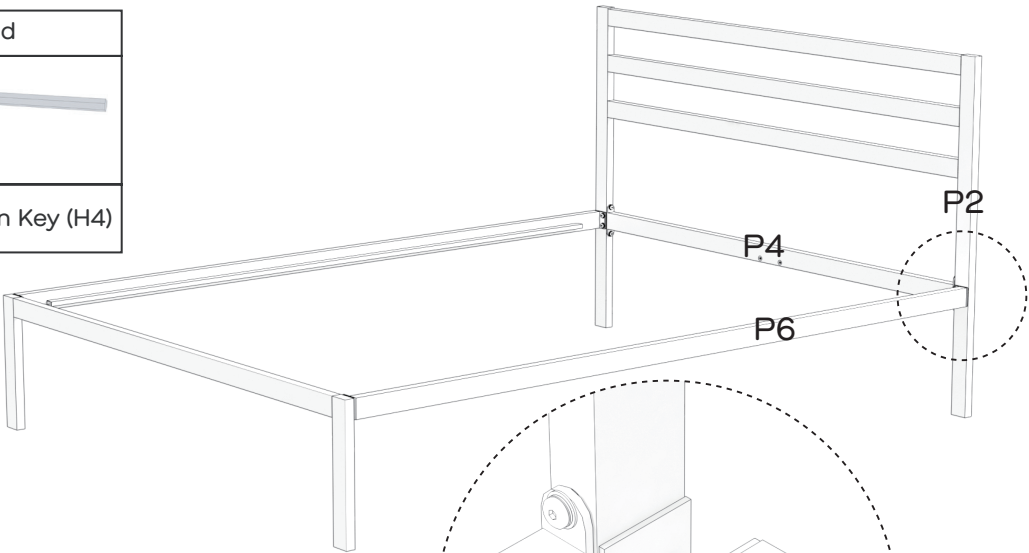

With assistance, align the holes on the side rail (P6) with the holes on the bedhead rail (P2). Attach the side rail (P6) with 2 x small bolts (H1), tightening with allen key (H4).

