


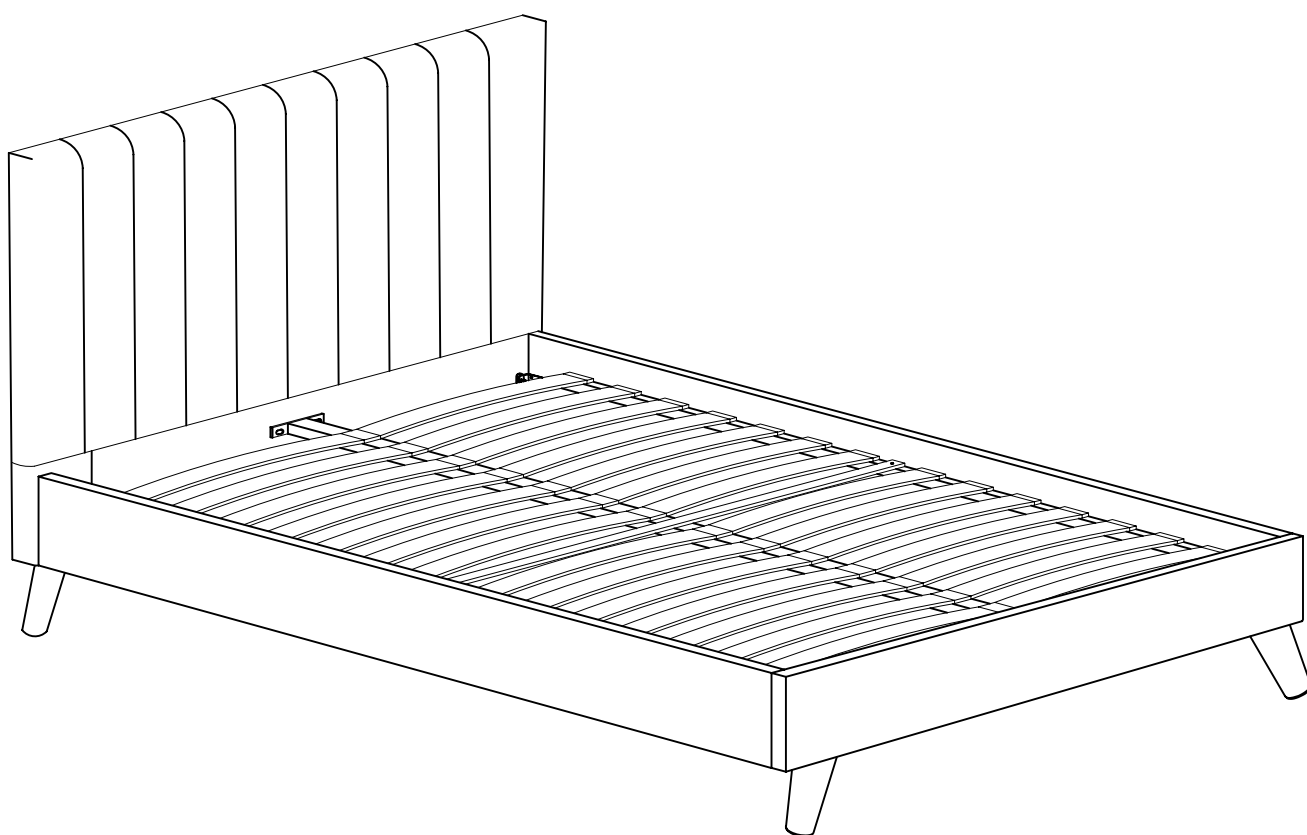

**Fantastic
Furniture**

Version 1.0



Two People



Required

Montana

Queen Bed/King Bed

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture


Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!
@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.

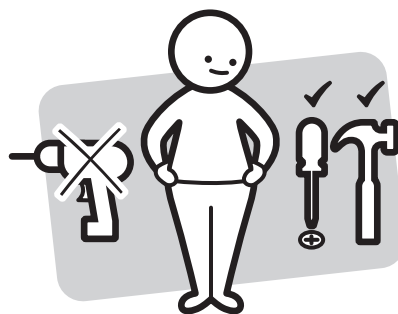

Make sure you have all the required tools. Never use power tools unless instructed.

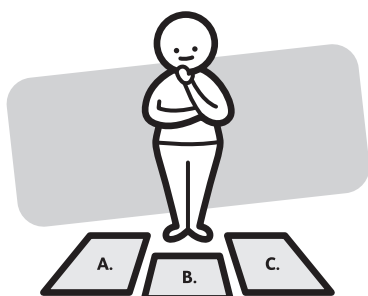

Identify and lay out all of the components before you begin assembly.

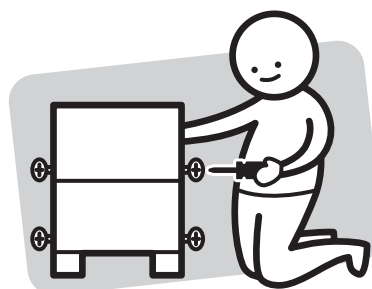

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE



Other tools you need:

Phillips head screwdriver;



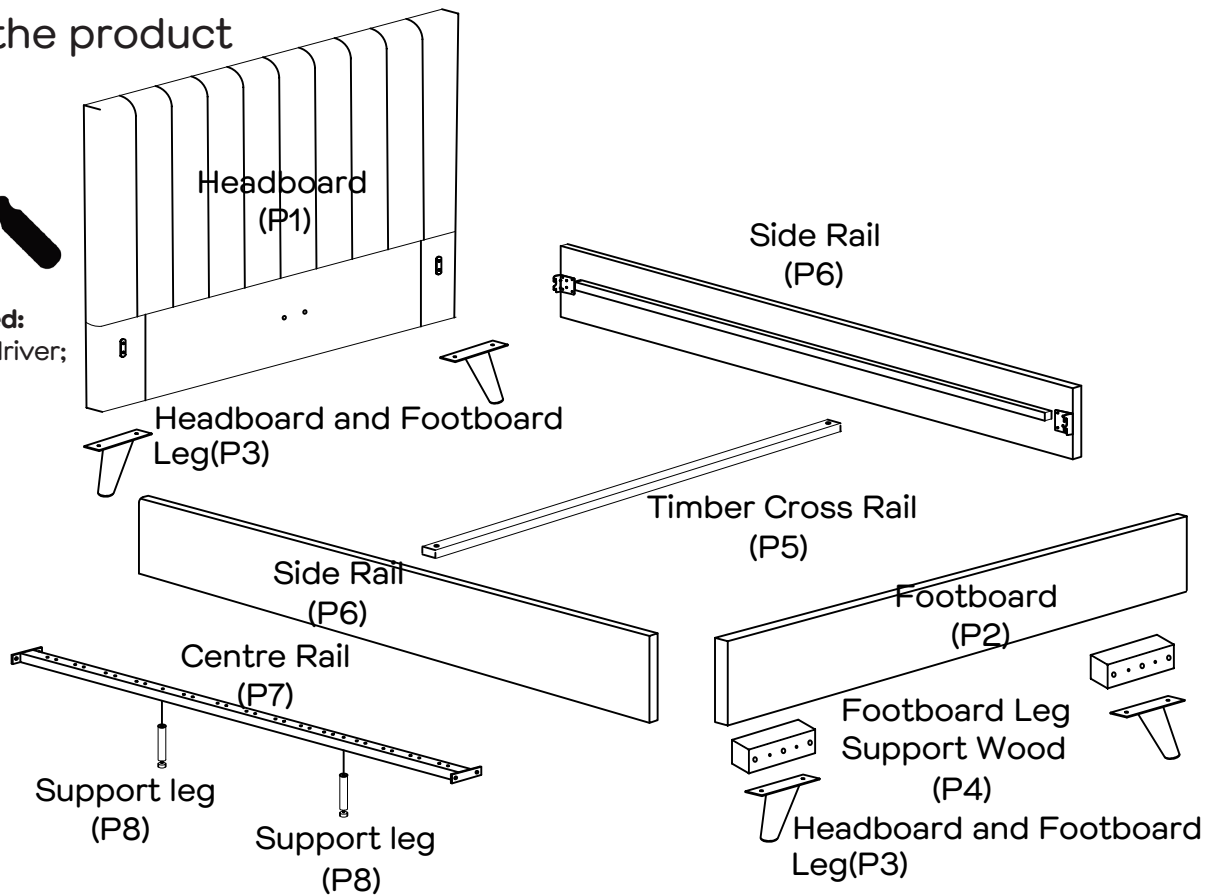


Parts list

Box 1 : Footboard (P2) ; Headboard and Footboard Legs (P3) ; Footboard Leg Support Woods (P4) ; Timber Cross Rail (P5) ; Side Rails (P6) ; Center Rail (P7) ; Support Legs (P8) ; End Connectors (P9) ; Centre Connectors (P10) ; Hardware Pack.

Box 2 : Headboard (P1) ; Slats (P11)

28 x End Connectors (P9) 14 x Centre Connectors (P10)

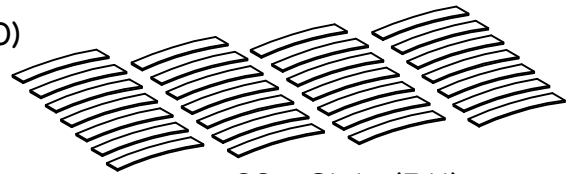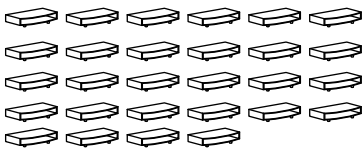


28 x Slats (P11)

Hardware pack



(Bolt)
8 x M8 x 16mm
(H1)



1 x M5 (Allen Key)
(H2)



(Bolt)
14 x M8 x 20mm
(H3)



(Washer)
20 x M8 x 19mm
(H4)



(Screw)
6 x M4 x 38mm
(H5)



(Felt Pad)
1 x 40 x 20mm
(H6)









(Bolt)
6 x M8 x 55mm
(H7)



(Spring Washer)
10 x M8
(H8)


Step 1

You will need		
		
6 x Washers M8 (H4)	6 x Bolts 55mm (H7)	Allen Key (H2)
		
6 x Spring Washer (H8)	4 x Screws 38mm (H5)	Phillips head Screwdriver (not provided)

Two People



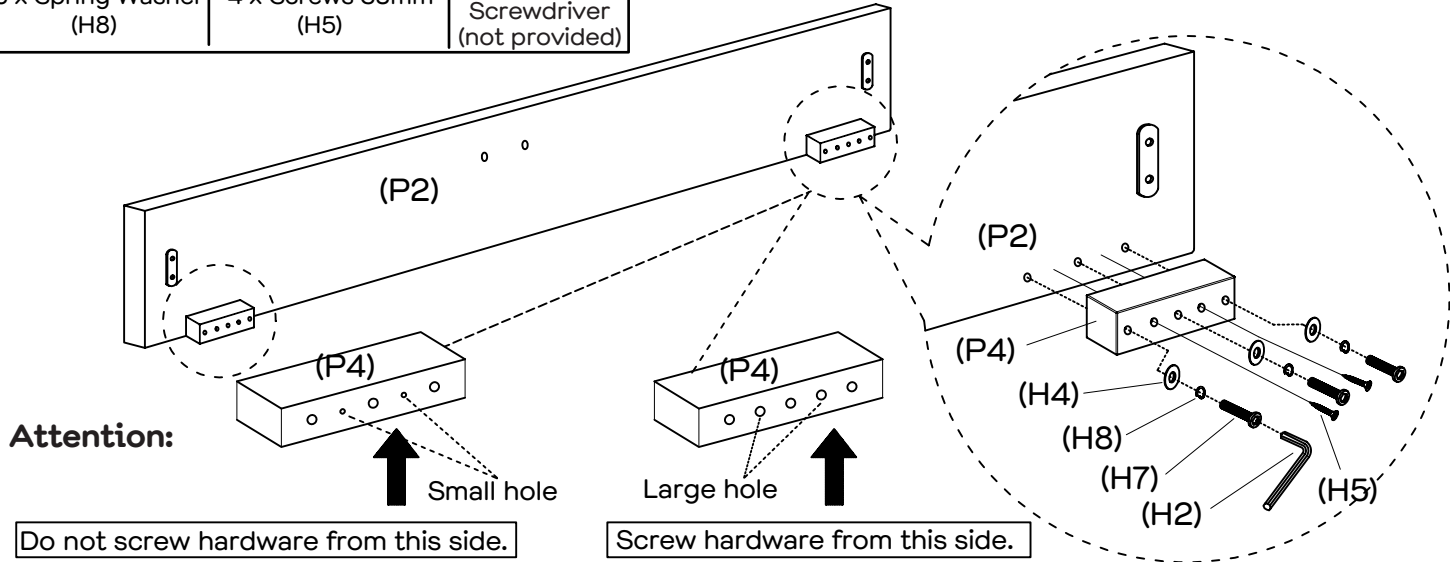



Required



Attach the footboard leg support woods (P4) to the footboard (P2) with 6 x bolts 55mm (H7), 6 x washers (H4) and 6 x spring washers (H8) by using allen key (H2). Then screw the 4 x Screws 38mm (H5) by phillips head screwdriver (not provided).


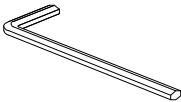
Step 2

You will need		
		
8 x Washers M8 (H4)	8 x Bolts 20mm (H3)	Allen Key (H2)

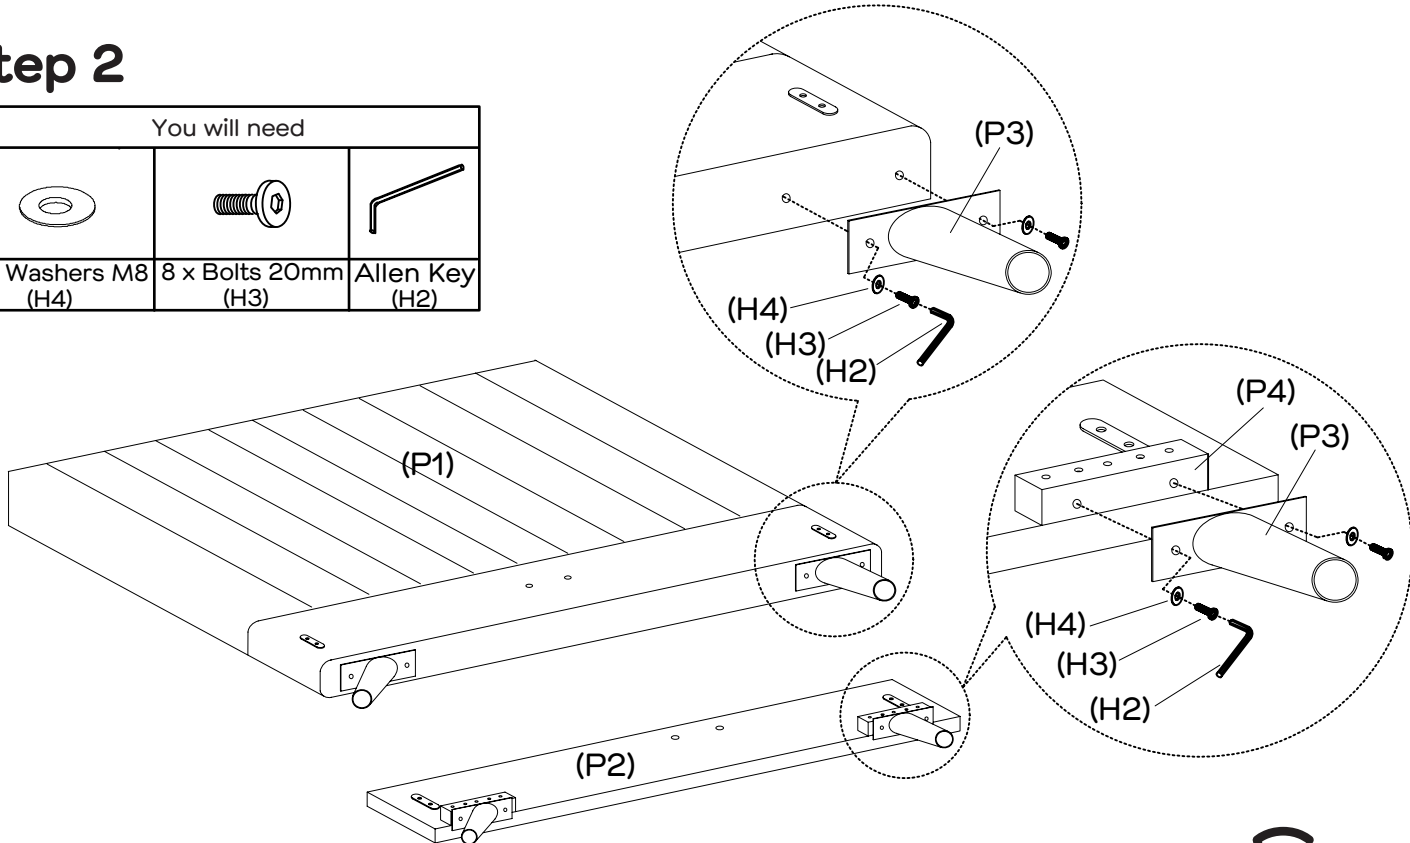

Attach legs (P3) to the bottom of headboard (P1) and footboard leg support wood (P4) with 8 x bolts 20mm (H3) and 8 x washers (H4) by using allen key (H2).


Step 3

You will need	
	
8 x Bolts 16mm (H1)	Allen Key (H2)

Two People



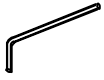



Required

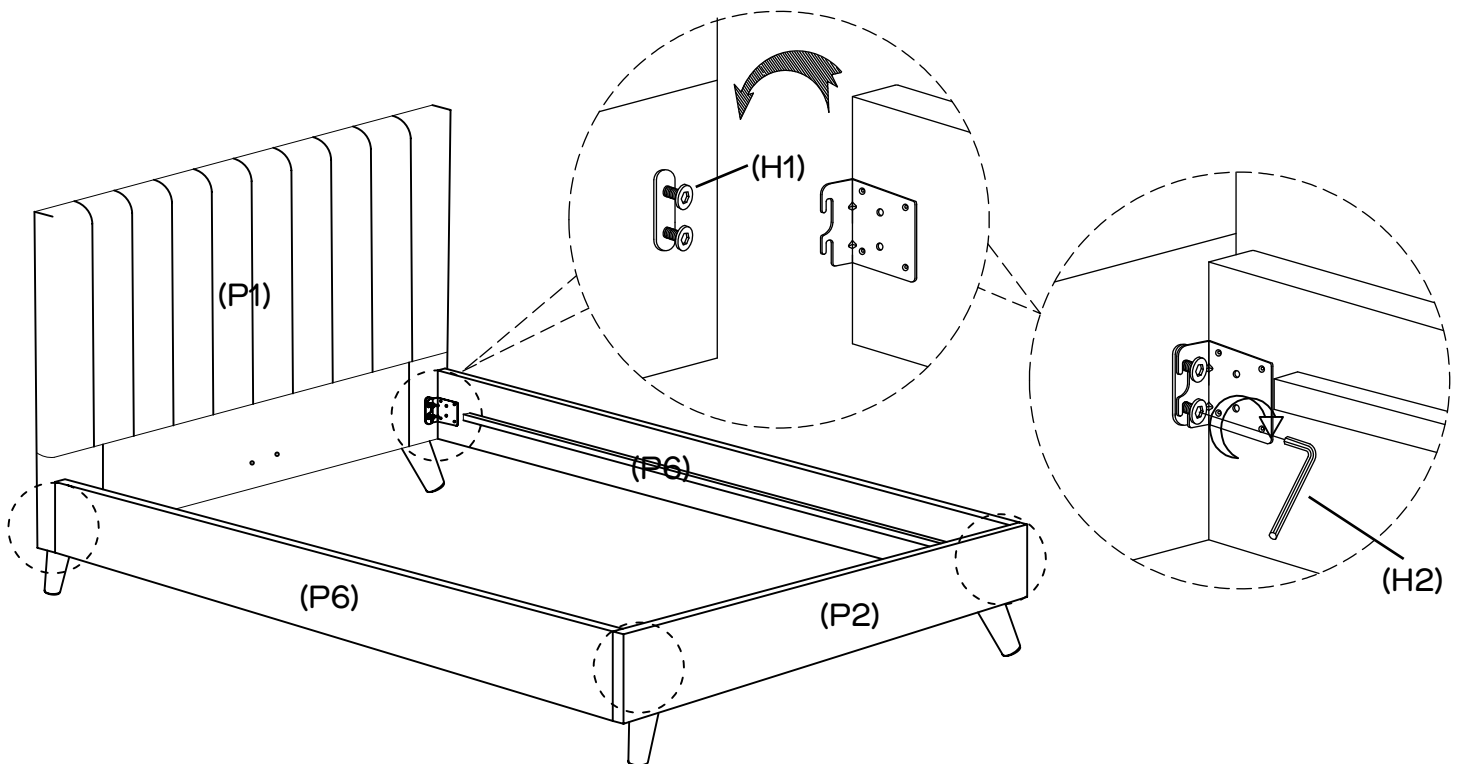

Install the bolts (H1) to the brackets by using allen key (H2) as shown, do not tighten the bolts and keep them 8mm loose. Then attach side rails (P6) to headboard (P1) and footboard (P2) by slotting the bracket on the side rails (P6) over the bolt as shown. No need to tighten bolts until step 7.





Step 4

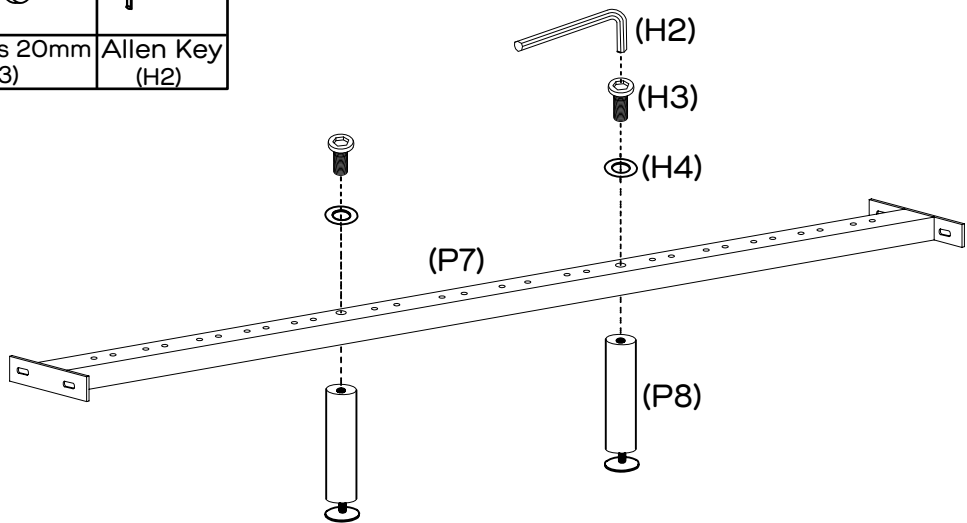
You will need		
		
2 x Washers M8 (H4)	2 x Bolts 20mm (H3)	Allen Key (H2)



Attach the support legs (P8) to the centre rail (P7) with 2 x bolts (H3) and 2 x washers (H4) by using allen key (H2).

Step 5



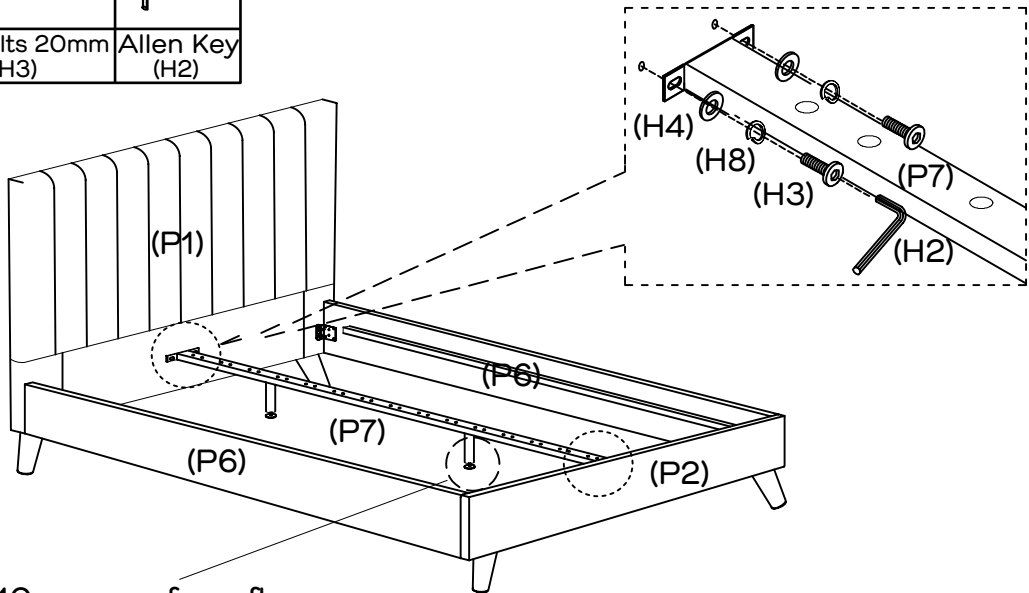
You will need		
		
4 x Washers M8 (H4)	4 x Bolts 20mm (H3)	Allen Key (H2)
		
4 x Spring Washer (H8)		




Adjust to be 10mm gap from floor to the bottom of support legs.

Slot the centre rail (P7) into the headboard (P1) and footboard (P2). Rotate 4 x bolts (H3) and 4 x washers (H4) and 4 x spring washers (H8) to the headboard (P1) and footboard (P2) by using allen key(H2). No need to tighten bolts until step 7.


Step 6

You will need	
	
28 x End Connectors (P9)	14 x Centre Connectors (P10)
	
28 x Slats (P11)	

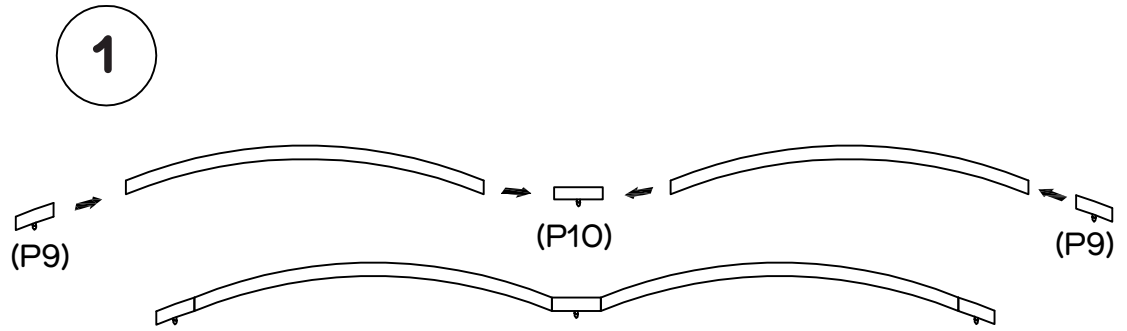


Push 2 end connectors (P9), 2 pcs slats (P11) and a centre connector (P10) together.

2

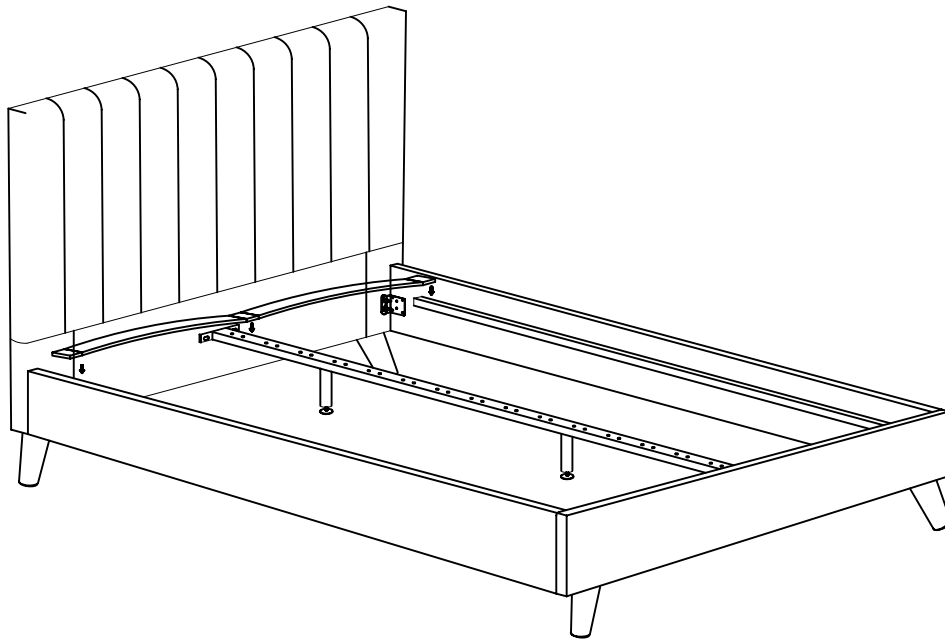


Insert the full slat into the side rail and centre rail one by one.

3

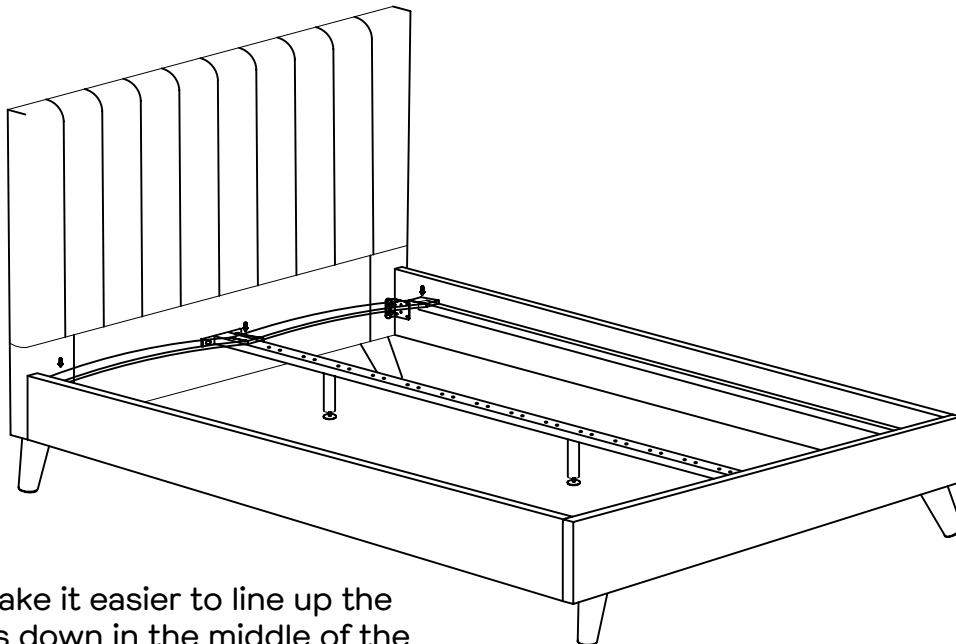





Sometimes it make it easier to line up the hole if you press down in the middle of the slat to flatten it out.

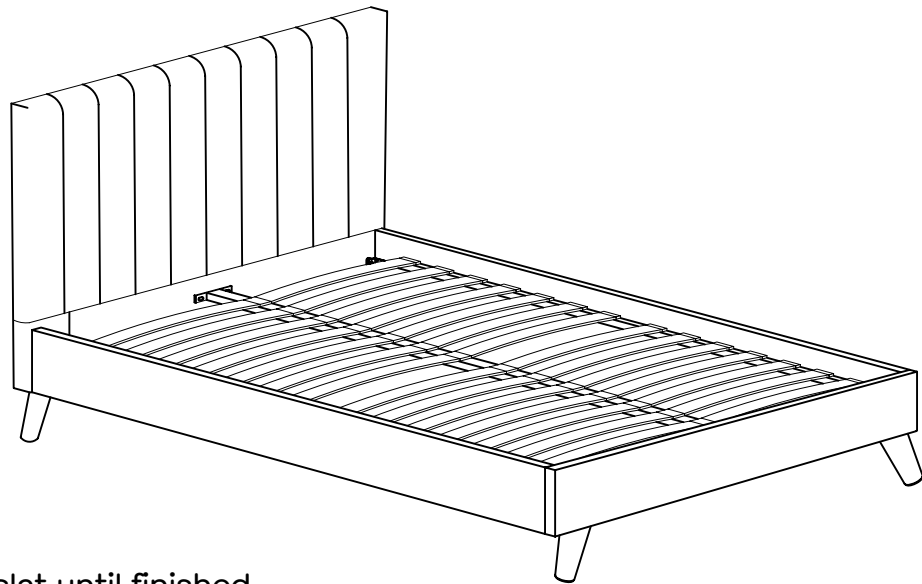
4



Repeat for every bed slat until finished.

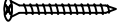Step 7

You will need	
	
2 x Screws 38mm (H5)	Phillips head Screwdriver (not provided)
	
Allen Key (H2)	Felt Pad 1 x 40 x 20mm (H6)

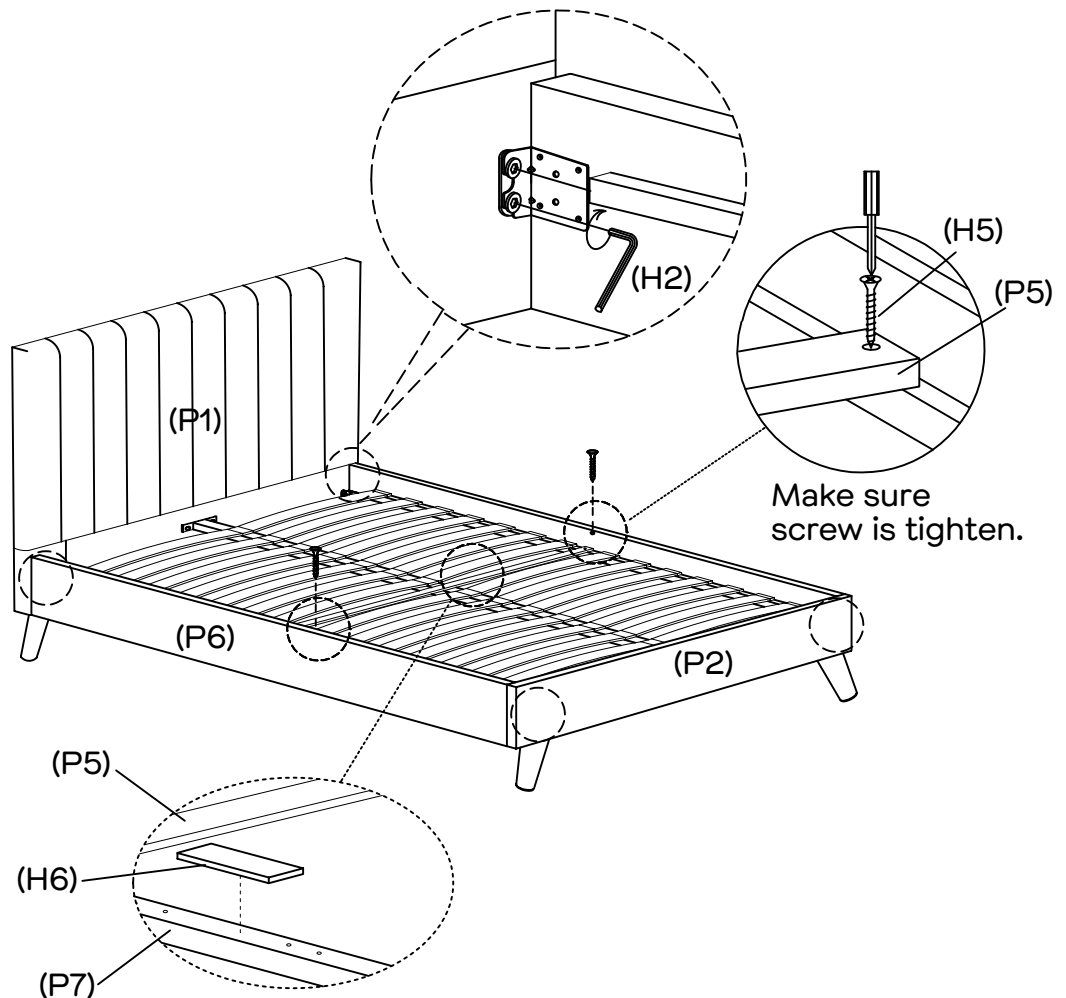


Make sure the inner space is square.

Attach the felt pad (H6) to the centre of centre rail (P7).

Then attach the timber cross rail (P5) to the centre of side rails (P6) by using 2 x screws (H5). Now tighten all the bolts on the corner bracket and tighten bolts on the headboard (P1) and footboard (P2).

Step 8

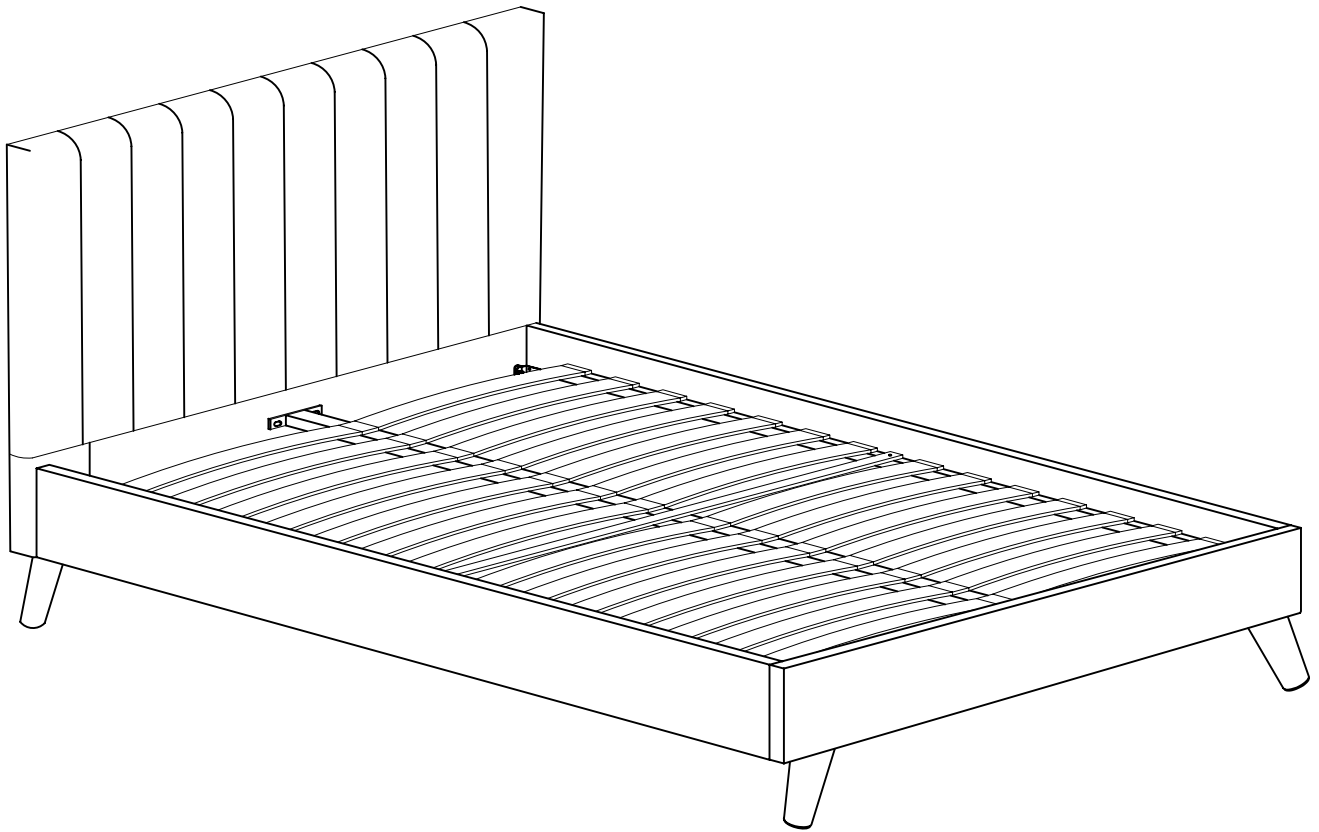


Job complete!

In the interest of our environment please dispose
of all packaging thoughtfully.



Version 1.1

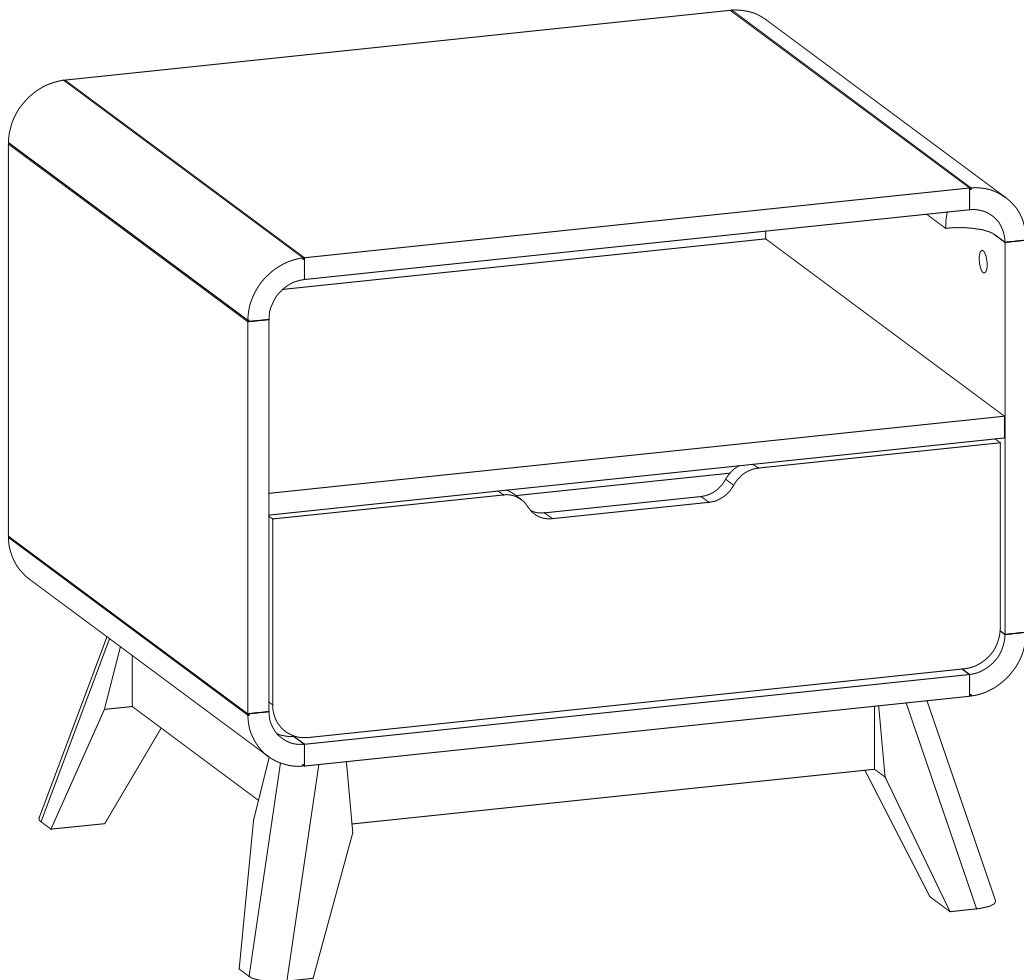

TWO PEOPLE



REQUIRED

VIOR

Lamp Table 1 Drawer

www.fantasticfurniture.com.au

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

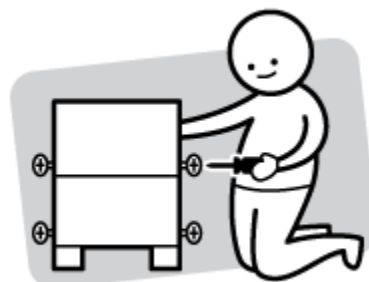

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product



DO NOT USE





Other tools you need

Flat head screwdriver; Phillips head screwdriver; Mallet

Part list

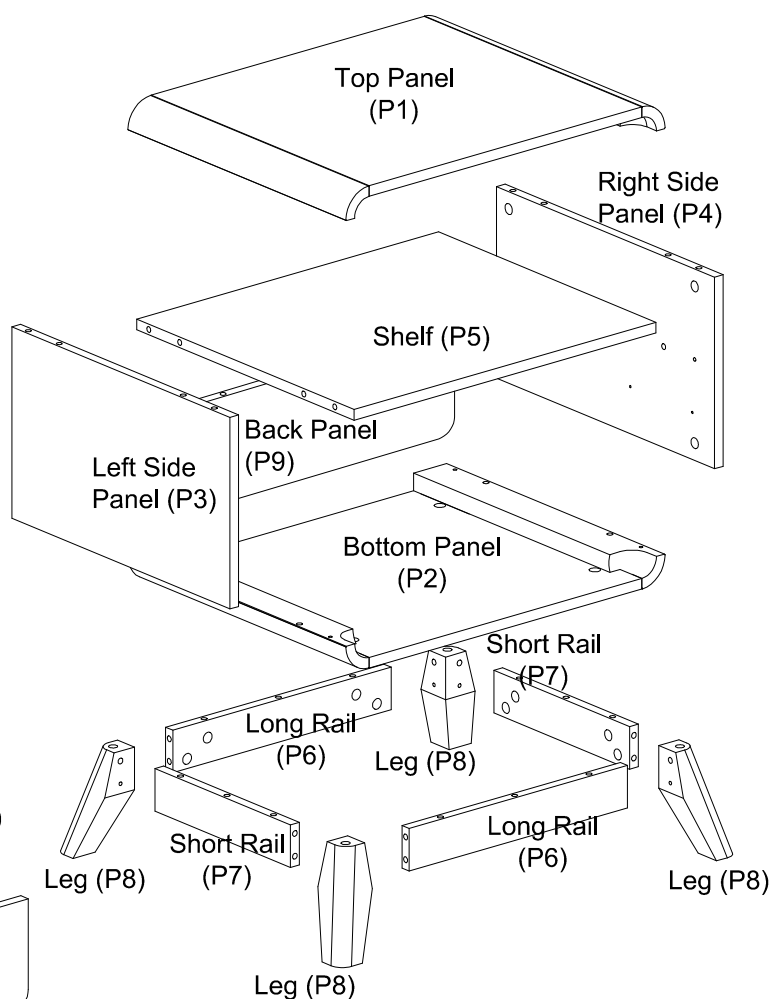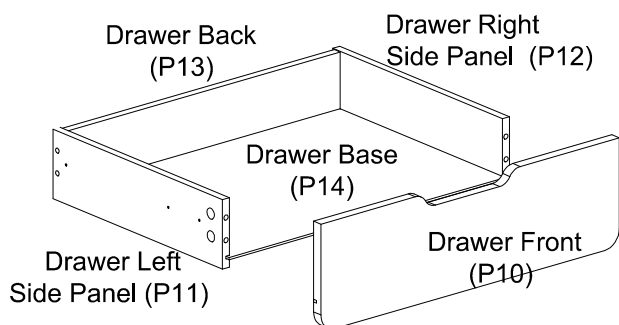

Box 1: Top Panel (P1); Bottom Panel (P2); Left Side Panel (P3); Right Side Panel (P4); Shelf (P5); Long Rail (P6); Short Rail (P7); Leg (P8); Back Panel (P9); Drawer Front (P10); Drawer Left Side Panel (P11); Drawer Right Side Panel (P12); Drawer Back (P13); Drawer Base (P14); Hardware Pack.




Hardware pack

36 x Cam Bolt (H1)	32 x Big Cam Nut (H2)	28 x Wood Dowel (H3)	4 x Felt Feet (H4)	4 x Small Cam Nut (H5)	14 x Screw (H6)	6 x Screw (H7)
4 x Screw (H8)	1 x Left Runner Track (H11)	1 x Left Runner Track (H12)	1 x Right Runner Track (H13)	1 x Right Runner Track (H14)		

Step 1


You will need	
	
8 x Cam Bolts (H1)	Phillips head screwdriver

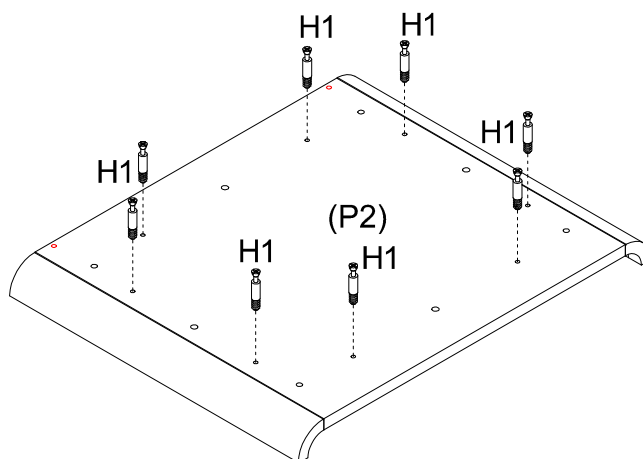

Screw 8 x Cam Bolts (H1) into Bottom Panel (P2) using a Phillips head screwdriver.



Step 2





You will need	
	
12 x Wood Dowels (H3)	Mallet

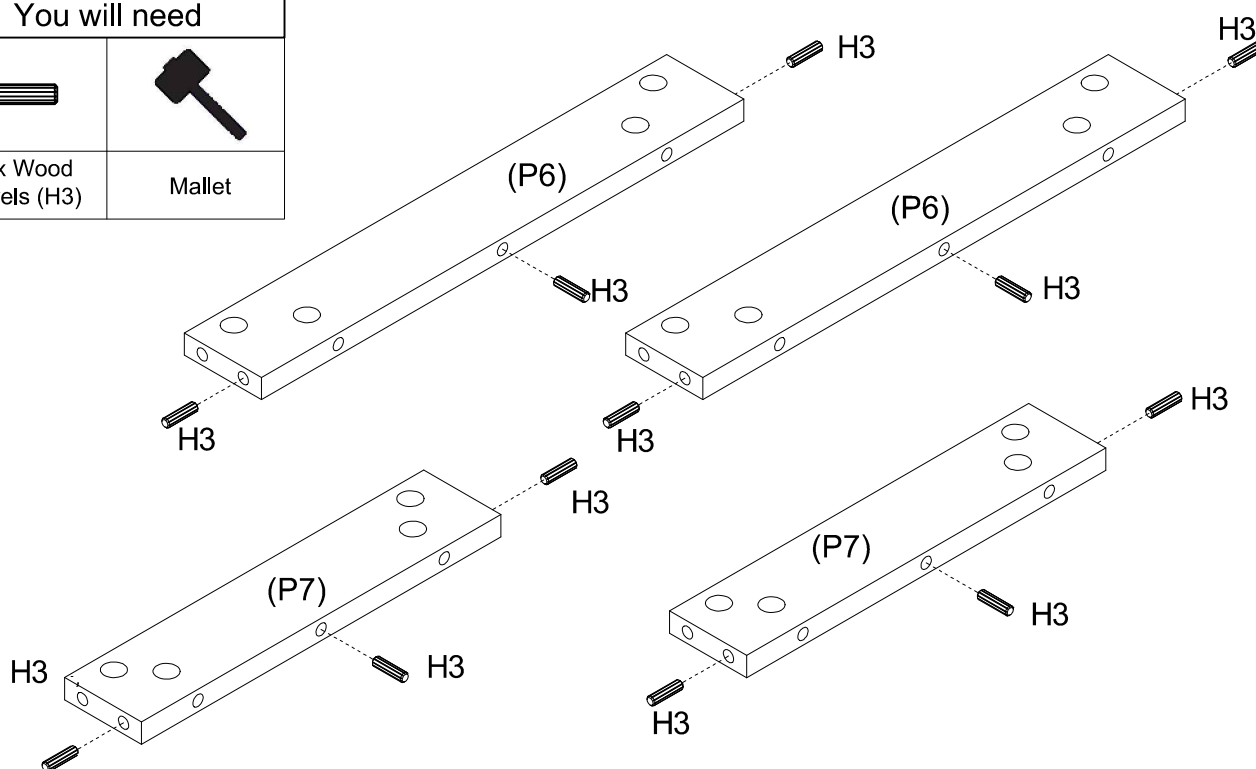

Insert each 3 x Wood Dowels (H3) into Short Rails (P7) and Long Rails (P6).

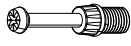

Step 3

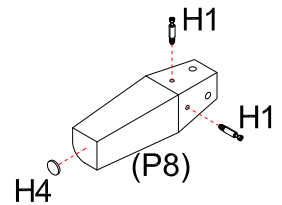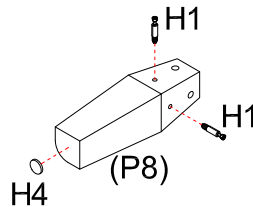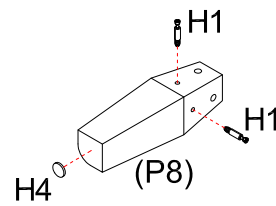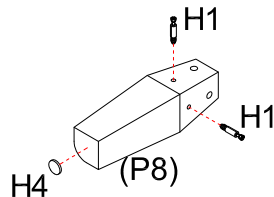You will need	
	
8 x Cam Bolts (H1)	4 x Felt Feet (H4)
	
Phillips head screwdriver	




Screw each 2 x Cam Bolts (H1) into 4 x Legs (P8).
Attached 4 x Felt Feet (H4) to Legs (P8).



Step 4

You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver

This is how a cam nut works.....

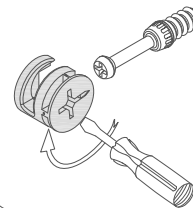

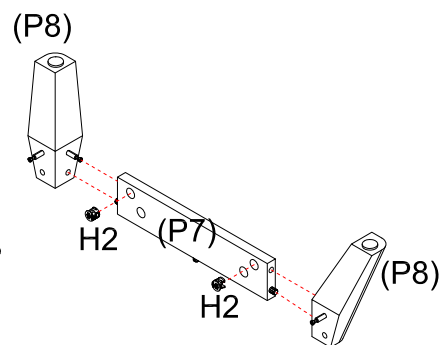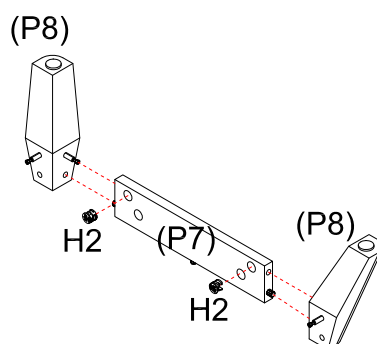


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.




Attach Leg (P8) to Short Rail (P7).
Insert each 2 x Big Cam Nuts (H2) into Short Rails (P7).
Rotate the cam nuts so the arrows point towards the incoming cam bolt.
Push Leg (P8) into place and tighten the cam nuts.

Step 5

You will need	
	
4 x Big Cam Bolts (H2)	Flat head screwdriver

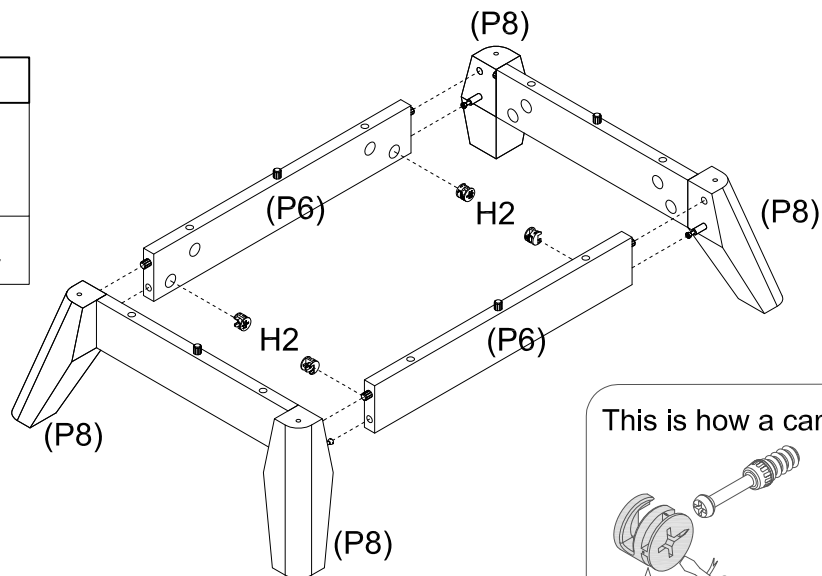

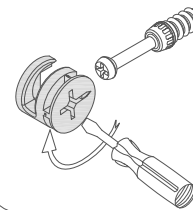

This is how a cam nut works.....




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Attach Leg (P8) to Long Rail (P6).
Insert 4 x Big Cam Nuts (H2) into Long Rails (P6) and turn clockwise to lock.




Step 6


You will need	
	
8 x Big Cam Bolts (H2)	Flat head screwdriver

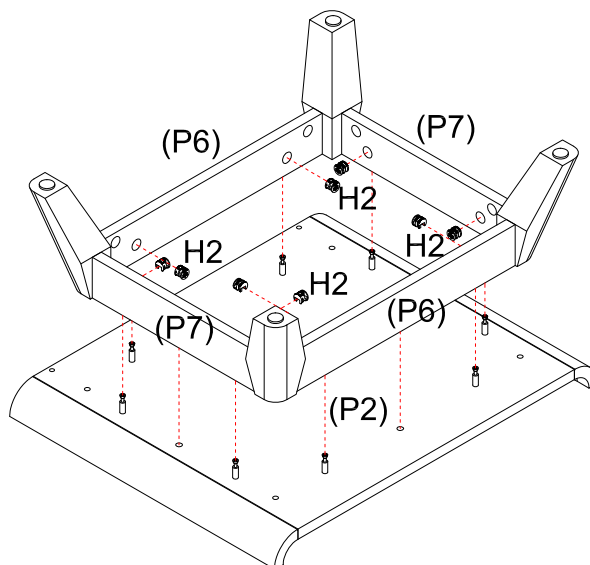

Attach Short Rails (P7) and Long Rails (P6) to Bottom Panel (P2).
Insert 8 x Big Cam Nuts (H2) into Rails (P6) & (P7) and turn clockwise to lock.

Step 7

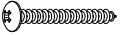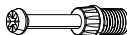You will need	
	
4 x Screws (H8)	4 x Cam Bolts (H1)
	
Phillips head screwdriver	

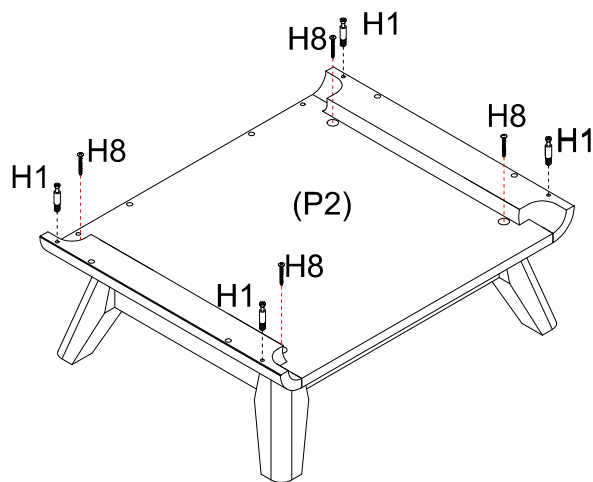


Turn over carefully.

Screw 4 x Cam Bolts (H1) into place using a phillips head screwdriver.
Use 4 x Screws (H8) through Bottom Panel (P2) to connect Leg (P8) with a phillips head screwdriver.



Step 8

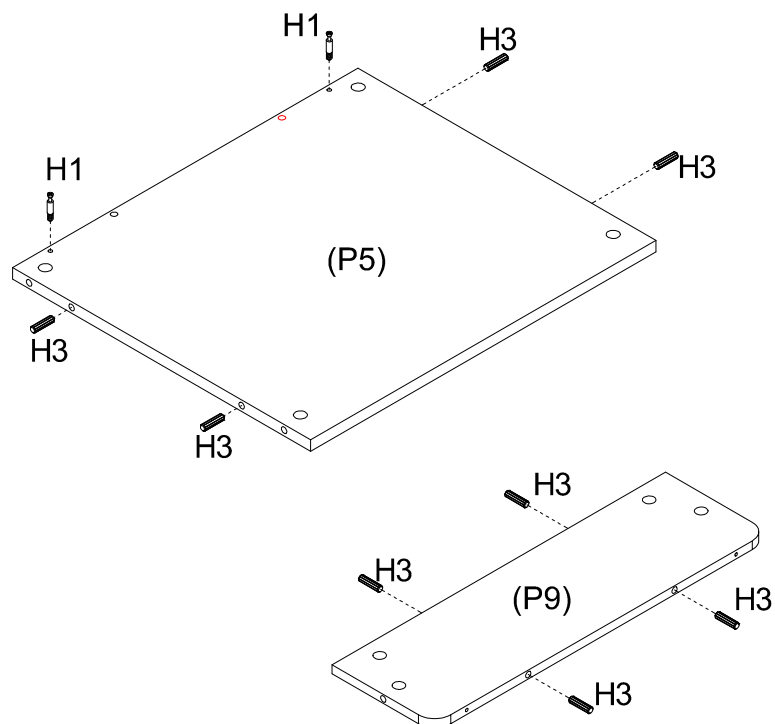You will need	
	
2 x Cam Bolts (H1)	8 x Wood Dowels (H3)
	
Phillips head screwdriver	Mallet




Insert each 4 x Wood Dowels (H3) to Back Panel (P9) and Shelf (P5).
Screw 2 x Cam Bolts (H1) into Shelf (P5) using a phillips head screwdriver.


Step 9

You will need	
	
2 x Big Cam Bolts (H2)	Flat head screwdriver

This is how a cam nut works.....

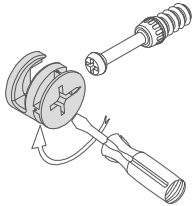

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

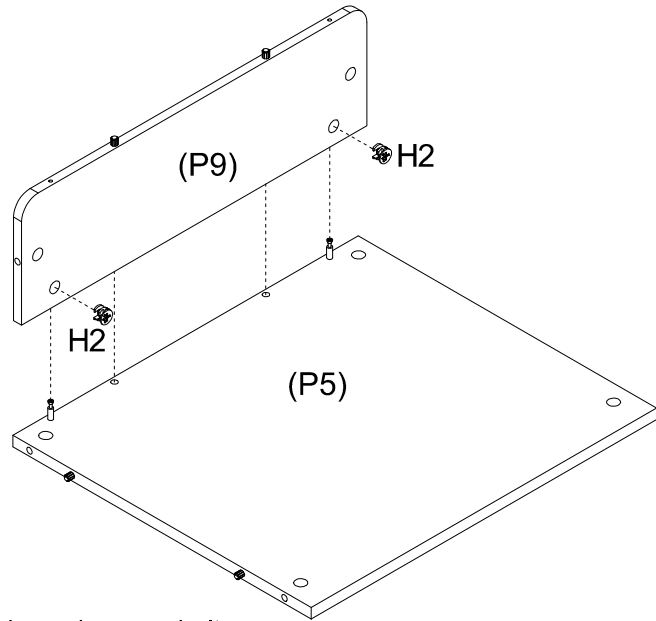

Attach Back Panel (P9) to Shelf (P5).


Insert 2 x Big Cam Nuts (H2) into Back Panel (P9).

Rotate the cam nuts so the arrows point towards the incoming cam bolt.

Push Back Panel (P9) into place and tight the cam nuts.

Step 10

You will need	
	
6 x Cam Bolts (H1)	8 x Wood Dowels (H3)
	
Phillips head screwdriver	Mallet




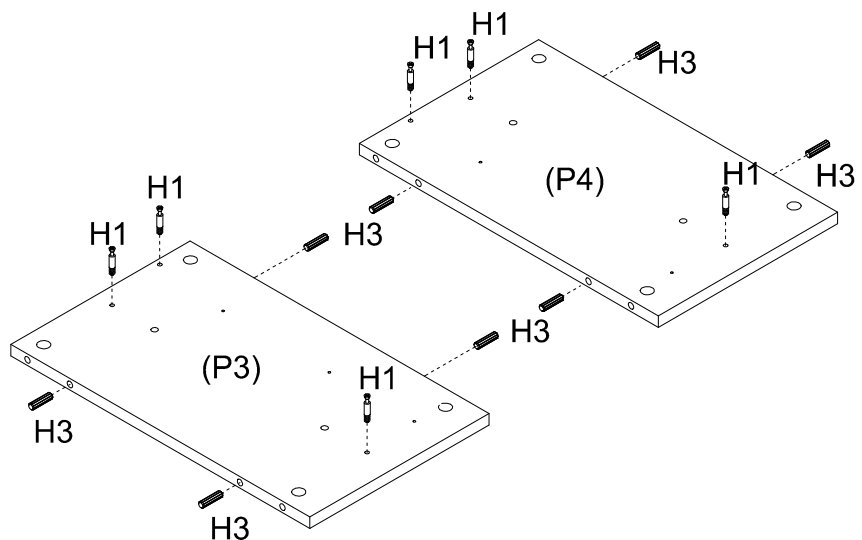


Insert each 4 x Wood Dowels (H3) to Side Panels (P3) & (P4).

Insert each 3 x Cam Bolts (H1) to Side Panels (P3) & (P4).



Step 11

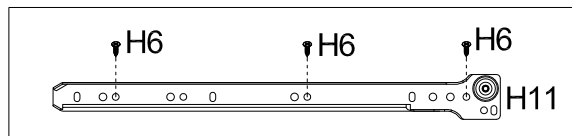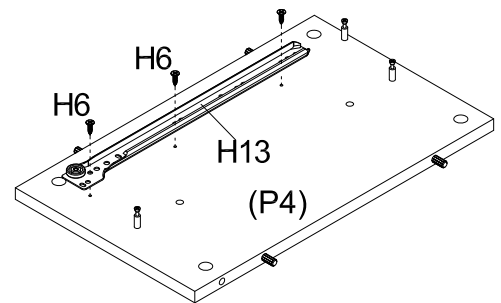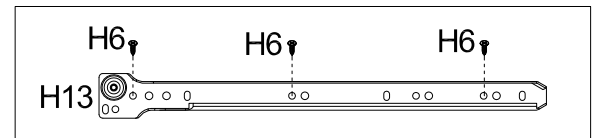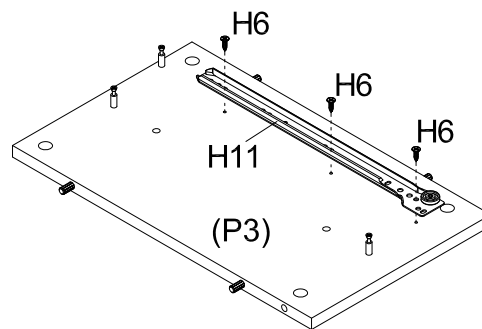You will need	
	
1 x Left Runner Track (H11)	1 x Right Runner Track (H13)
	
6 x Screws (H6)	Phillips head screwdriver



Attach 1 x Left Runner Track (H11) to Left Side Panel (P3) with 3 x Screws (H6).
Attach 1 x Right Runner Track (H13) to Right Side Panels (P4) with 3 x Screws (H6).


Step 12

You will need	
	
3 x Big Cam Nuts (H2)	Flat head screwdriver


TWO PEOPLE



REQUIRED

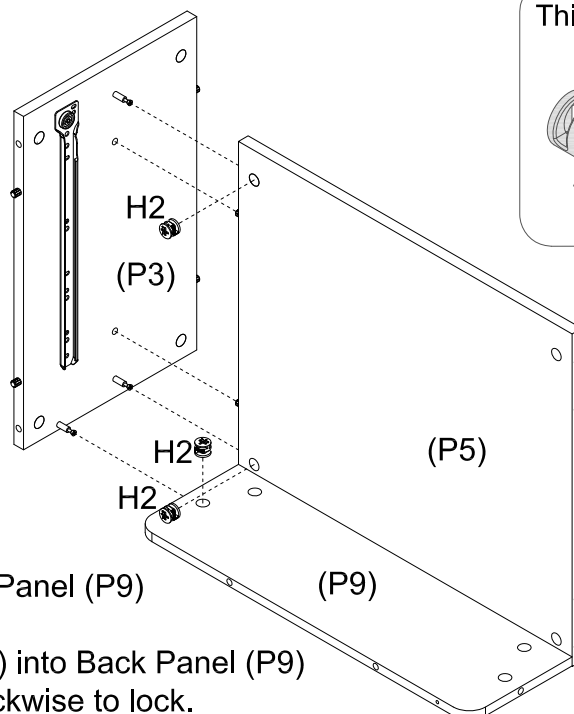

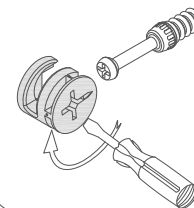

This is how a cam nut works.....




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Attach Shelf (P5) and Back Panel (P9) to Left Side Panel (P3).
Insert 3 x Big Cam Nuts (H2) into Back Panel (P9) and Shelf (P5) and turn clockwise to lock.

Step 13


You will need	
	
3 x Big Cam Nuts (H2)	Flat head screwdriver

TWO PEOPLE

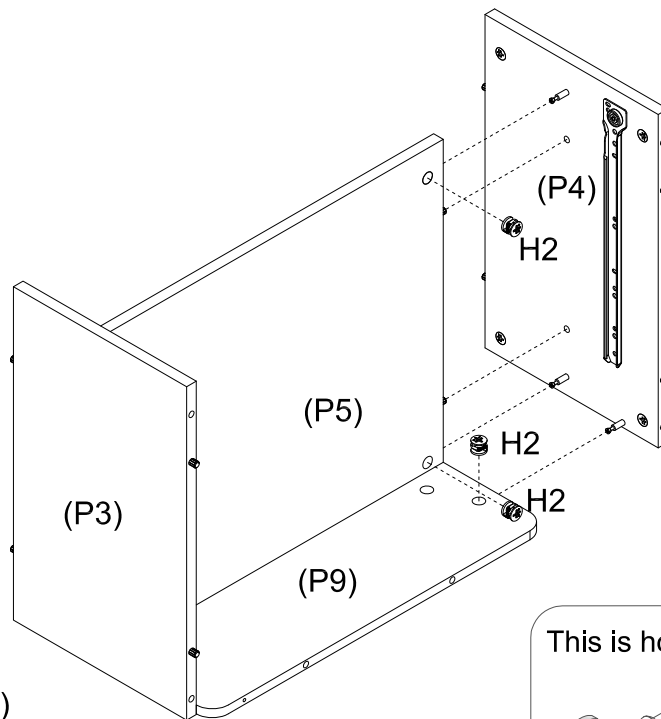



Attach Right Side Panel (P4) to Back Panel (P9) and Shelf (P5).
Insert 3 x Big Cam Nuts (H2) into Back Panel (P9) and Shelf (P5) and turn clockwise to lock.

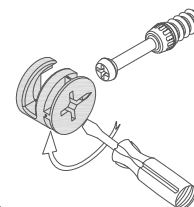This is how a cam nut works.....




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Step 14



You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver


TWO PEOPLE

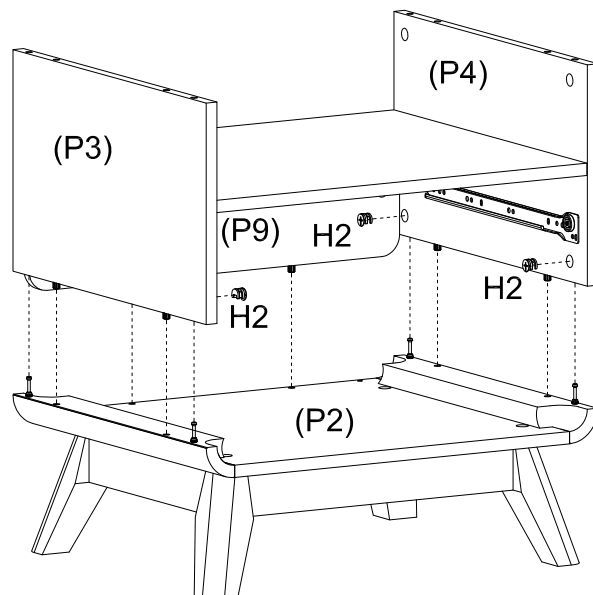

Attach Side panels (P3) & (P4) and Back Panel (P9) to Bottom Panel (P2).
Insert 4 x Big Cam Nuts (H2) into Side Panels (P3) and (P4), turn clockwise to lock.



Step 15

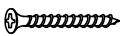
You will need	
	
2 x Screws (H7)	Phillips head screwdriver

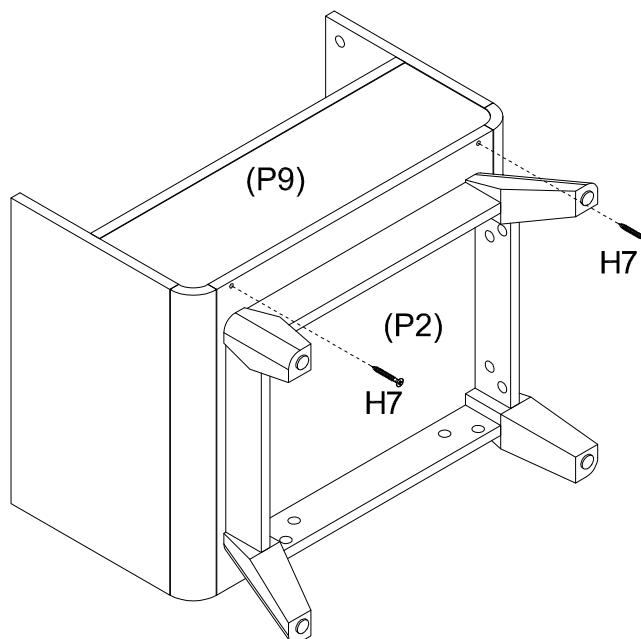

Use 2 x Screws (H7) through Bottom Panel (P2) to connect Back Panel (P9) with a phillips screwdriver.

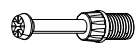

Step 16


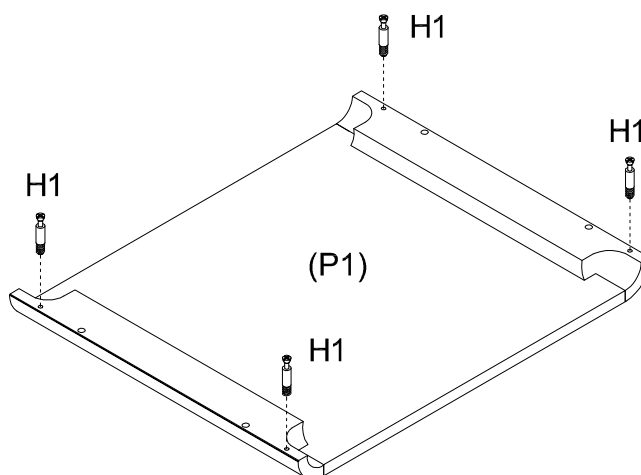
You will need	
	
4 x Cam Bolts (H1)	Phillips head screwdriver



Screw 4 x Cam Bolts (H1) into place using a phillips head screwdriver.



Step 17


You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver

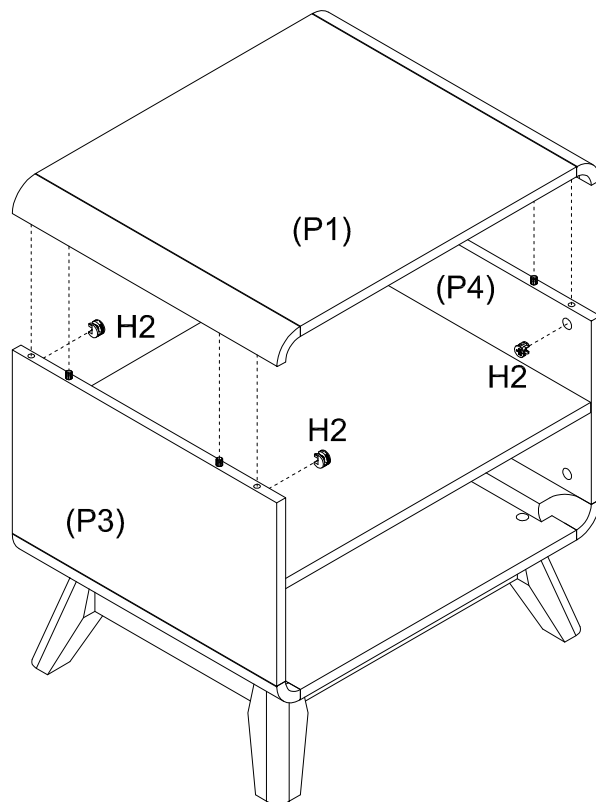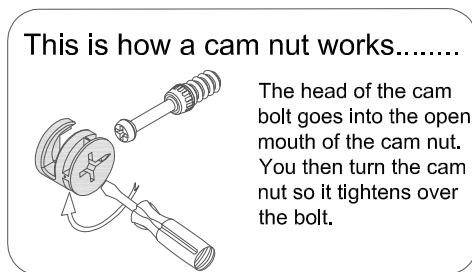

Attach Top Panel (P1) to Side Panels (P3) & (P4).
Insert 4 x Big Cam Nuts (H2) into Side Panels (P3) & (P4), turn clockwise to lock.



Step 18

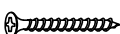You will need	
	
4 x Screws (H7)	Phillips head screwdriver

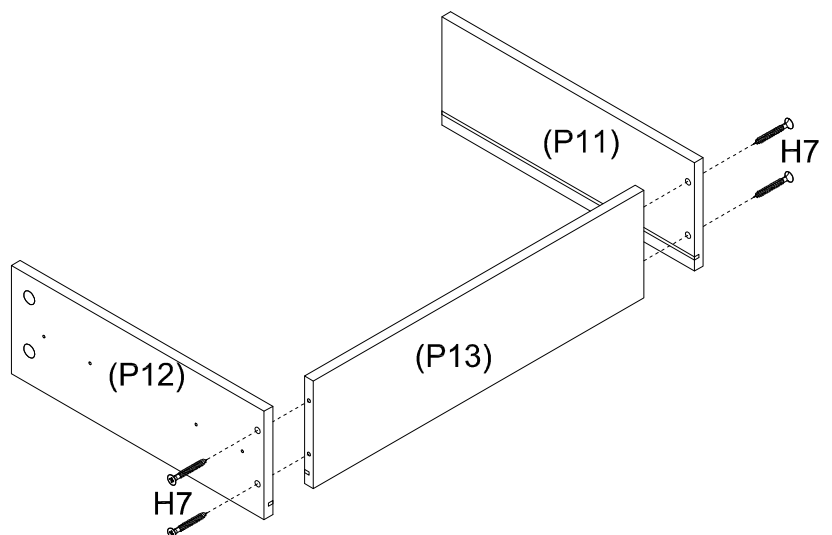


Attach Drawer Side Panels (P11) and (P12) to Drawer Back (P13) with 4 x Screws (H7).


Step 19

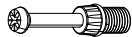You will need	
	
4 x Cam Bolts (H1)	Phillips head screwdriver

Screw 4 x Cam Bolts (H1) into Drawer Front (P10) using a Phillips head screwdriver.

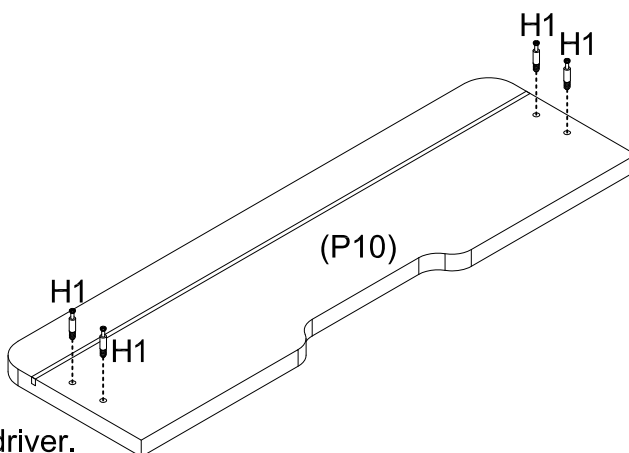


Step 20

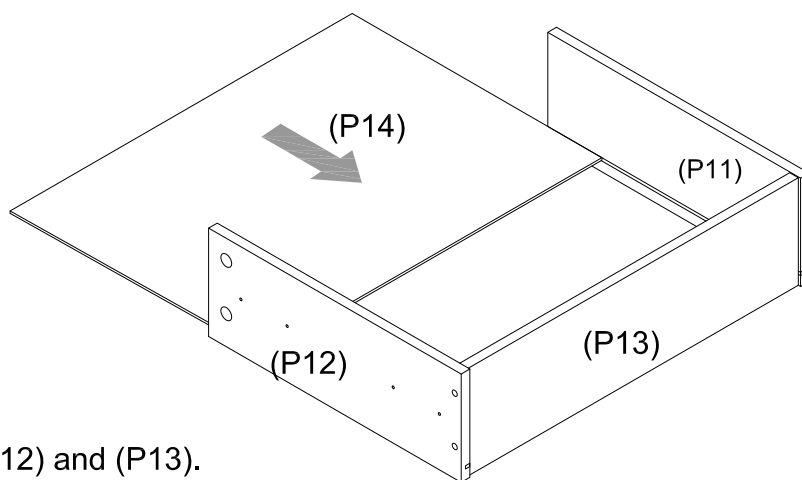


Slide Drawer Base (P14) into the groove in Drawer Panels (P11), (P12) and (P13).


Step 21

You will need	
	
4 x Small Cam Nuts (H5)	Flat head screwdriver

This is how a cam nut works.....

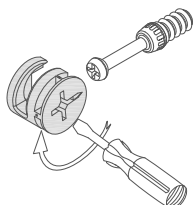


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

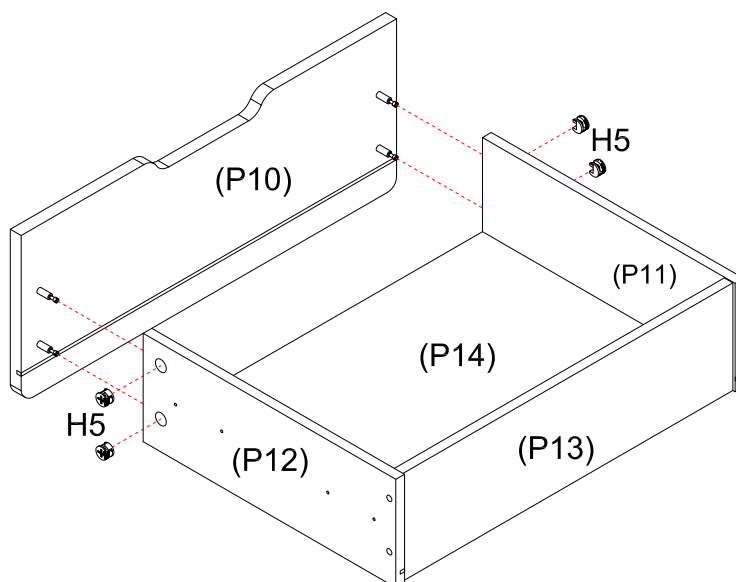

Attach Drawer Front (P10) to Drawer Sides (P11) & (P12).
 Insert 4 x Small Cam Nuts (H5) into Drawer Sides (P11) & (P12).
 Rotate the cam nuts so the arrows point towards the incoming cam bolt.
 Push Drawer Front (P10) into place and turn the cam nuts clockwise to lock.

Step 22


You will need	
1 x Left Runner (H12)	1 x Right Runner (H14)
8 x Screws (H6)	Phillips head screwdriver

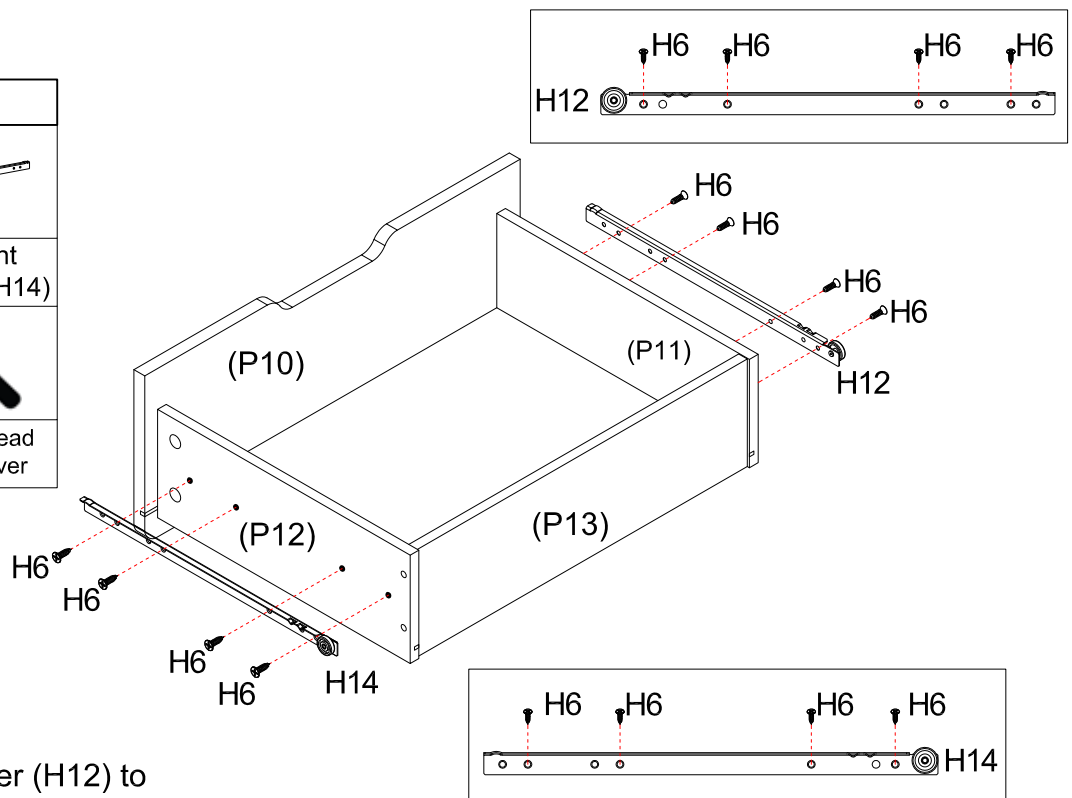

Attach 1 x Left Runner (H12) to Drawer Left Side Panel (P11) with 4 x Screws (H6).


Attach 1 x Right Runner (H14) to Drawer Right Side Panel (P12) with 4 x Screws (H6).

Step 23

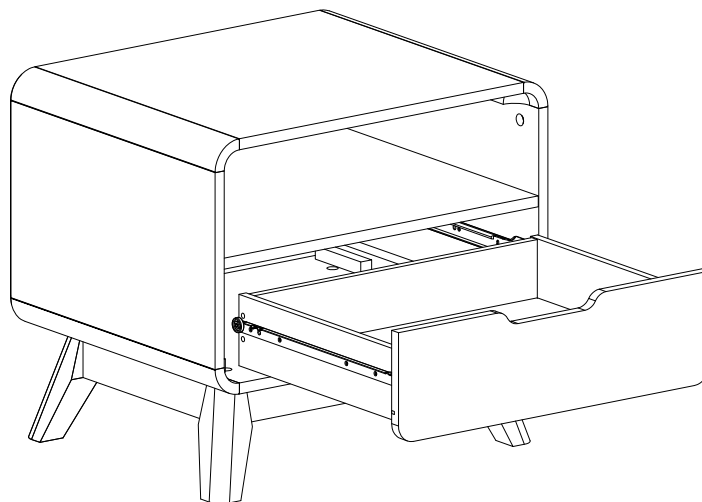

Slide the Drawer into the Frame.

Step 24

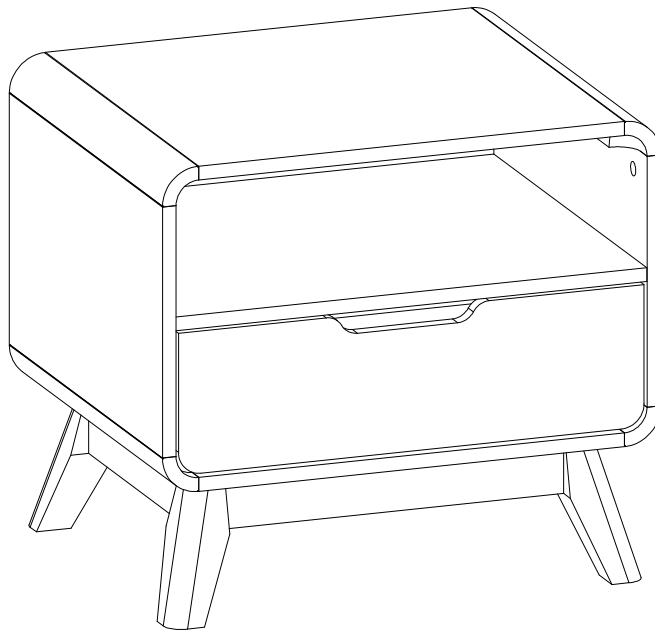


Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.



Version 1.0

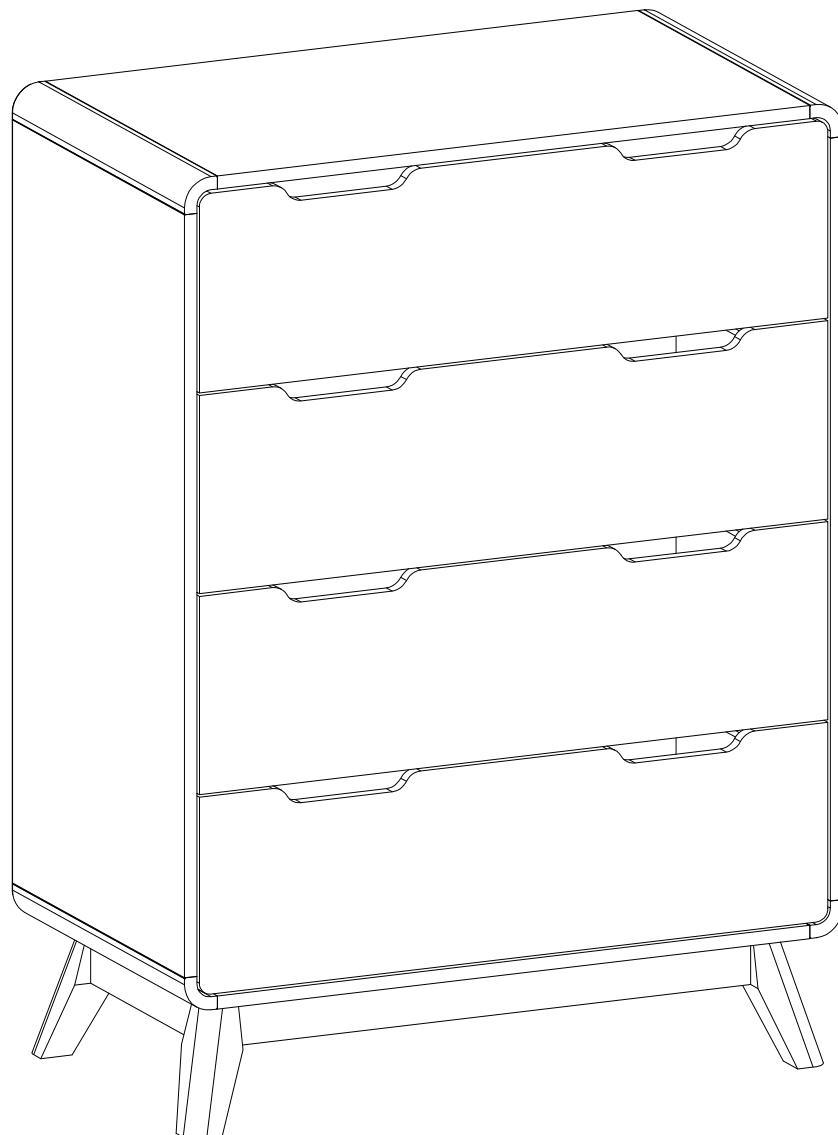

TWO PEOPLE



REQUIRED

VIOR

Tallboy 4 Drawer

www.fantasticfurniture.com.au



**WARNING: ENSURE THE WALL STRAP IS ATTACHED
TO AVOID SERIOUS INJURY.**

To avoid any serious or fatal injury, this product has been supplied with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Wall fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Enjoy
Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

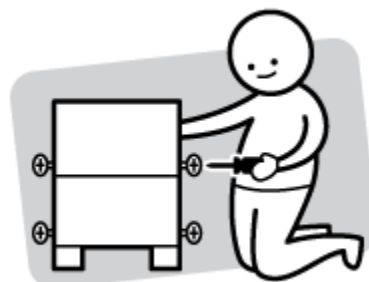

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product



DO NOT USE

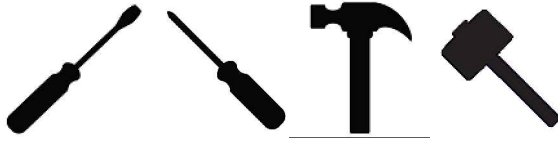




Other tools you need

Flat head screwdriver; Phillips head screwdriver; Hammer; Mallet


Part list

Box 1: Top panel (P1); Bottom Panel (P4); Leg (P5); Drawer Left Side (P11); Drawer Right Side (P12); Drawer Rail (P15); Hardware Pack.

Box 2: Left Side Panel (P2); Right Side Panel (P3); Short Rail (P6); Long Rail (P7); Metal Rail (P8); Front Rail (P9); Back Panel (P10); Drawer Back (P13); Drawer Base (P14); Drawer Front (P16); Drawer Front (P17); Drawer Front (P18); Back Rail (P19).

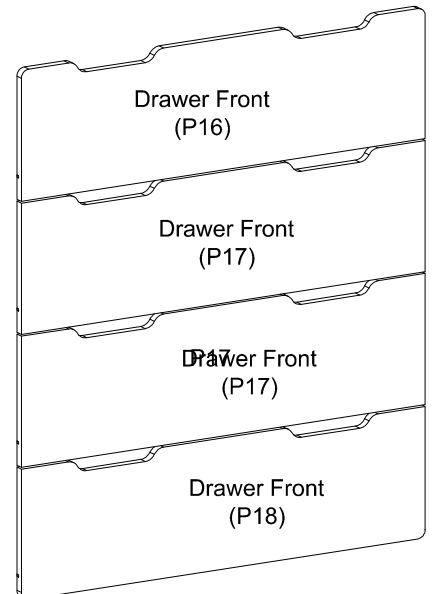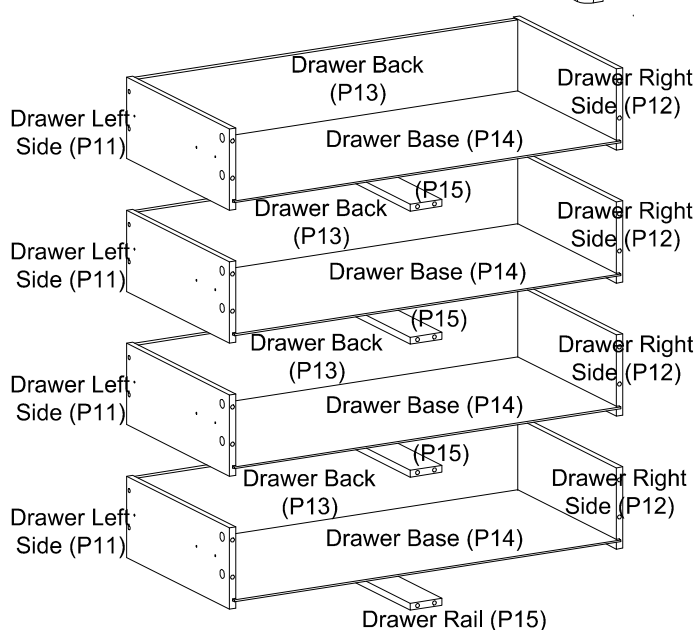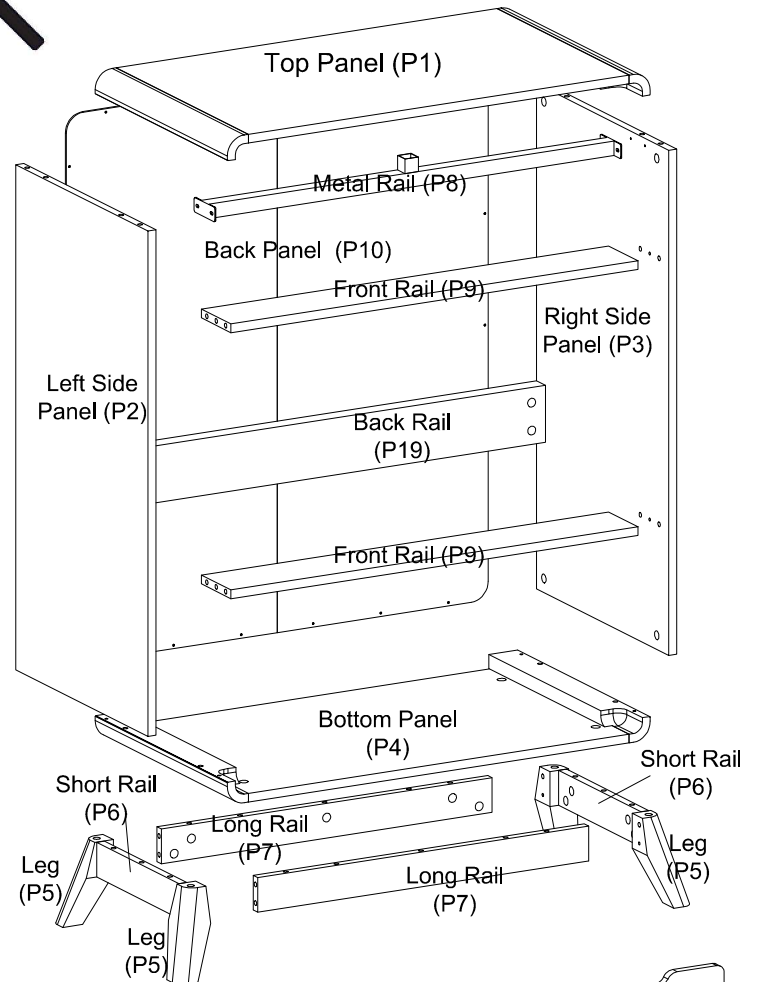

Hardware pack



58 x Cam Bolts
(H1)




34 x Big Cam
Nuts (H2)




30 x Wood Dowels
(H3)



24 x Small Cam
Nuts (H4)



4 x Screws
(H5)




25 x Nails
(H6)




4 x Felt Feet
(H7)




48 x Screws
(H8)




4 x Left Runner
Tracks (H9)




4 x Left Runners
(H10)



4 x Right Runner
Tracks (H11)



4 x Right Runners
(H12)




1 x Screws
(H13)



1 x Wall Strap
(H14)



2 x Flat Washers
(H15)






24 x Screws
(H17)



4 x Screws
(H18)

Step 1


You will need	
	
10 x Cam Bolts (H1)	Phillips head screwdriver

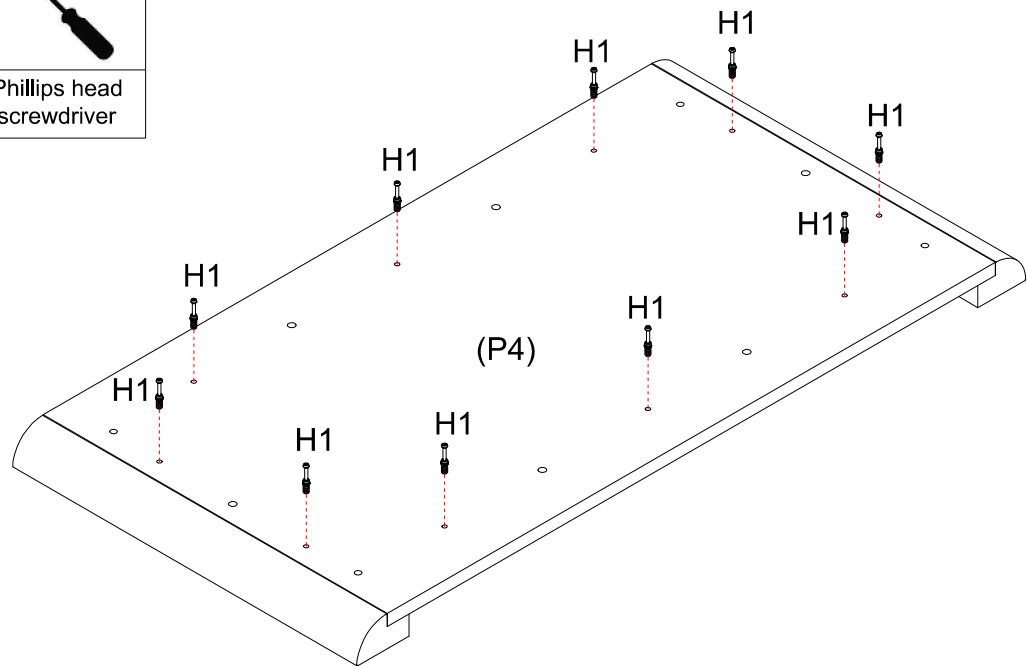

Screw 10 x Cam Bolts (H1) into Bottom Panel (P4) as shown.


Step 2


You will need	
	
14 x Wood Dowels (H3)	Mallet

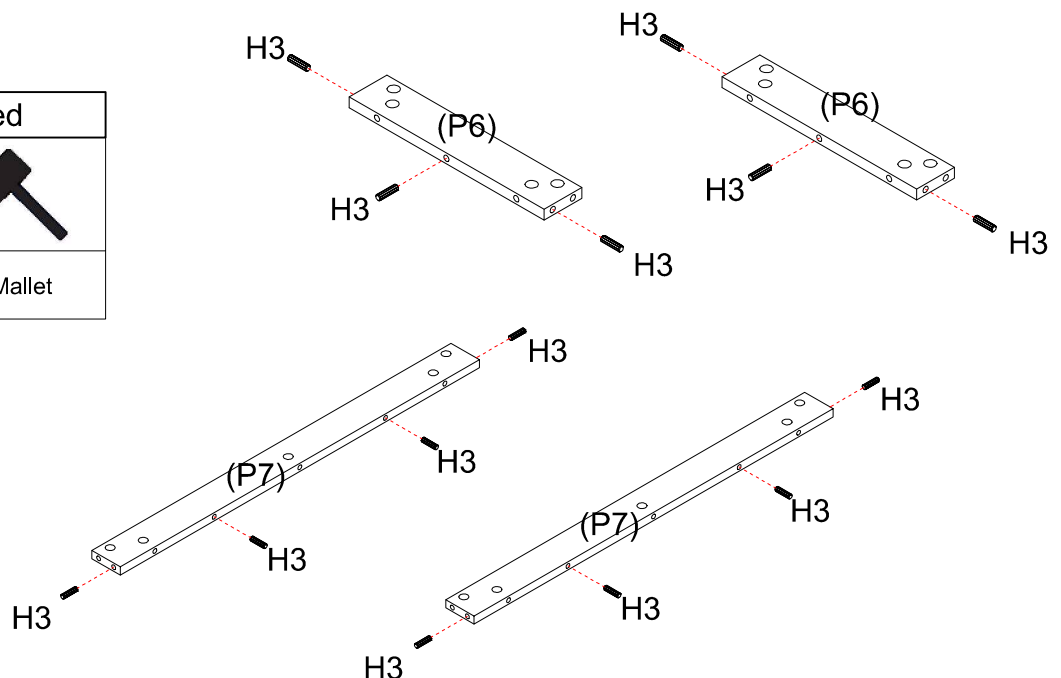

Insert each 3 x Wood Dowels (H3) into Short Rail (P6) and each 4 x Wood Dowels (H3) into Long Rail (P7).

Step 3


You will need	
	
8 x Cam Bolts (H1)	Phillips head screwdriver
	
4 x Felt Feet (H7)	

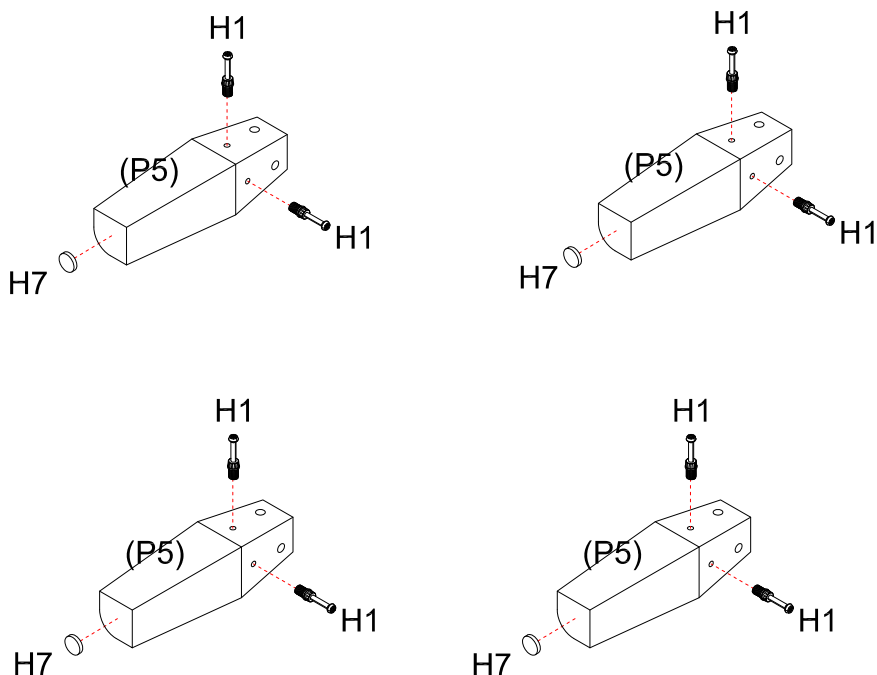


Screw each 2 x Cam Bolts (H1) into Leg (P5) using a phillips head screwdriver.
Attached 4 x Felt Feet (H7) to Legs (P5).

Step 4

You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver

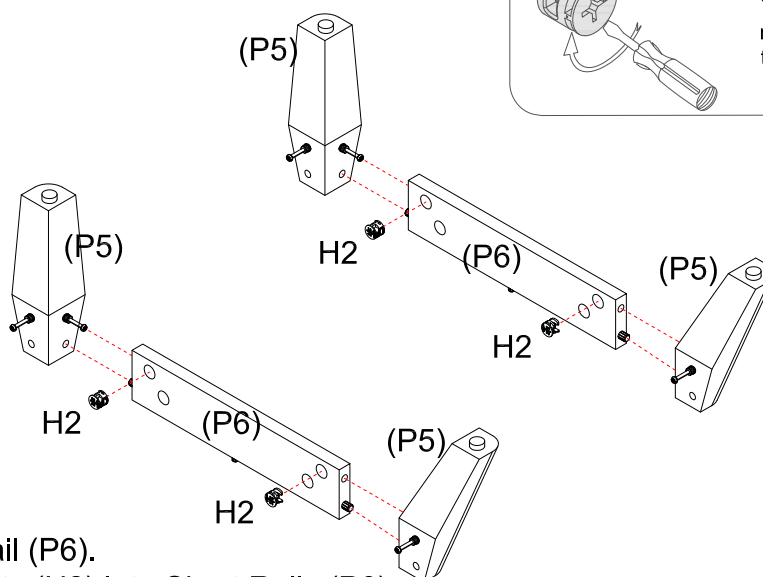

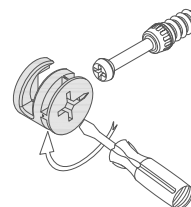

This is how a cam nut works.....




The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.


Attach Leg (P5) to Short Rail (P6).
Insert each 2 x Big Cam Nuts (H2) into Short Rails (P6).
Rotate the cam nuts so the arrows point towards the incoming cam bolt.
Push Leg (P5) into place and tighten the cam nuts.

Step 5

You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver

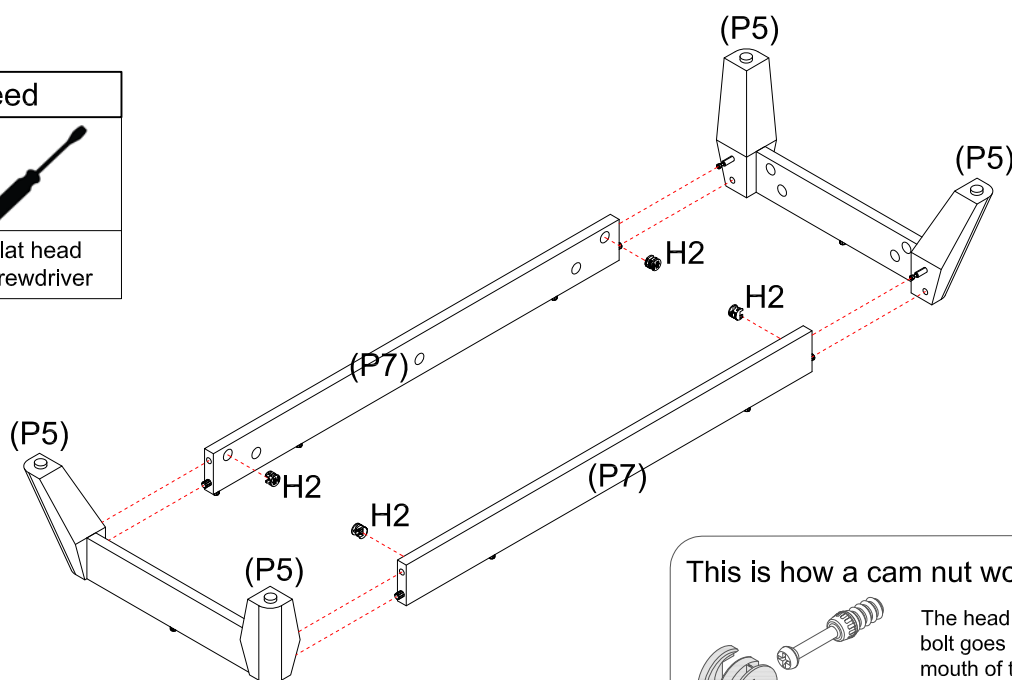


This is how a cam nut works.....

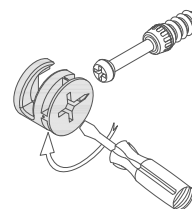


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Attach Leg (P5) to Long Rail (P7).
Insert 4 x Big Cam Nuts (H2) into Long Rails (P7) and turn clockwise to lock.

Step 6

You will need	
	
10 x Big Cam Nuts (H2)	Flat head screwdriver

This is how a cam nut works.....

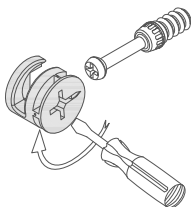


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PEOPLE




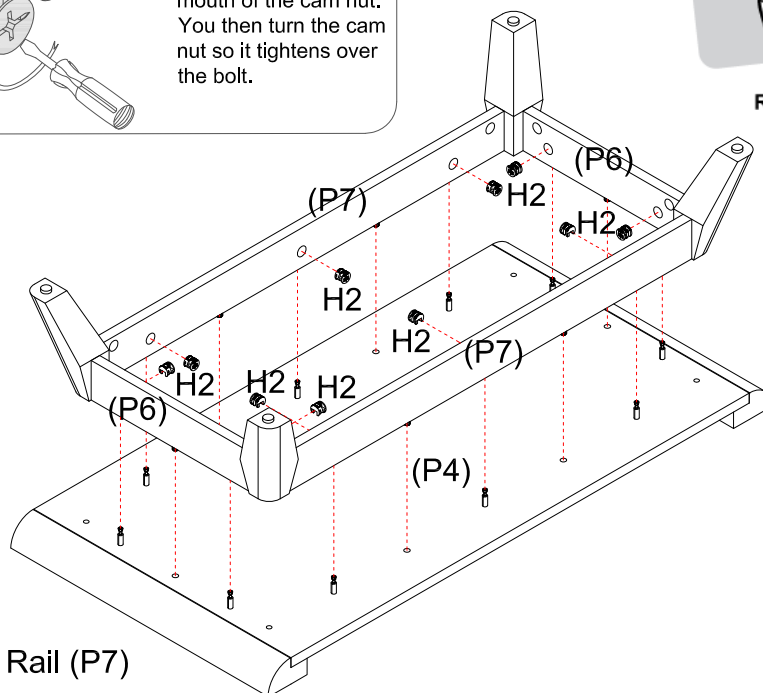


REQUIRED



Attach Short Rail (P6) and Long Rail (P7) to Bottom Panel (P4).
Insert 10 x Big Cam Nuts (H2) into Short Rails (P6) and Long Rails (P7), and turn clockwise to lock.

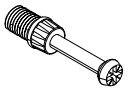Step 7


You will need	
	
4 x Cam Bolts (H1)	4 x Screws (H5)
	
Phillips head screwdriver	

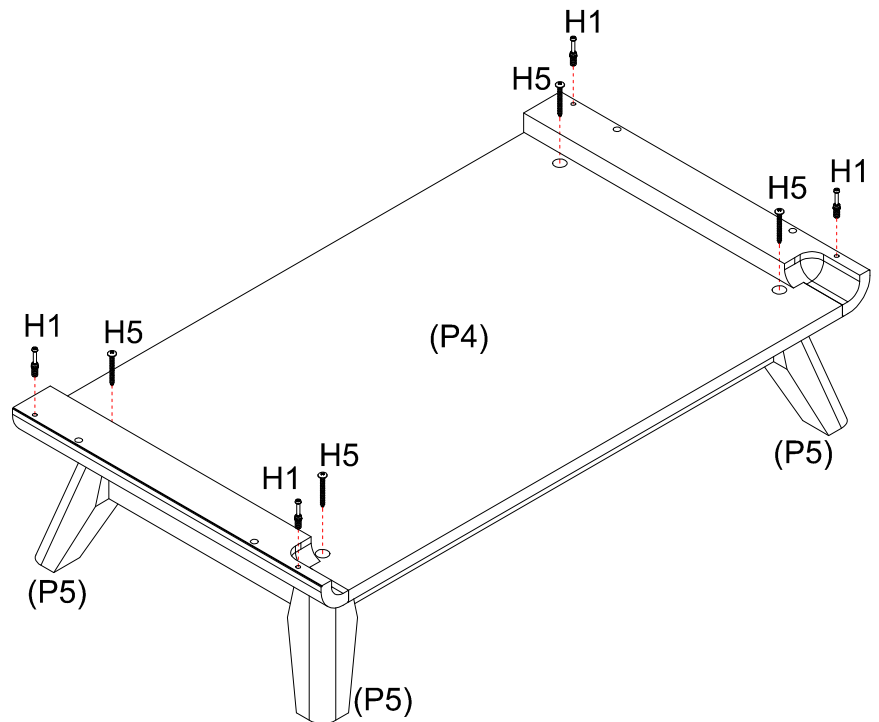

Screw 4 x Cam Bolts (H1) into Bottom Panel (P4) as shown.
Use 4 x Screws (H5) through Bottom Panel (P4) to connect Legs (P5).





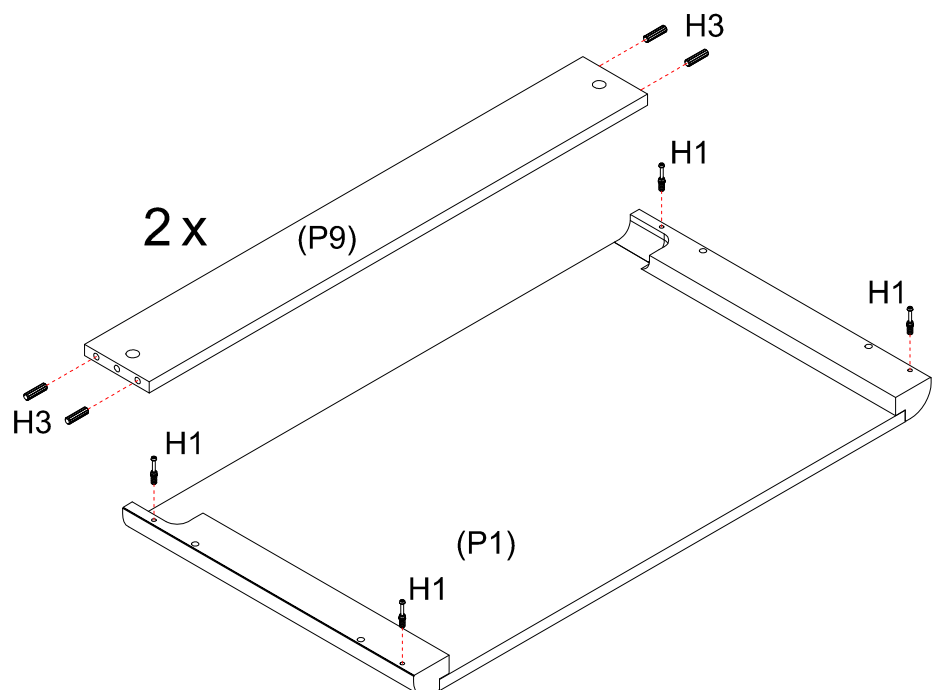

Step 8


You will need	
	
4 x Cam Bolts (H1)	8 x Wood Dowels (H3)
	
Phillips head screwdriver	Mallet



Insert each 4 x Wood Dowels (H3) into Front Rail (P9).
Screw 4 x Cam Bolts (H1) into Top Panel (P1) as shown.

Step 9

You will need	
	
4 x Cam Bolts (H1)	4 x Wood Dowels (H3)
	
12 x Screws (H8)	4 x Left Runner Tracks (H9)
	
Phillips head screwdriver	Mallet

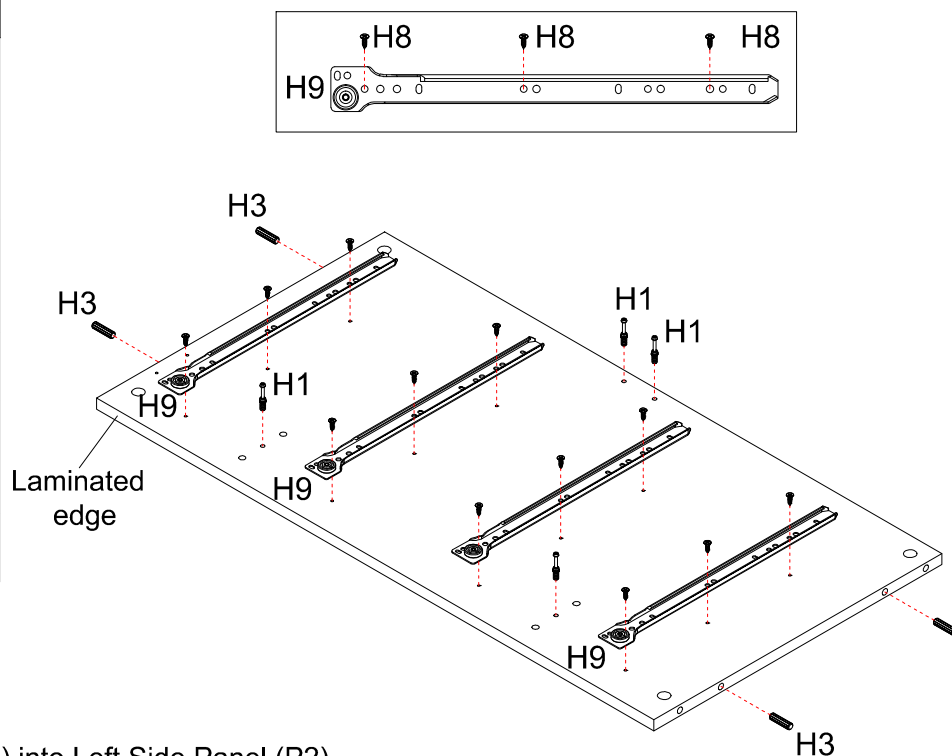








Insert 4 x Wood Dowels (H3) into Left Side Panel (P2).

Screw 4 x Cam Bolts (H1) into Left Side Panel (P2) as shown.

Attach 4 x Left Runner Tracks (H9) to Left Side Panel (P2) with 12 x Screws (H8).

Step 10

You will need	
	
4 x Cam Bolts (H1)	4 x Wood Dowels (H3)
	
12 x Screws (H8)	4 x Right Runner Tracks (H11)
	
Phillips head screwdriver	Mallet

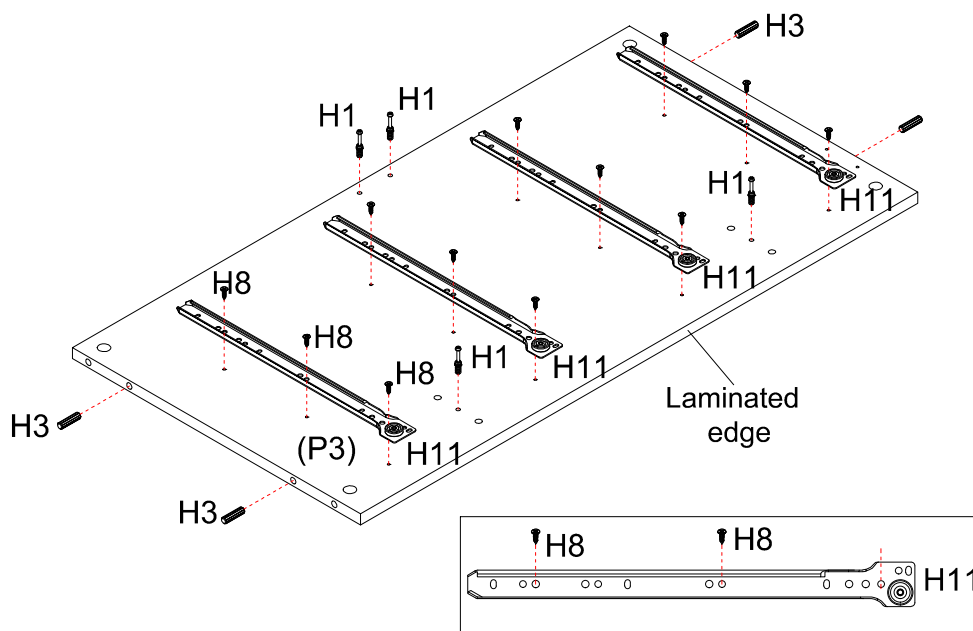

Insert 4 x Wood Dowels (H3) into Right Side Panel (P3).

Screw 4 x Cam Bolts (H1) into Right Side Panel (P3) as shown.

Attach 4 x Right Runner Tracks (H11) to Right Side Panel (P3) with 12 x Screws (H8).

Step 11


TWO PEOPLE




REQUIRED

You will need	
4 x Big Cam Nuts (H2)	2 x Screws (H18)
Phillips head screwdriver	Flat head screwdriver

This is how a cam nut works.....

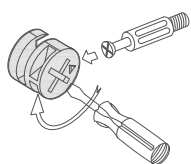

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

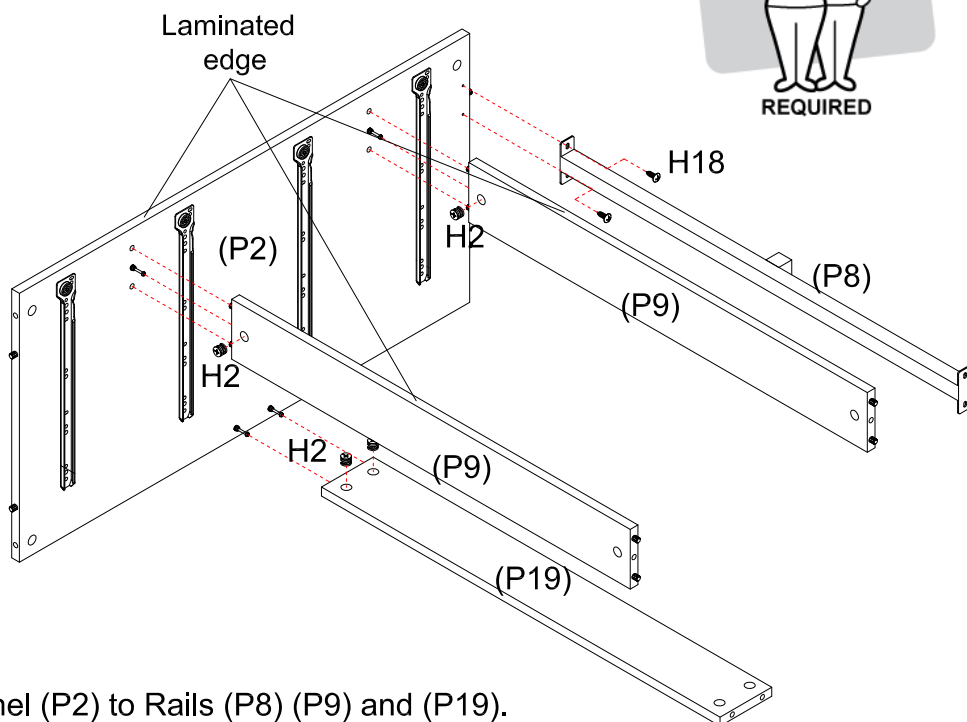

Move and align Left Side Panel (P2) to Rails (P8) (P9) and (P19).
Insert 4 x Big Cam Nuts (H2) into Rails (P9) (P19) and turn clockwise to lock.
Use 2 x Screws (H18) to connect Metal Rail (P8) and Left Side Panel (P2).


Step 12

TWO PEOPLE




REQUIRED

You will need	
4 x Big Cam Nuts (H2)	2 x Screws (H18)
Phillips head screwdriver	Flat head screwdriver

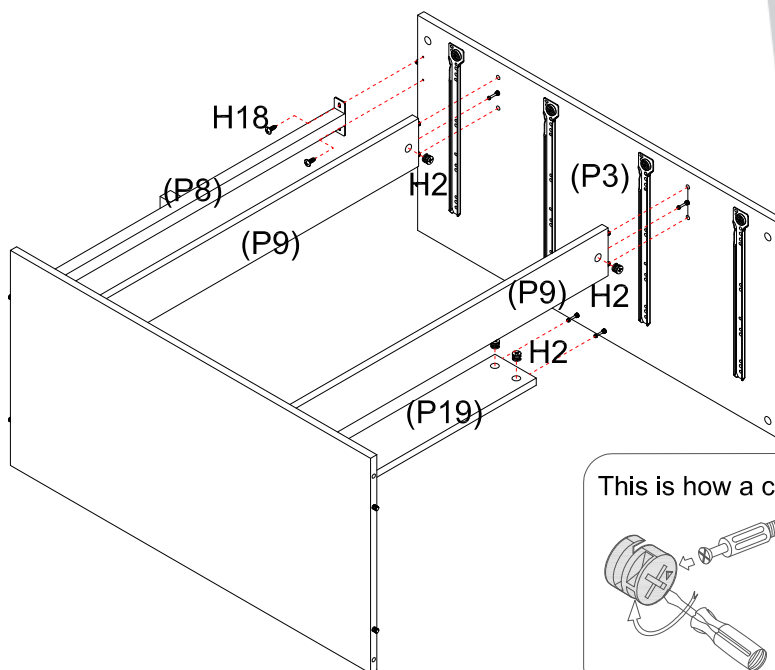

This is how a cam nut works.....

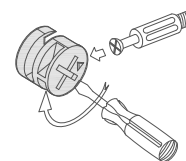

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.



Move and align Right Side Panel (P3) to Rails (P8) (P9) and (P19).
Insert 4 x Big Cam Nuts (H2) into Rails (P9) (P19) and turn clockwise to lock.
Use 2 x Screws (H18) to connect Metal Rail (P8) and Right Side Panel (P3).

Step 13


TWO PEOPLE




REQUIRED

You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver

This is how a cam nut works.....

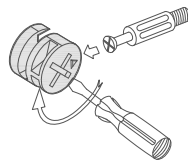

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

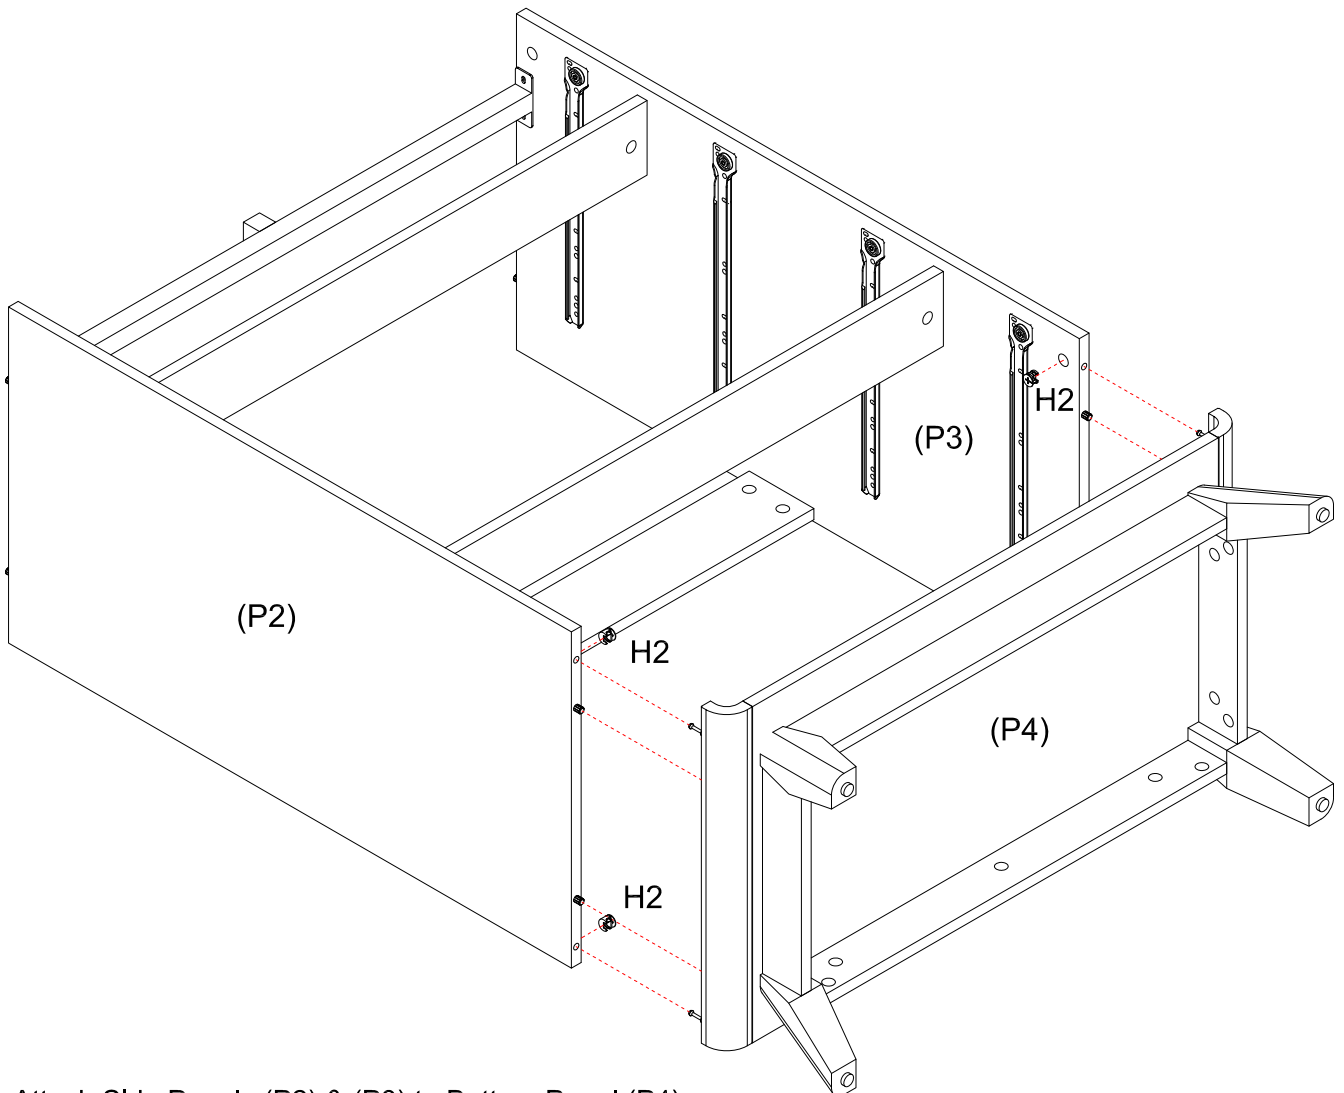

Attach Side Panels (P2) & (P3) to Bottom Panel (P4).
Insert 4 x Big Cam Nuts (H2) into Side Panels (P2) & (P3) and turn clockwise to lock.


Step 14

TWO PEOPLE




You will need	
	
4 x Big Cam Nuts (H2)	Flat head screwdriver
	
Phillips head screwdriver	

This is how a cam nut works.....

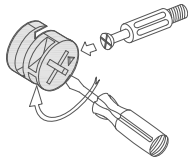

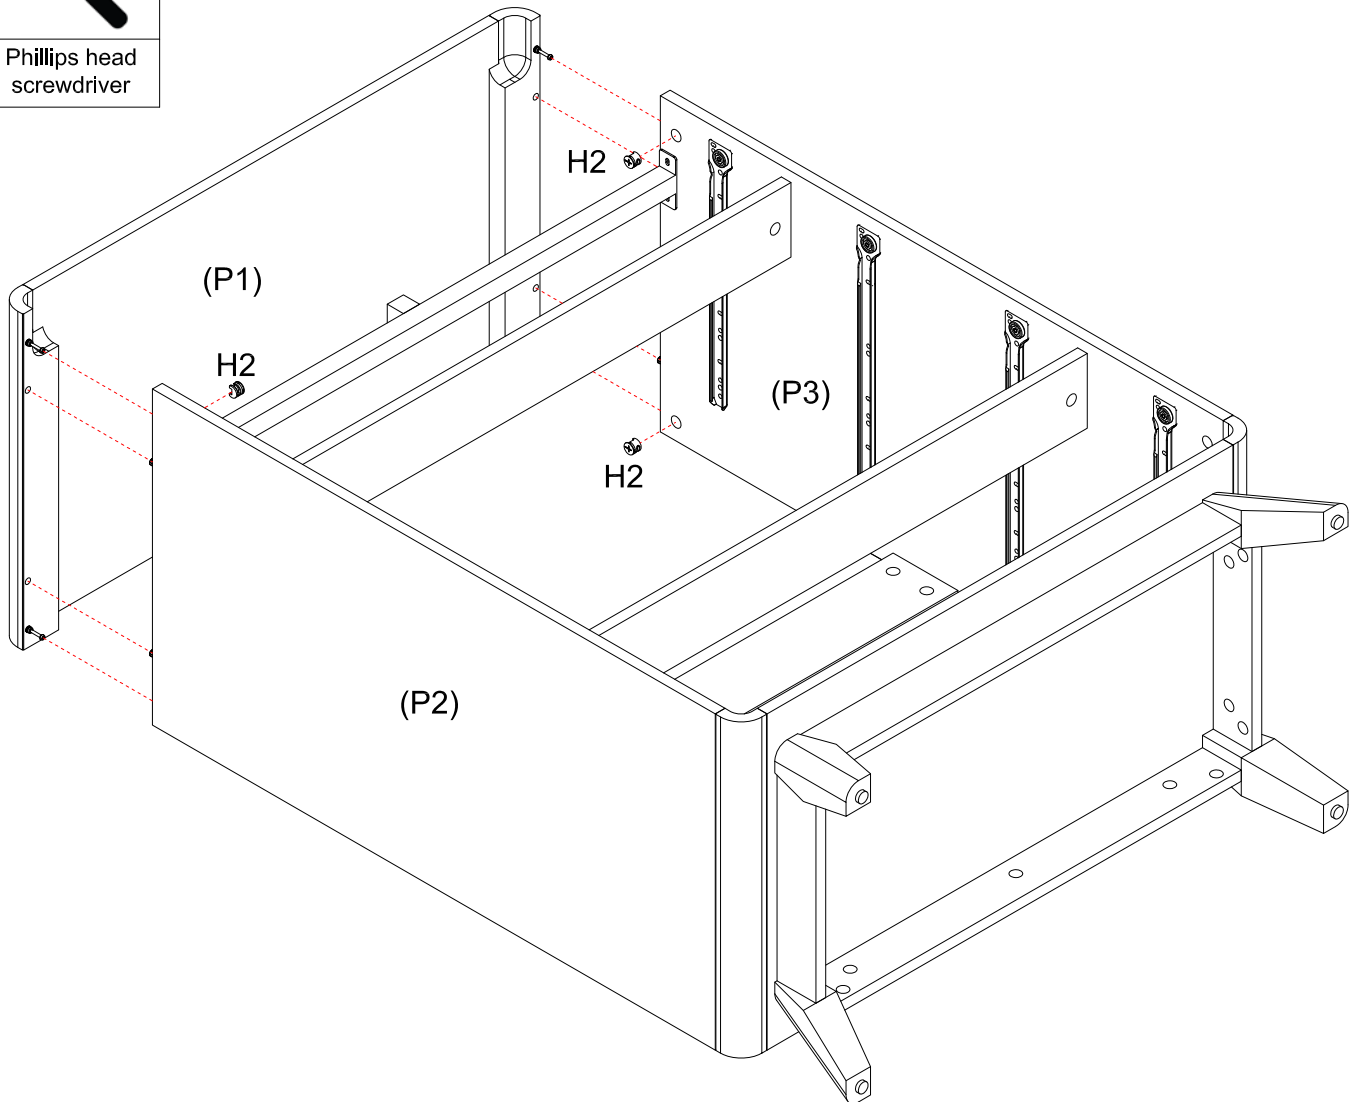

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.




Attach Top Panel (P1) to Side Panels (P2) & (P3) and Metal Rail (P8).
Insert 4 x Big Cam Nuts (H2) into Side Panels (P2) & (P3) and turn clockwise to lock.

Step 15




You will need	
	
25 x Nails (H6)	Hammer

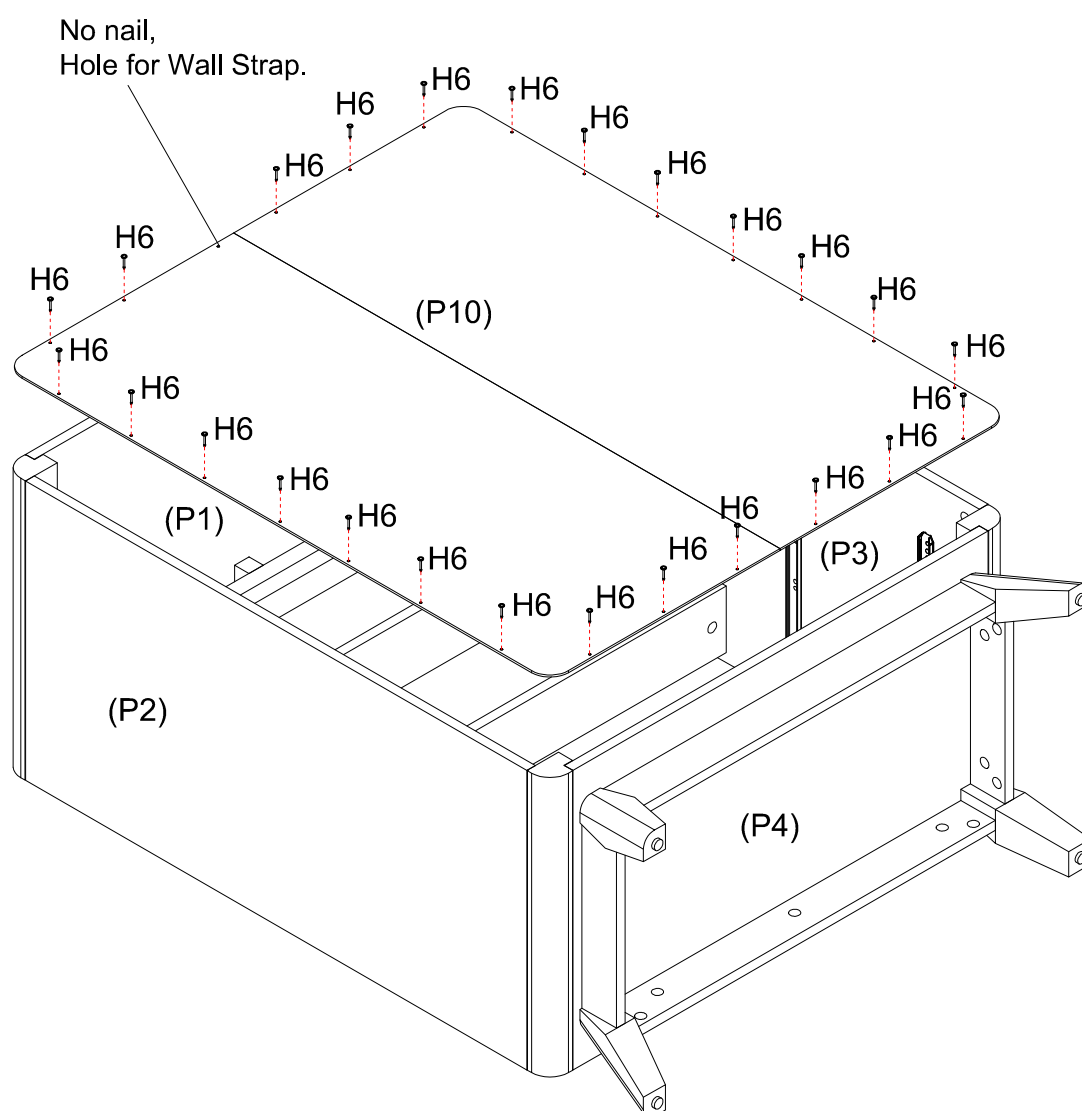

Attach Back Panel (P10) to Panels (P1) (P2) (P3) and (P4) with 25 x Nails (H6).

Step 16


You will need	
4 x Left Runners (H10)	4 x Right Runners (H12)
24 x Screws (H8)	Phillips head screwdriver

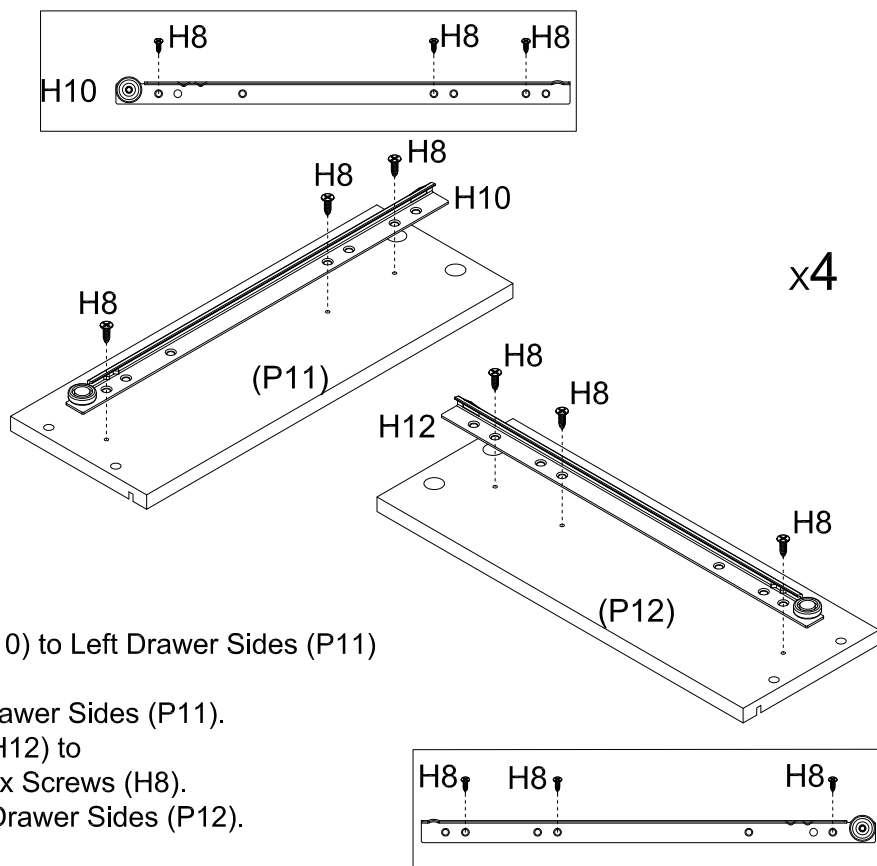

Attach each one Left Runner (H10) to Left Drawer Sides (P11) with 3 x Screws (H8).
 Repeat three times for all Left Drawer Sides (P11).
 Attach each one Right Runner (H12) to Right Drawer Sides (P12) with 3 x Screws (H8).
 Repeat three times for all Right Drawer Sides (P12).



Step 17

You will need	
24 x Cam Bolts (H1)	Phillips head screwdriver

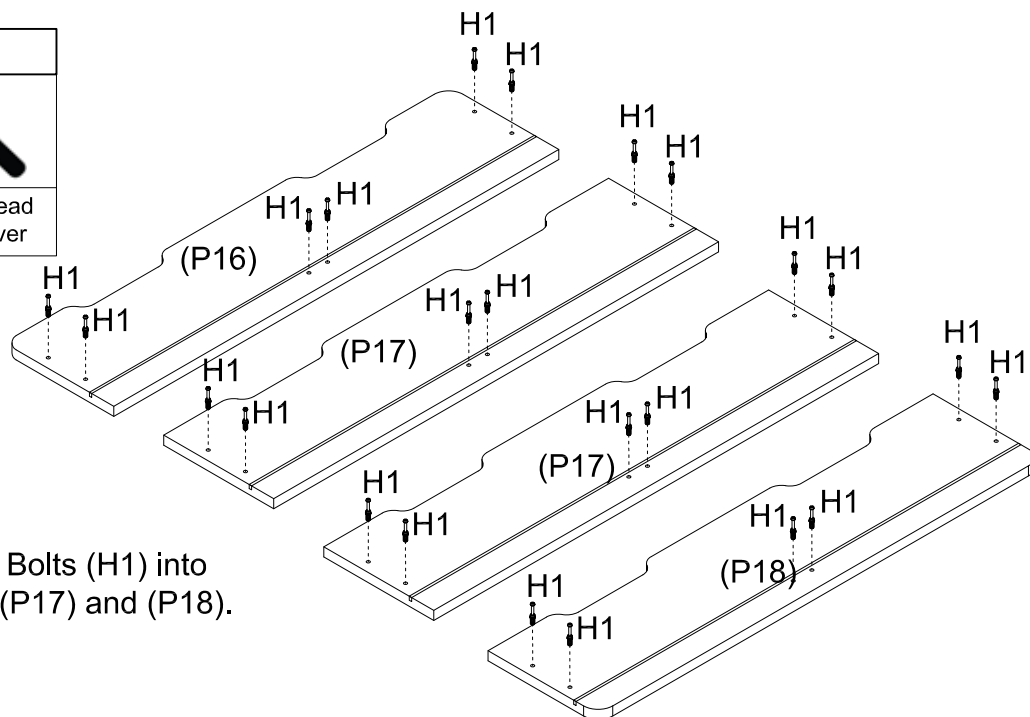


Screw each 6 x Cam Bolts (H1) into Drawer Fronts (P16) (P17) and (P18).

Step 18



You will need	
	
24 x Small Cam Nuts (H4)	Flat head screwdriver

Attach Drawer Sides (P11) & (P12) to Drawer Fronts (P16) (P17) and (P18). Attach Drawer Rails (P15) to Drawer Fronts (P16) (P17) and (P18). Insert 24 x Small Cam Nuts (H4) into Drawer Sides (P11) (P12) and Drawer Rails (P15), turn clockwise to lock.

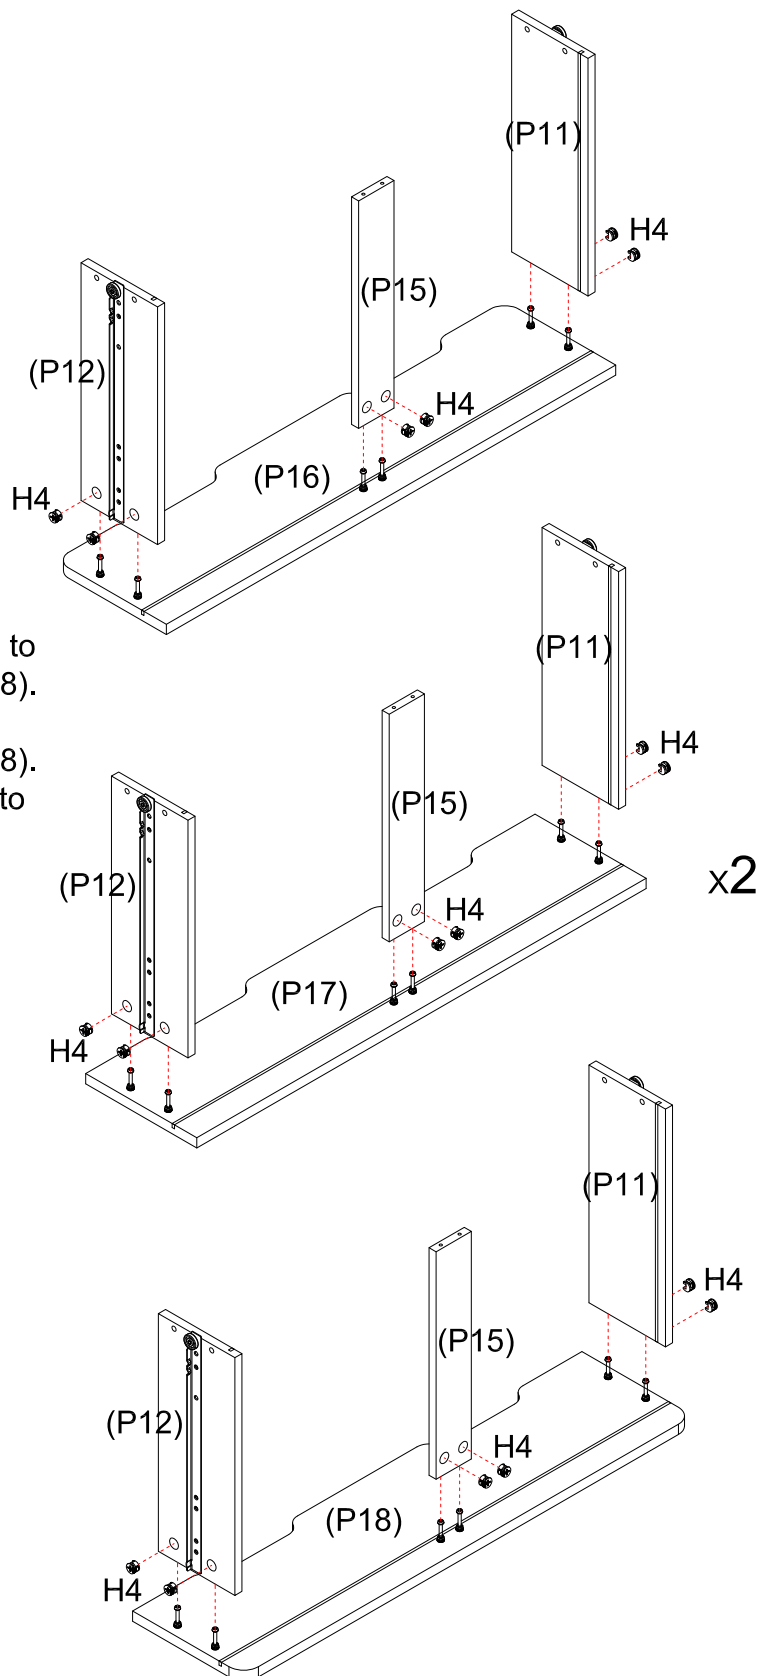


Step 19



Slide each Drawer Base (P14) into the groove in the Drawer Panels (P11), (P12) and Drawer Fronts (P16) (P17) (P18). Repeat with all Drawer Bases (P14).

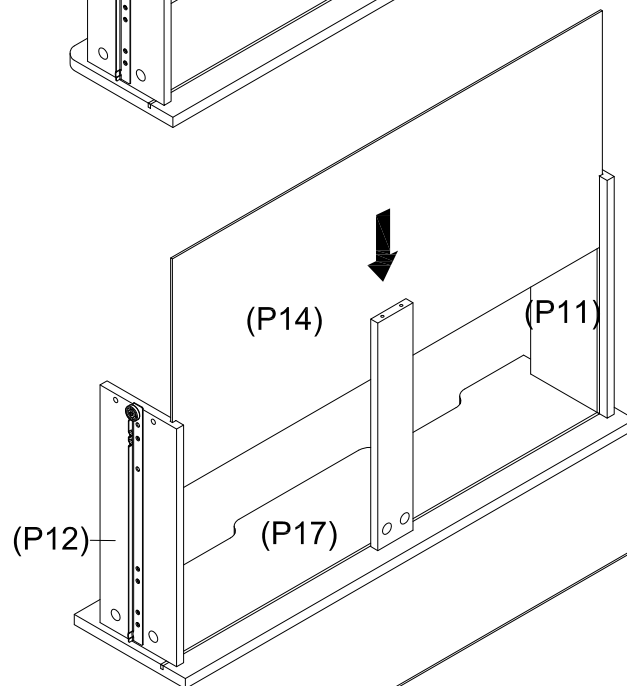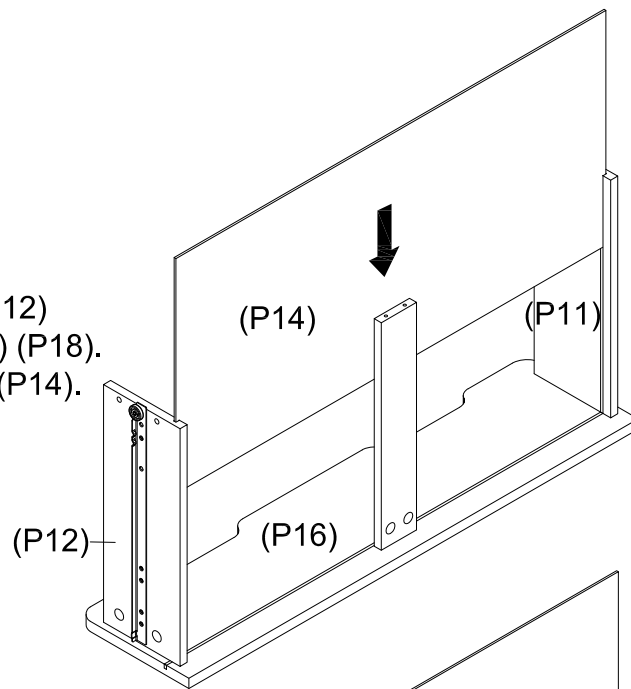


x2

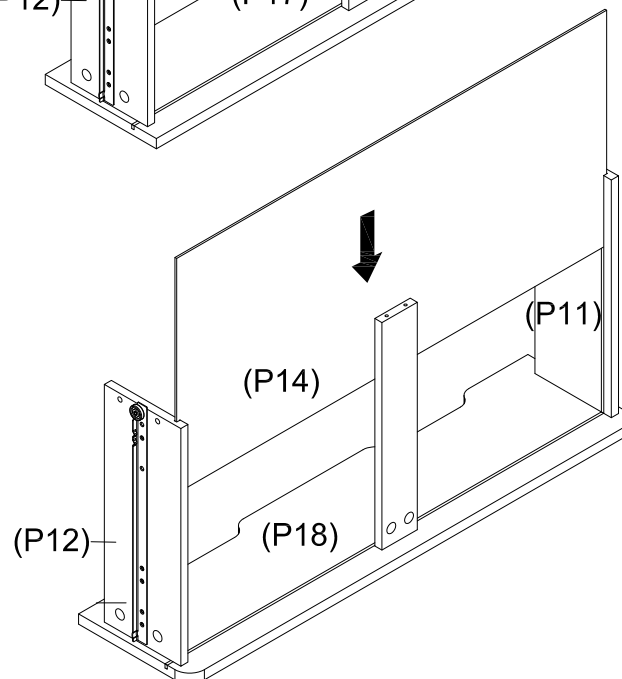

Step 20

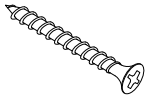You will need	
	
24 x Screws (H17)	Phillips head screwdriver

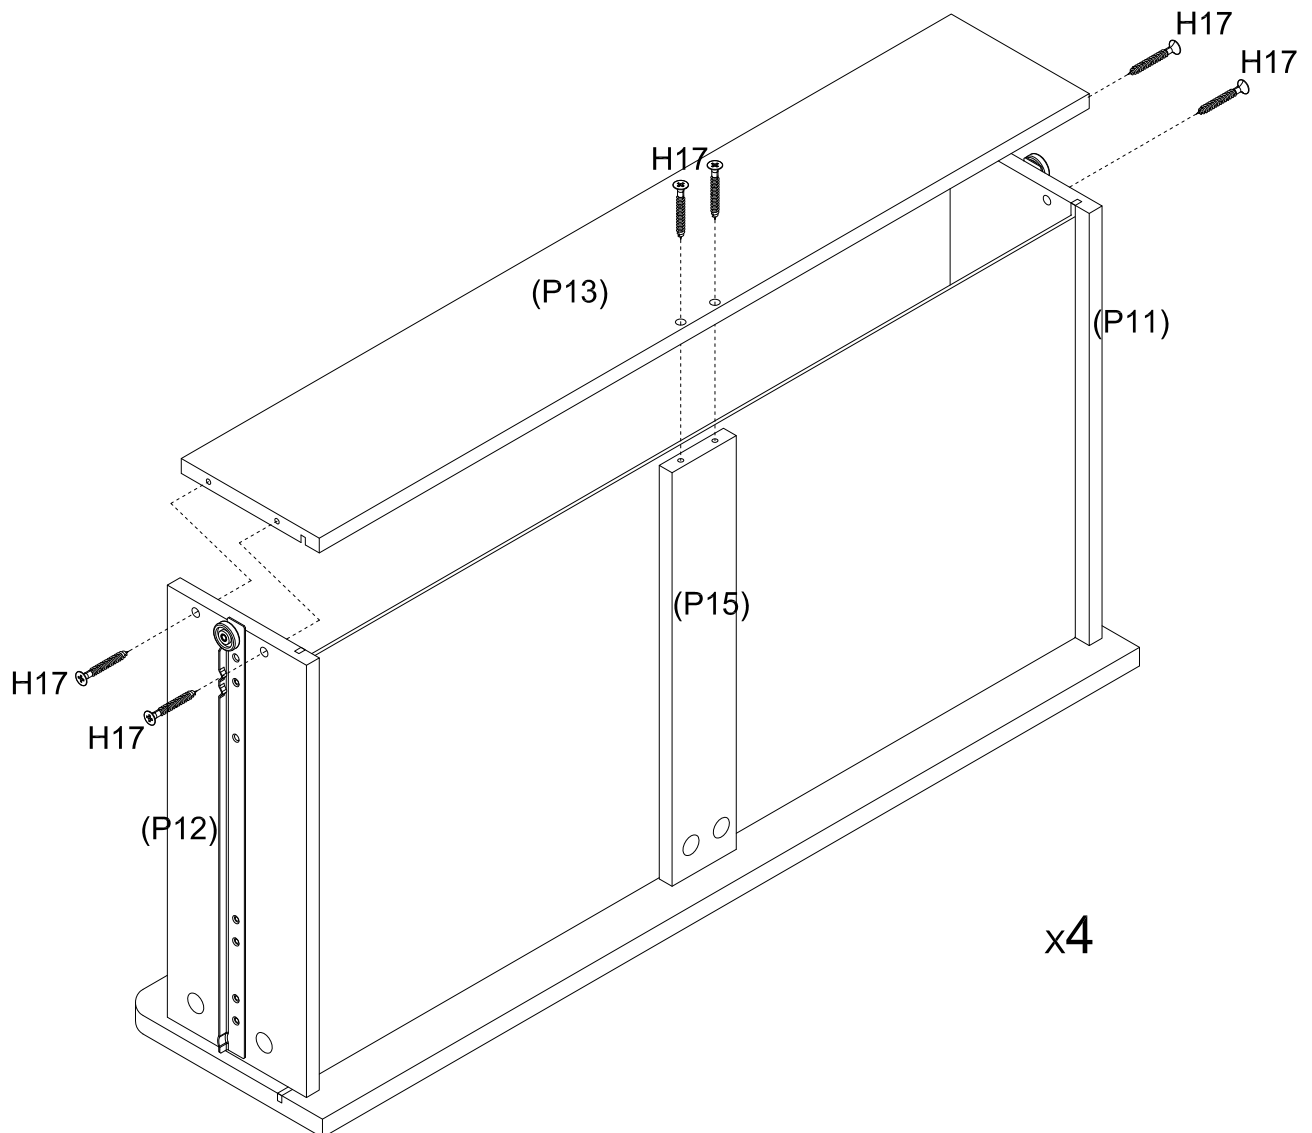


Attach each Drawer Back (P13) to Drawer Sides (P11) & (P12) and Drawer Rail (P15) with 6 x Screws (H17).
Repeat for all Drawer Backs (P13).

Step 21

Insert drawers into cabinet carefully as shown.
Slide drawers runners into position gently to avoid
damaging runners.



Note: Follow the correct order of these
four drawers as shown.

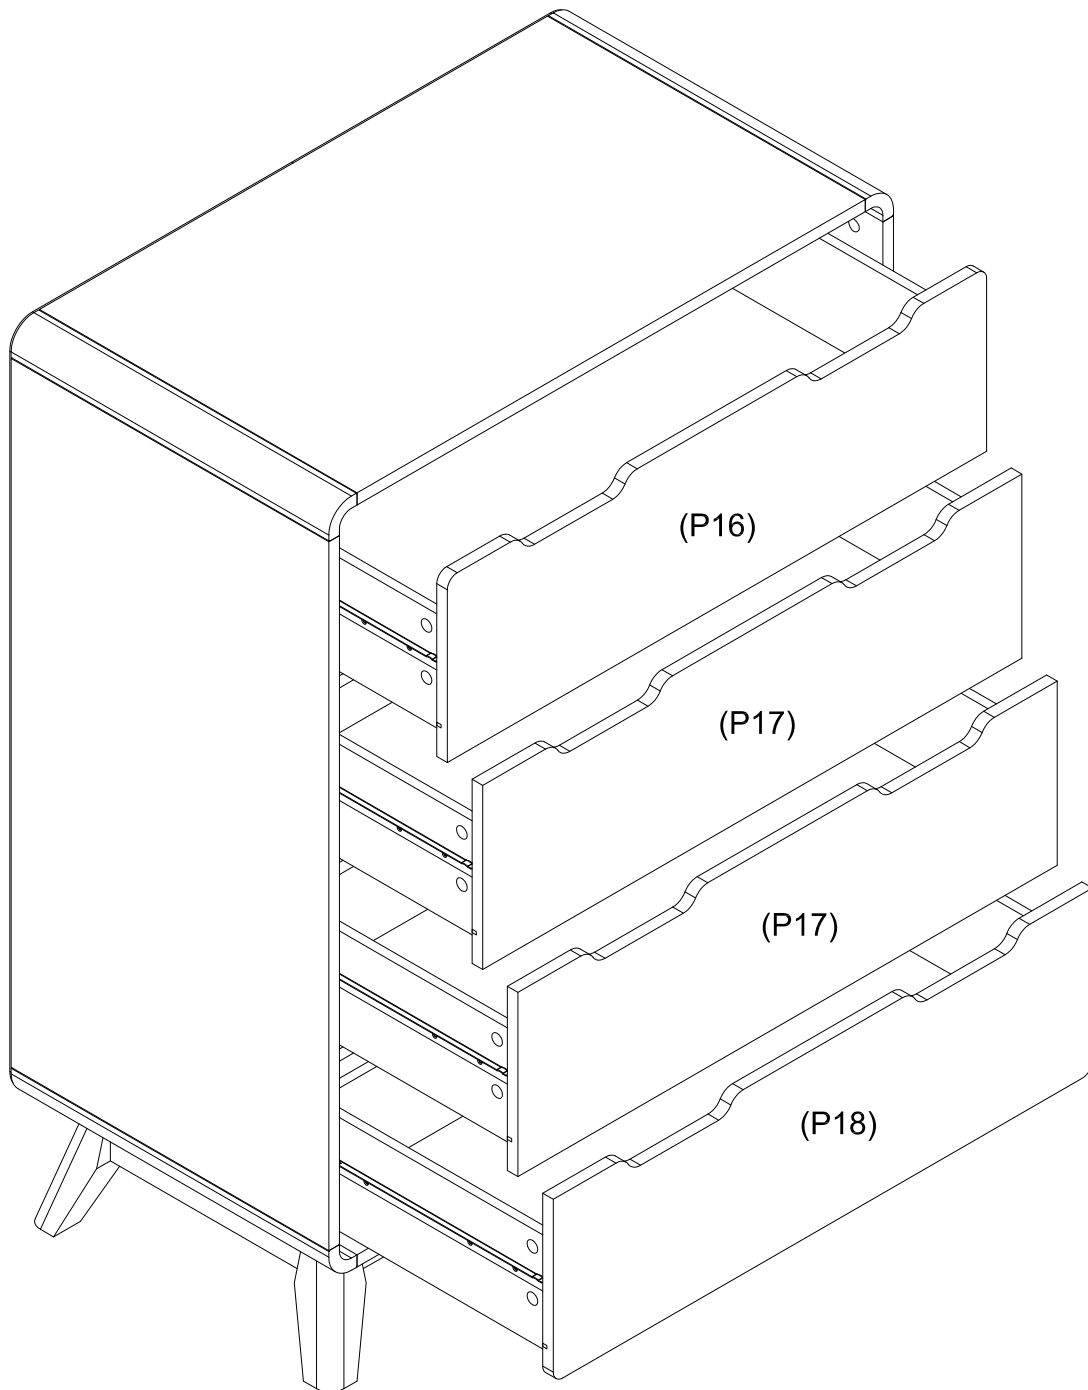

Step 22



You will need	
	
1 x Flat Washer (H15)	1 x Screw (H13)
	
1 x Wall strap (H14)	Phillips head screwdriver

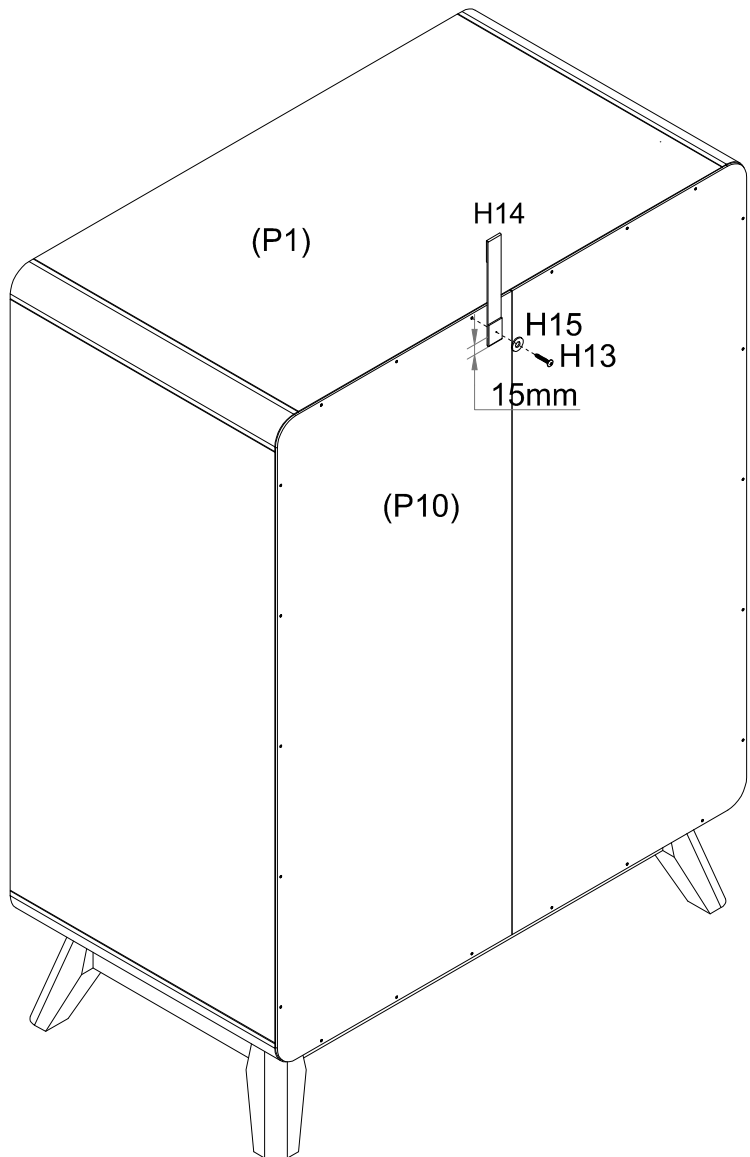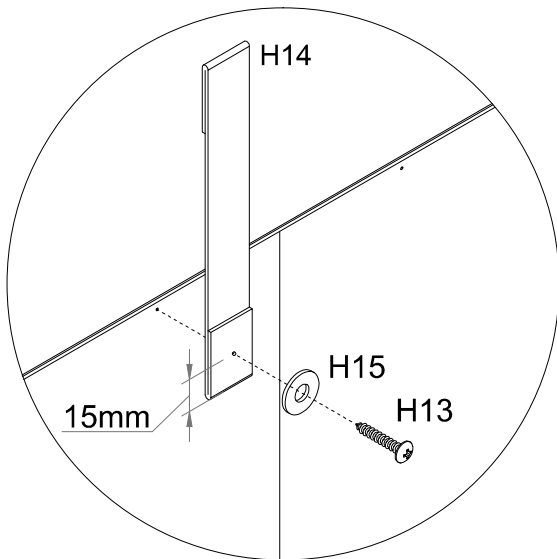We strongly advise that you use the wall safety strap provided to prevent the unit toppling.



Use Screw (H13) to connect Wall Strap (H14) on Top Panel (P1).



Step 23

You will need	
	
1 x Flat Washer (H15)	Phillips head screwdriver


Seek advice from a qualified trades person on how to attach this safety strap to your specific wall.

Screw and Wall Plug which are not provided. Please use appropriate fixtures for your wall.

Move the Tallboy to the final position. Attach the safety strap to the wall. Make sure it is firmly attached and a snug fit.

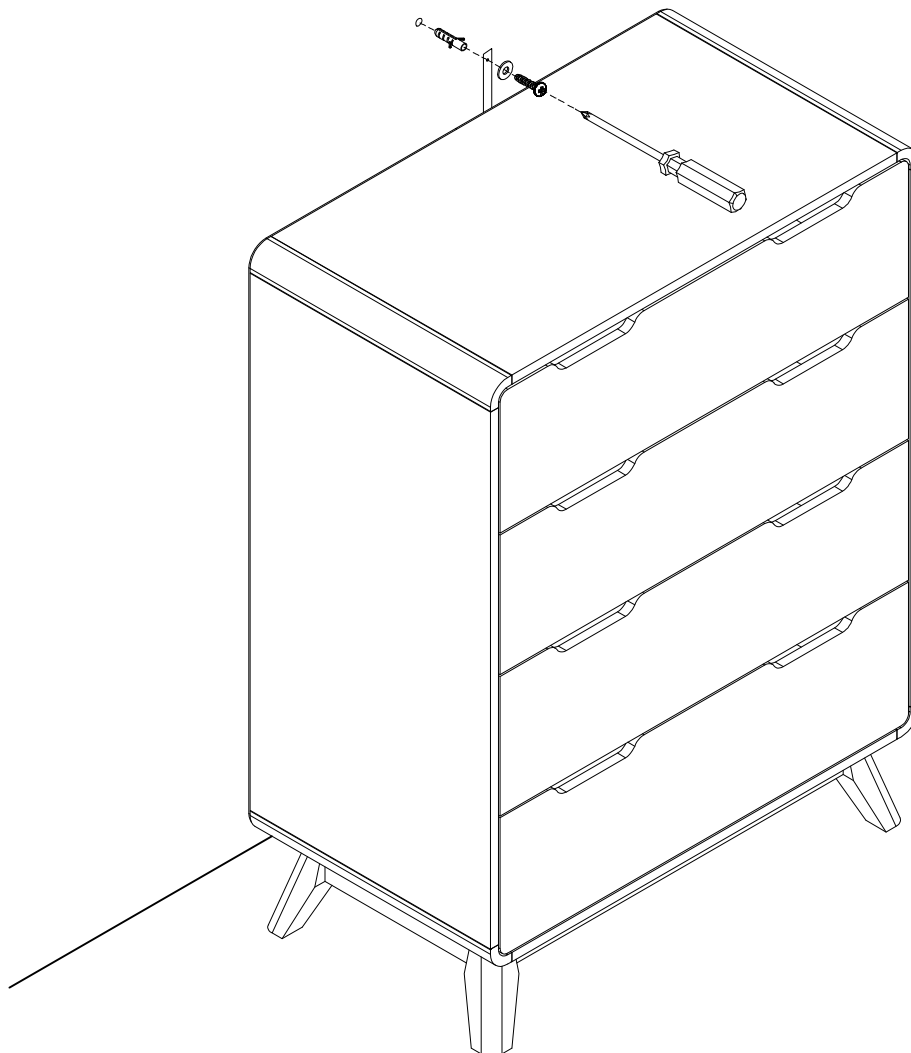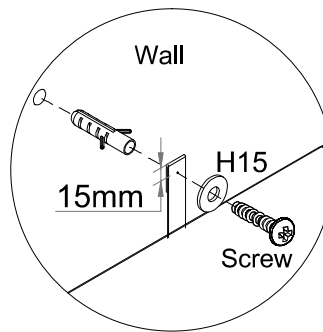

Step 24

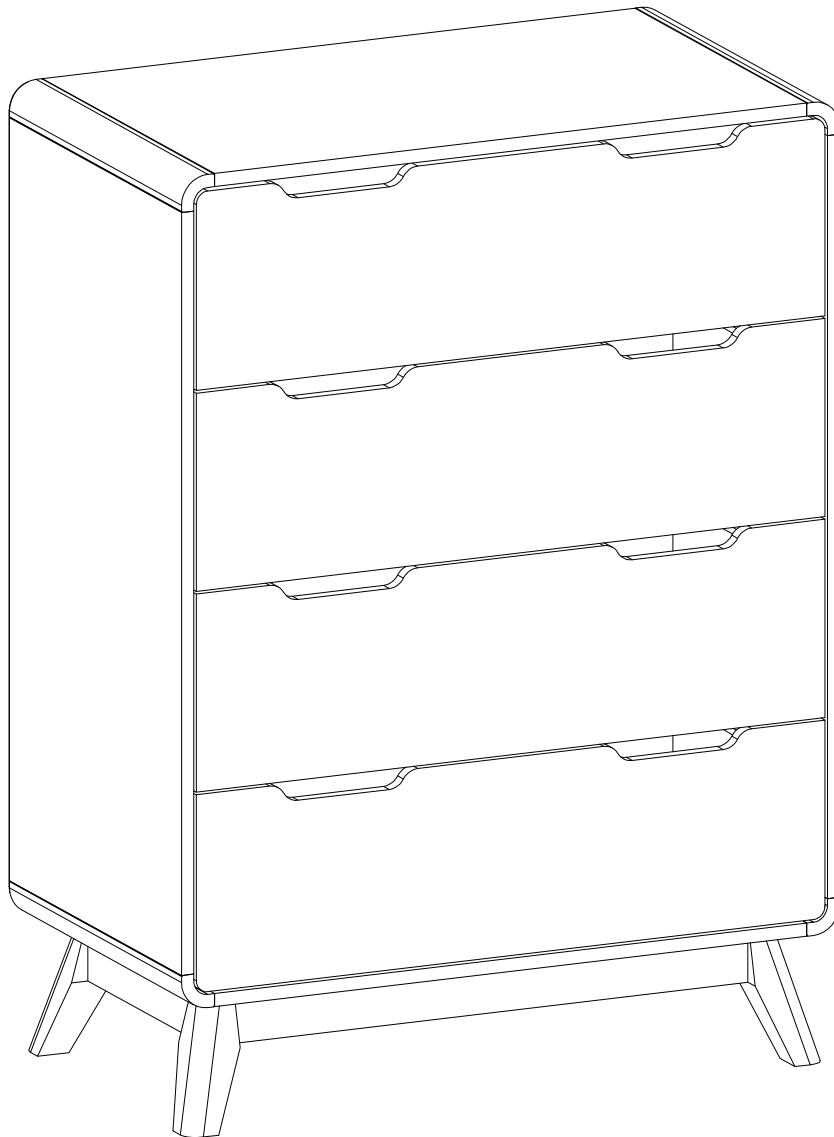

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.