


# ASSEMBLY INSTRUCTION

MODEL : IQ182GR GUARD RAIL

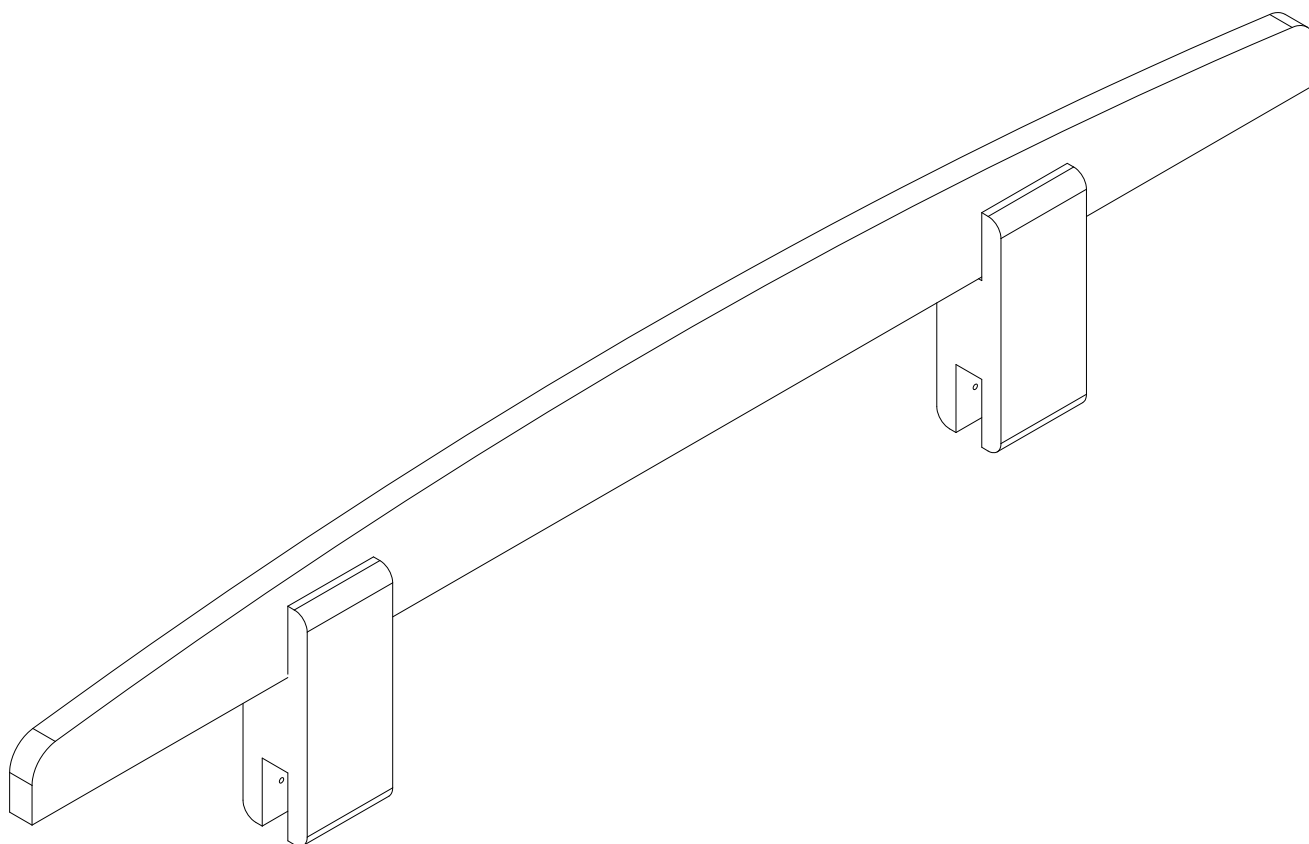

## **WARNING : SUFFOCATION AND STRANGULATION HAZARD**

- NEVER use with children younger than 3 years old. Use ONLY with older children who can get in and out of single bed without help. NEVER use in place of BABY COT.
- Gaps in and around guard rails have entrapped young children and killed infants.
- NEVER use guard rail without properly securing guard rail to bed. Incorrect installation can allow guard rail to move away from bed, which can lead to entrapment and death.
- NEVER use on toddler bed, bunk bed, water bed or bed with inflatable mattress. Use ONLY on single bed or adult bed.
- Discontinue use if damaged, broken or if parts are missing. Periodically check the guard rail for tightness to ensure guard rail is securely fasten.

### **HARDWARE LIST**

**A**

**8 PCS**




CSK RATTAN SCREW (#8 x 25MM)




*Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.*

**Tools Required :**  
**Crosshead Screw Driver**


### **PART LIST**

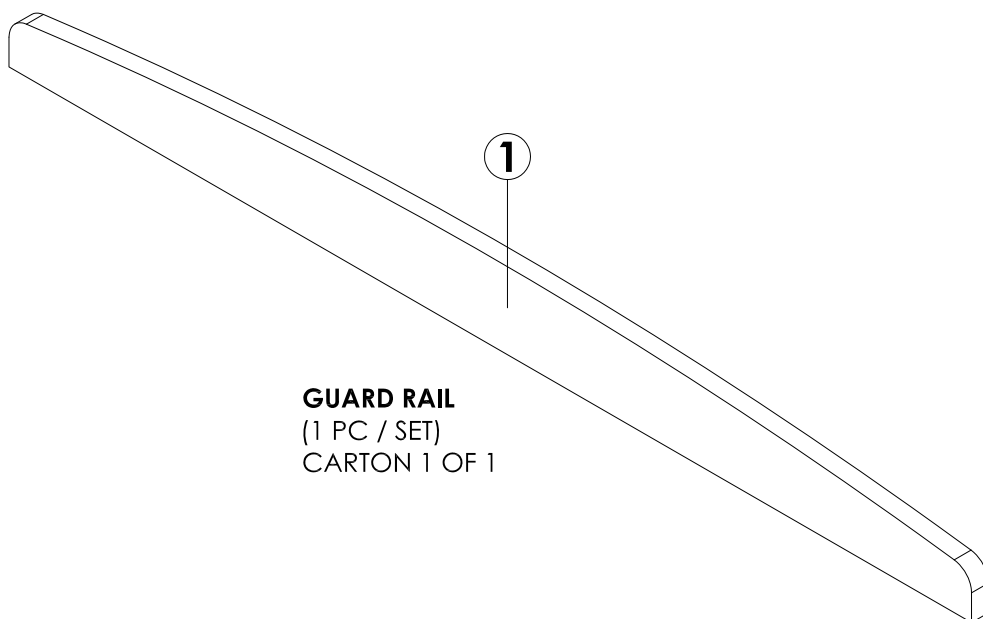

**GUARD RAIL**  
(1 PC / SET)  
CARTON 1 OF 1

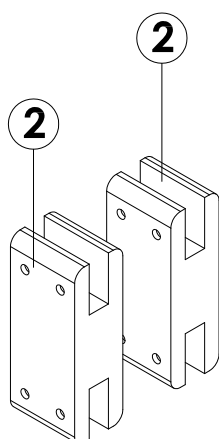


**RAIL SUPPORT**  
(2 PCS / SET)  
CARTON 1 OF 1

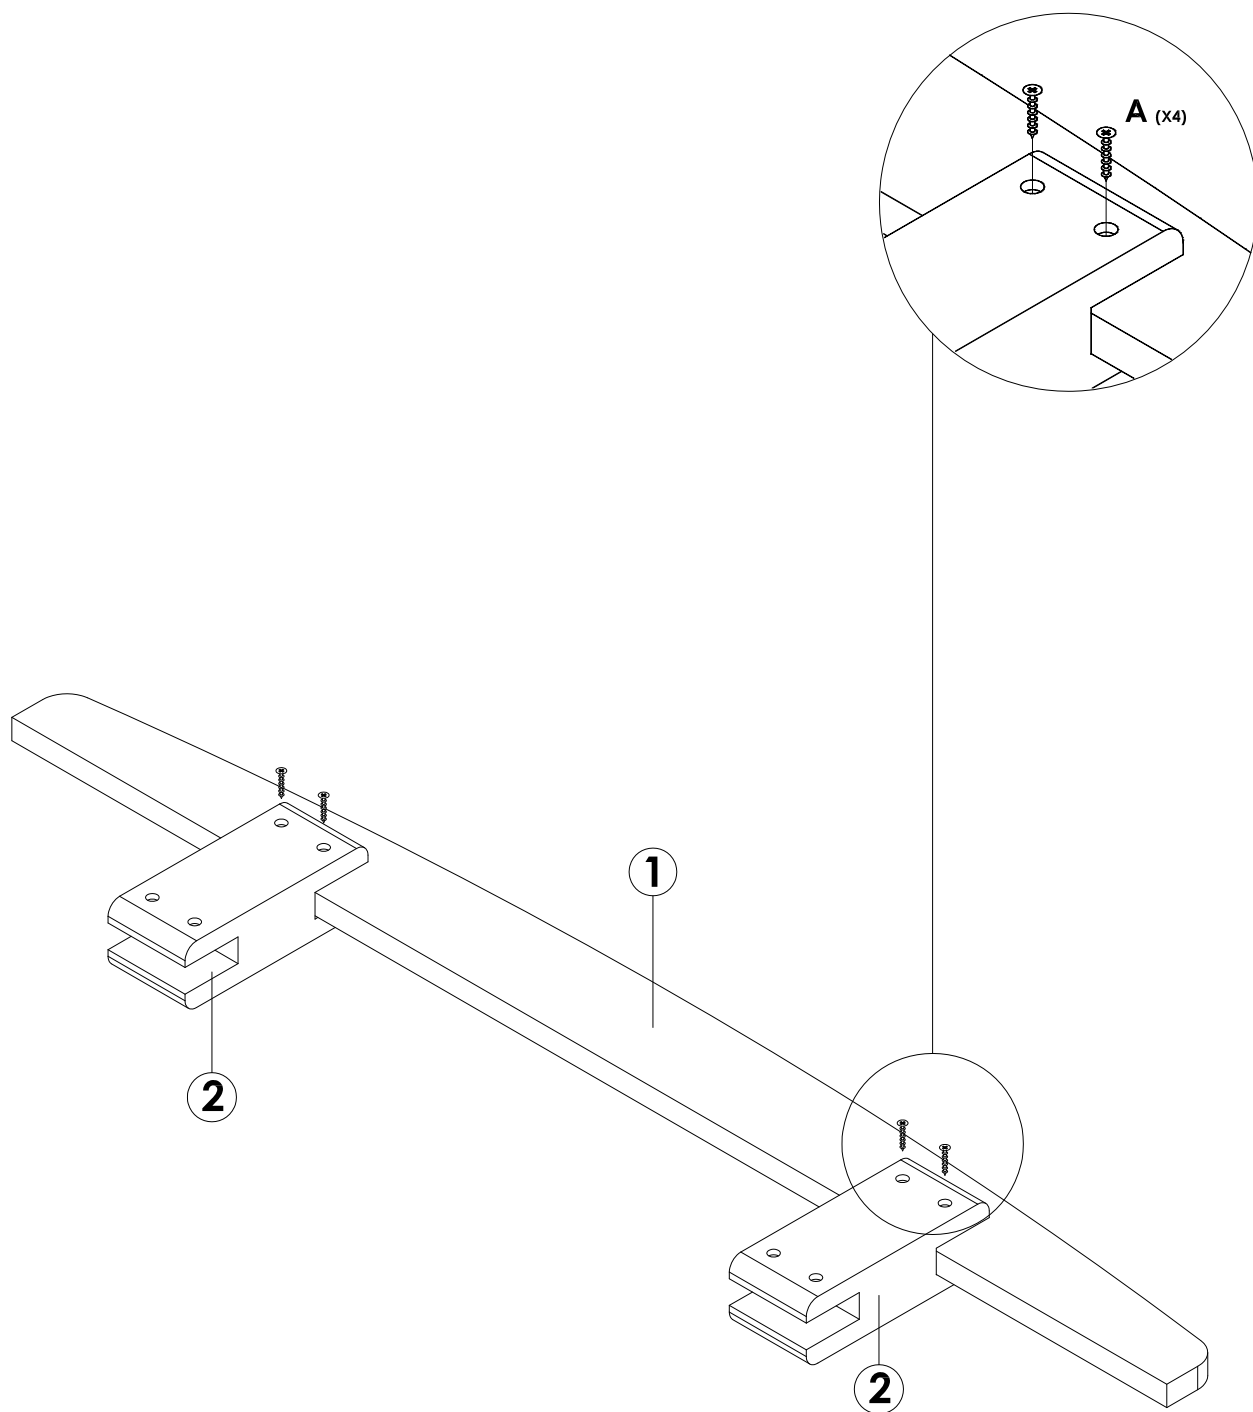

### STEP 1

Attach and secure **Guard Rail** onto **Rail Support** by using **(A)**, tighten it up by using a Crosshead Screw Driver.

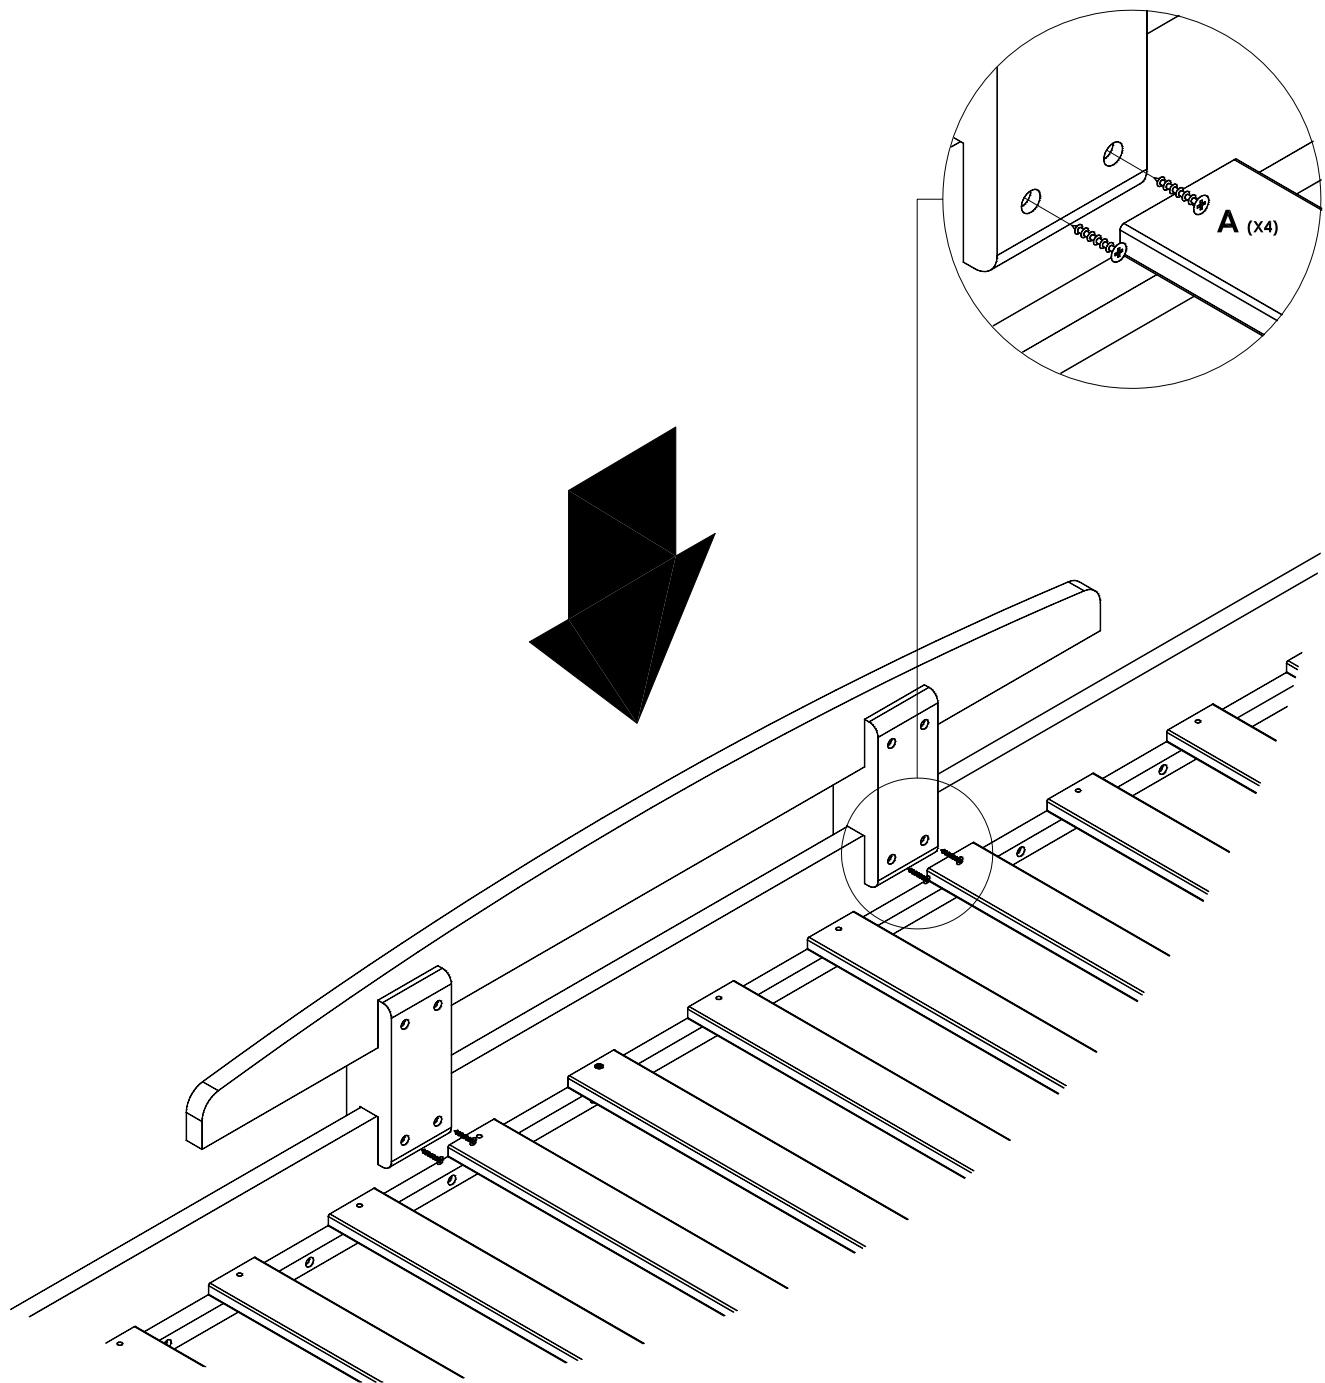


## **STEP 2**







Attach **Guard Rail** to **Side Rail** of **IQ16111W** Bed Frame by using self tapping screws **(A)**, tighten up by using Crosshead Screw Driver. Not required to predrill the holes. Go on to complete the assembly.

# ASSEMBLY INSTRUCTION

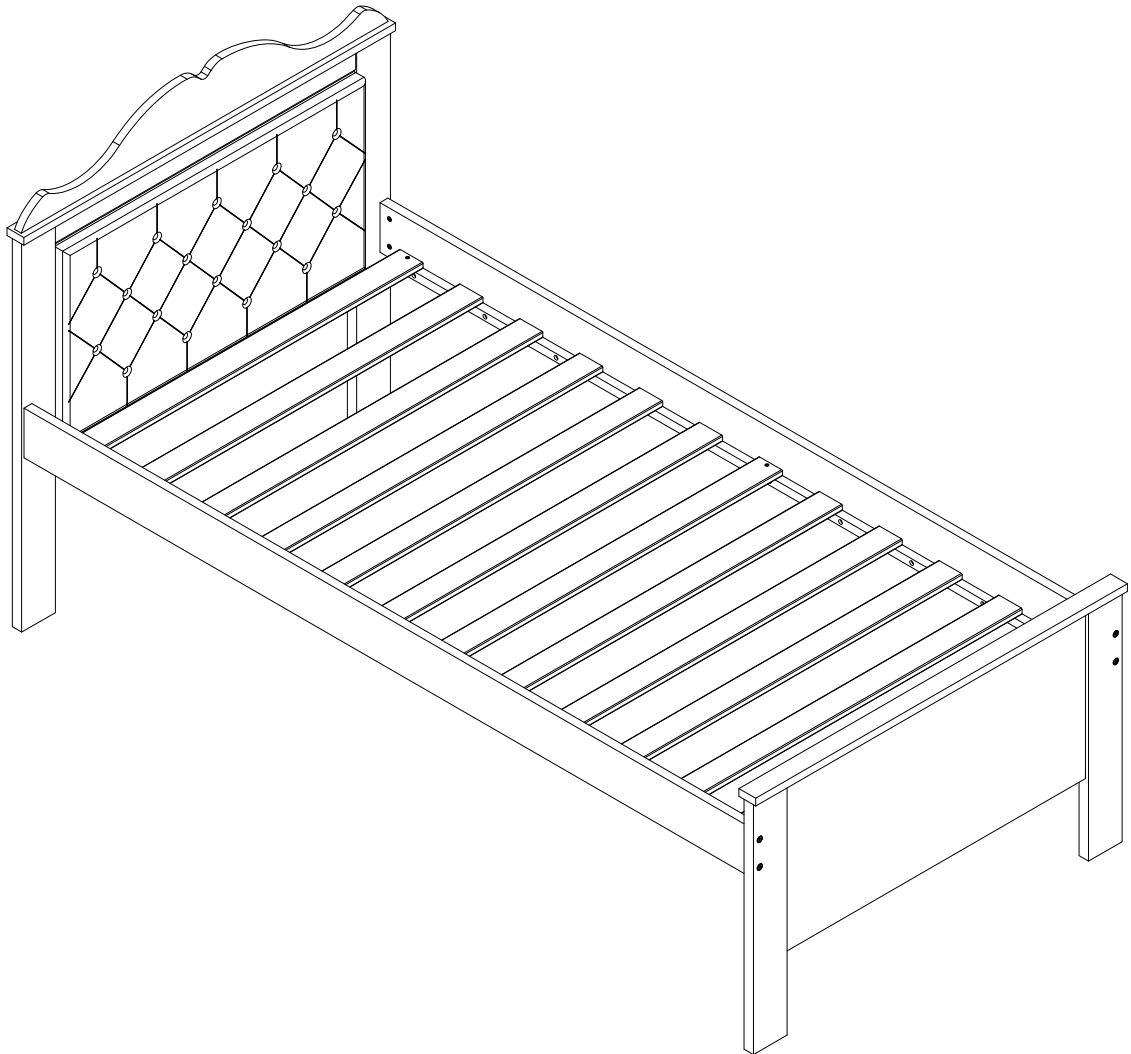
MODEL : IQ16111W SINGLE BED (930 x 1930)MM

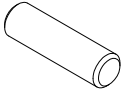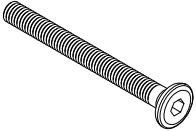


## HARDWARE LIST
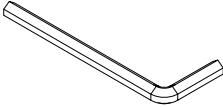
<b>A</b> <b>4 PCS</b>  PLASTIC DOWEL (M10 x 35MM)	<b>B</b> <b>8 PCS</b>  JCBC BOLT (M6 x 60MM)	<b>C</b> <b>8 PCS</b>  JRN NUT (M6 x 13MM)
<b>D</b> <b>6 PCS</b>  CSK C/B SCREW (M4 x 32MM)	<b>E</b> <b>1 PC</b>  ALLEN KEY (M4 x 60MM)	 <p>Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.</p> <p><b>Tools Required :</b> Crosshead Screw Driver</p>


## PART LIST

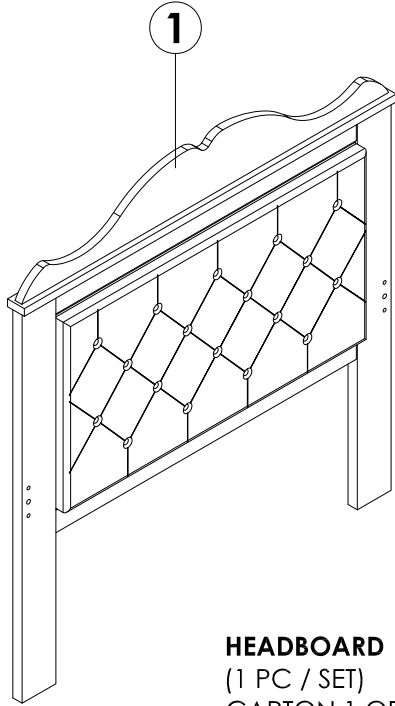


**HEADBOARD**  
(1 PC / SET)  
CARTON 1 OF 2

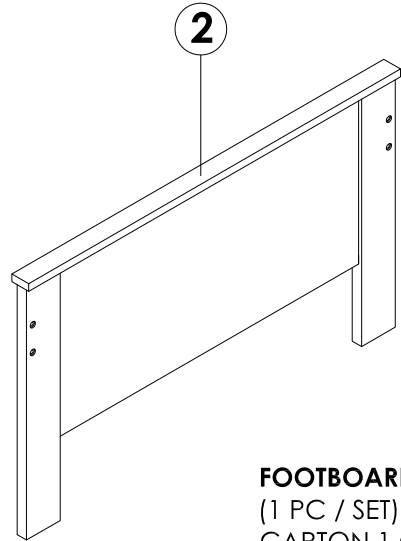


**FOOTBOARD**  
(1 PC / SET)  
CARTON 1 OF 2

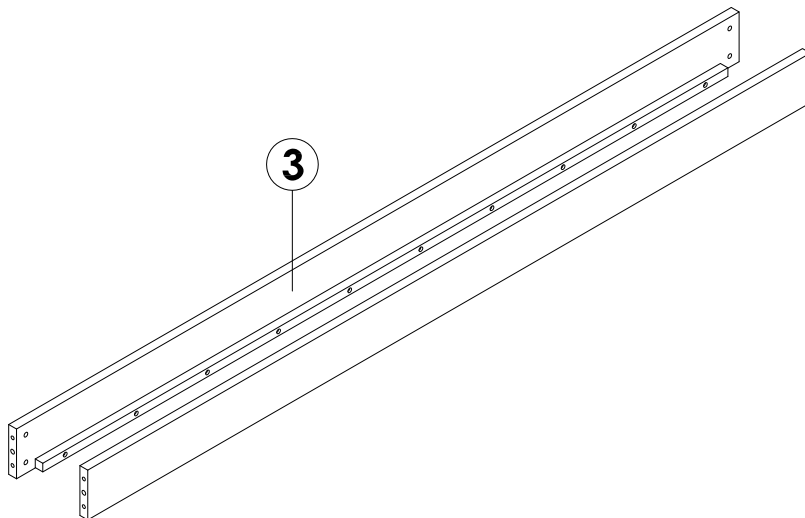

**SIDE RAIL**  
(2 PCS / SET)  
CARTON 2 OF 2

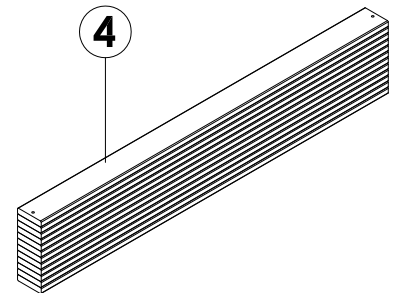


**WOODEN SLAT**  
(12 PCS / SET)  
CARTON 1 OF 2

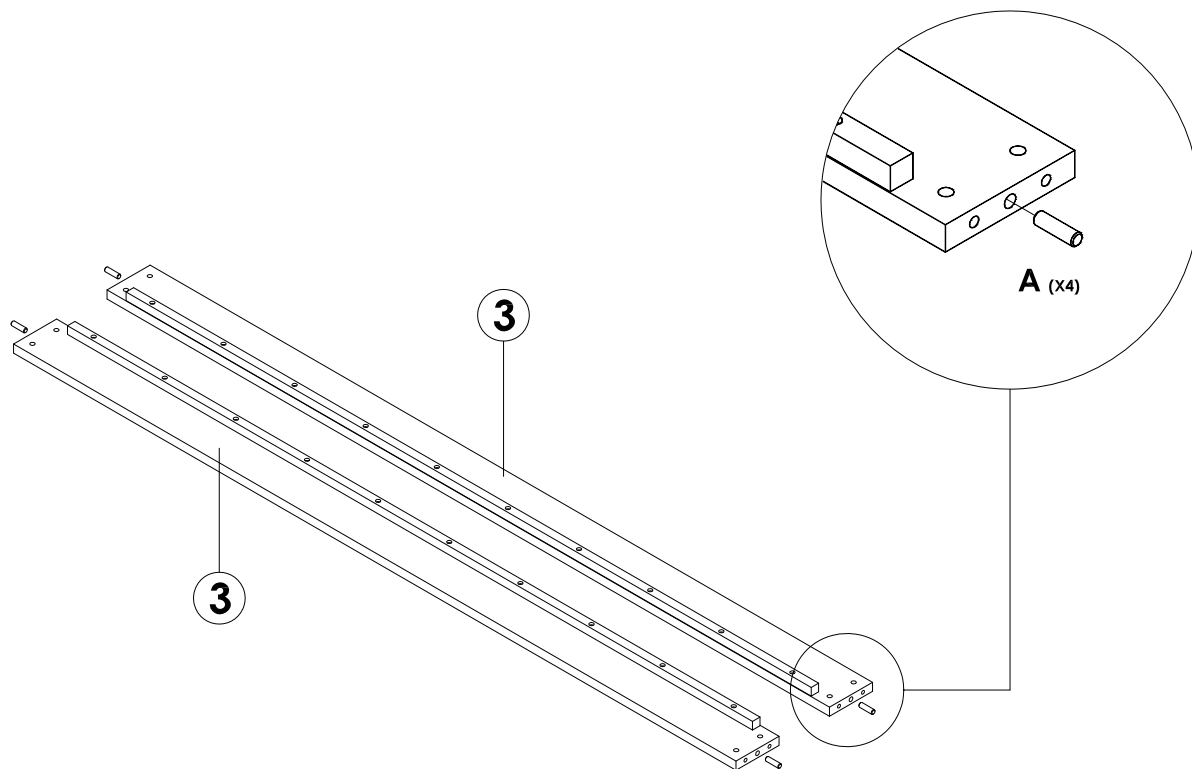


### STEP 1

Insert **(A)** into Ø10MM holes on **Side Rail** by using a Rubber Hammer.

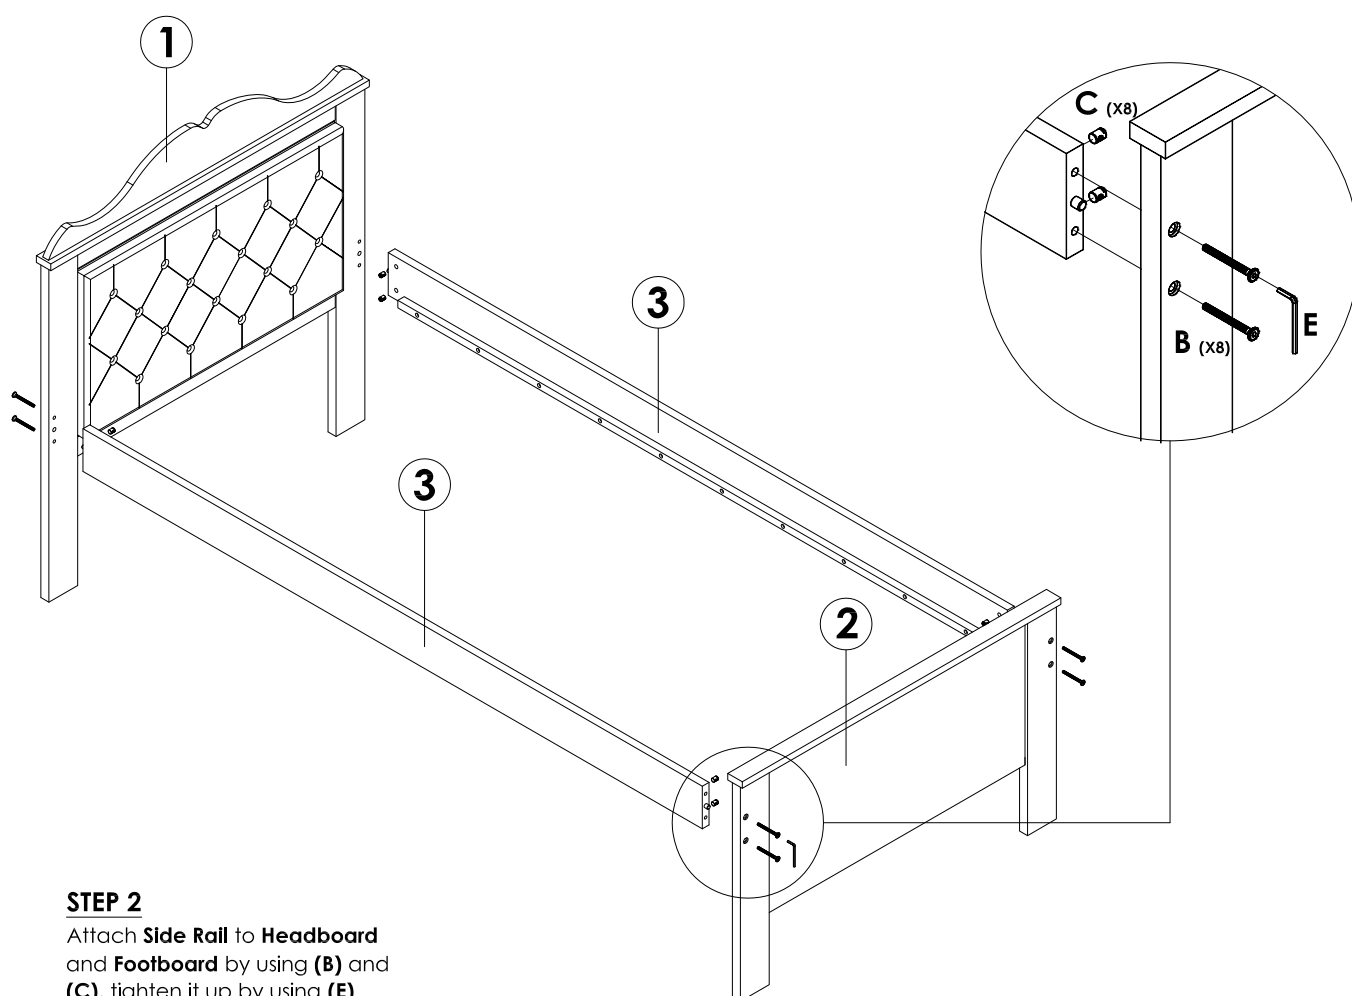

### STEP 2

Attach **Side Rail** to **Headboard** and **Footboard** by using **(B)** and **(C)**, tighten it up by using **(E)**.

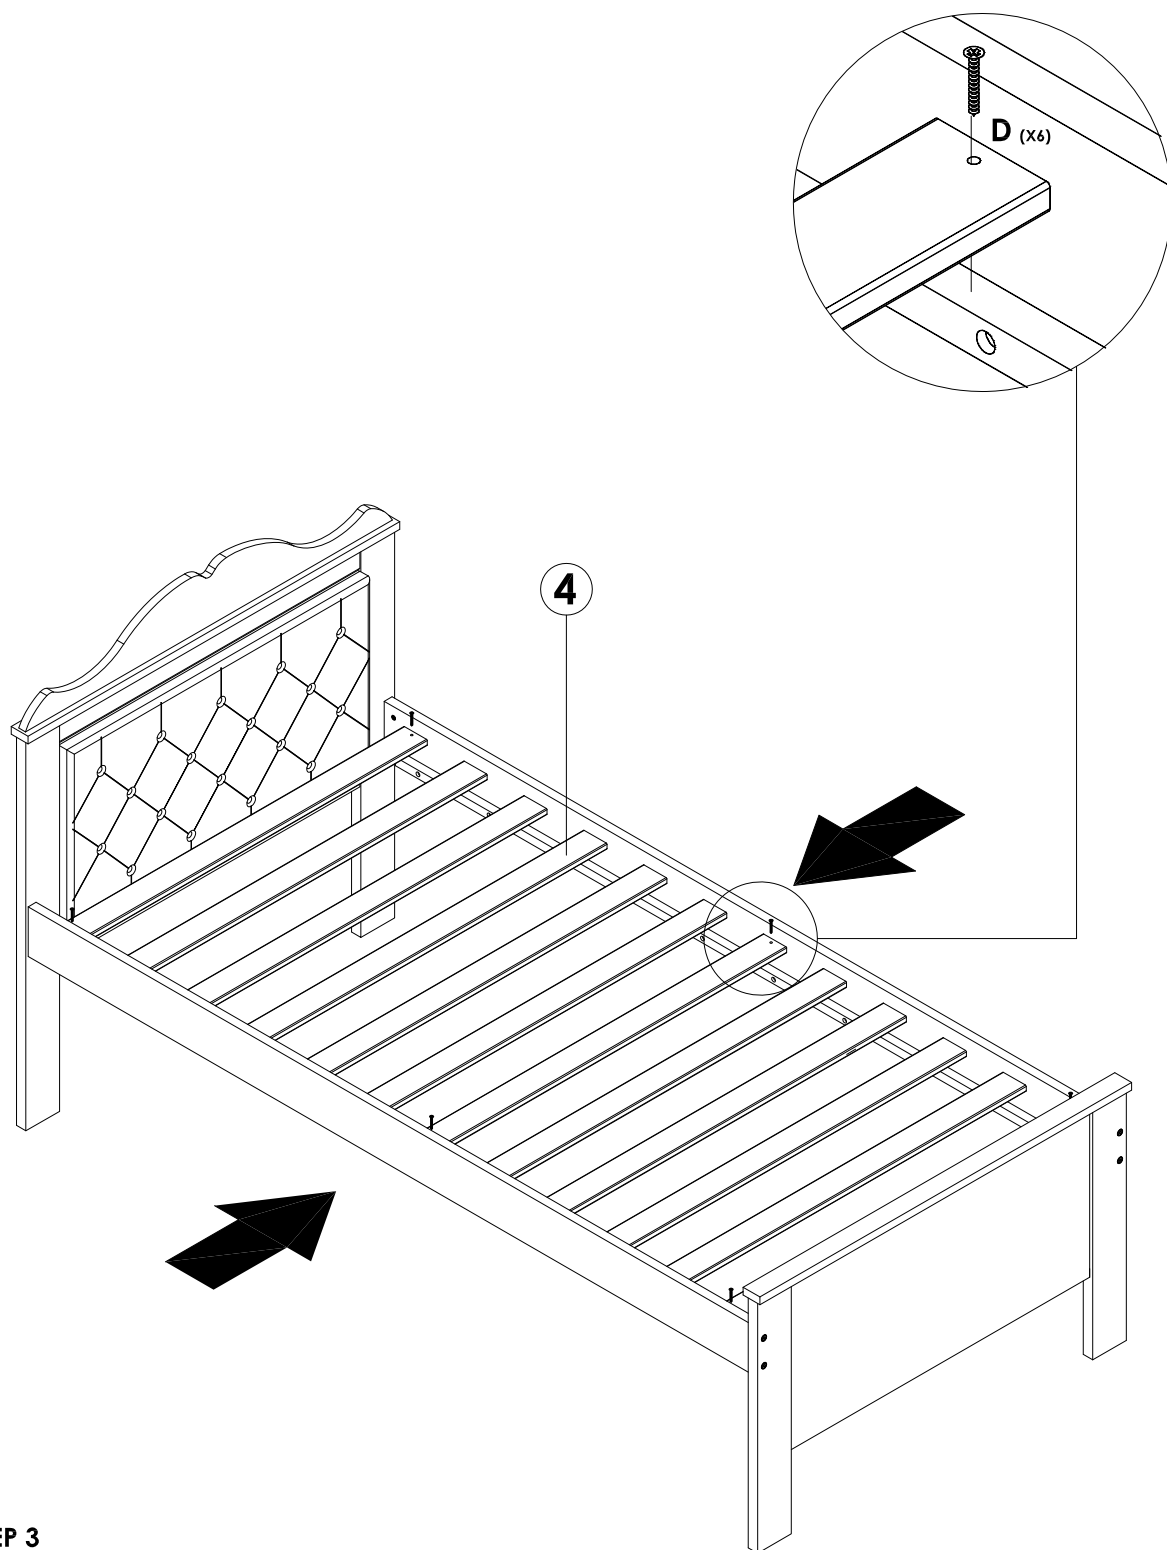

### STEP 3

Attach **Wooden Slat** onto **Side Rail** by using **(D)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the assembly.

\* Align both **Side Rail** before tightening the screws.