



Version 1.0



# DAYTONA

Office Chair

[www.fantasticfurniture.com.au](http://www.fantasticfurniture.com.au)

**CAUTION:**

Do not stand on, or use this product as a step ladder.  
Use this product for seating one person at a time.  
This product should be checked periodically to ensure all  
components are secure and all hardware is tight.

**RECOMMENDED WEIGHT CAPACITY 120KG**

**Enjoy**

Your purchase from  
Australia's Best Value Furniture Store




**Note: Recommend weight capacity 120kg**


# Assembly checklist




Read through the instructions carefully before you begin.

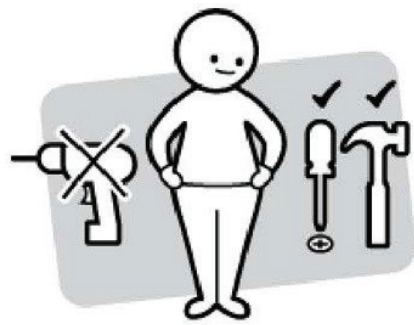

Make sure you have all the required tools. Never use power tools unless instructed.

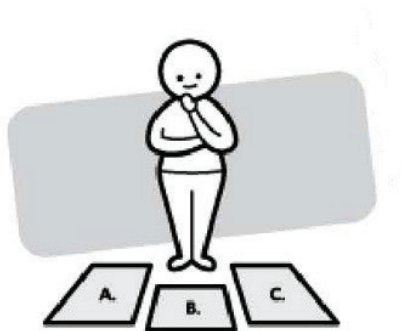

Identify and lay out all of the components before you begin assembly.

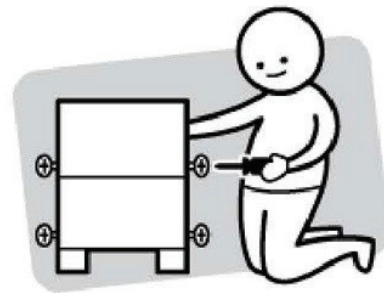

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

## What you need

to assemble the product



DO NOT USE

### Other tools you need

N/A

#### Part list

Box 1: Backrest(P1) X1;

Left Arm(P2) X1;

Right Arm(P3) X1;

Seat(P4) X1;


Seat Plate(P5) X1;

Gas Lift Cover(P6) X1;

Gas Lift(P7) X1;

Star Base(P8) X1;

Castor(P9) X5

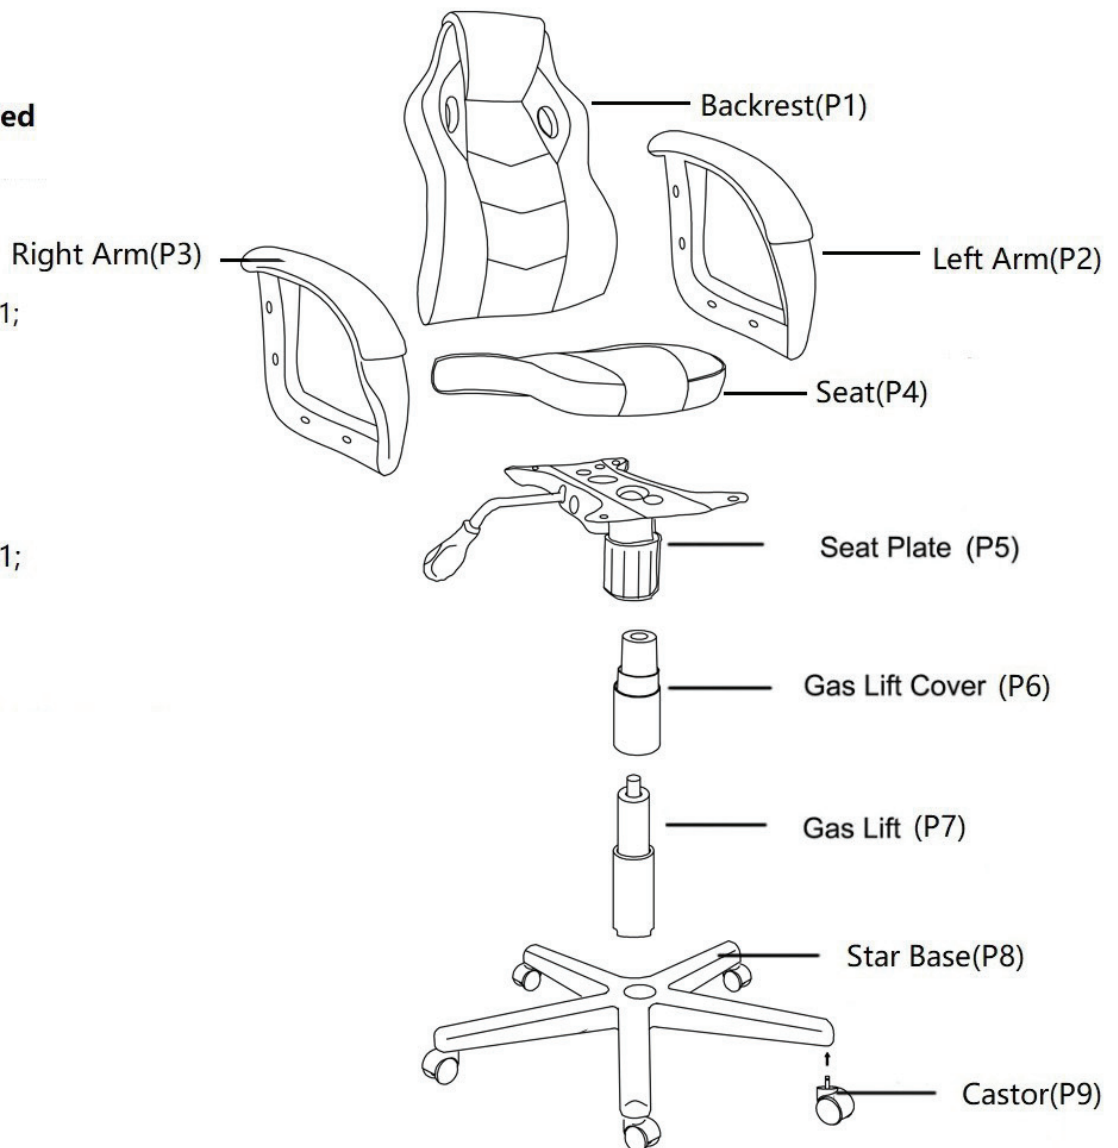

2 x Small Bolts  
(H1)



10 x Large Bolts  
(H2)




8 x Plastic Covers  
(H3)



Allen Key

# Step 1

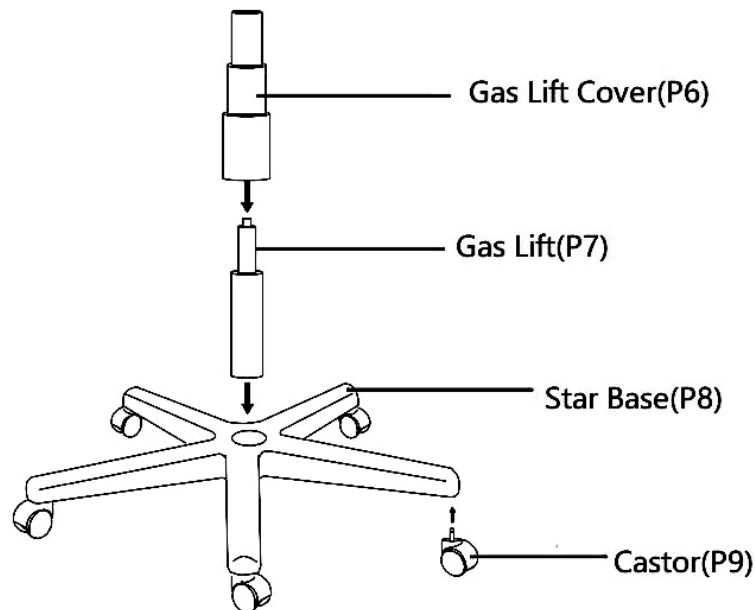





Insert 5x Castors(P9) into the Star Base (P8) as shown. Push down firmly on each castor to ensure they are fixed in position.

Insert the Gas Lift(P7) into the top of Star Base(P8).

Place the Gas Lift Cover (P6) over the top of the Gas Lift (P7) as shown.

# Step 2


You will need	
	
2x Small Bolts (H1)	Allen Key
	
2x Large Bolts (H2)	

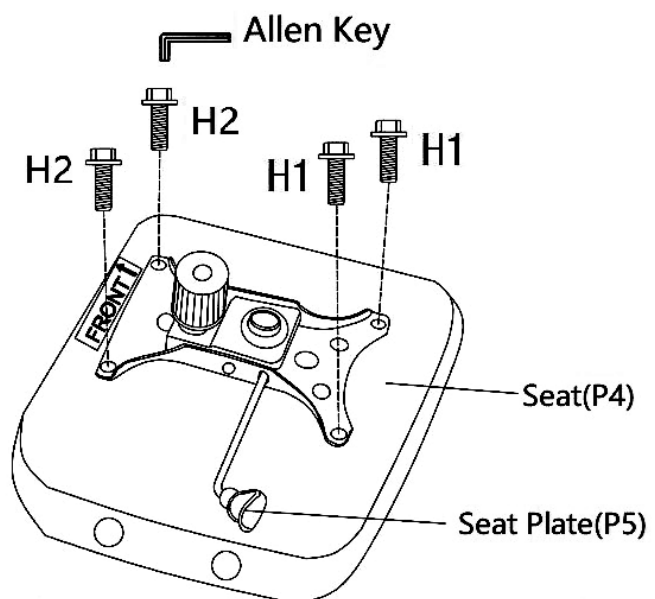

Align the holes on the Seat Plate (P5) with the bottom of the Seat (P4) and use Allen Key to fasten 2 x Small Bolts (H1) at the back of the Seat Plate (P4) and 2 x Large Bolts (H2) to the front of the Seat Plate (P4). Ensure the front of the Seat Plate (P5) is in the correct direction before securing to the base of the Seat (P4).




## Step 3

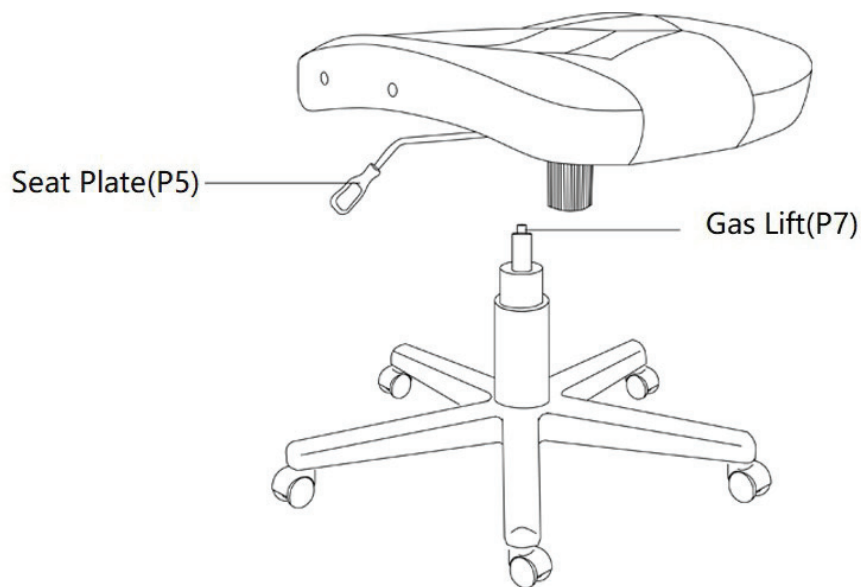

Position the centre hole of the Seat Plate(P5) over the top of Gas Lift(P7).  
Carefully lower the Seat(P4) onto the Gas Lift (P7). Press seat down firmly.  
Check the connection is secure before sitting in the chair.

## Step 4


You will need	
	
4 x Large Bolts (H2)	Allen Key

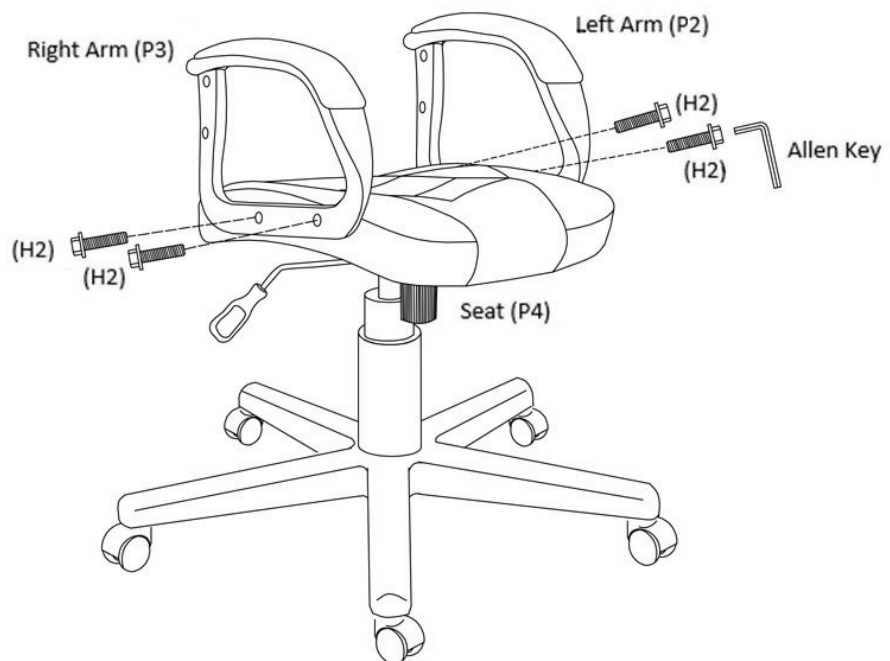

Attach the Left and Right Arms (P2&P3) to each side of the Seat (P4) by fastening 4 x Large Bolts (H2) with the Allen Key. Ensure each arm is firmly secured.

# Step 5


You will need	
	
2x Large Bolts (H2)	Allen Key

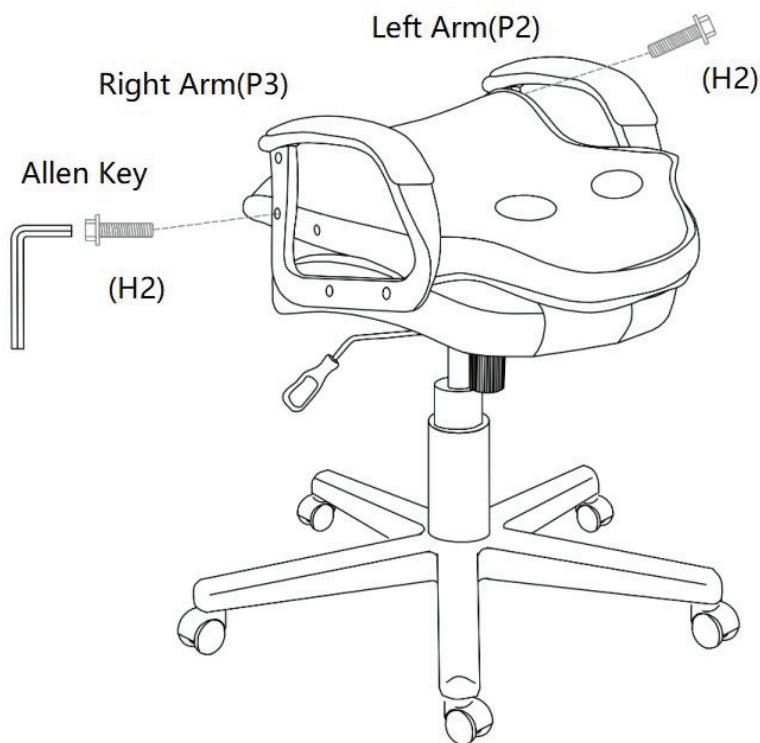

Lay Backrest (P1) flat on top of Seat (P4) as shown. Attach Backrest (P1) to the Right & Left Arms (P2&P3) by fastening 2 x Large Bolts (H2) with the Allen Key as shown. Do not fully tighten the Bolts.


# Step 6


You will need	
	
2x Large Bolts (H2)	Allen Key

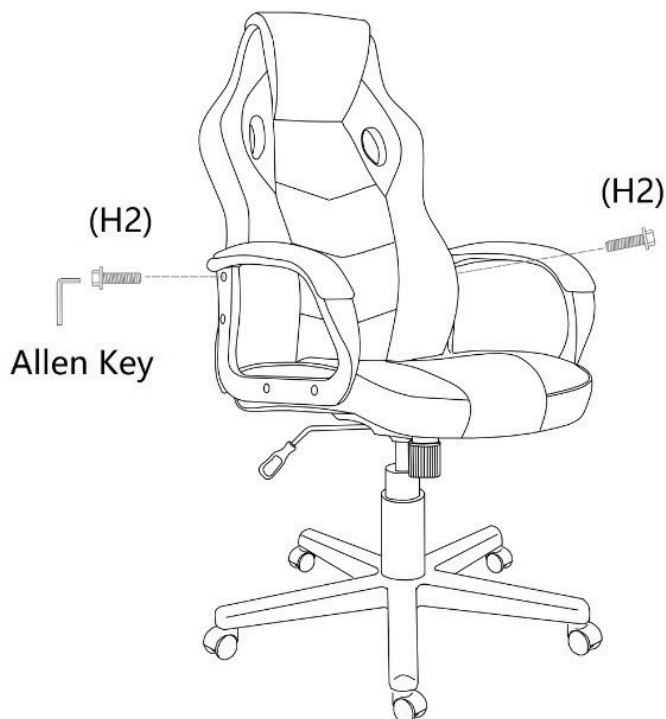

Gently lift up Backrest (P1) to the vertical position. Secure Backrest (P1) to the Right & Left Arms (P2 & P3) by fastening 2 x Large Bolts (H2) with the Allen Key as shown. Tighten all Bolts and ensure they are fully secure.

# Step 7

You will need	
	
8x Plastic Covers (H3)	

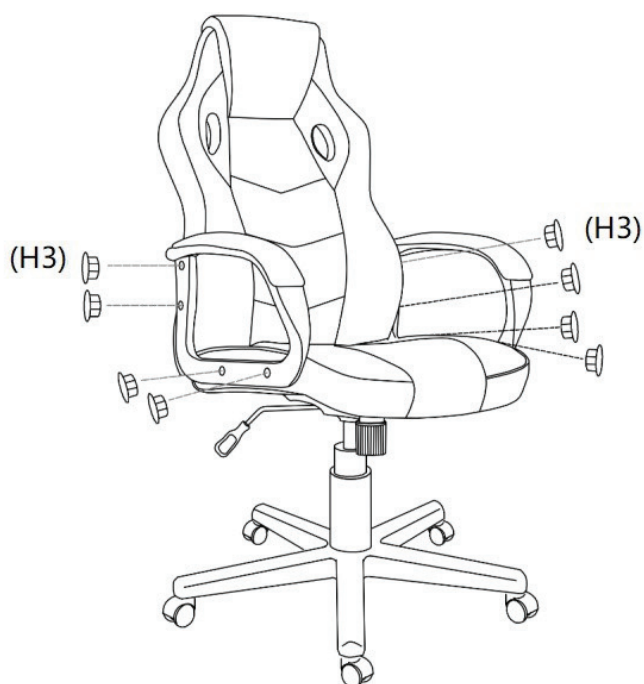

Insert the Plastic Caps (H3) into the Left & Right Arms (P2&P3) as shown. Push firmly to secure into place.



**Job Complete!**

In the interest of our environment please dispose of all packing thoughtfully.