

# HEQS Wholesale group

## Assembly Instructions

### Redfern Tech TV Unit





LAYOUT OF PARTS								
TOOLS NEEDED								
				Screwdriver				Hammer
HARDWARE CHECK								
HARDWARE	CODE	QTY	DESCRIPTION & APPLICATION	HARDWARE	CODE	QTY	DESCRIPTION & APPLICATION	
	001	20	Cam		008	20	Backing Board Nail	
	002	20	Cam Bolt		009	3	Door Handle	
	003	22	Cork $\Phi 8 \times 40$		010	6	Screw M4 $\times 20$	
	004	4	Cork $\Phi 8 \times 30$		011	3	Metal Draw Runner	
	005	4	Cork $\Phi 8 \times 50$		012	6	Metal Foot	
	006	36	Screw M4 $\times 14$					
	007	18	Draw Runner Screw		013	20	Screw M4 $\times 30$	

#### Please follow these Assembly Instructions


This will save you time, make assembly easier and prevent possible damages to your furniture. Please note that correct assembly is your responsibility and our warranty does not cover damages as a result of incorrect assembly procedures.

We recommend that the unit is assembled on a soft surface such as carpet. Please make sure you have plenty of space for assembly and have a damp rug to clean the furniture if necessary. Please make sure that two people are available during assembly.


STEP 1

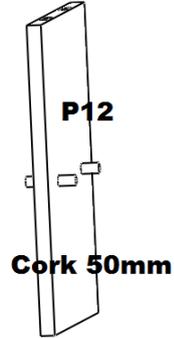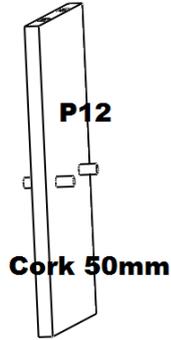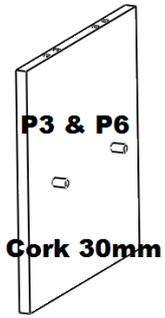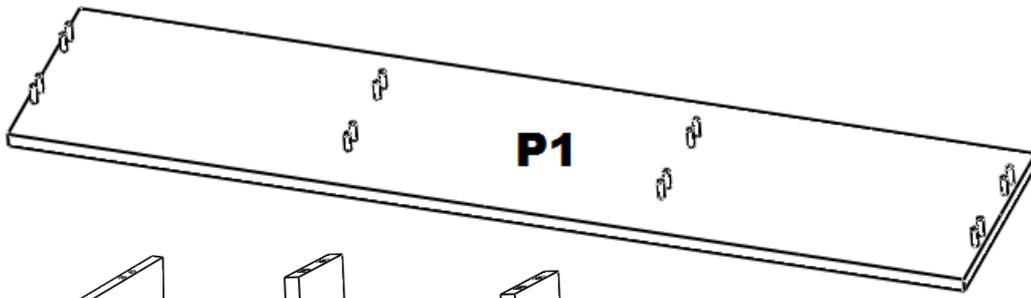

hardware	amount
	8
	4
	4
	8

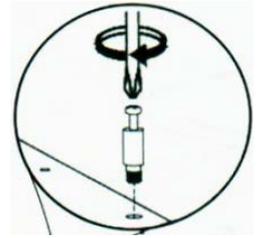


STEP 2


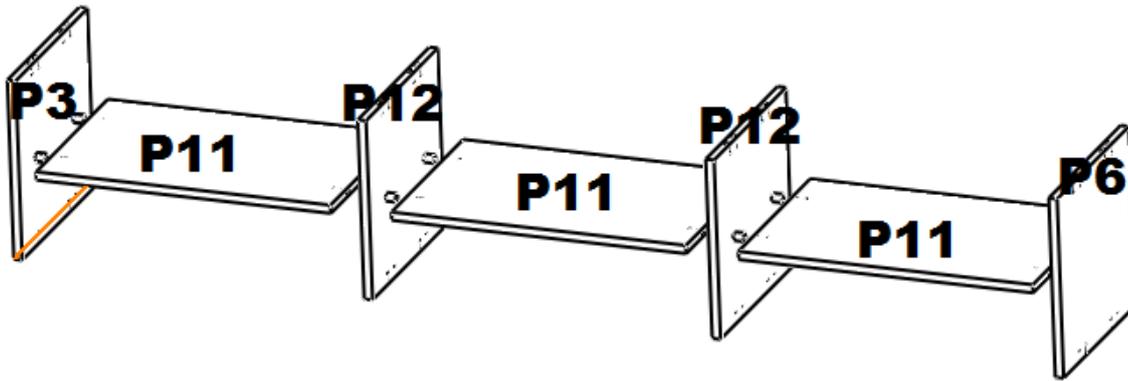


hardware	amount


STEP 3

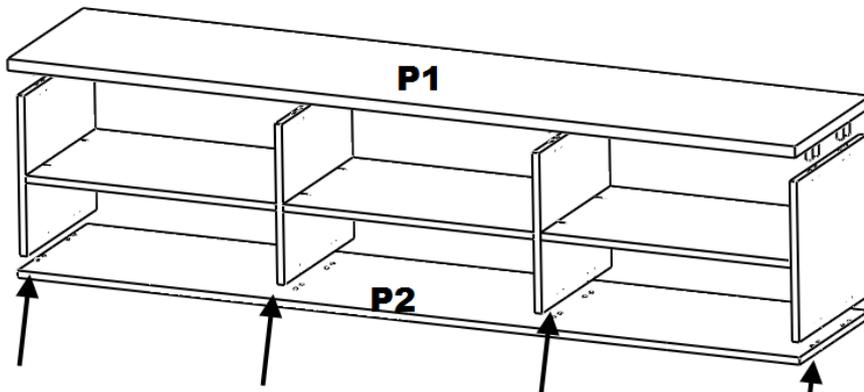


hardware	amount
	8
	8
	8


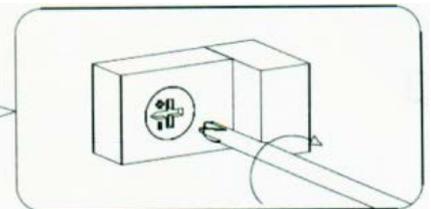
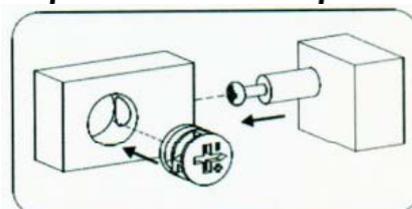


STEP 4

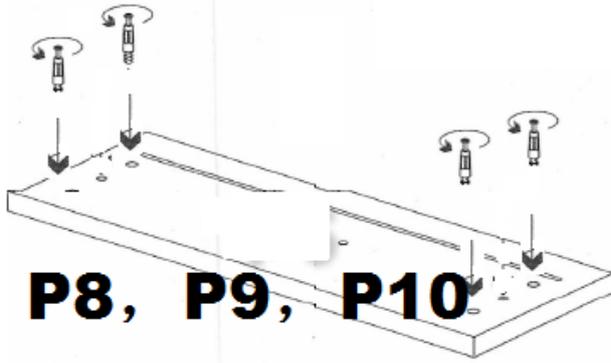


**P8, P9, P10**

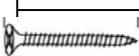
hardware	amount
	4×3
	4×3
	2×3
	1×3
	2×3
	4×3

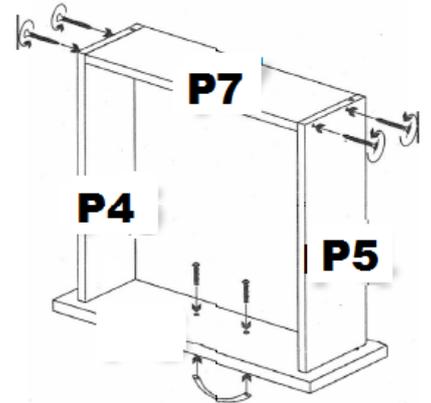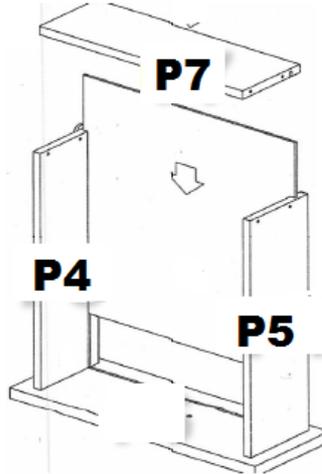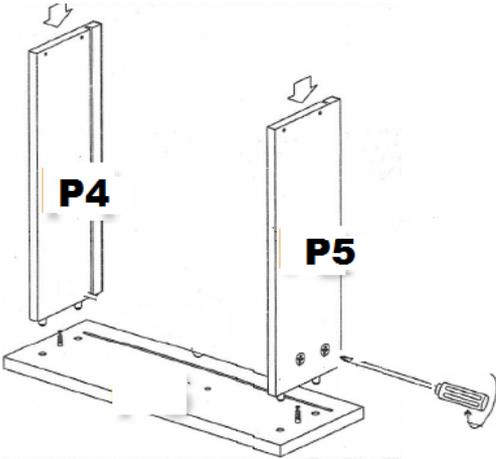


STEP 5

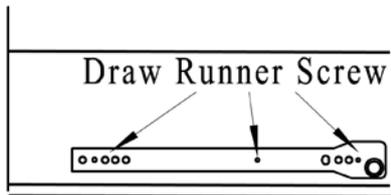


**P3,P12,P12,P6**

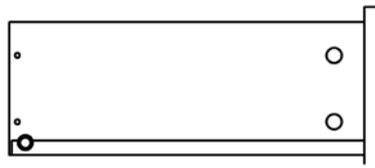



M4 Screw

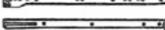hardware	amount
	3×4
	3×4
	1×3

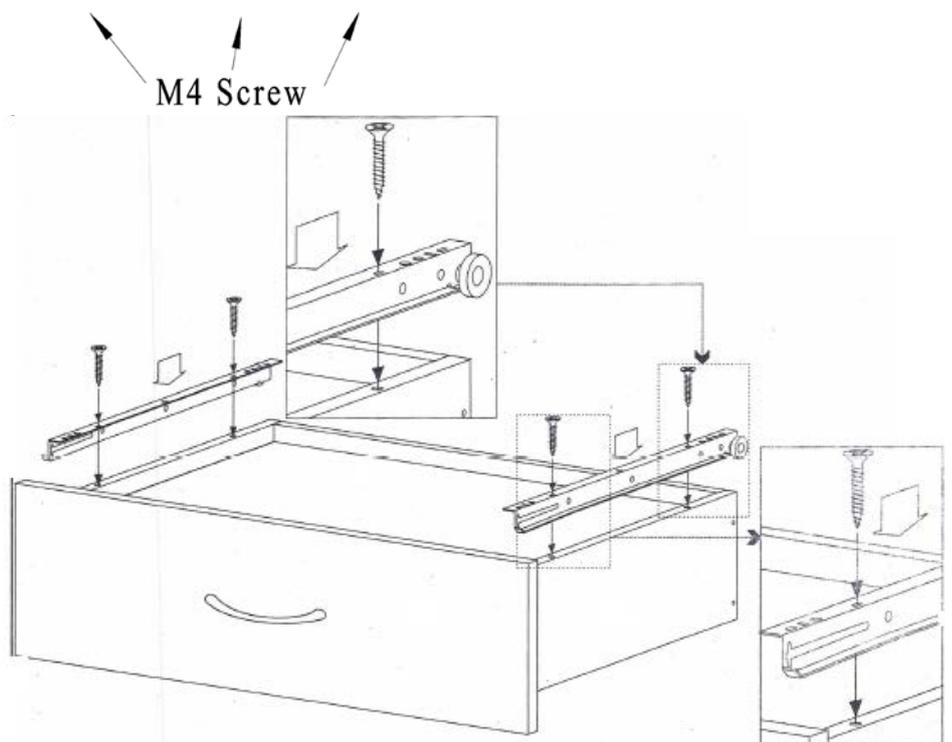


STEP 6

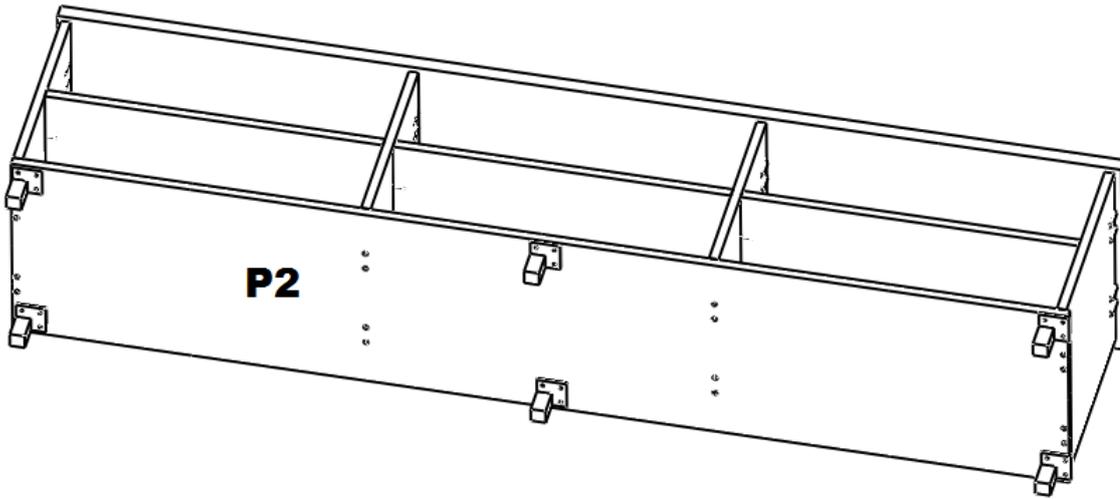

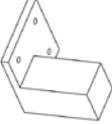hardware	amount
	18
	6

STEP 7

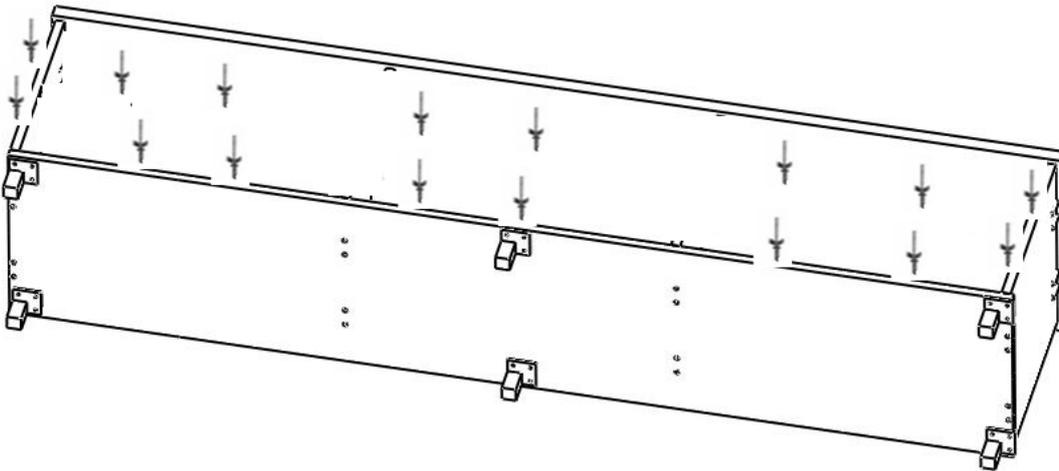

hardware	amount
	20

STEP 8

hardware	amount