


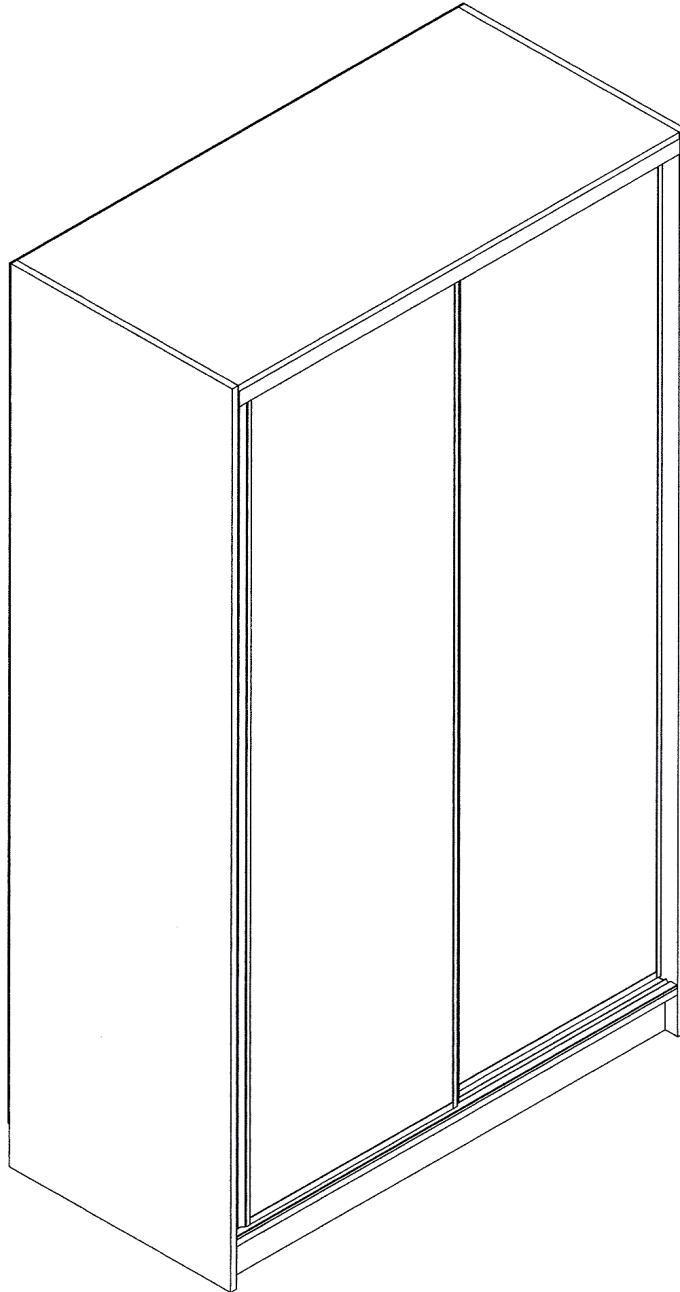

**Fantastic  
Furniture**

Version 1.0



**Two People**



**Required**

**Aussie  
made!**

# Home Robe

**2 Door 1200mm White**

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)



## CAUTION

We recommend all units to be screwed to the wall using the wall brackets supplied.  
Consult your hardware specialist for which fastener is recommended.

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



# Fantastic Furniture

## Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!  
[@fantasticfurniture](https://www.instagram.com/fantasticfurniture)




Fantastic  
Furniture

# Assembly checklist




Read through the instructions carefully before you begin.

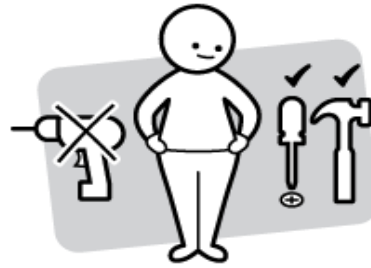

Make sure you have all required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

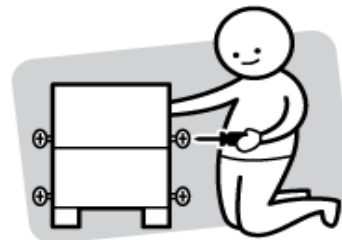

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

! Please see page 2 for any safety requirements or weight restrictions.



# What you need

to assemble the product




DO NOT USE



Other tools you need:  
Phillips Head Screwdriver

## Parts list

- 2 x Kickboards (P1)
- 2 x Back Panels (P2)
- Bottom Panel (P3)
- Left Side Panel (P4)
- Right Side Panel (P5)
- Division Panel (P6)
- Shelf Panel (P7)
- Top Rail (P8)
- Top Panel (P9)

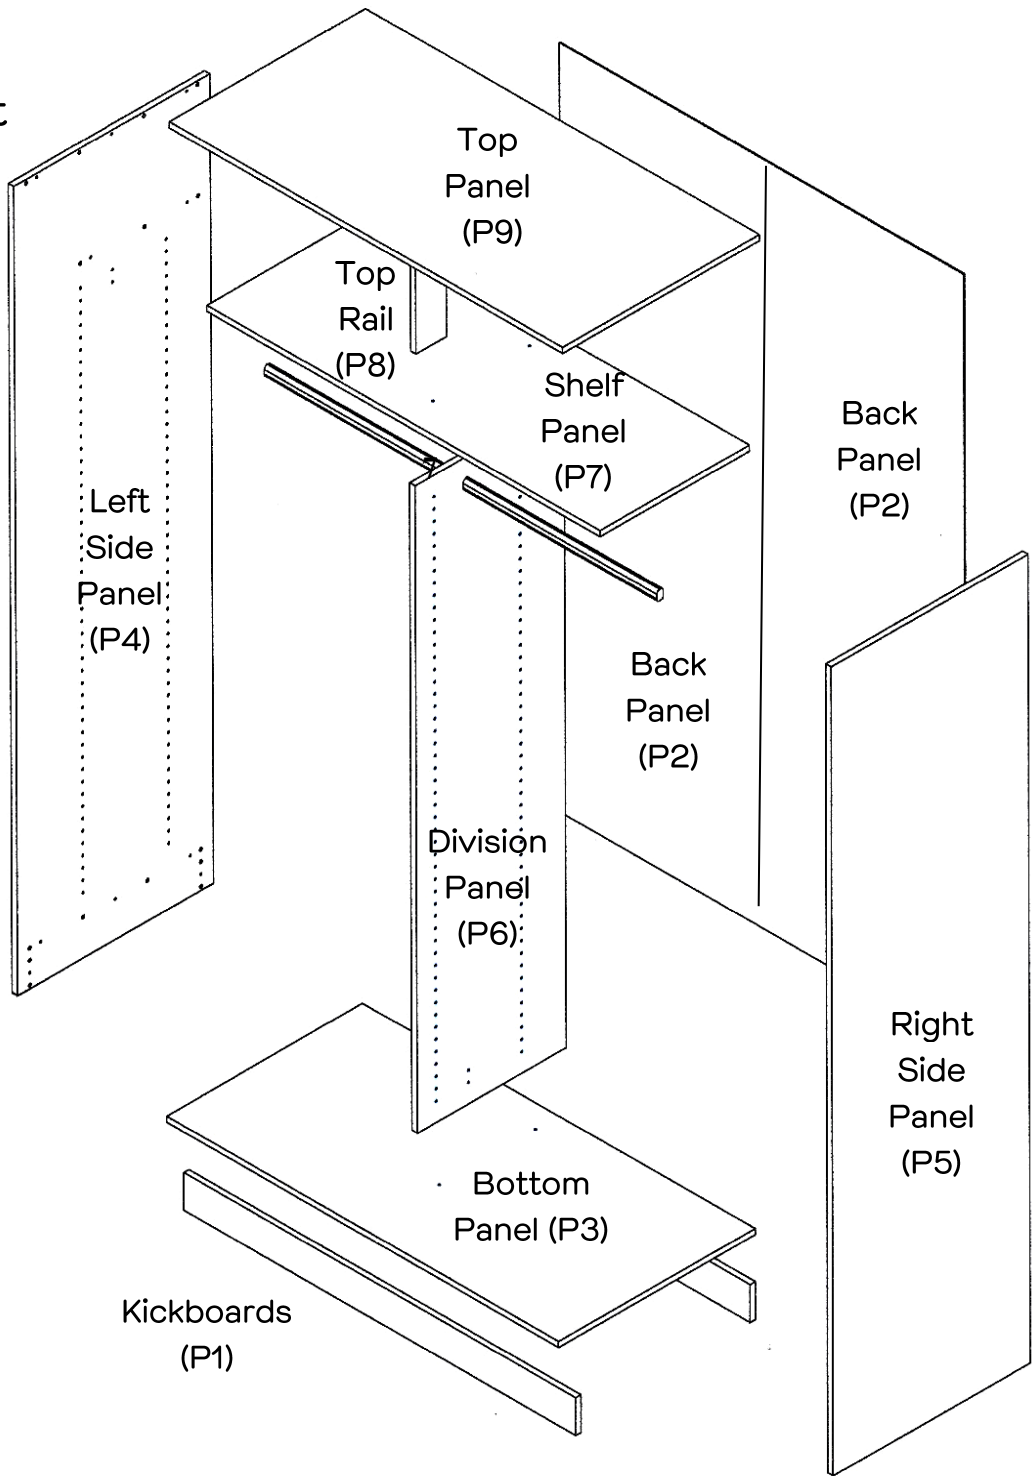

## Hardware pack




2 x Fittings  
TZ (H1)




4 x Hanging Rail  
Brackets (H2)



2 x Hanging Rails  
(H3)

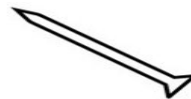

50 x Nails  
(H4)

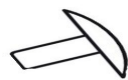

20 x Confirmat Screw  
Caps (H5)



24 x Confirmat Screws  
(H6)



2 x 28mm Nib  
Screws (H7)



6 x Track Screws  
(H8)




4 x Bracket  
Screws (H9)



2 x Wall Fixing Brackets  
(H10)

# Step 1


| You will need  |   |
|--|---|
|  |  |
| 2 x TZ Fittings<br>(H1)  | Hammer  |

Two People



We recommend assembling the wardrobe in the intended room. Clear floor space if required.



The robe must be assembled facing down (edged panels down).

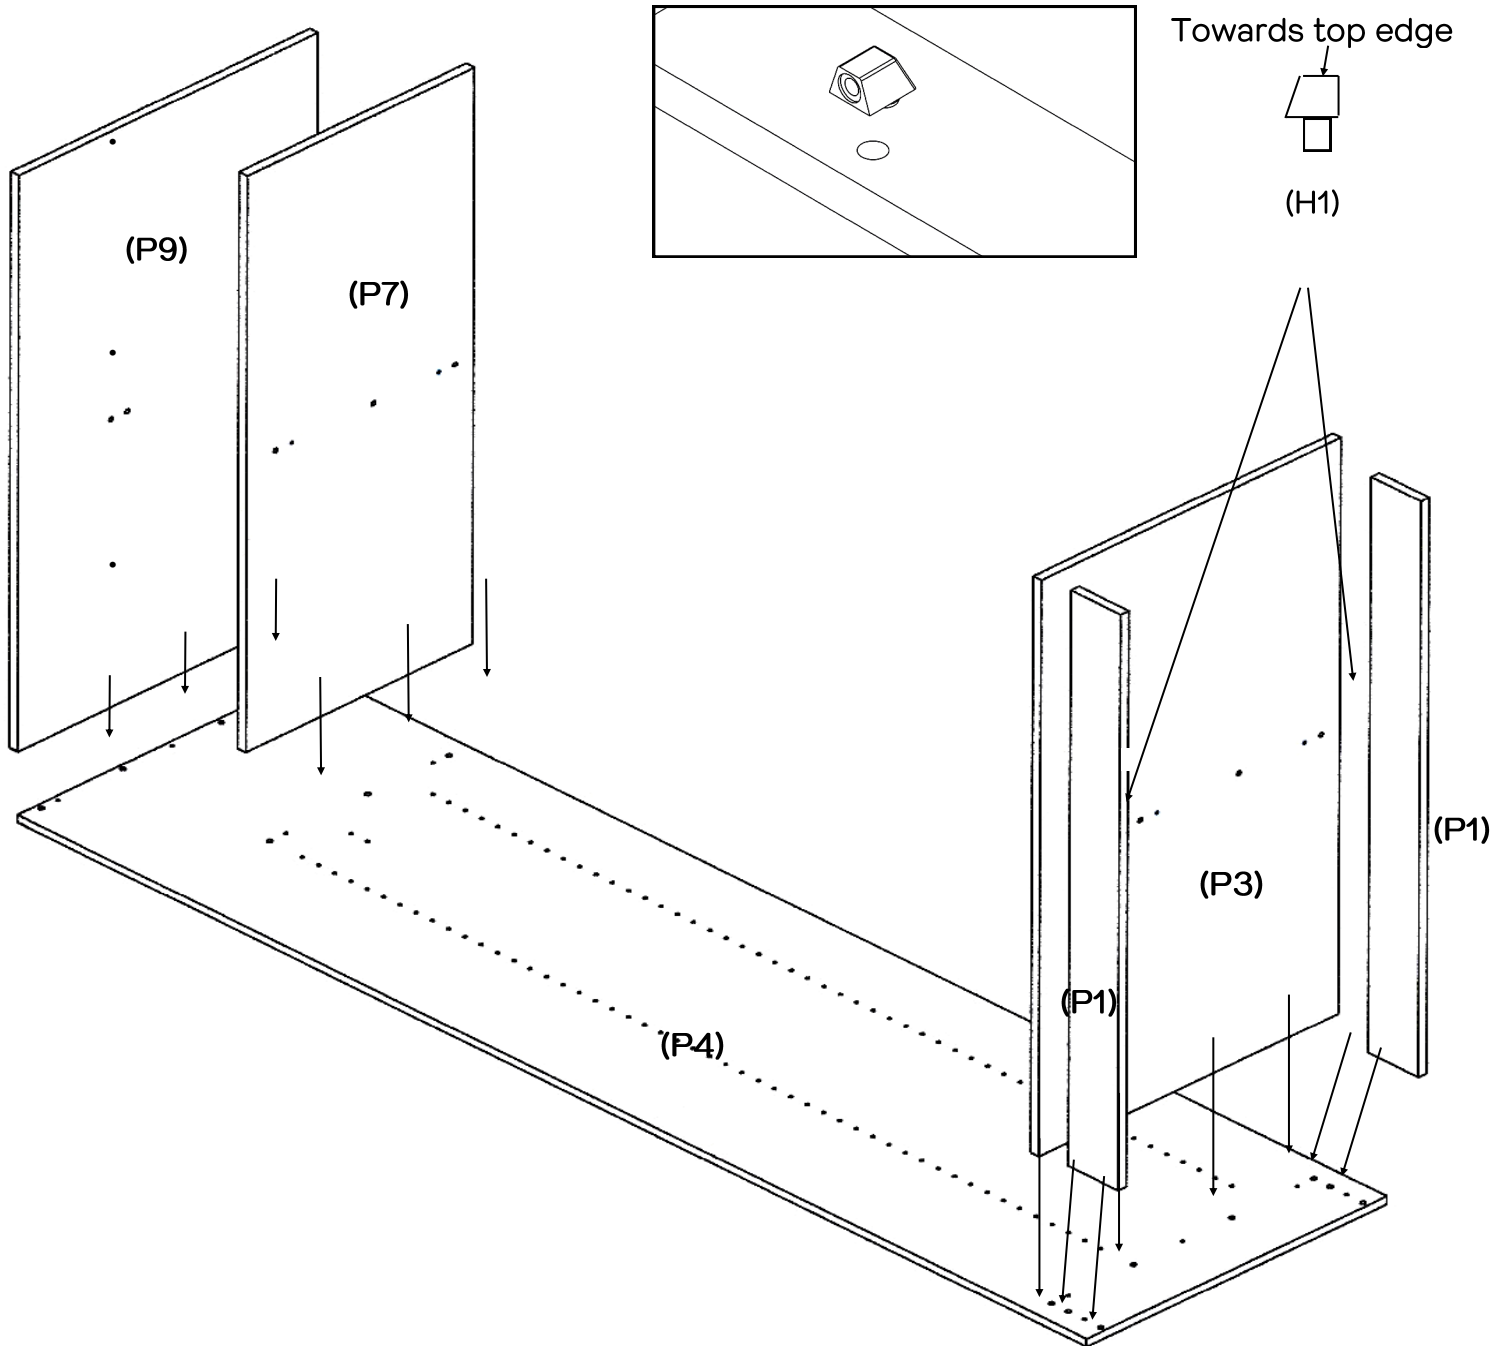

Insert 2 x TZ fittings (H1) into 2 x kickboards (P1) in the holes indicated using a hammer.


Align and attach top panel (P9), shelf panel (P7), bottom panel (P3) and 2 x kickboards (P1) to left side panel (P4) as shown.

## Step 2

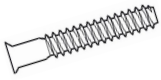


| You will need  |   |
|--|---|
|  |  |
| 2 x Confirmat Screws (H6)  | Phillips Head Screwdriver   |

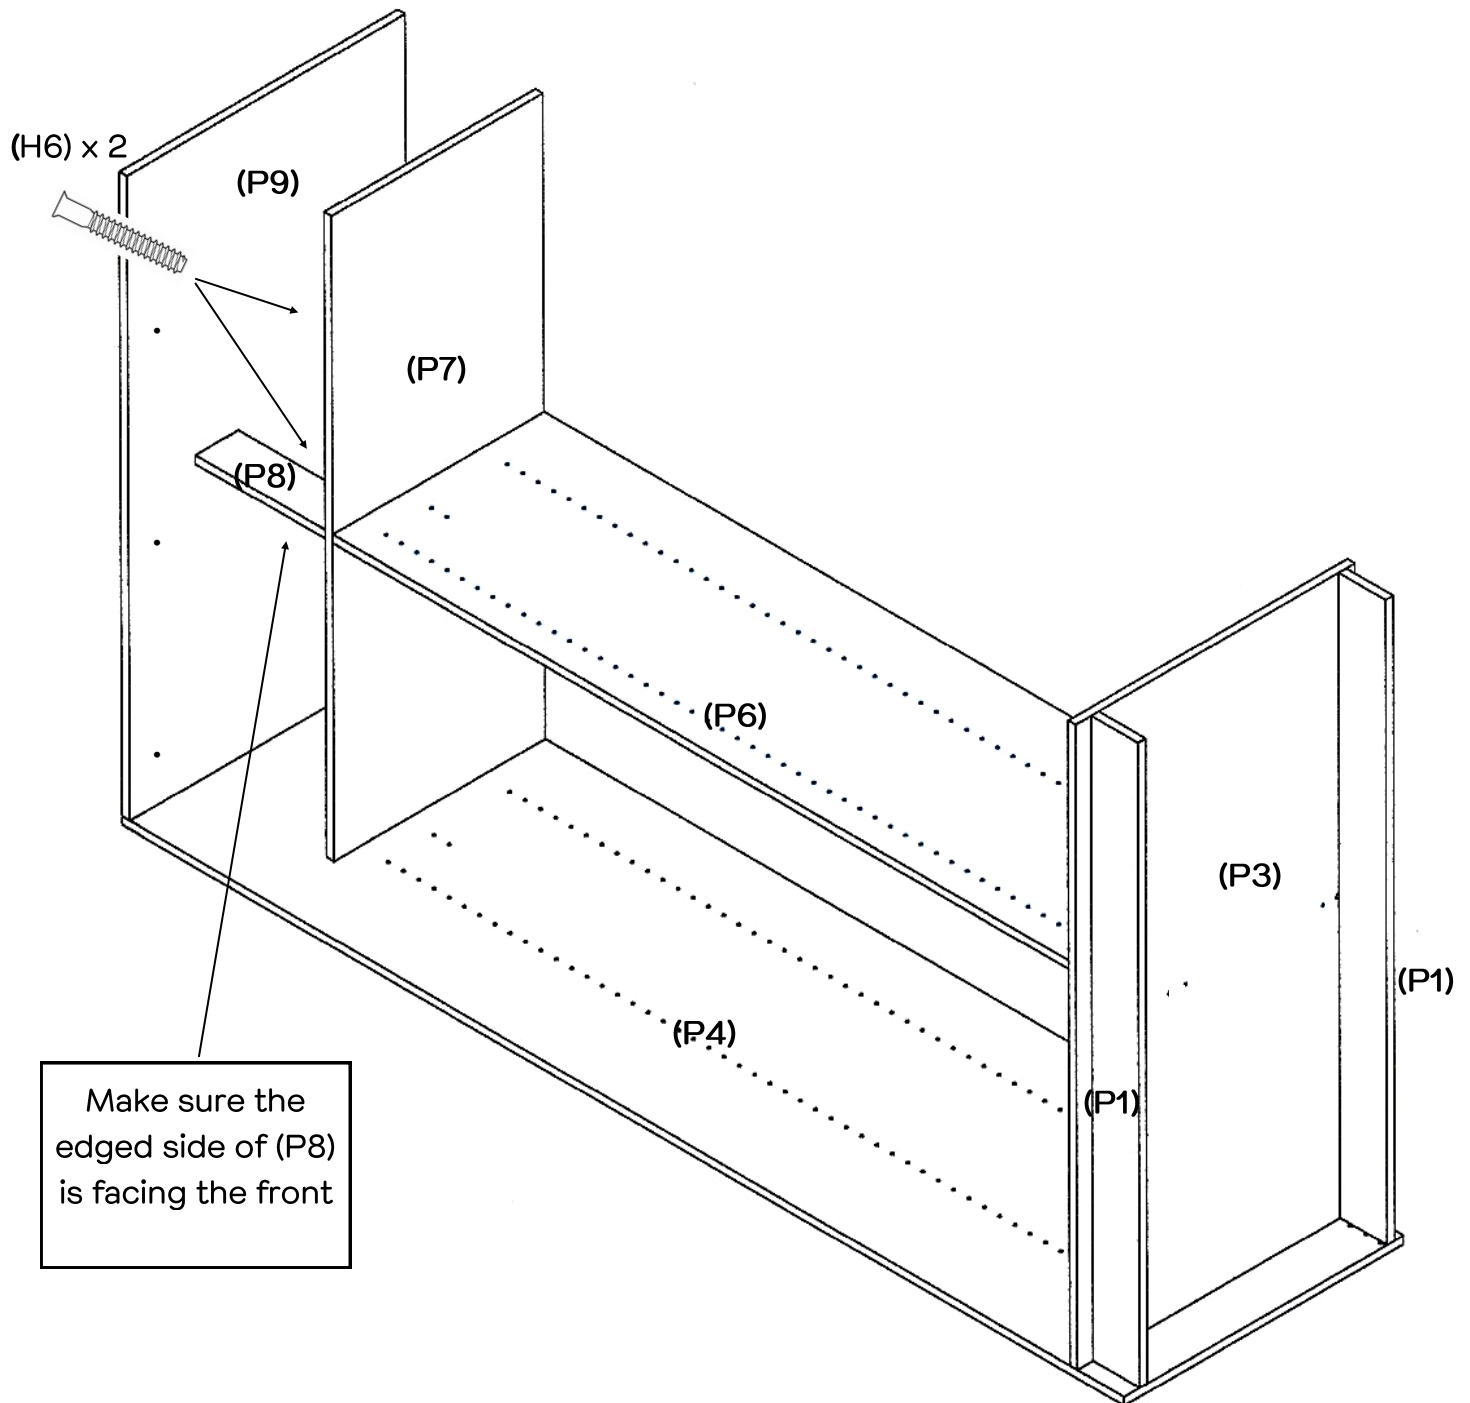

**Robe must be assembled  
front facing down  
(edged panels down)**

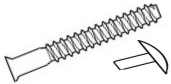


With assistance, insert division panel (P6) between the shelf panel (P7) and bottom panel (P3) as shown. Ensure the holes on division panel (P6) align with the holes on shelf panel (P7) and attach together by inserting 2 x confirmat screws (H6) through the shelf panel (P7), tightening using a phillips head screwdriver. Insert top rail (P8) between the top panel (P9) and top shelf panel (P7) as shown.

| You will need   |   |  |
|---|---|--|
|  |  |  |
| 22 x Confirmat Screws (H6) & 20 x Caps (H5)                                     | 2 x 28mm Nib Screws (H7)  | Phillips Head Screwdriver  |



**Robe must be assembled  
front facing down  
(edged panels down)**

## Step 3

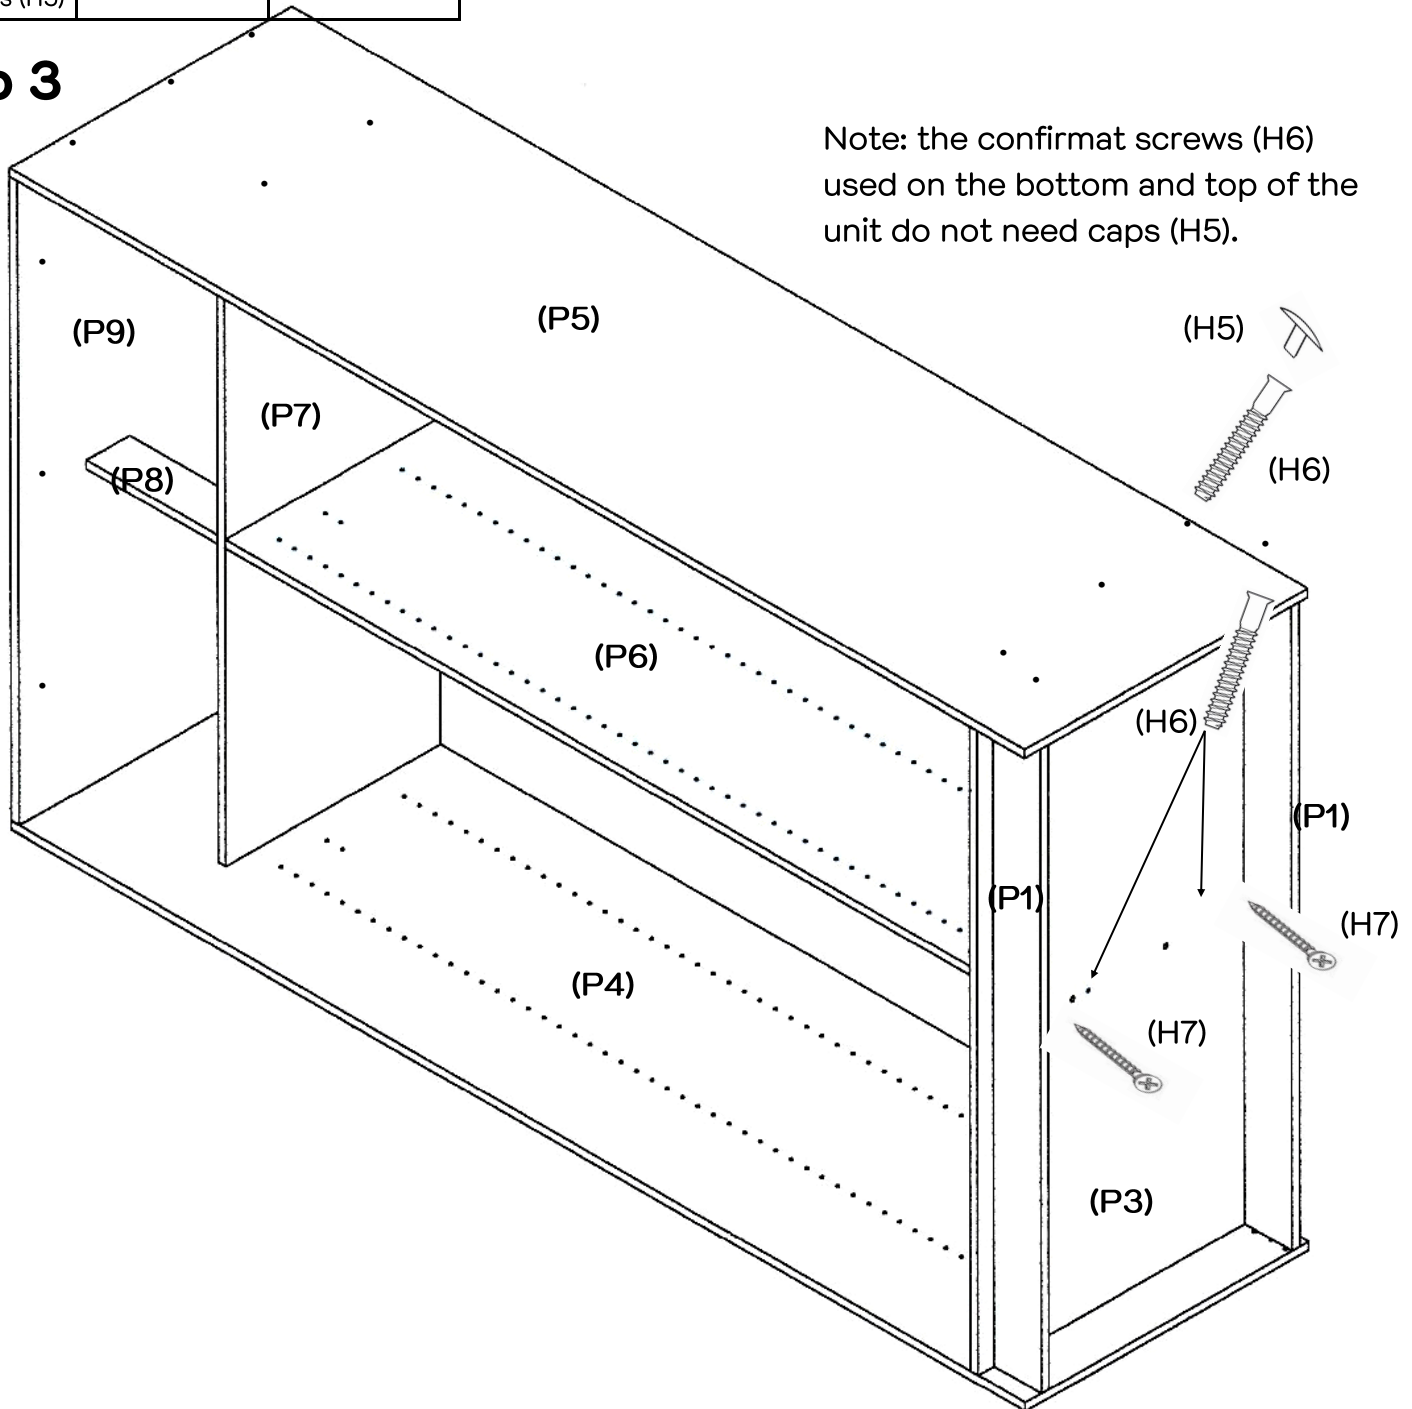

With assistance, align the right side panel (P5) onto the assembled frame as shown. Using 22 x confirmat screws (H6) and 20 x caps (H5), attach the right side panel (P5) to the frame, tightening using a phillips head screwdriver.

Attach 2 x kickboards (P1) to bottom panel (P3) using the 2 x tx fittings (H1) and 2 x 28mm nib screws (H7), tightening with a phillips head screwdriver.




## Step 4

| You will need  |   |
|--|---|
|  |  |
| 50 x Nails (H4)  | Hammer  |



**Robe must be assembled  
front facing down  
(edged panels down)**

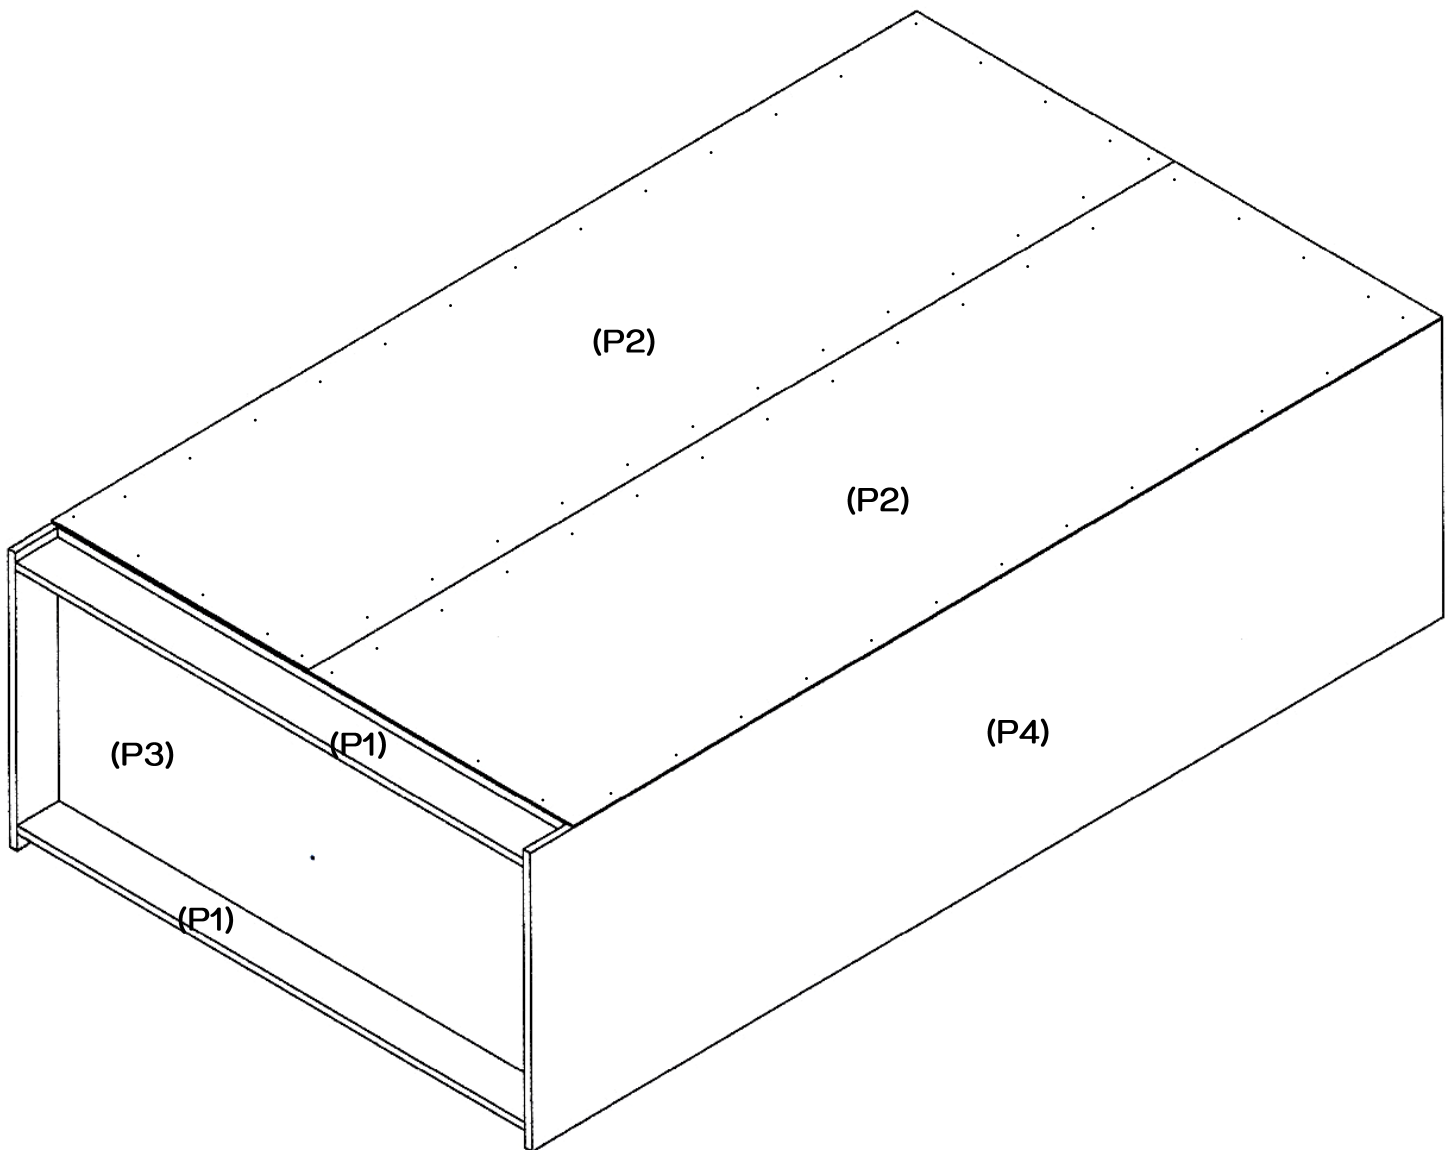

With assistance, carefully turn the unit onto it's front.

Ensure the unit is square and align 2 x back panels (P2) onto the assembled unit as shown.





Nail on the 2 x back panels (P2) using 50 x nails (H4), gently tapping with a hammer.


Ensure the nails are close to the edges so the nail (H4) goes through the board behind it.

Do not stand the unit upright until the back panels (P2) have been securely attached.



# Step 4

| You will need  |   |   |   |
|--|---|---|---|
|  |  |  |  |
| 4 x Hanging Rail Brackets (H2)   | 4 x Bracket Screws (H9)   | 2 x Hanging Rail (H3)   | Phillips Head Screwdriver   |

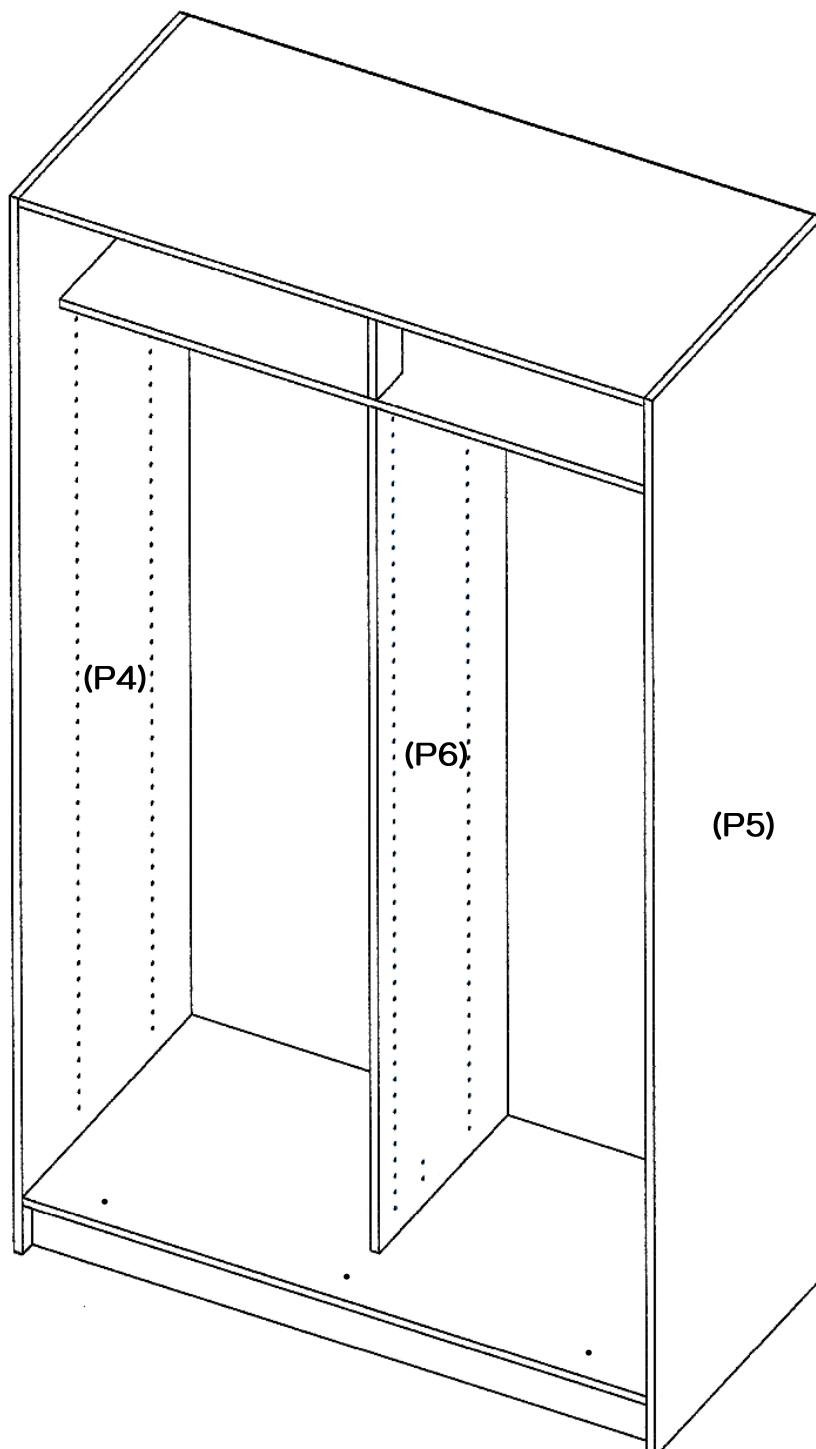

With assistance, carefully stand the unit upright.

Using the holes on the top of the division panel (P6) and left and right side panels (P4, P5), attach 4 x hanging rail brackets (H2) using 4 x bracket screws (H9) at the desired height. Tighten with a phillips head screwdriver.

Insert 2 x hanging rails (H3) into the brackets (H2).

# What you need

to assemble the product



DO NOT USE






Other tools you need:  
Phillips Head Screwdriver

## Parts list


2 x Sliding Doors (P10)  
Top Track (P11)  
Bottom Track (P12)
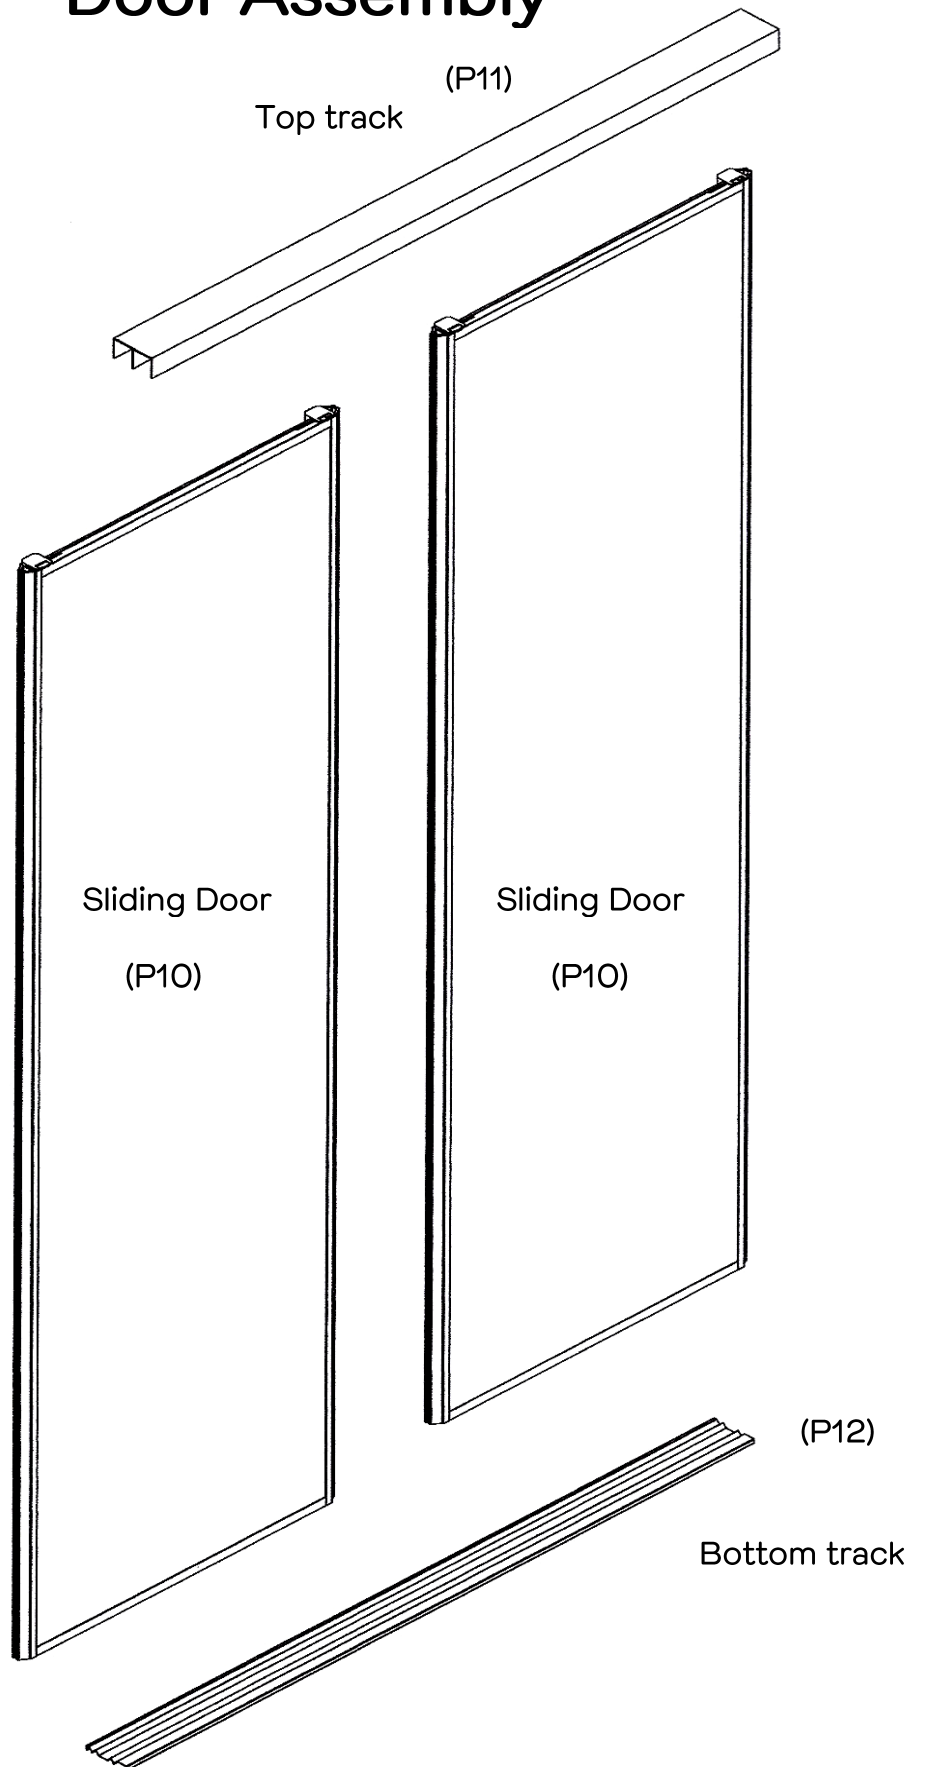
## Door Assembly



| You will need   |  |
|---|--|
|  |  |
| 6 x Track Screws (H8)   | Phillips Head Screwdriver  |


## Step 5

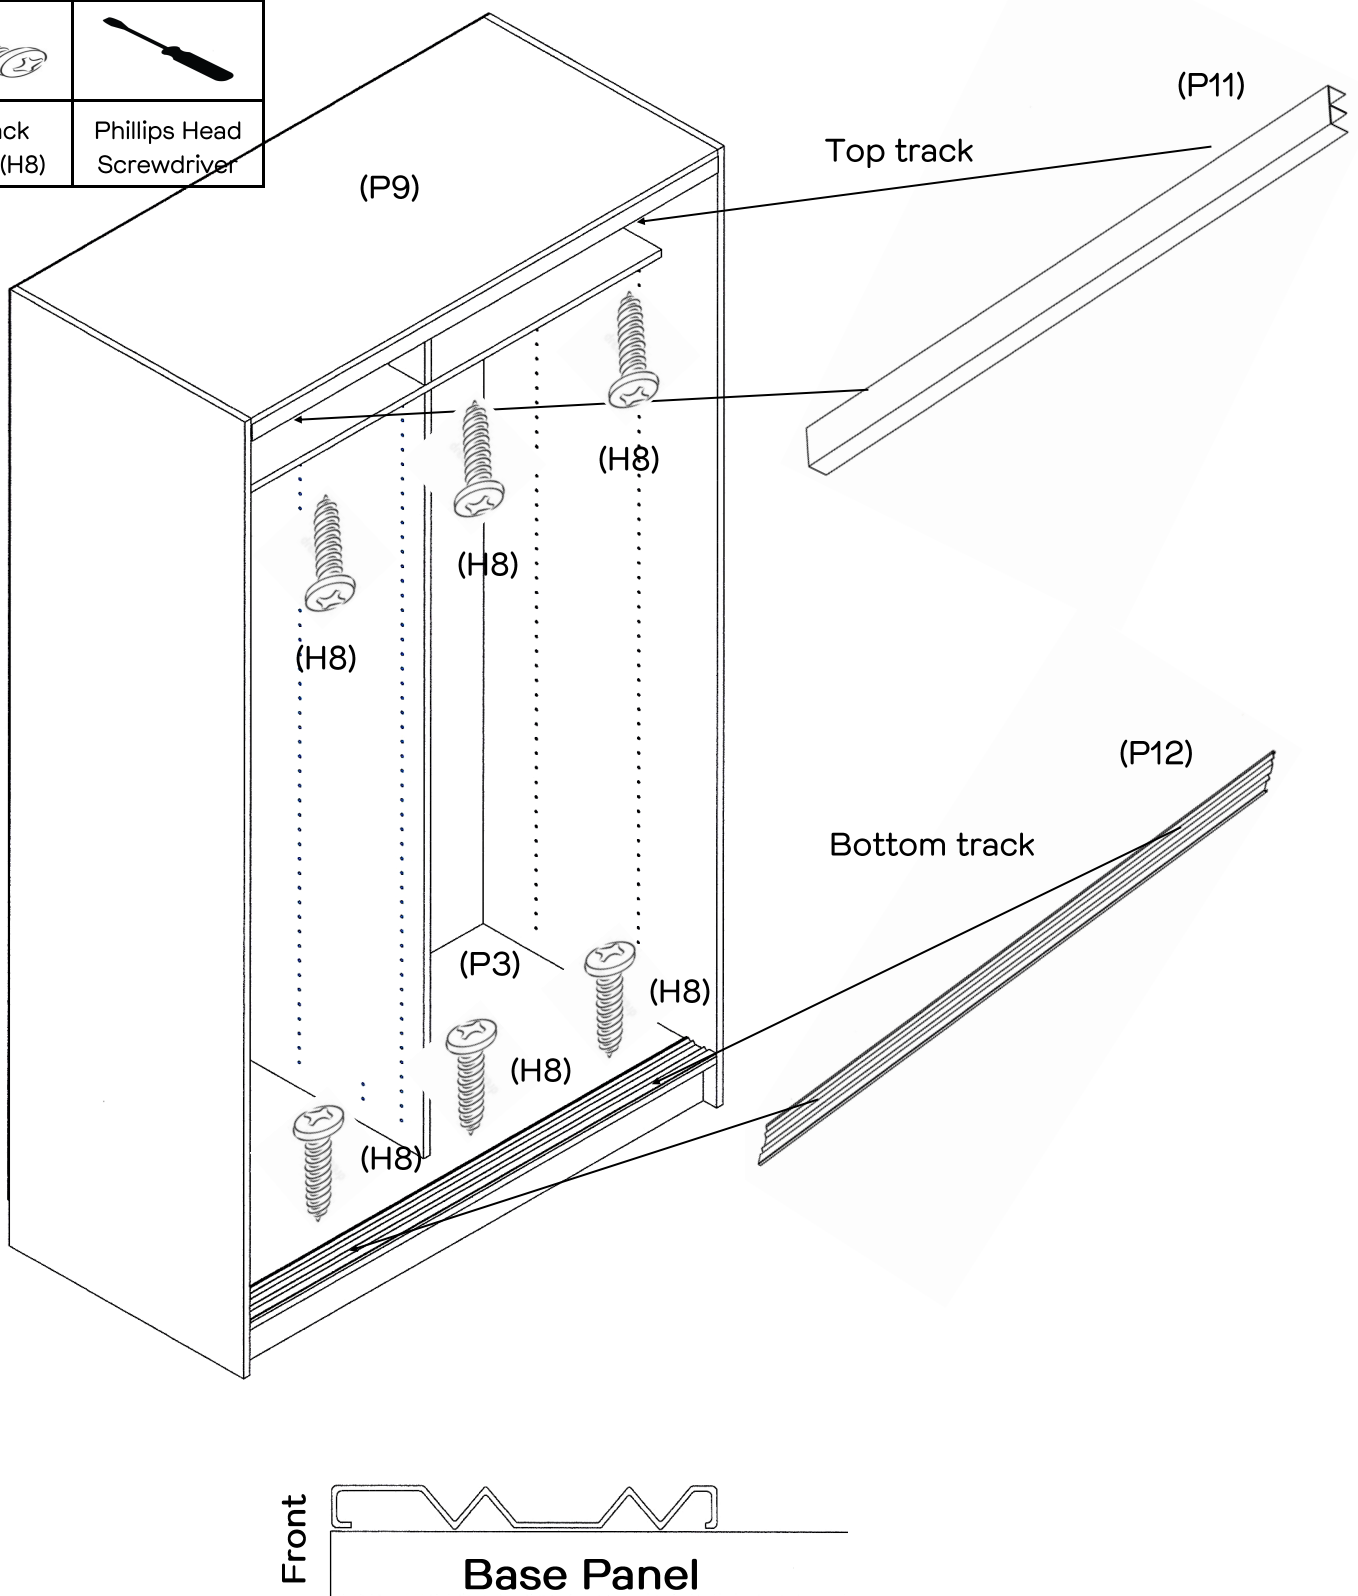


Attach the top track (P11) and bottom track (P12) to the top panel (P9) and bottom panel (P3) using 6 x track screws (H8), tightening using a phillips head screwdriver.

Ensure the front edge of the wardrobe and the front edge of the tracks line up as shown above.

## Step 6

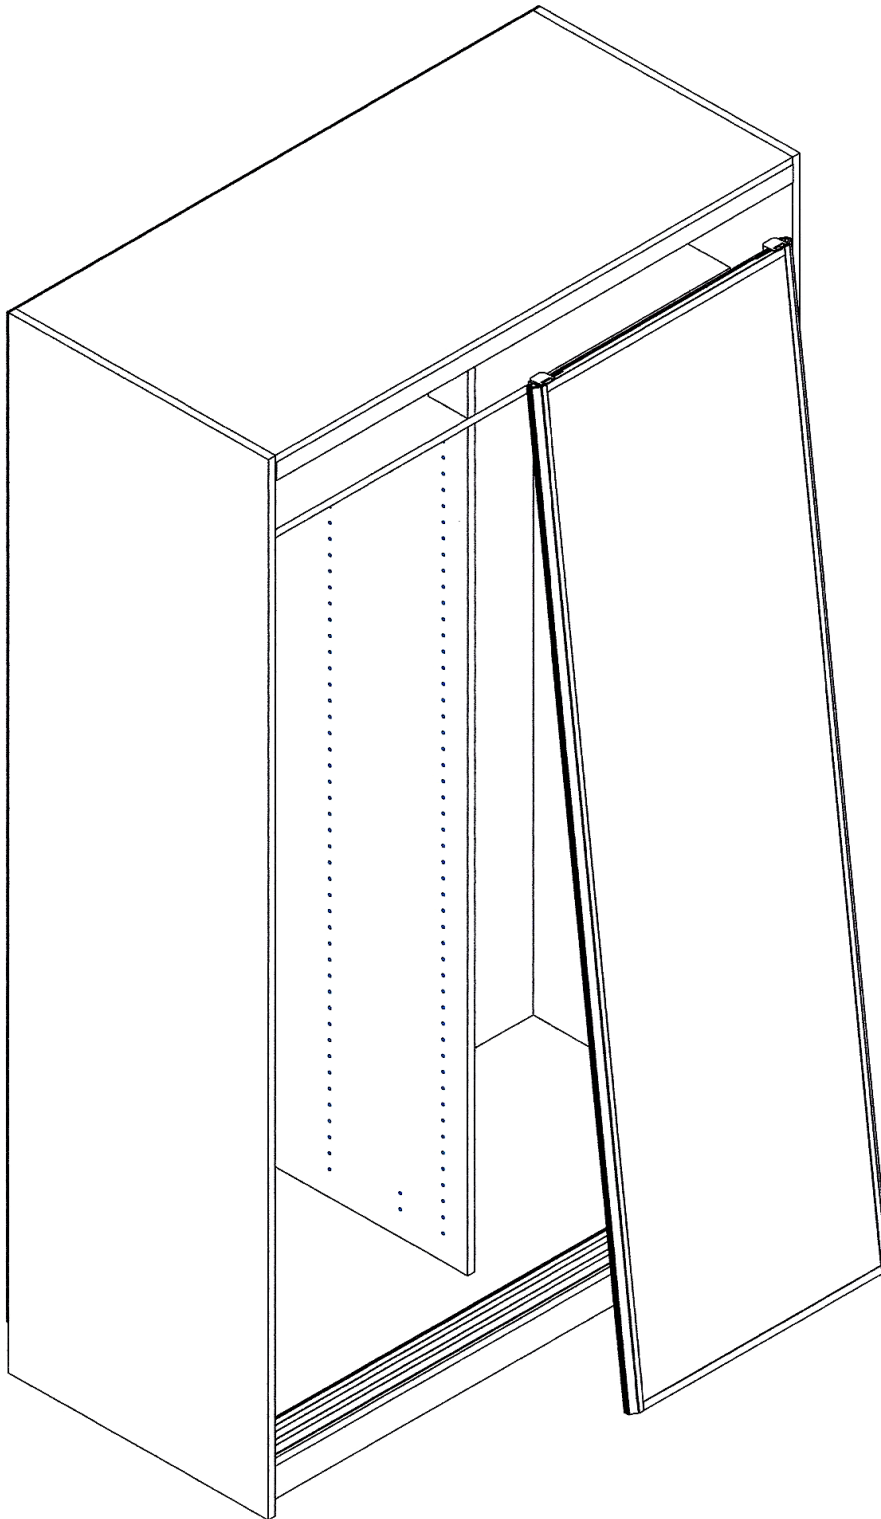


The wheels on the bottom of the door must both go into this slot.

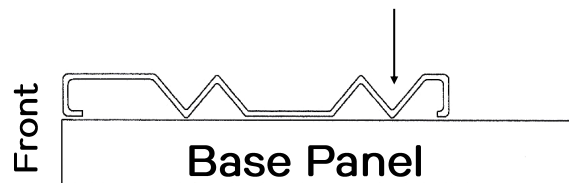


To fit the doors into the unit hold the assembled door by the sides and line up the top into the back groove of the top track. Then continue to insert the door into the bottom track.

Ensure the wheels on the doors slide into the back groove of the bottom track (as shown above).

## Step 7

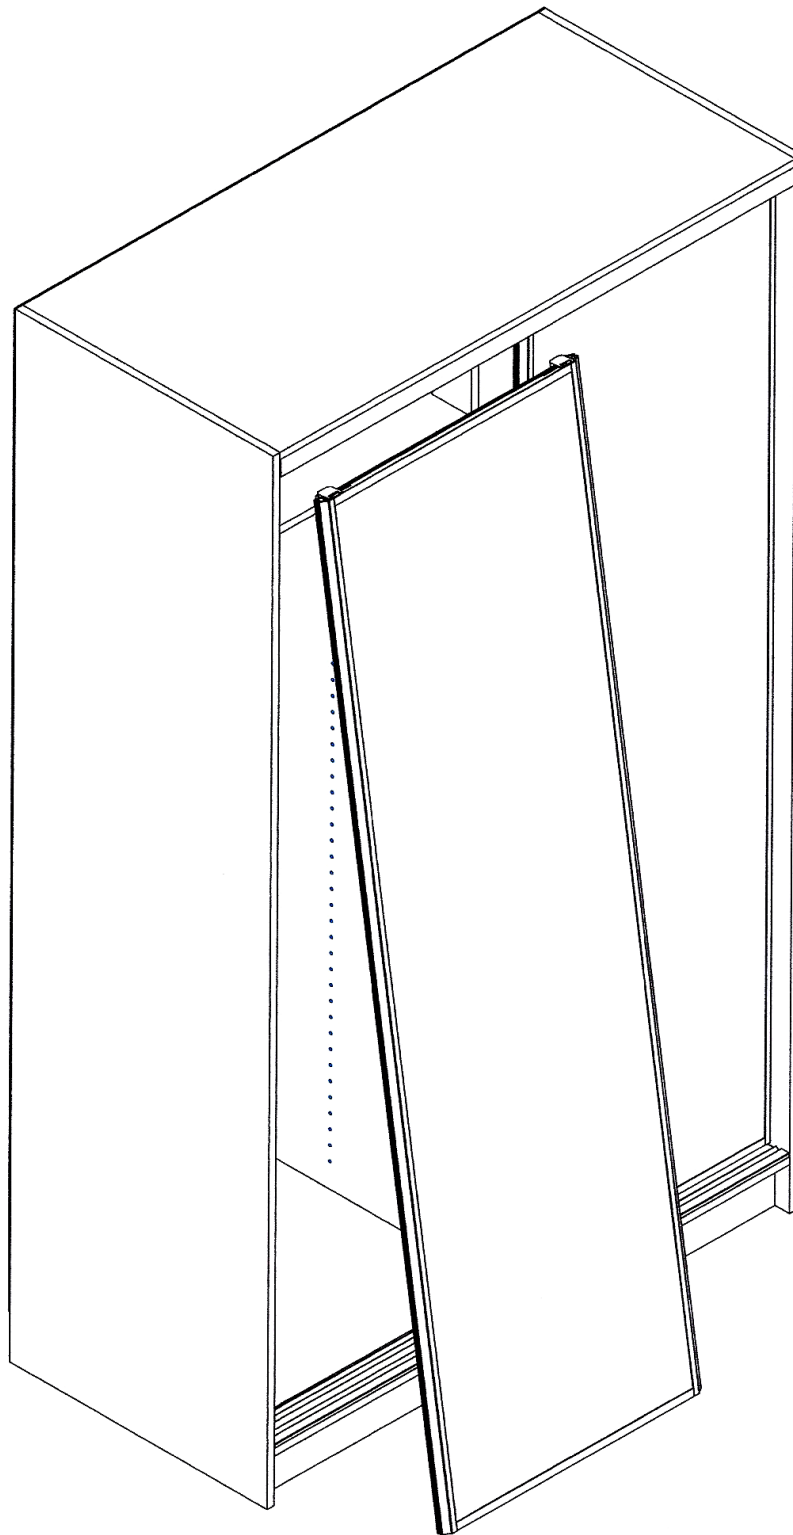

The wheels on the bottom of the door must both go into this slot.

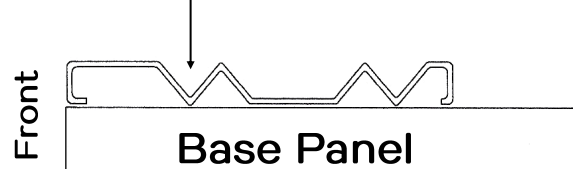

To fit the doors into the unit hold the assembled door by the sides and line up the top into the front groove of the top track. Then continue to insert the door into the bottom track.

Ensure the wheels on the doors slide into the front groove of the bottom track (as shown above).


You will need



Phillips Head  
Screwdriver

## Step 8

If you need to adjust the doors

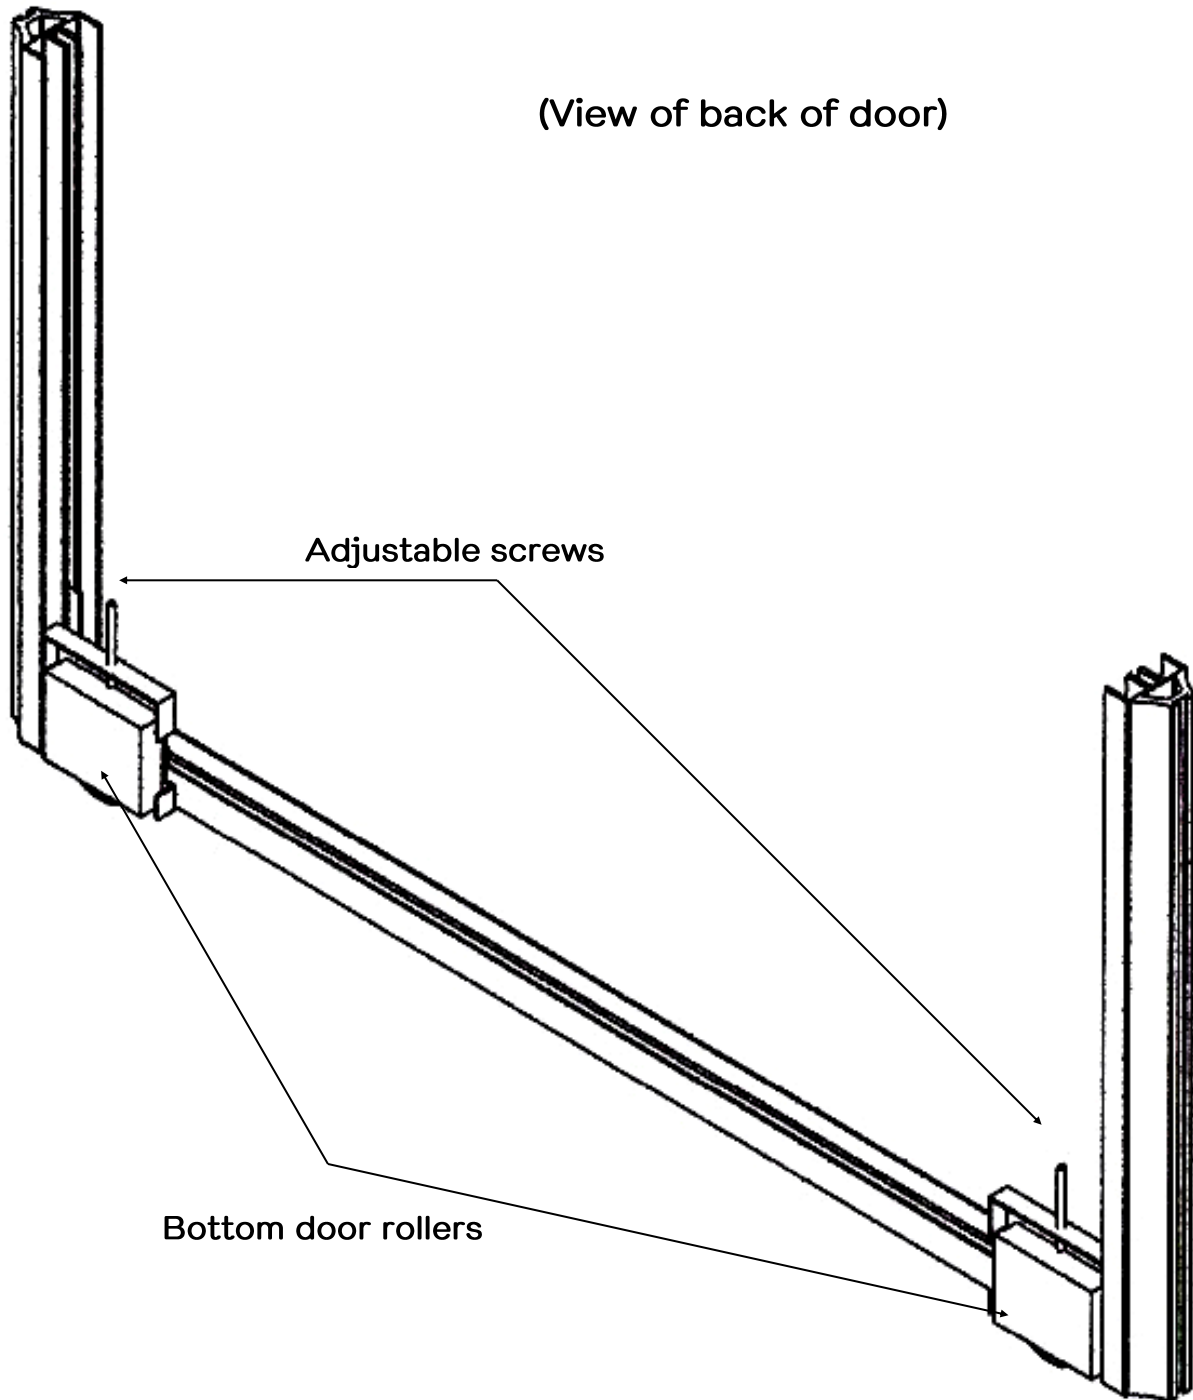


If your doors do not sit flush against the side of the wardrobe you will need to adjust the doors.


Using a phillips head screw driver, screw from the back the adjustable screw up or down to square up the door.



Fantastic  
Furniture

# Step 9

| You will need  |  |
|--|--|
|  |  |
| 2 x Wall Fixing Brackets (H10)   |  |

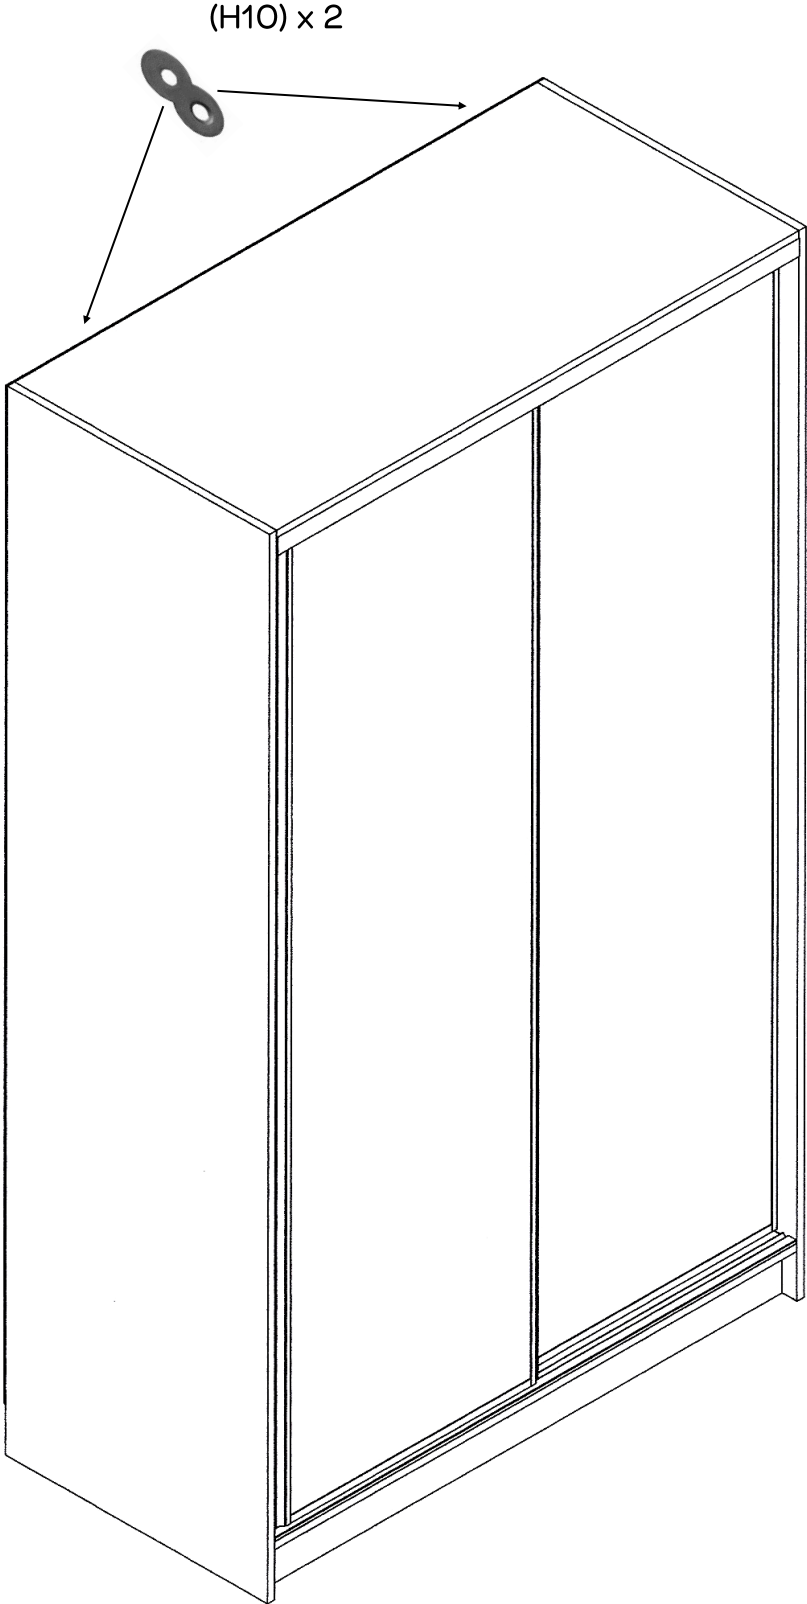


Attach the 2 x wall fixing brackets (H10) to the top back panel (P9).  
Screws are not included.





# Step 10



| You will need  |  |
|--|--|
|  |  |
| 2 x Wall Fixing Brackets (H10)   |  |

Screws and wall plugs are not provided.

Please use appropriate fixtures for your wall.


We strongly suggest using the wall brackets to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

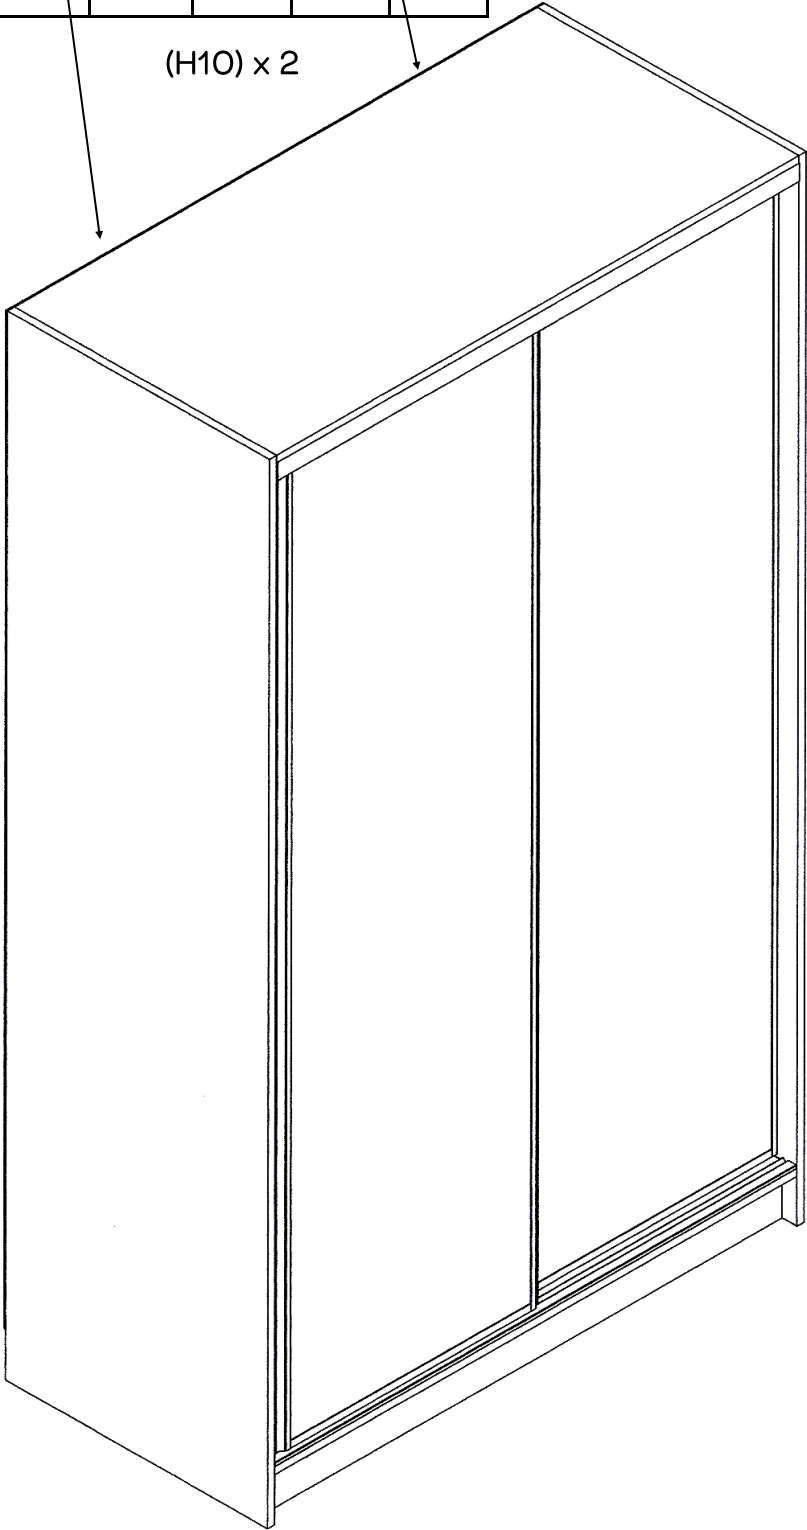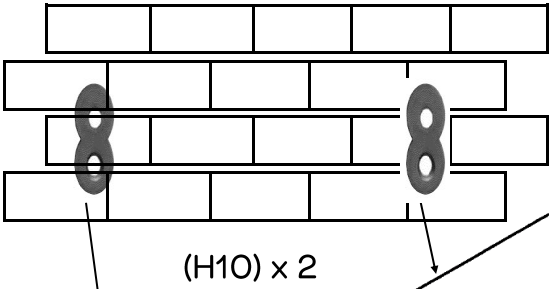

Move furniture to its final position, then connect the end of the wall fixing brackets (H10) to the wall. Make sure it is firmly attached and a snug fit.



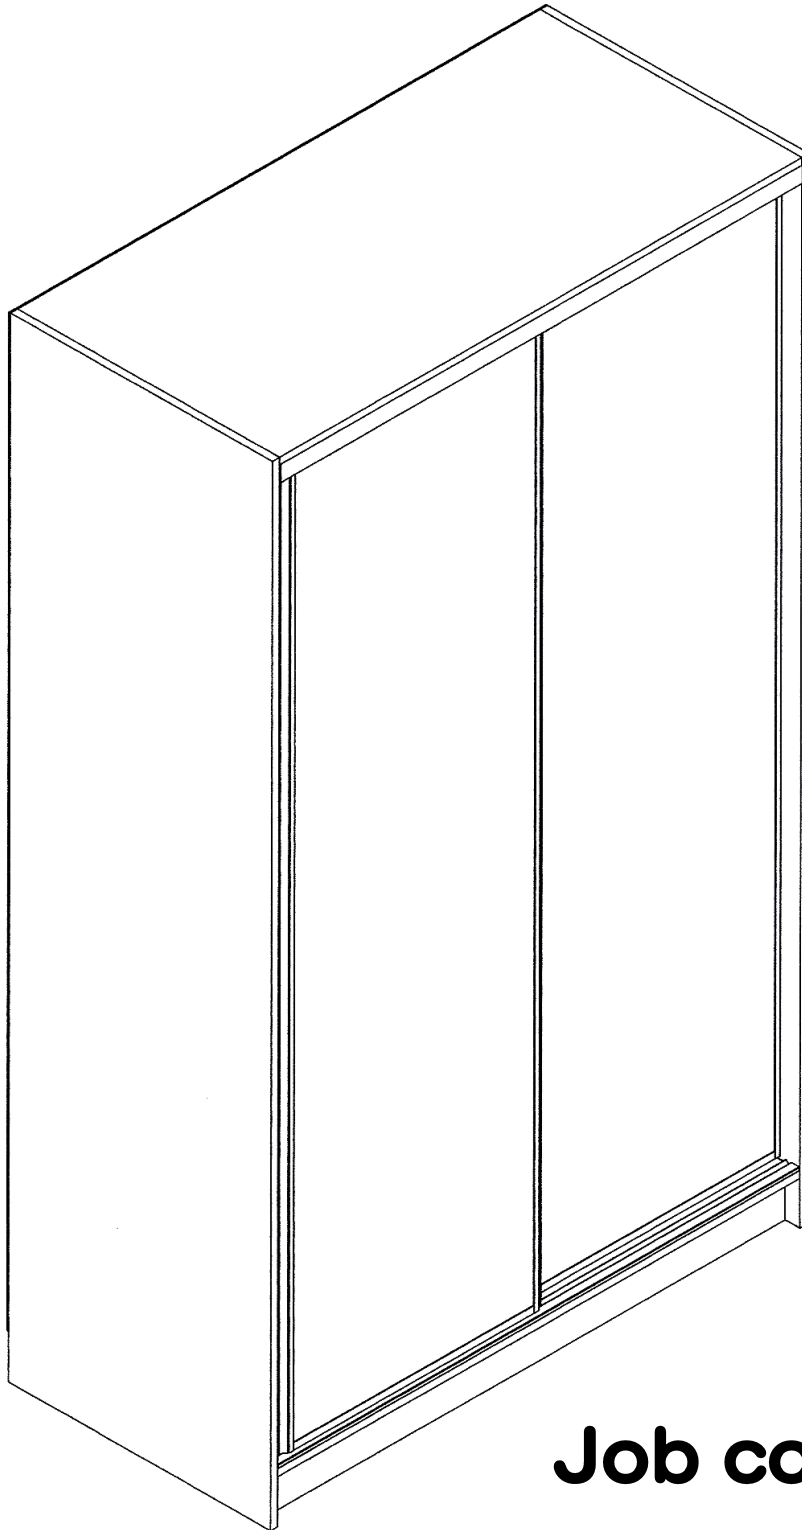

**Job complete!**

In the interest of our environment please dispose of all packaging thoughtfully.

