


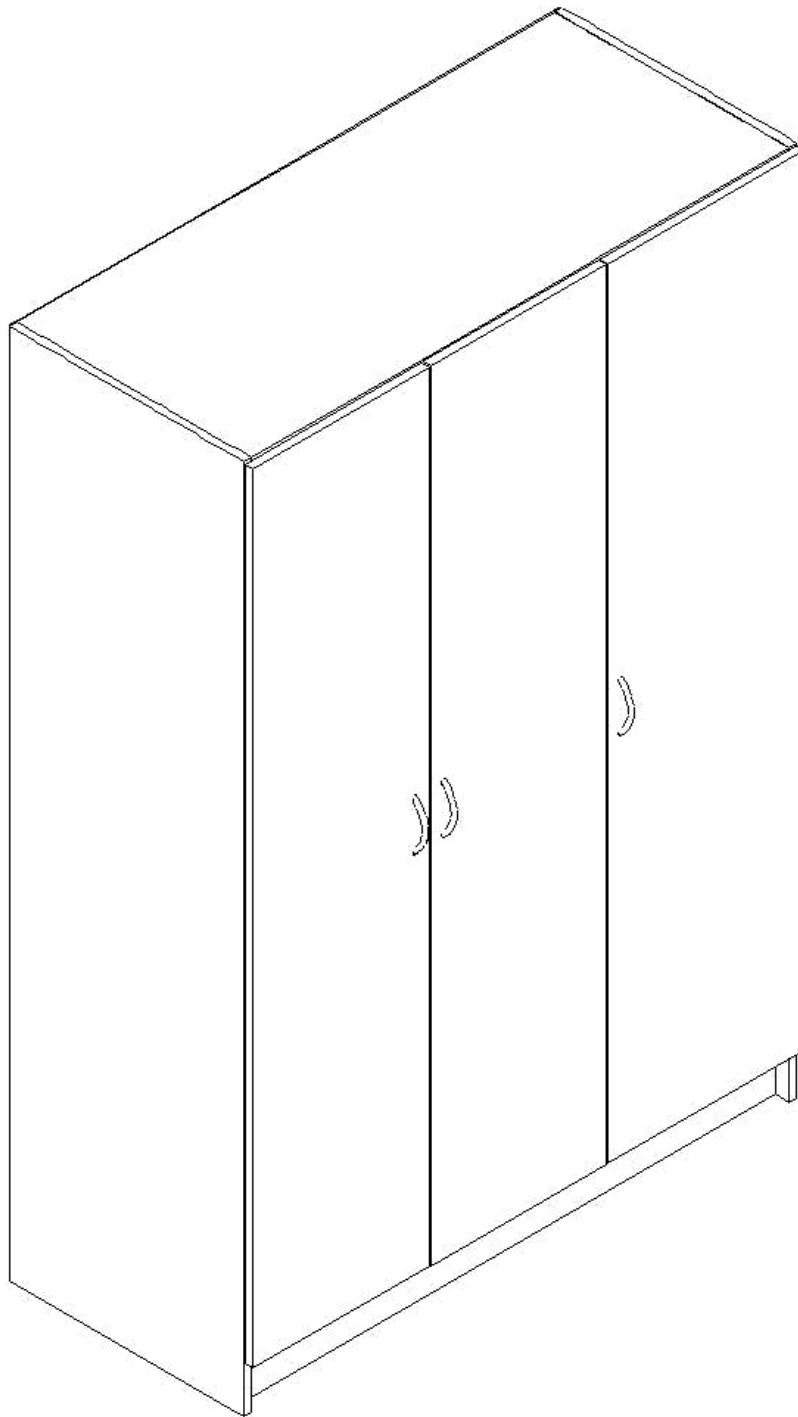

**Fantastic
Furniture**

Version 1.0



Two People



Required

**Aussie
made!**

Star Robe

3 Door 1200mm White

fantasticfurniture.com.au



CAUTION

We recommend all units to be screwed to the wall using the wall brackets supplied. Consult your hardware specialist for which fastener is recommended.

Recommended Weight Capacity—Up to 10kg per shelf

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



Fantastic
Furniture

Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

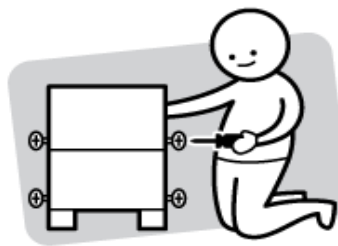

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product




DO NOT USE




Other tools you need:
Phillips Head Screwdriver

Parts list


2 x Kickboards (P1)
Bottom Panel (P2)
Left Side Panel (P3)
Division Panel (P4)
Right Side Panel (P5)
Top Panel (P6)
2 x Shelves (P7)
2 x Small Backs (P8)
1 x Large Back (P9)
2 x Small Doors (P10)
1 x Large Door (P11)
Connector Strip (P13)

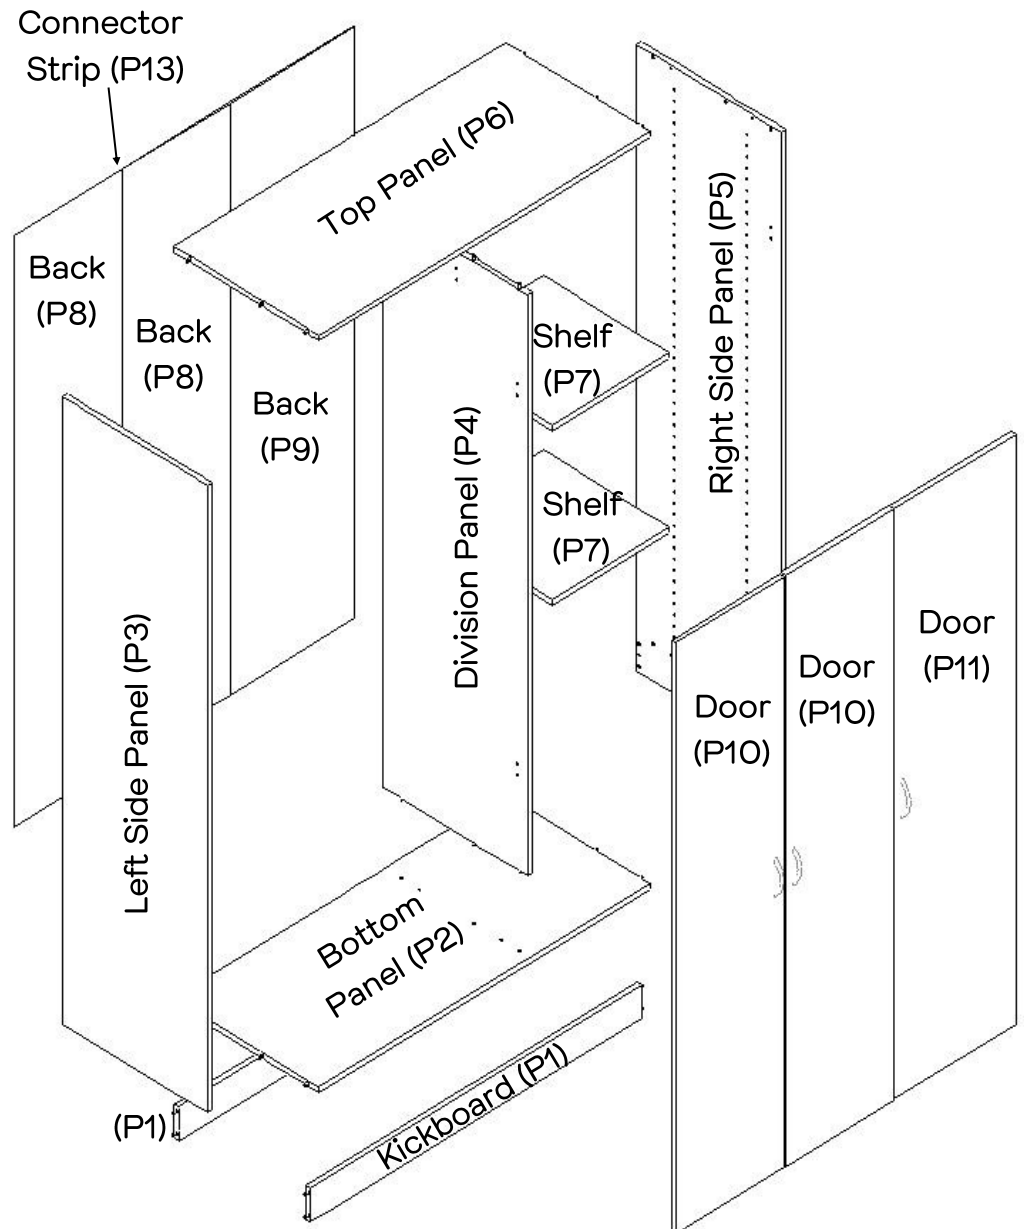

Hardware pack

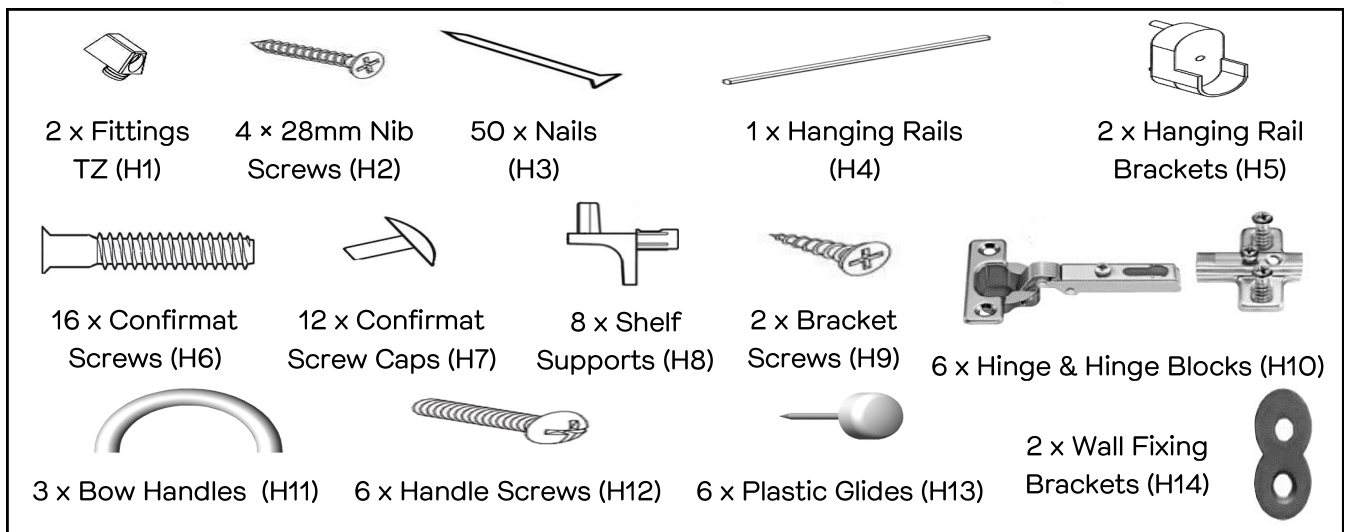


Step 1

You will need	
	
4 x Confirmat Screws (H6)	Phillips Head Screwdriver



We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

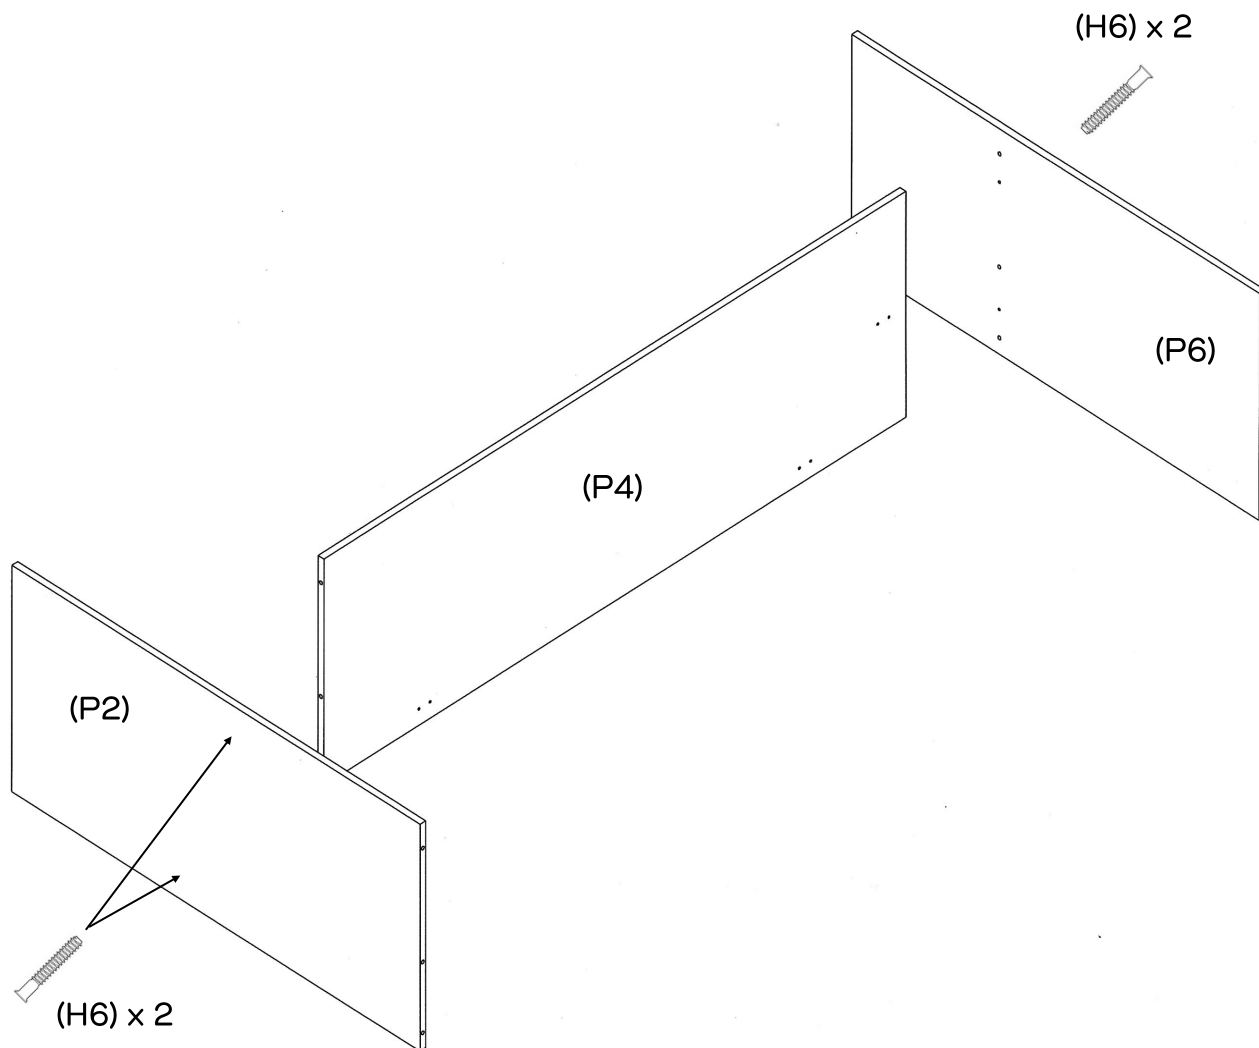



Using the wooden dowels already inserted in the panels, attach the top panel (P6) and bottom panel (P2) to the division panel (P4) as shown.

Secure the top panel (P6) to the division panel (P4) using 2 x confirmat screws (H6) in the holes provided, tightening using a phillips head screwdriver.

Secure the bottom panel (P2) to the division panel (P4) using 2 x confirmat screws (H6) in the holes provided, tightening using a phillips head screwdriver.

Step 2

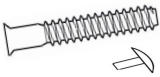
You will need	
	
4 x Confirmat Screws (H6) & 4 x Confirmat Screw Caps (H7)	Phillips Head Screwdriver

Two People



We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

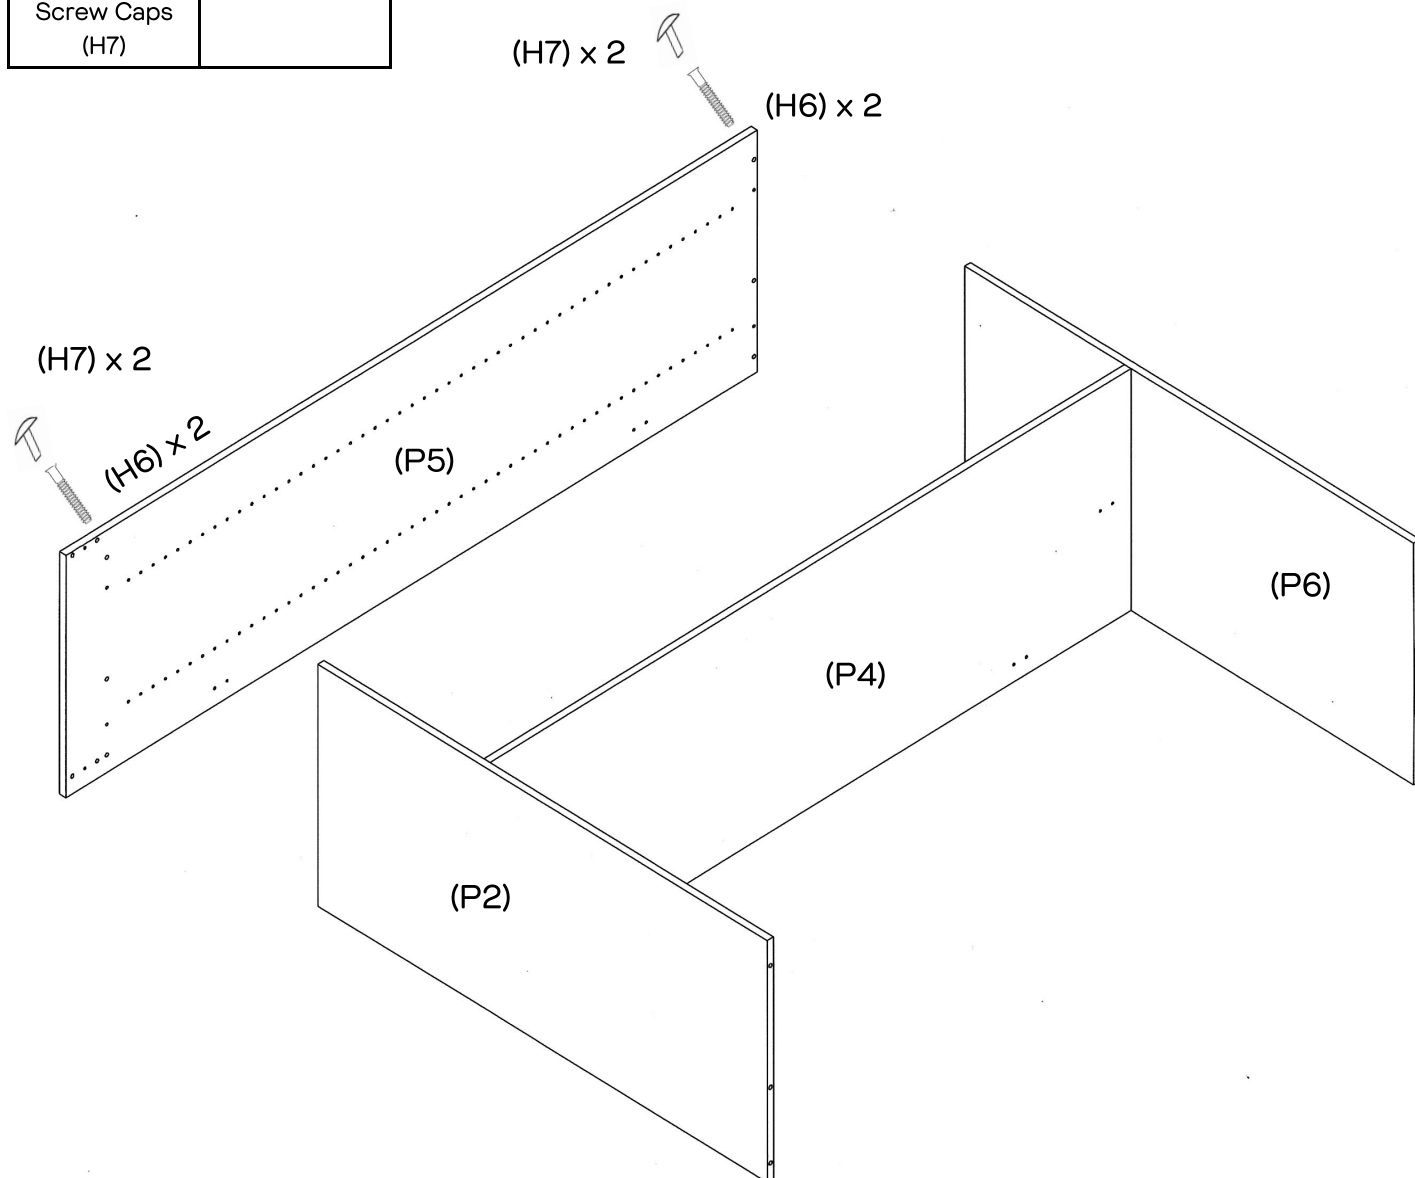

Align and attach right side panel (P5) using the wooden dowels already inserted in the top panel (P6) and bottom panel (P2).

Secure the panels together by inserting 4 x confirmat screws (H6) in the holes provided, tightening using a phillips head screwdriver.

Insert 4 x confirmat screw caps (H7) into the 4 x confirmat screws (H6).

Step 3

Two People





Required

We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

You will need
2 x TZ Fittings (H1)
2 x Confirmat Screws (H6) & 2 x Confirmat Screw Caps (H7)
Phillips Head Screwdriver

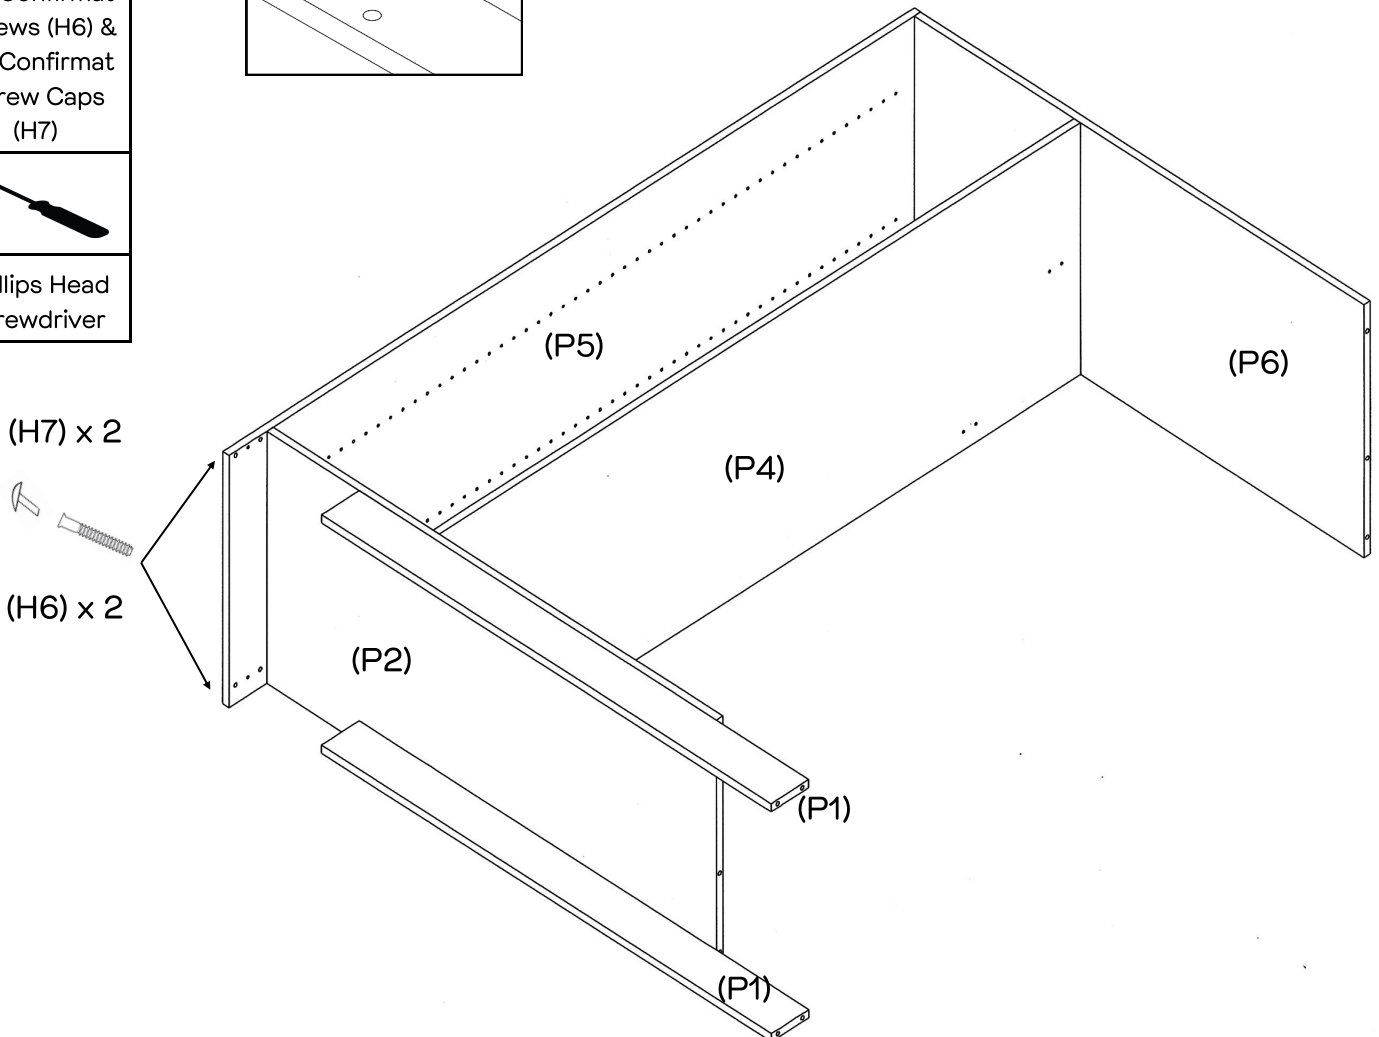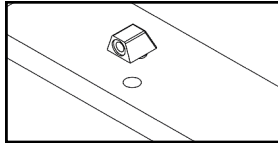

Insert 2 x TZ fittings (H1) into the holes provided on the 2 x kickboards (P1). Ensure the flat side of the TZ fitting is in line with the edge of the kickboard (P1) as shown in the image above.



Using the wooden dowels already inserted in the panels, attach the 2 x kickboards (P1) to the right side panel (P5). Note: the side with the TZ Fittings should face inwards.

Secure the kickboards (P1) to the right side panel (P5) using 2 x confirmat screws (H6) in the holes provided, tightening using a phillips head screwdriver.

Insert 2 x confirmat screw caps (H7) into the 2 x confirmat screws (H6).



Step 4

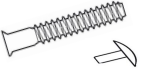
You will need	
	
6 x Confirmat Screws (H6) & 6 x Confirmat Screw Caps (H7)	Phillips Head Screwdriver

Two People



We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

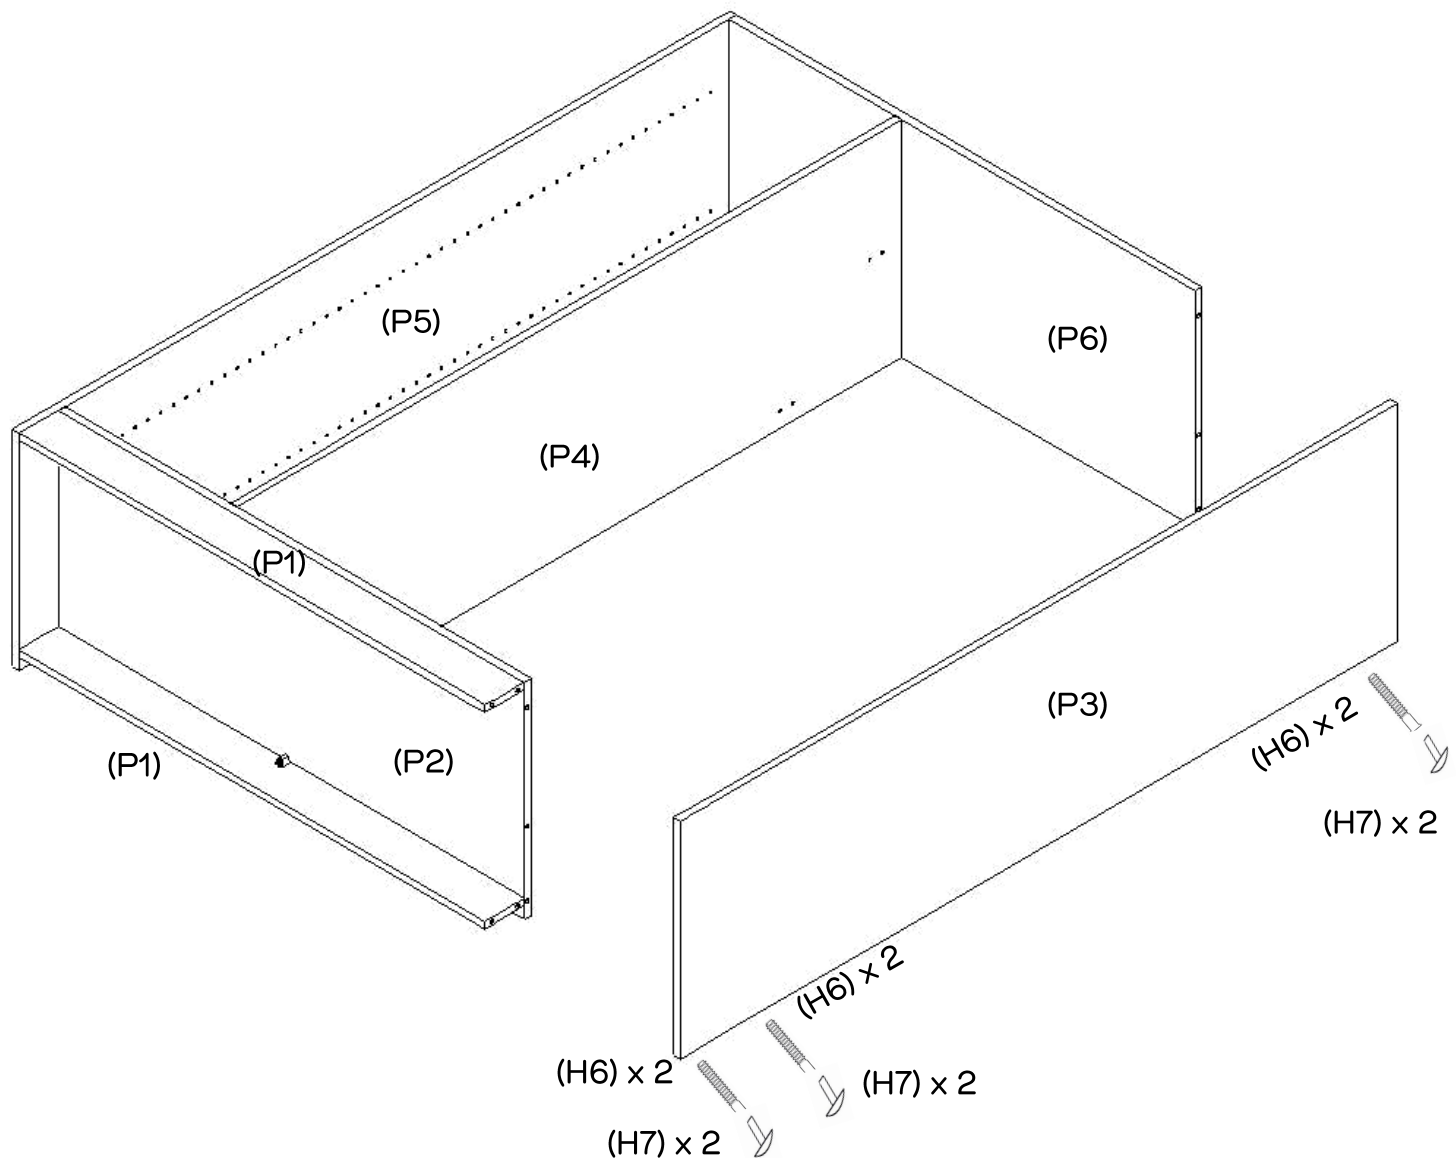

Align and attach left side panel (P3) using the wooden dowels already inserted in the top panel (P6), bottom panel (P2) and 2 x kickboards (P1).

Secure the panels together by inserting 6 x confirmat screws (H6) in the holes provided, tightening using a phillips head screwdriver.

Insert 6 x confirmat screw caps (H7) into the 6 x confirmat screws (H6).




Step 5

You will need	
	
2 x 28mm Nib Screws (H2)	Phillips Head Screwdriver



We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

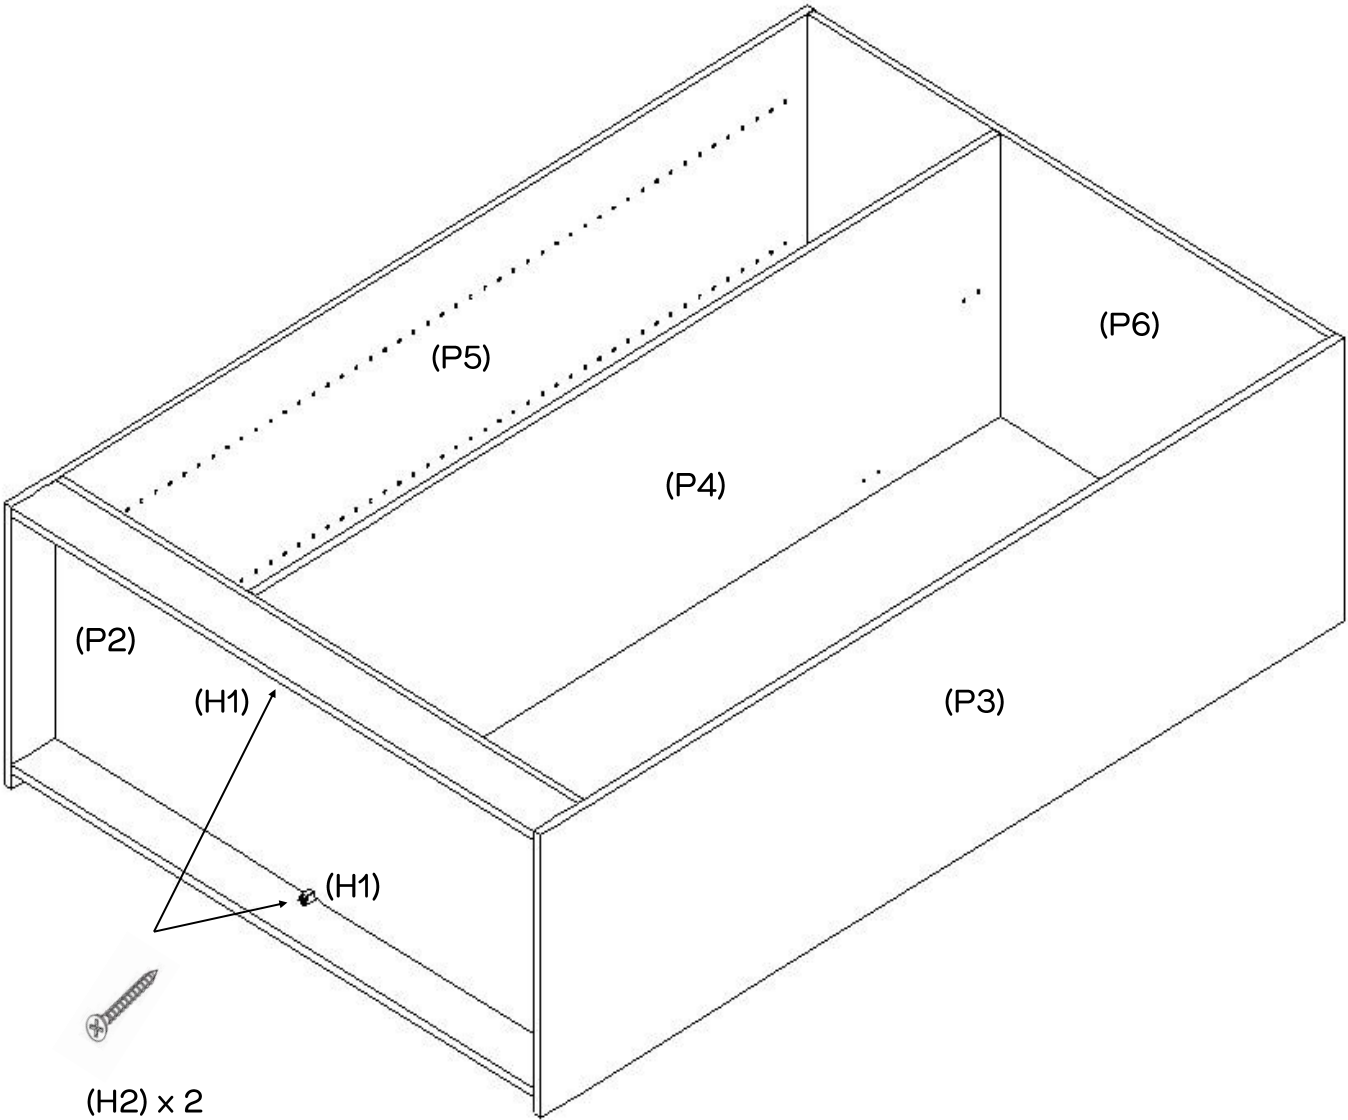

Secure the 2 x kickboards (P1) to the bottom panel (P2) using 2 x 28mm nib screws (H2) inserted into the 2 x TZ fittings (H1), tighten using a phillips head screwdriver.







Step 6


Two People



We recommend assembling the wardrobe in the intended room. Clear floor space if required.

The panels must be assembled with the laminated edge facing down.

You will need

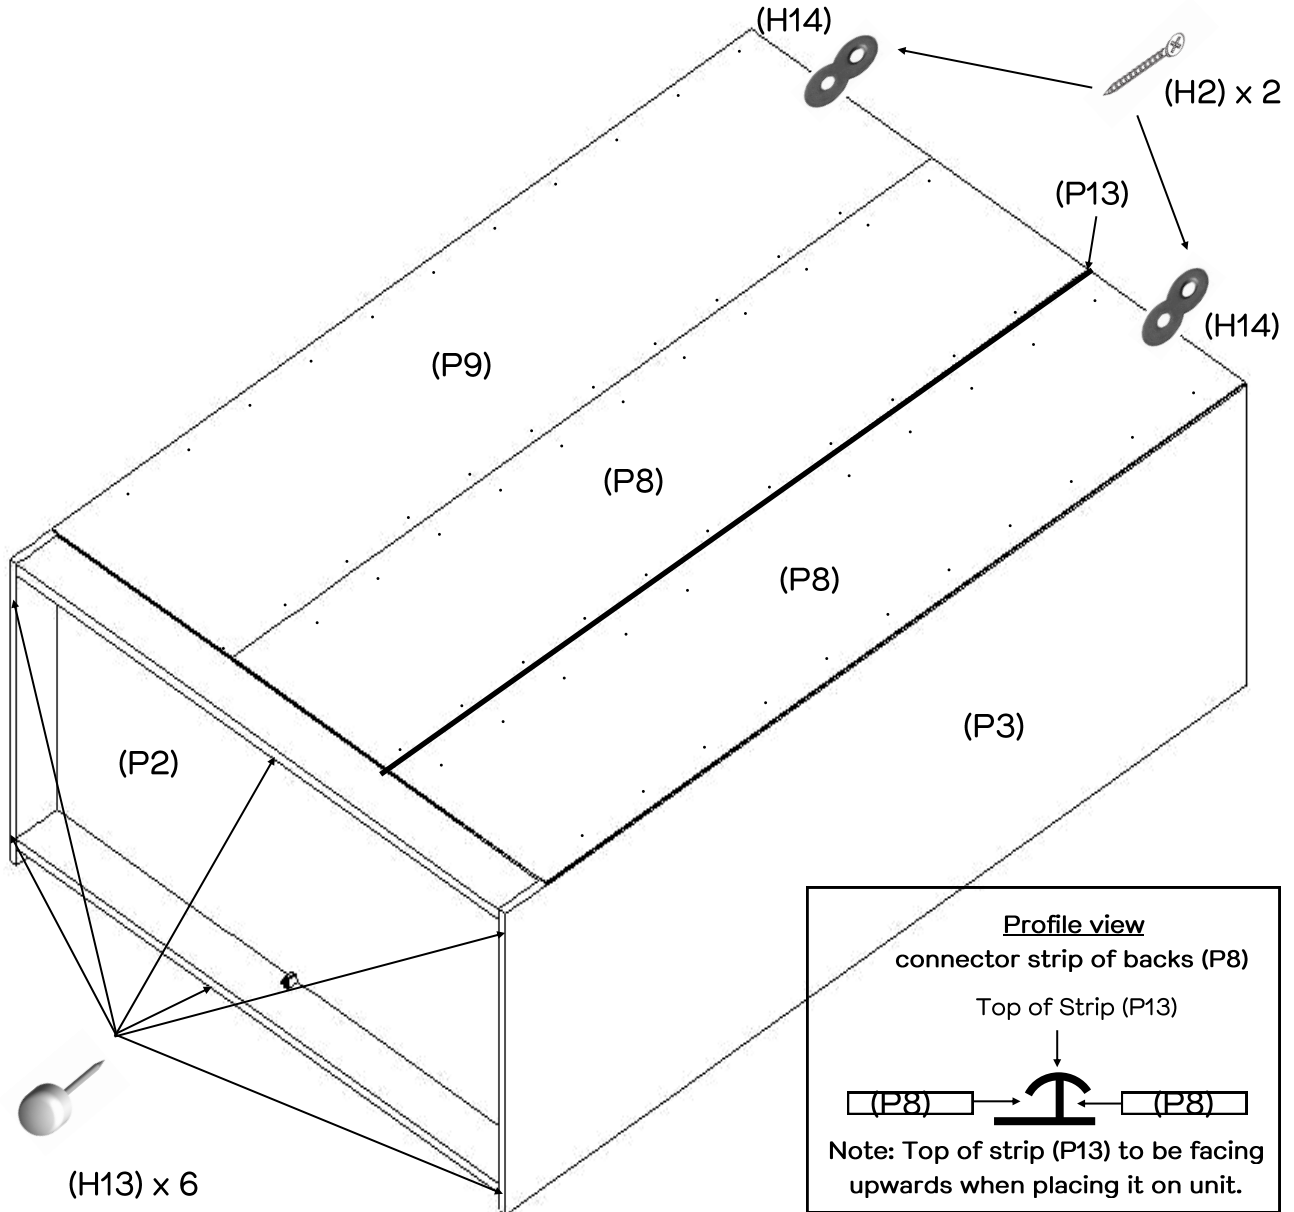50 x Nails (H3)

2 x Wall Fixing Brackets (H14)

2 x 28mm Nib Screws (H2)

6 x Plastic Glides (H13)

Hammer

Phillips Head Screwdriver



Ensure the unit is square then join the 2 small back panels (P8) with the connector strip P13 as shown above, then place over the large opening. Place the large back panel (P9) over the remaining opening. Ensure there is no gap between the back panels (P8) & (P9) and that there is an even gap on all sides of the unit.

Nail on the back panels (P8) & (P9) with 50 x nails (H3), by gently tapping with a hammer. Ensure the nails are close to the edges so the nail (H4) goes through the panels behind it.

Using a hammer tap 6 x plastic glides (H13) into the bottom panel of the robe.

Do not stand the unit upright until the back panels (P8) & (P9) have been securely attached.

Using 2 x 28mm nib screws (H2) attach the 2 x wall fixing brackets (H14) to the back of the top panel (P6). Ensure the brackets are secure.



Fantastic Furniture


Step 7

Two People



Required

You will need

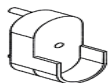


2 x Hanging Rail Brackets (H5)



2 x Bracket Screws (H9)



1 x Hanging Rail (H4)

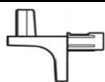


8 x Shelf Supports (H8)



6 x Hinge Blokes (H10)



Phillips Head Screwdriver

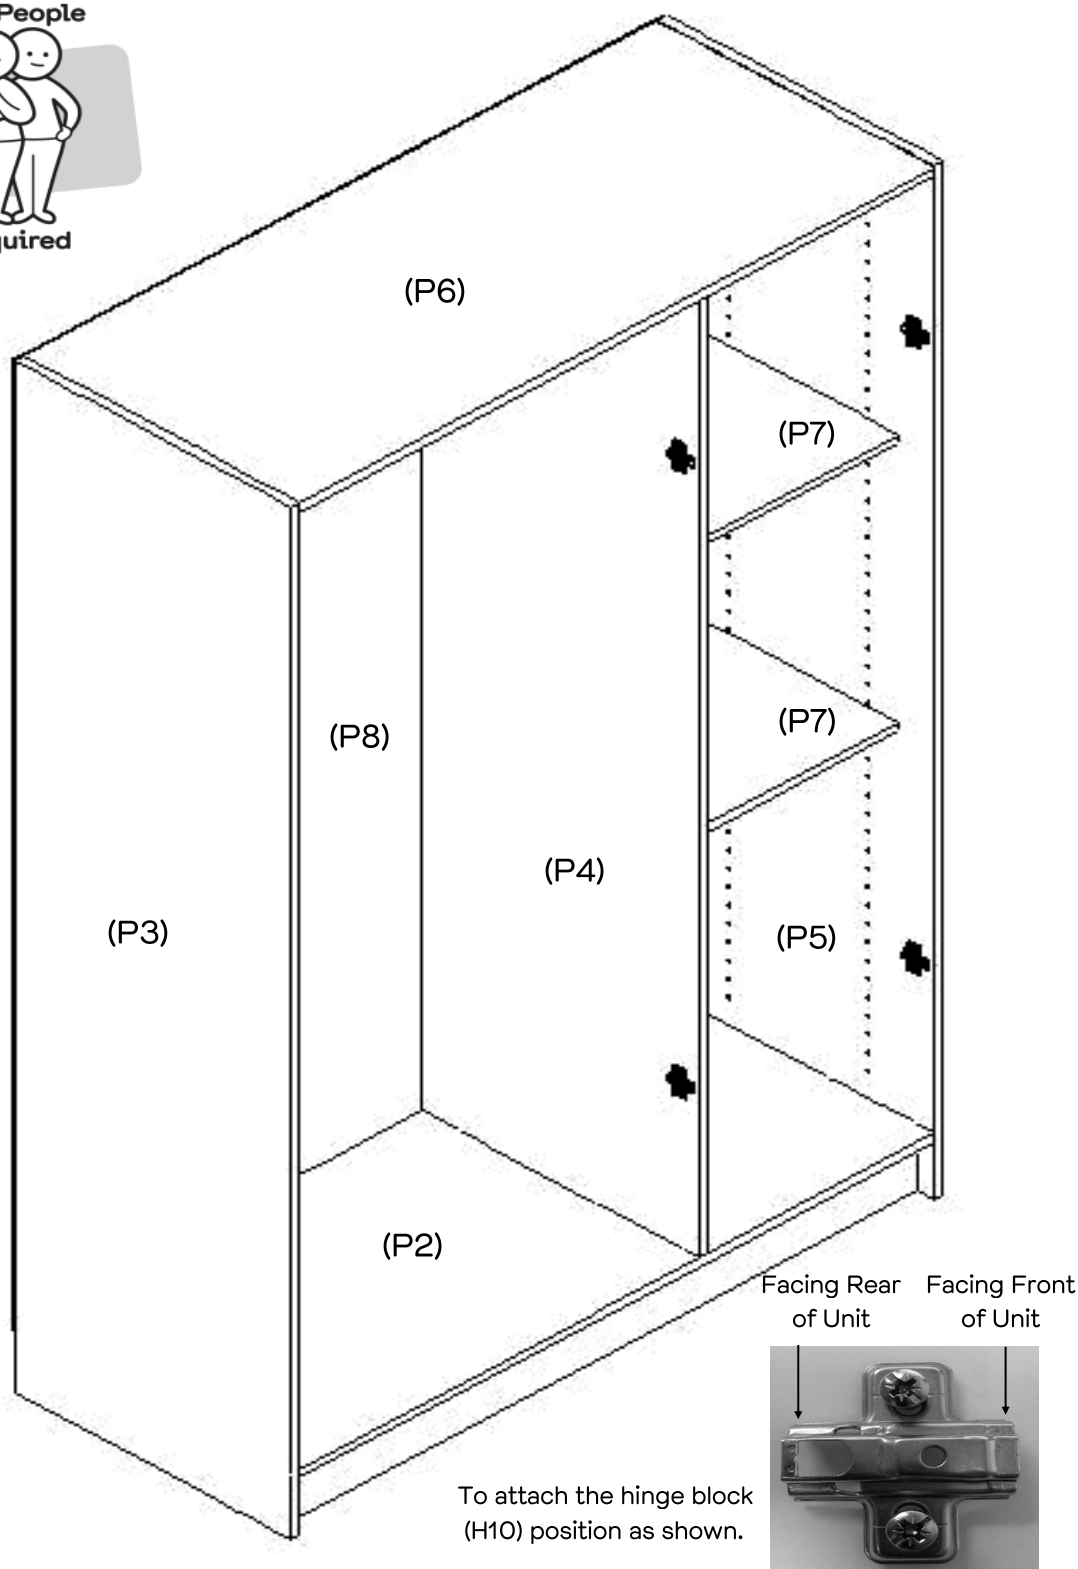

To attach the hinge block (H10) position as shown.

With assistance, carefully stand the unit upright.

Fix 6 x hinge blocks (H10) to panels (P3), (P4) & (P5) into the guide holes using screws provided on the hinge block (H10). Make sure hinge block (H10) is facing the correct way as picture above.

Insert 8 x shelf supports (H8) into division panel (P4) & right side panel (P5) then insert 2 x shelves (P7).

Using the holes on the top of the division panel (P4) and left side panel (P3), attach 2 x hanging rail brackets (H5) using 2 x bracket screws (H9). Tighten with a phillips head screwdriver and then attach hanging rail (H4).


Step 8

Two People




Required

You will need	
6 x Hinges (H10)	Phillips Head Screwdriver

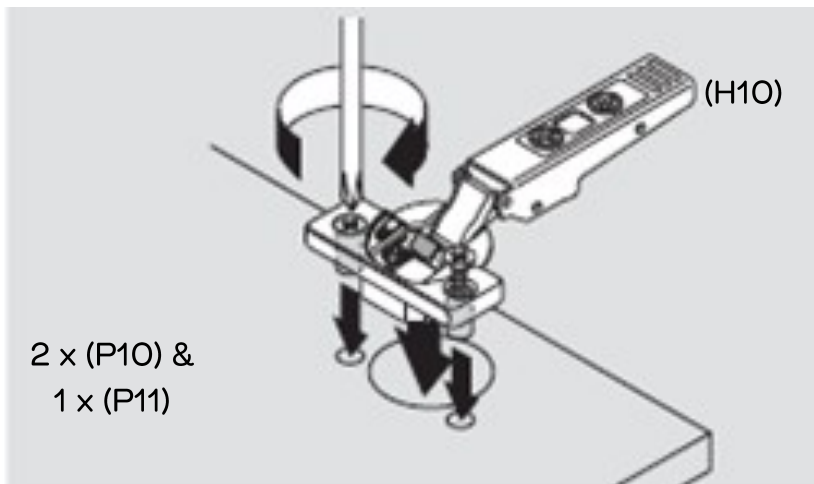


Insert hinge into the holes provided on the 3 x doors (P10) & (P11), then quarter turn clockwise to lock hinge into place.

Mounting Door to Robe

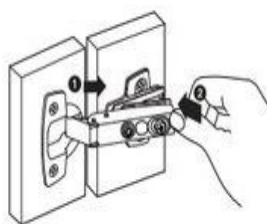

Installation

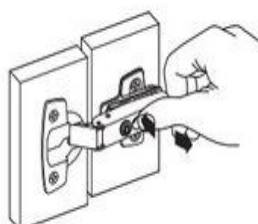




Removing

Snap-On System

The hinge arm is positioned on the mounting plate and simply clipped on from front to back.

It can easily be removed from the mounting plate by pressing the back end of the hinge arm which will release it from the block.

Adjustment of Doors (More information on page 14)

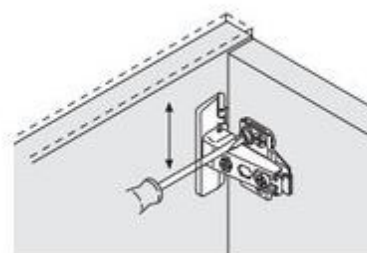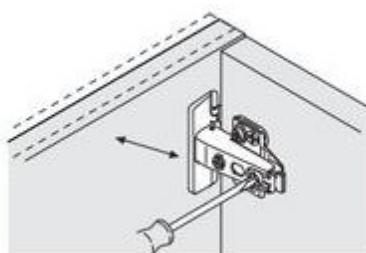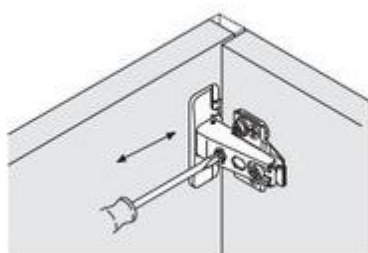


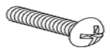

Insert hinge (H10) to 2 x small doors (P10) and 1 x large door (P11) then quarter turn clockwise to lock hinge in place.


Working from the top down, position the hinge and hinge block (H10) together from the front of the hinge block first then simply click together.

Note: The 2 x small doors (P10) attach to left side panel (P3) and division panel (P4) while the large door (P11) attaches to right side panel (P5).



Step 9

You will need

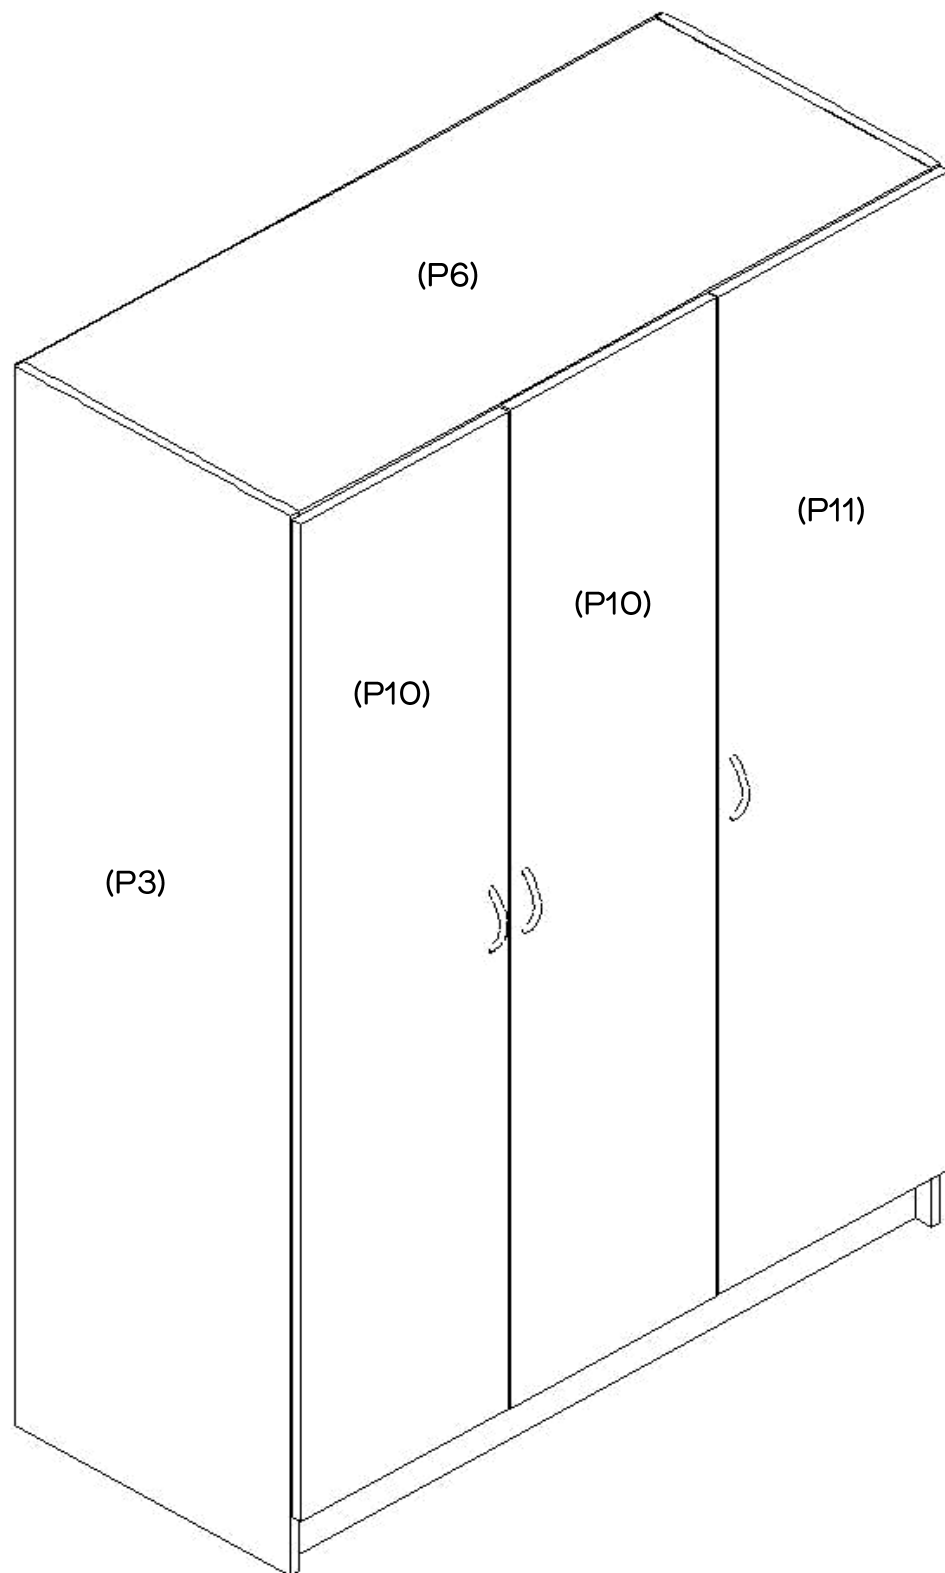3 x Bow Handles (H11)

6 x Handle Screws (H12)

Phillips Head Screwdriver




Attach 3 x bow handles (H11) to the 2 x small doors (P10) & 1 x large door (P11) by using the 6 x handle screws (H12). Tighten with a phillips head screwdriver.

Step 10

TO ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door.

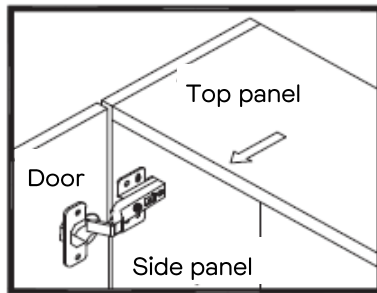


STEP 2

Adjust the gap between door and side panel.

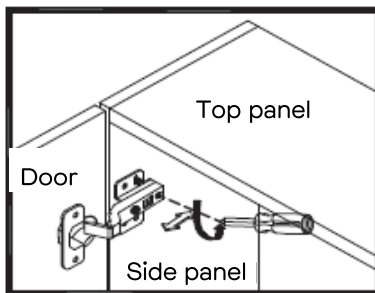


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

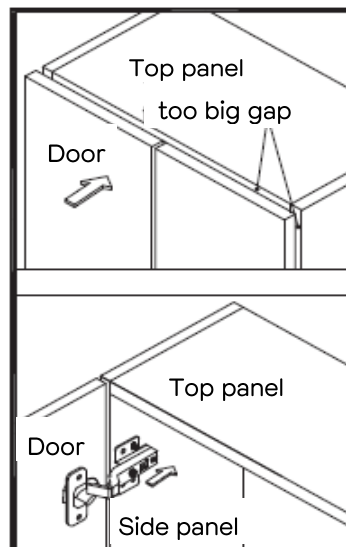

Push the hinge back a little.


STEP 2B MOVE DOOR OUT

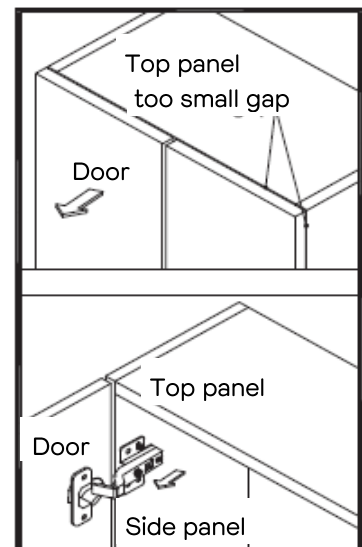

Push the hinge forward a little.


STEP 3

To adjust the gap between two doors.

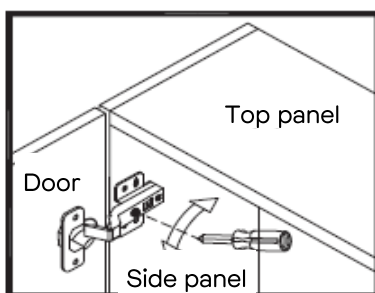


Loosen or tighten the screw indicated a little to adjust the gap between door panels (see step 3a & 3b),

STEP 3a MOVE DOOR RIGHT

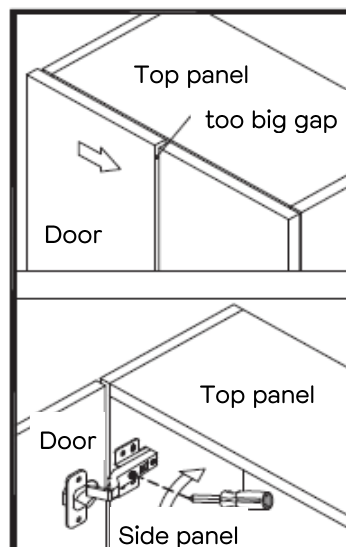

Turn the screw clockwise a little as shown to make the gap small.


STEP 3b MOVE DOOR LEFT

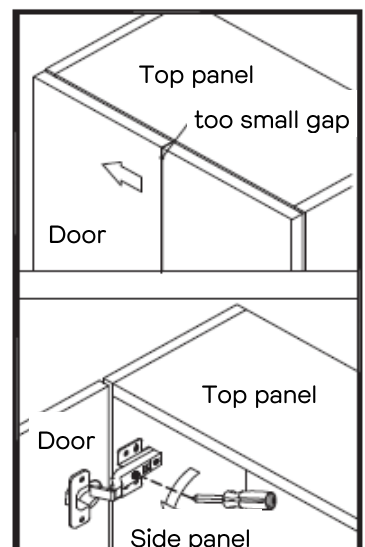

Turn the screw counter clockwise a little as shown to make the gap big.



Fantastic Furniture


You will need

2 x Wall Fixing Brackets (H14)

Step 11



Screws and wall plugs are not provided.

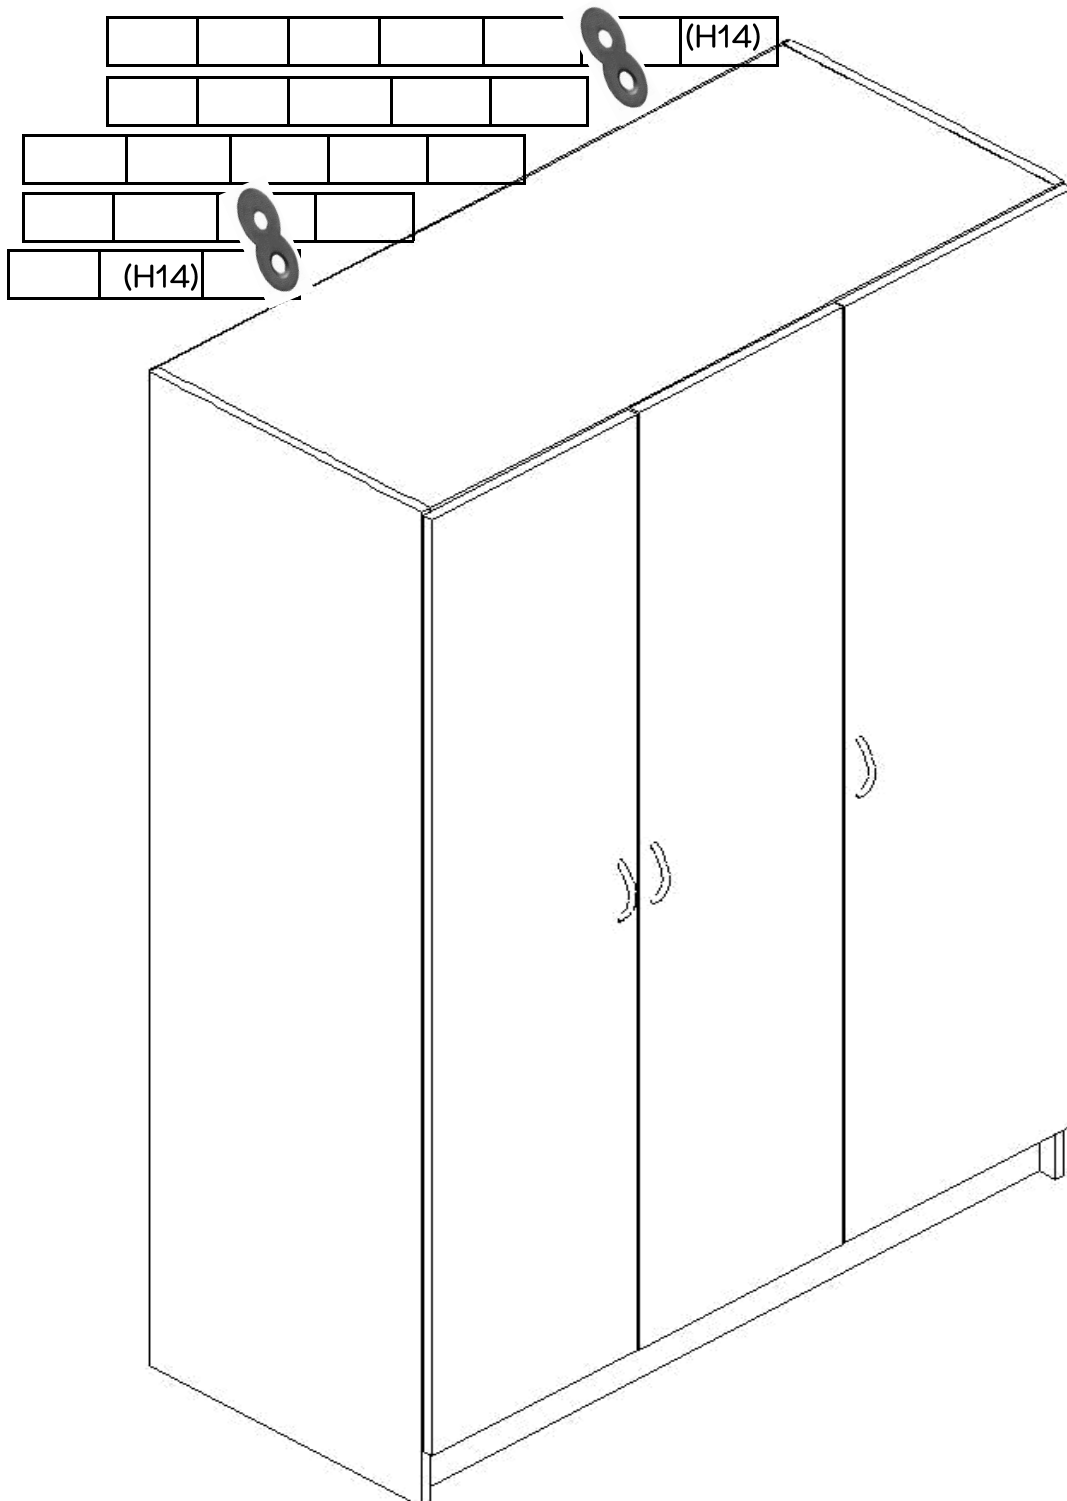Please use appropriate fasteners for your wall.




We strongly suggest using the wall brackets to prevent this unit from toppling.

Seek advice from a qualified trades person on how to attach this to your specific wall.

Move furniture to its final position, then connect the end of the wall fixing brackets (H14) to the wall.

Make sure it is firmly attached and a snug fit.

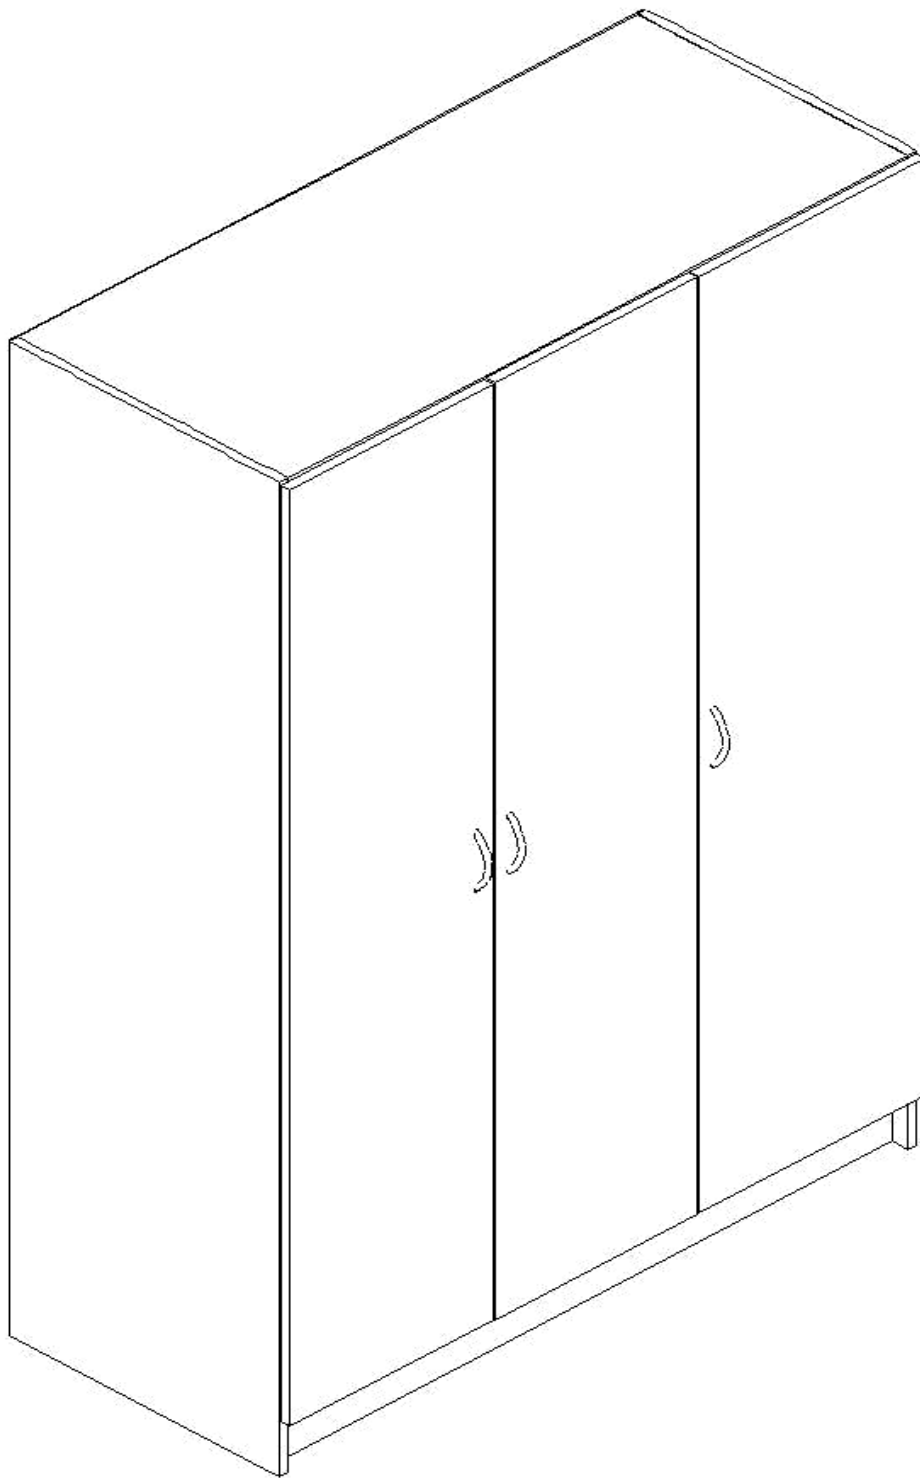

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.

