


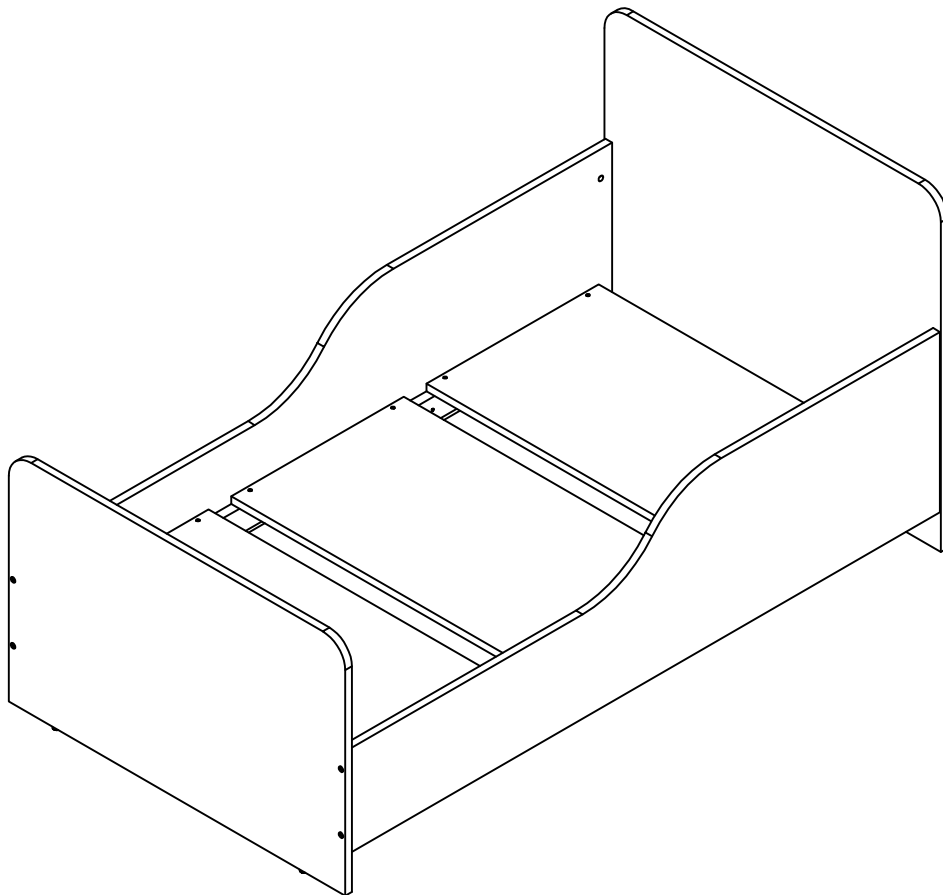

**Fantastic
Furniture**

Version 1.0



TWO PEOPLE



REQUIRED

CABIN TODDLER BED

www.fantasticfurniture.com.au

ENJOY

Your purchase from
Australia's Best Value Furniture Store




Fantastic Furniture




Assembly checklist




Read through the instructions carefully before you begin.

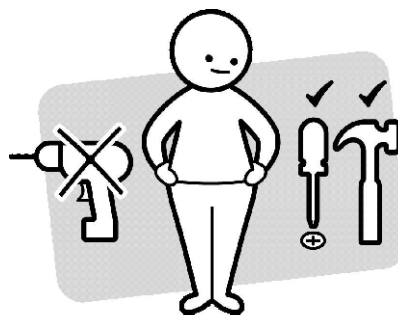

Make sure you have all the required tools. Never use power tools unless instructed.

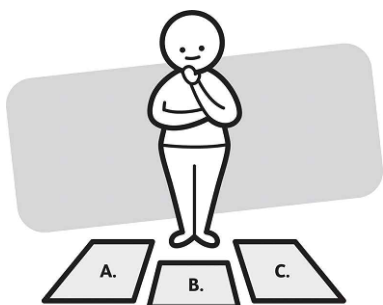

Identify and lay out all of the components before you begin assembly.

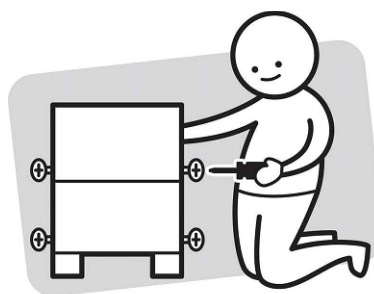

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product



DO NOT USE




Other tools you need

Phillips head screwdriver, soft head mallet.

Parts list

Box 1: Head Board (P1); Foot Board (P2);
Mattress Base Panel (P6); All Hardware.

Box 2: Centre Support (P3); Side Panel L (P4);
Side Panel R (P5).

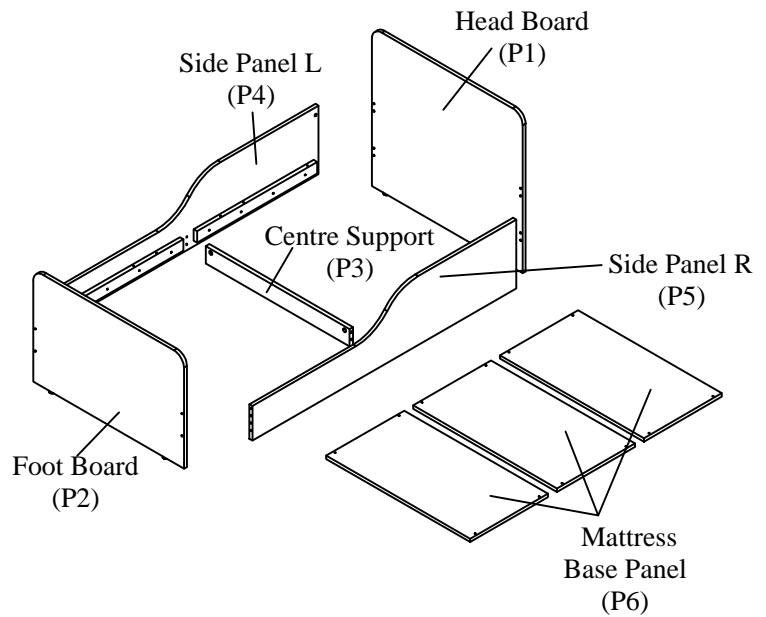


Hardware list


Baller Nut M6 (H1); JCBC SCREW M6x50mm
(H2); Wood Dowel M8x30mm (H3); CSK Screw
M4x30mm (H4); Cam Nut 15mm (H5); Cam Bolt
(H6); Allen Key (H7)



8 x BALLER NUT M6
(H1)



8 x JCBC BOLT
M6x50mm
(H2)



10 x WOOD DOWEL
M8x30mm
(H3)



12 x CSK SCREW
M4x38mm
(H4)




2 x CAM NUT
15mm
(H5)






2 x CAM BOLT
(H6)

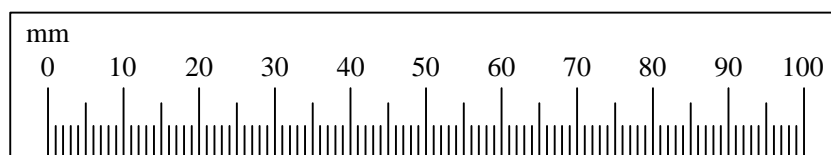


1 x ALLEN KEY
(H7)




Step 1



You will need	
	
8 x Baller Nut M6 (H1)	2 x Cam Nut 15mm (H5)
	
2 x Cam Bolt (H6)	Phillips Head Screwdriver

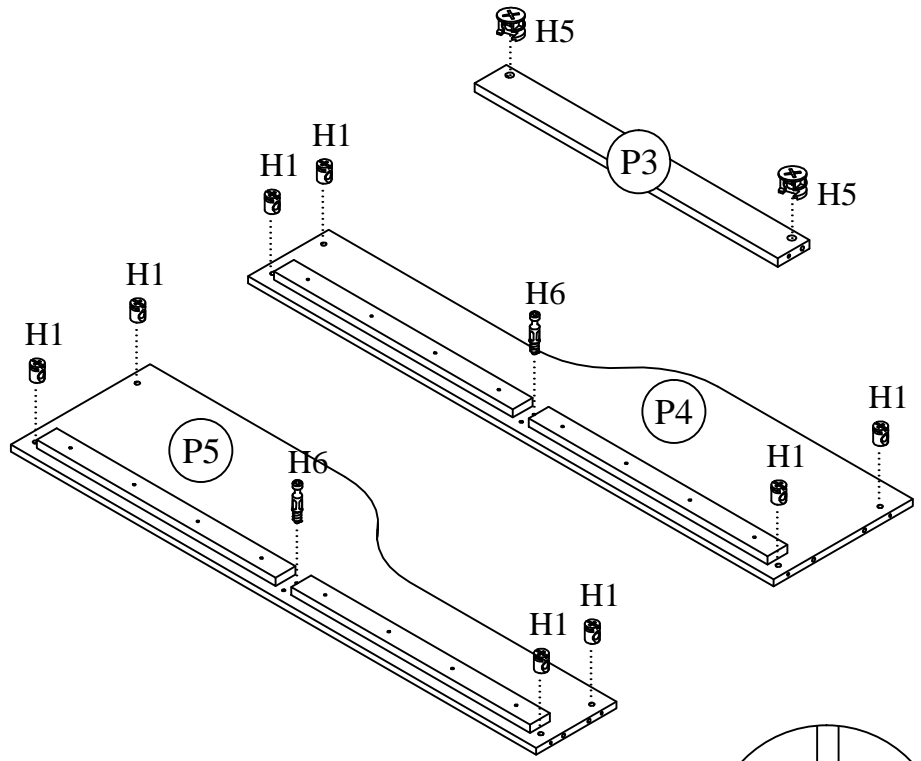


- Insert 2 x cam nuts (H5) into panel (P3).
- Insert 8 x baller nuts (H1) into panels (P4) & (P5).
- Screw 2 x cam bolts (H6) into panels (P4) & (P5) by using a philips head screwdriver.

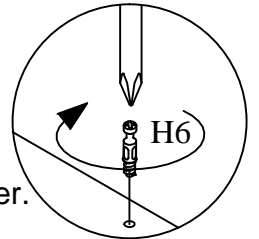


Step 2

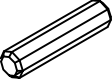
You will need	
	
10 x Wood Dowel M8x30mm (H3)	Soft Head Mallet

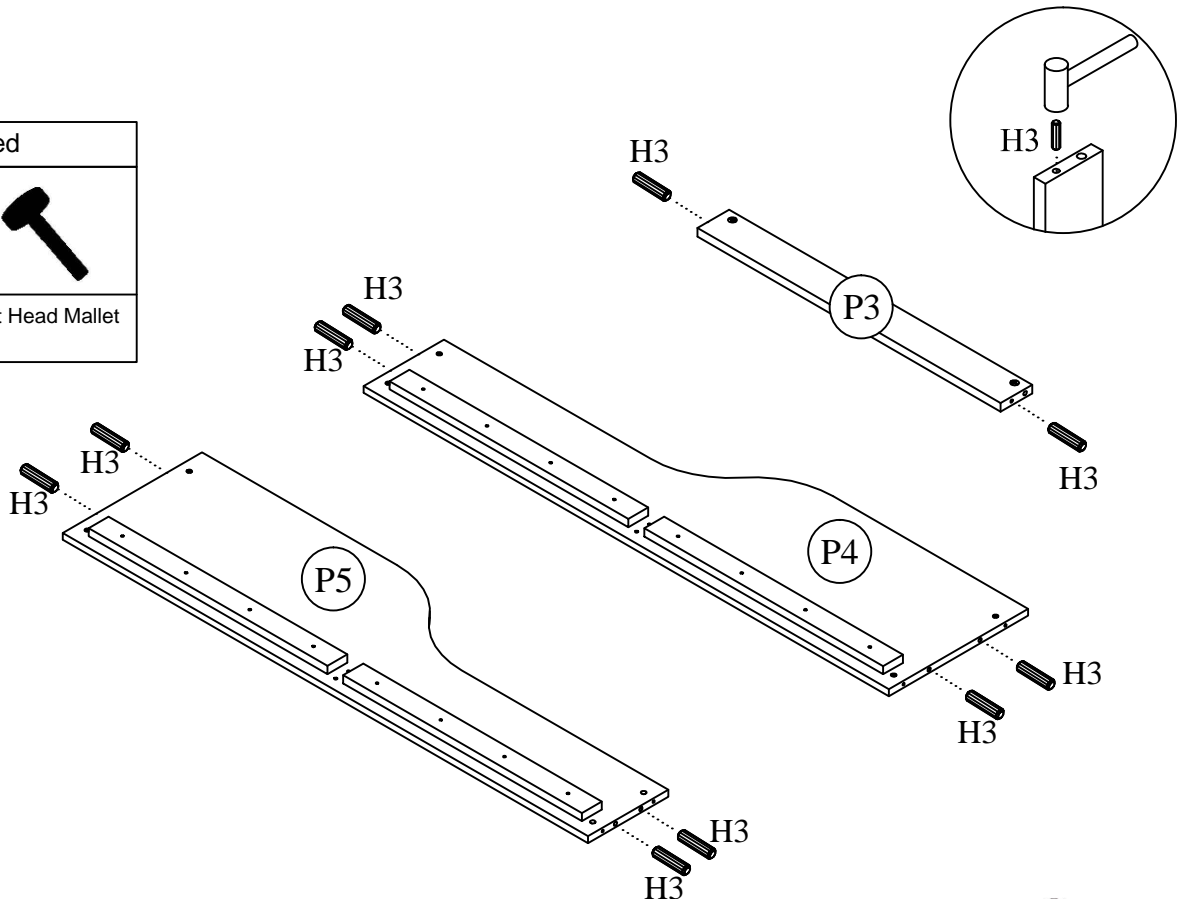


- Insert 10 x dowels (H3) into panels (P3), (P4) & (P5) by hand or gently using a soft head mallet.

Step 3

You will need	
	
Phillips Head Screwdriver	

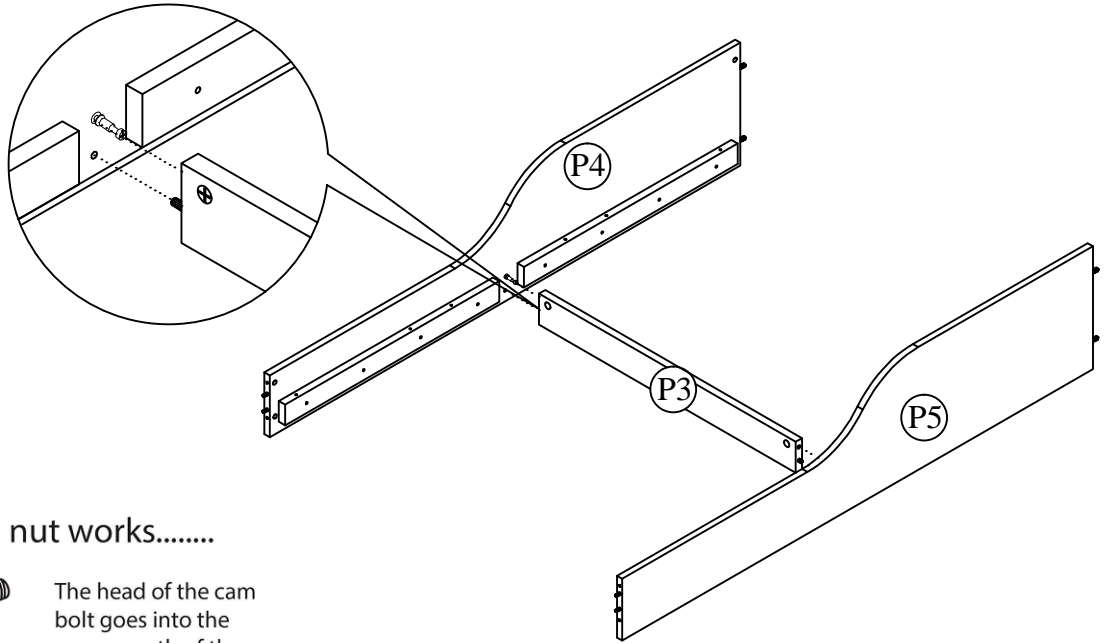



This is how a cam nut works.....

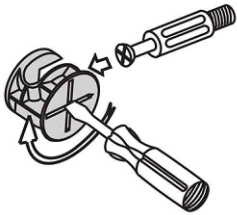


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

- Attach panels (P4) & (P5) to panel (P3).
- Turn the cam nuts on panel (P3) clockwise with a phillips head screwdriver to lock in position.

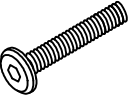

Step 4


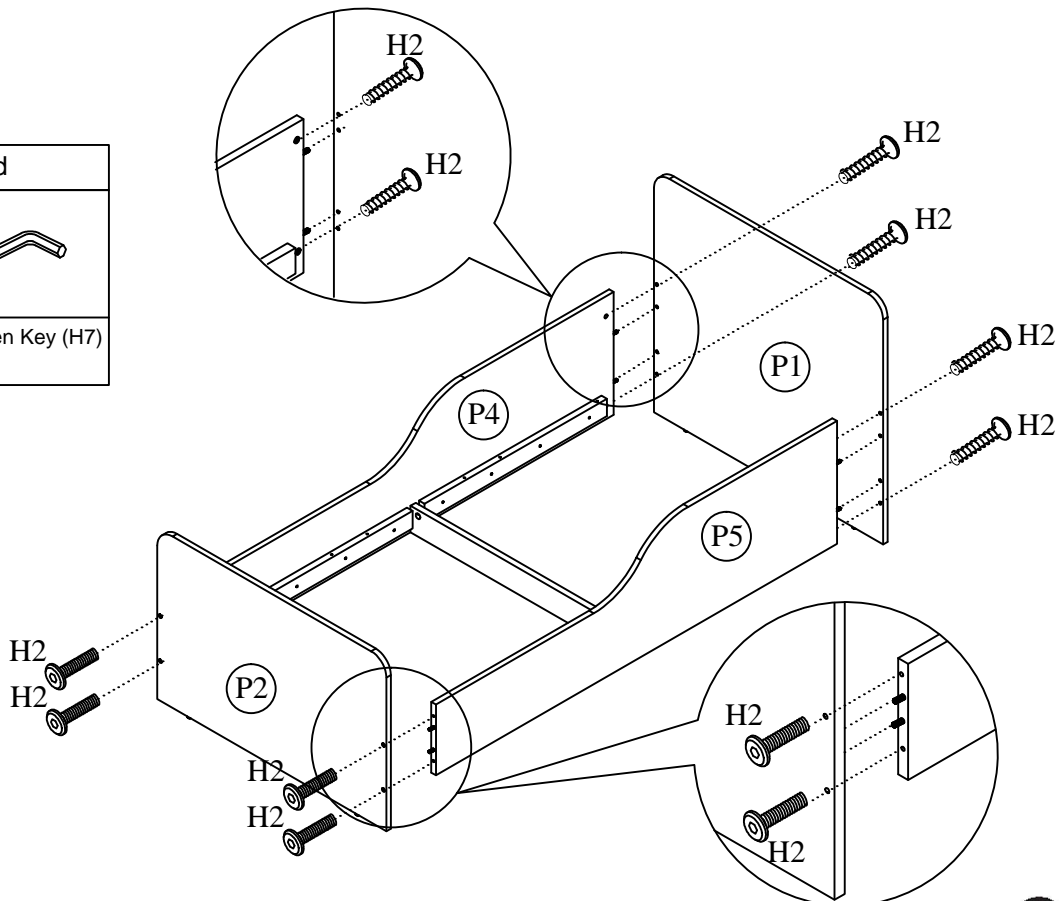
You will need	
	
8 x JCBC Bolts M6x50mm (H2)	1 x Allen Key (H7)




- Secure panels (P1) & (P2) to panels (P4) & (P5) with 8 x bolts (H2) using an allen key.

Step 5

You will need	
	
12 x CSK Screw M4x38mm (H4)	Philips Head Screwdriver

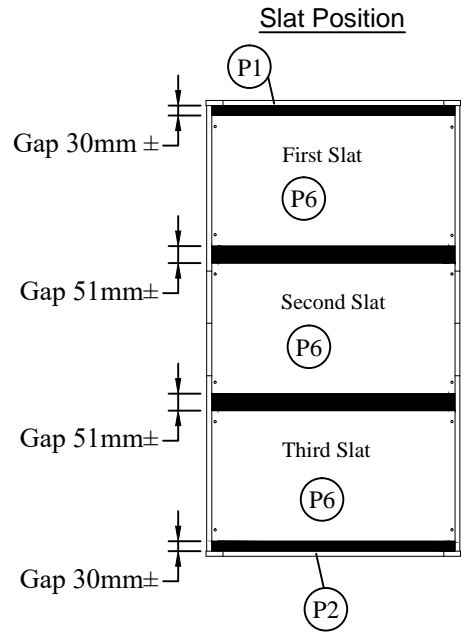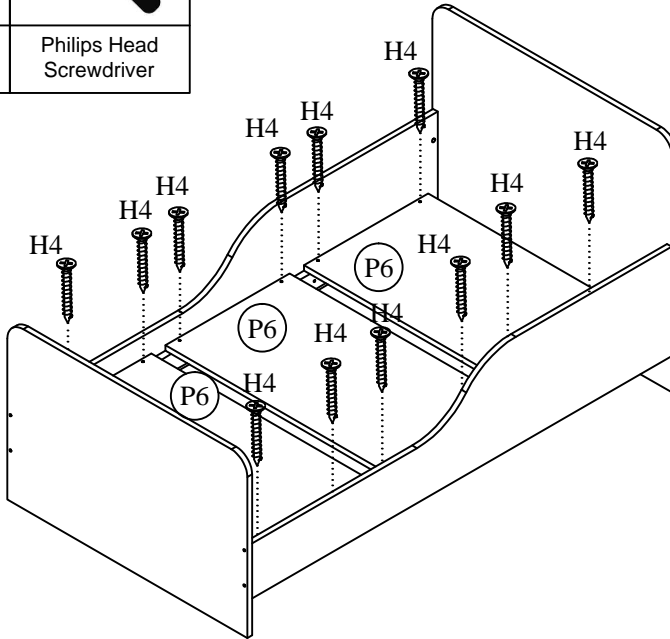

- Secure panels (P6) with 12 x screws by using a philips head screwdriver. Please note the gap dimensions in the above diagram.

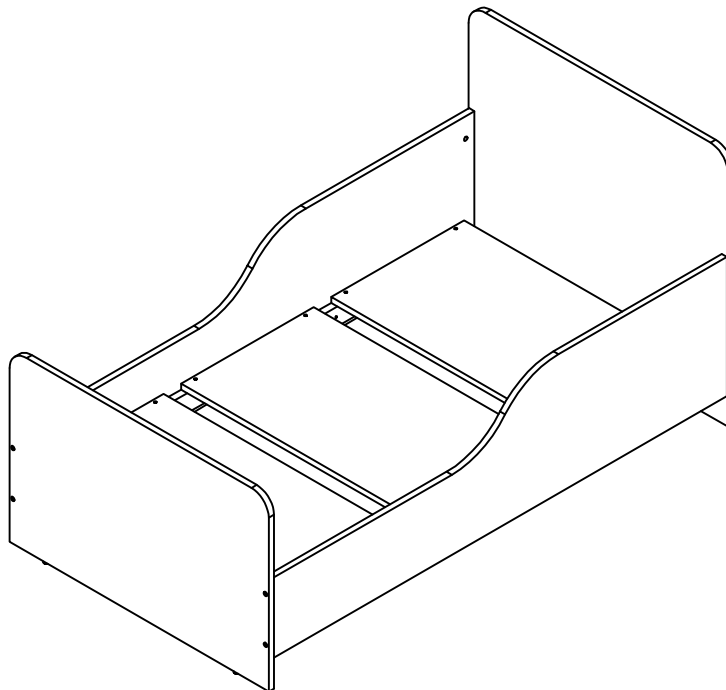

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.