



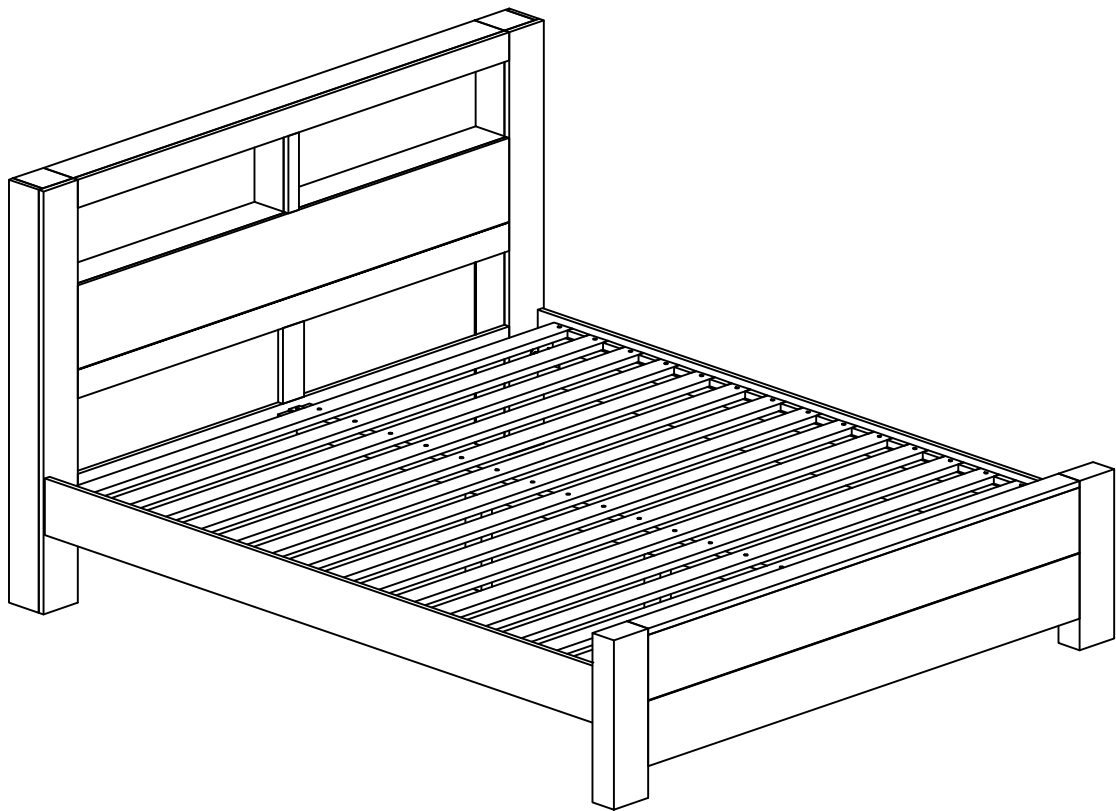

Version 2.0

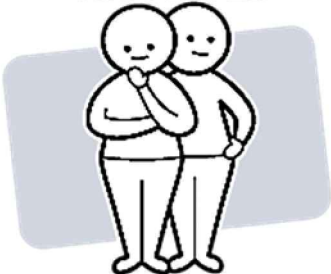

TWO PEOPLE



REQUIRED

KINGSTON

KINGSTON BED QUEEN WITH STORAGE

www.fantasticfurniture.com.au

Enjoy

Your purchase from
Australia's Best Value Furniture Store




Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

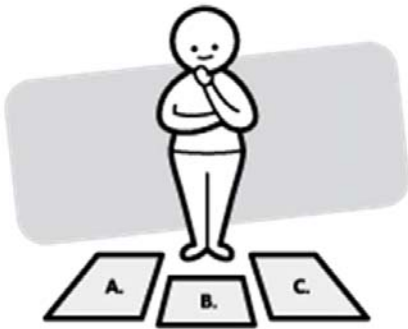

Identify and lay out all of the components before you begin assembly.

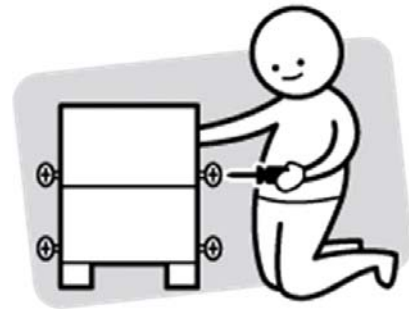

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product




DO NOT USE



Other tools you need


Hammer; Phillips head screwdriver

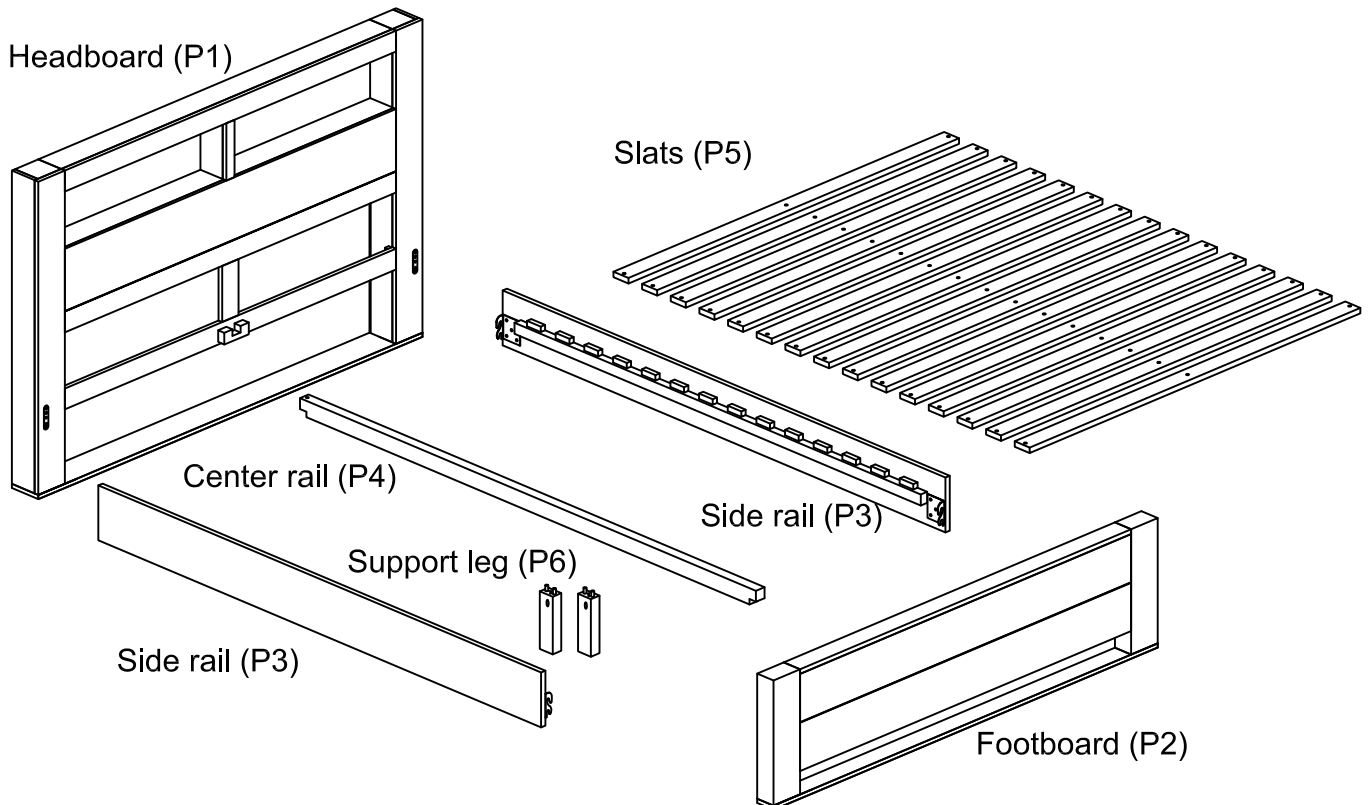

Parts list

Box 1: Side rails (P3), Center rail (P4), Slats (P5), Support legs (P6).

Box 2: Headboard (P1), Footboard (P2).




1 x Allen key
(H1)




8 x Washers
Ø 16 x 1 mm
(H2)



8 x Bolts
M6 x 25 mm
(H3)




5 x Screws
4 x 40 mm
(H4)



45 x Screws
4 x 30 mm
(H5)






4 x Plastic feet
Ø22 x 5 mm
(H6)

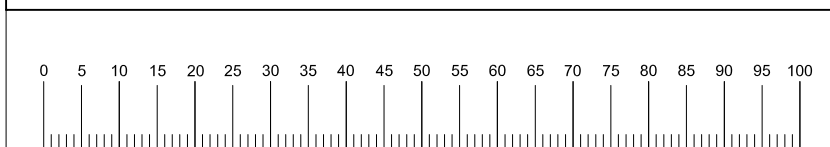

Step 1

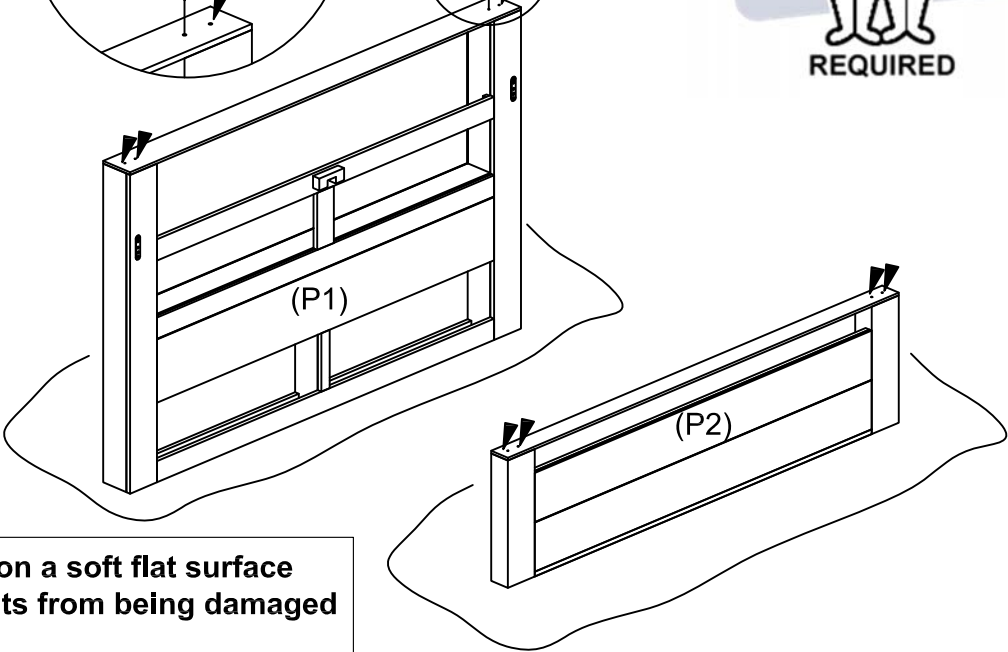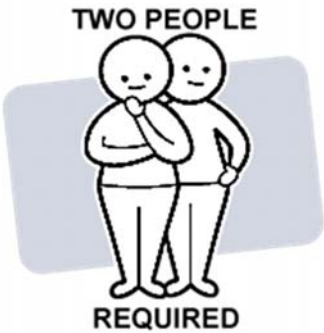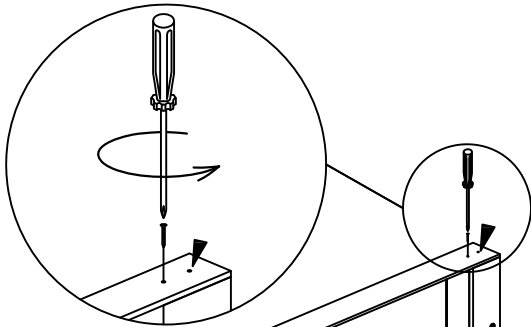

| You will need | |
|---|--|
|  | |
| Phillips head screwdriver | |





Note: Assemble the Bed on a soft flat surface to prevent the components from being damaged during assembly.

Turn the Headboard (P1), Footboard (P2) upside down (Bottom Up). Using a Screwdriver, loosen the 8 Screws and remove the Plywood brace.




Step 2

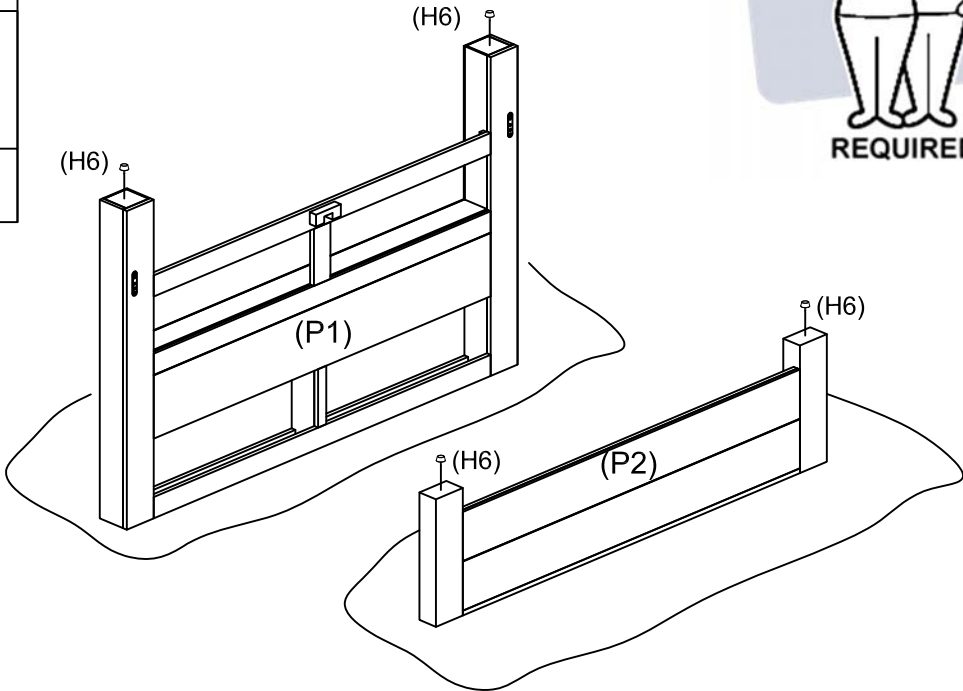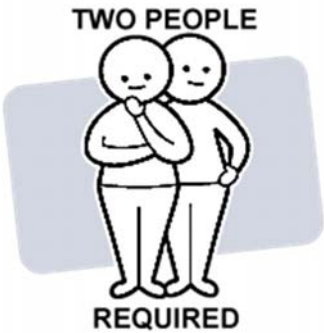
| You will need | |
|---|---|
|  |  |
| Hammer | 4 x Plastic feet (H6) |



Use a Hammer to nail the Plastic feet (H6) to the Legs.
www.fantasticfurniture.com.au




Step 3

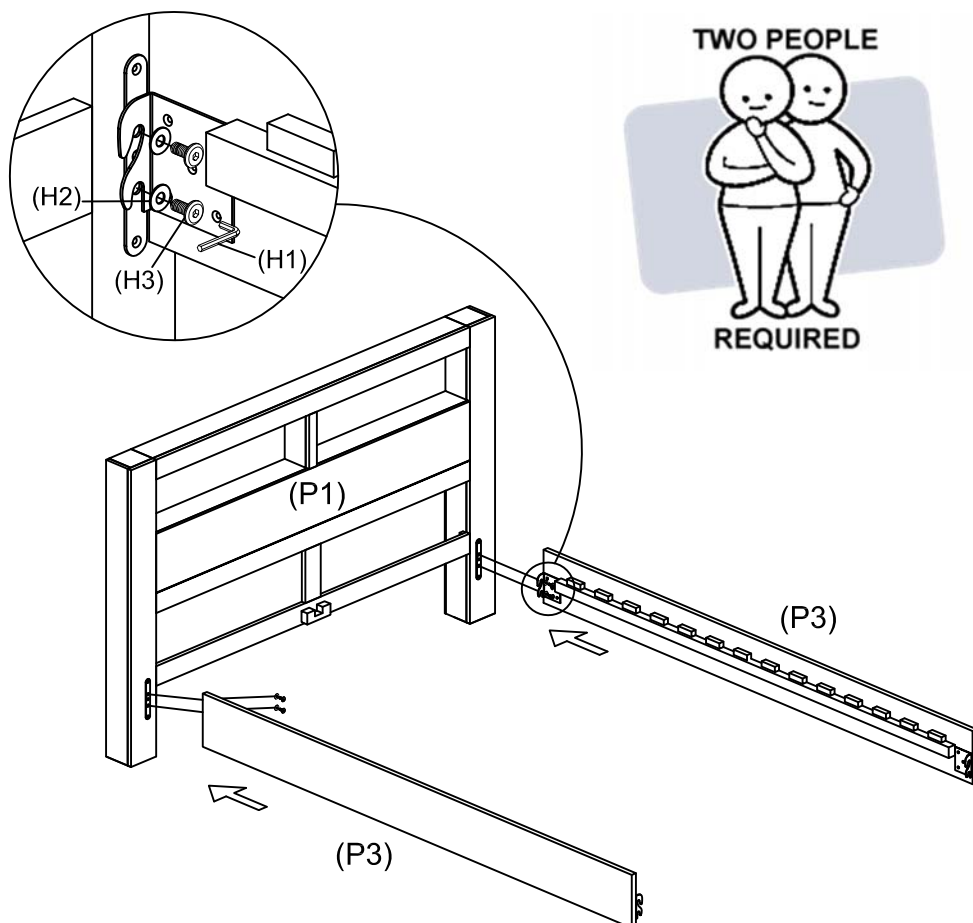
| You will need | |
|---|---|
|  |  |
| 1 x Allen key (H1) | 4 x Washers (H2) |
|  | |
| 4 x Bolts (H3) | |



Attach 2 x Side rails (P3) to the Headboard (P1) using 4 x Bolts (H3) and 4 x Washers (H2) as shown. Tighten the Bolts (H3) with Allen key (H1).



Step 4


| You will need | |
|---|---|
|  |  |
| 1 x Allen key (H1) | 4 x Washers (H2) |
|  | |
| 4 x Bolts (H3) | |

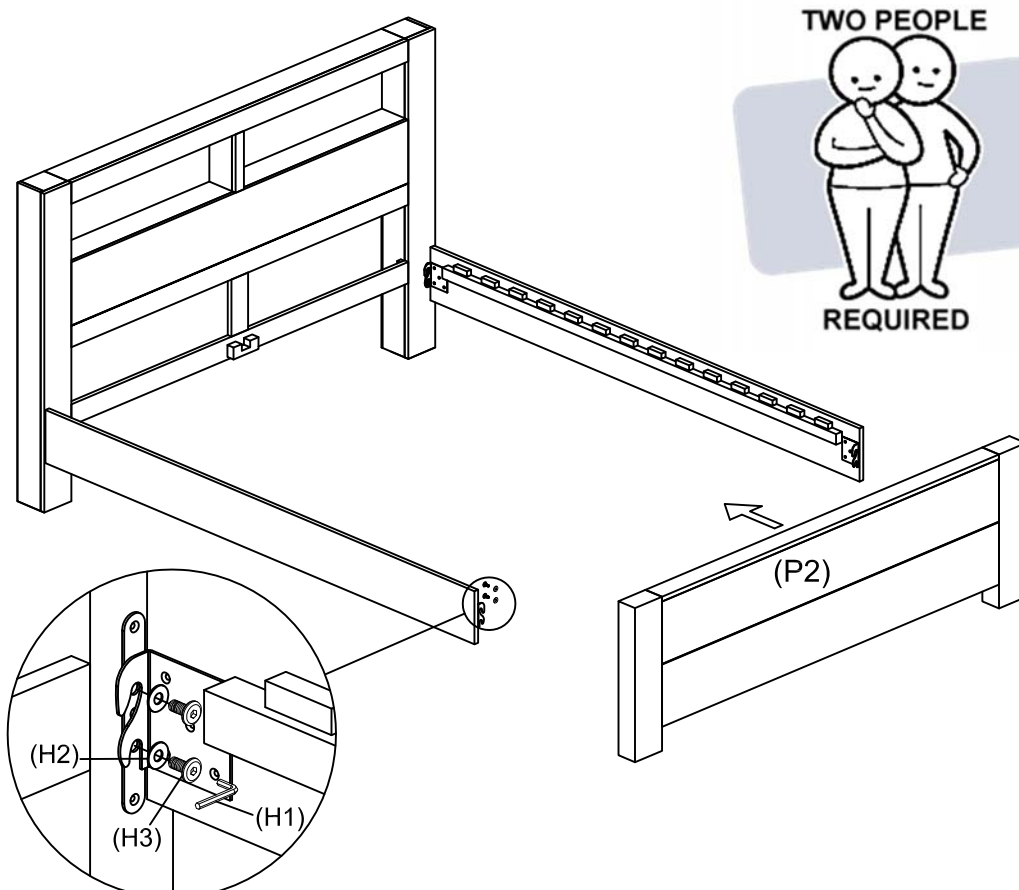

Attach the Footboard (P2) to 2 x Side rails (P3) using 4 x Bolts (H3) and 4 x Washers (H2) as shown. Tighten the Bolts (H3) with Allen key (H1).


Step 5

| You will need | |
|---|---|
|  |  |
| 4 x Screws (H4) | Phillips head screwdriver |

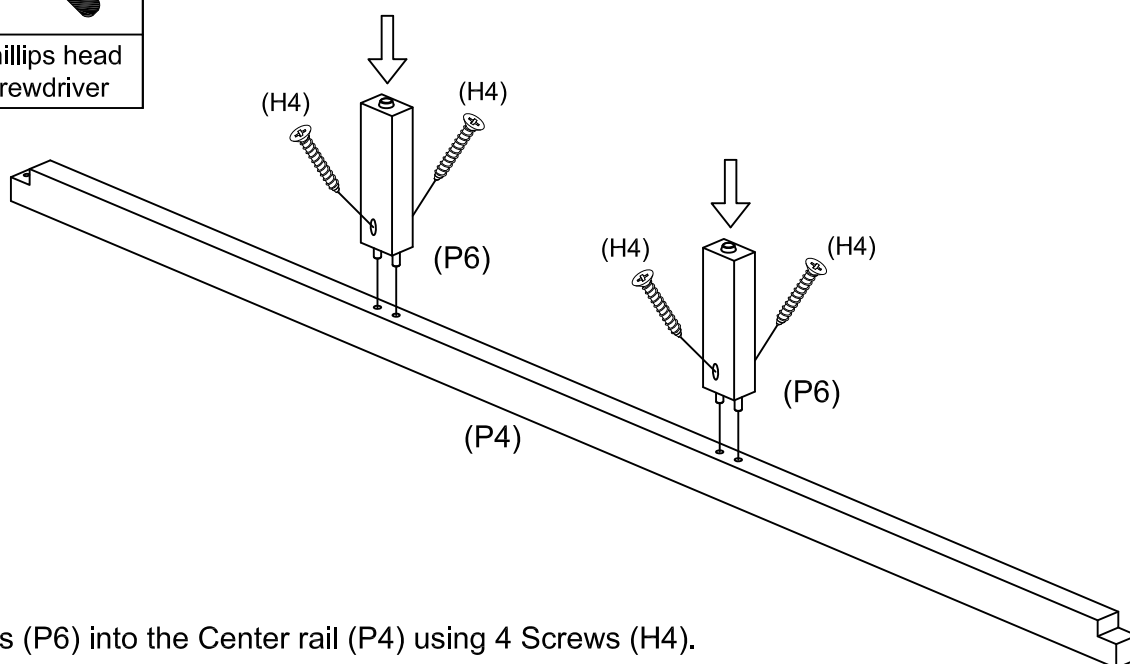

Fix the Support Legs (P6) into the Center rail (P4) using 4 Screws (H4).


Step 6

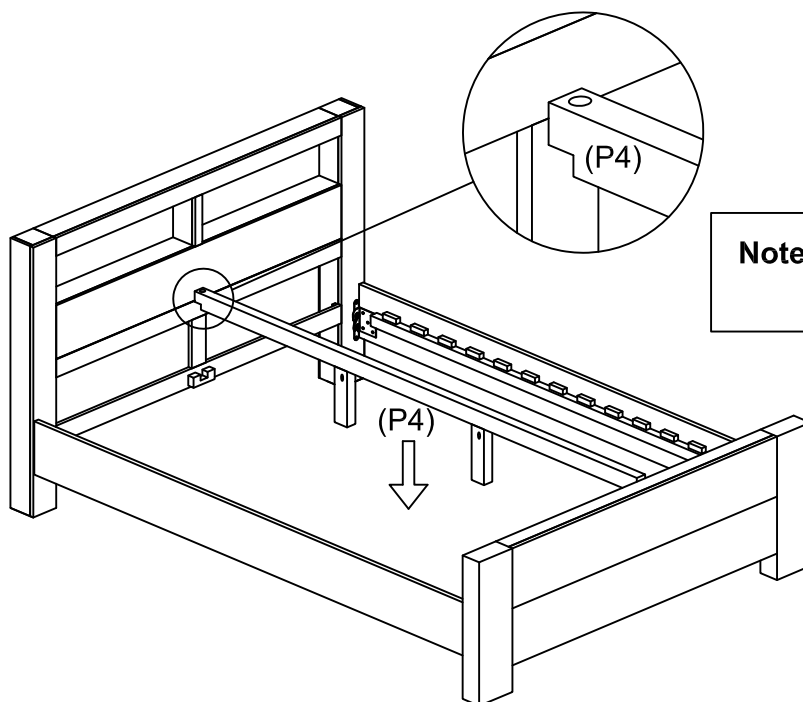

Note: Ensure screw hole in P4 is at headboard.



Place the Center rail (P4) into the Bed frame.


Step 7

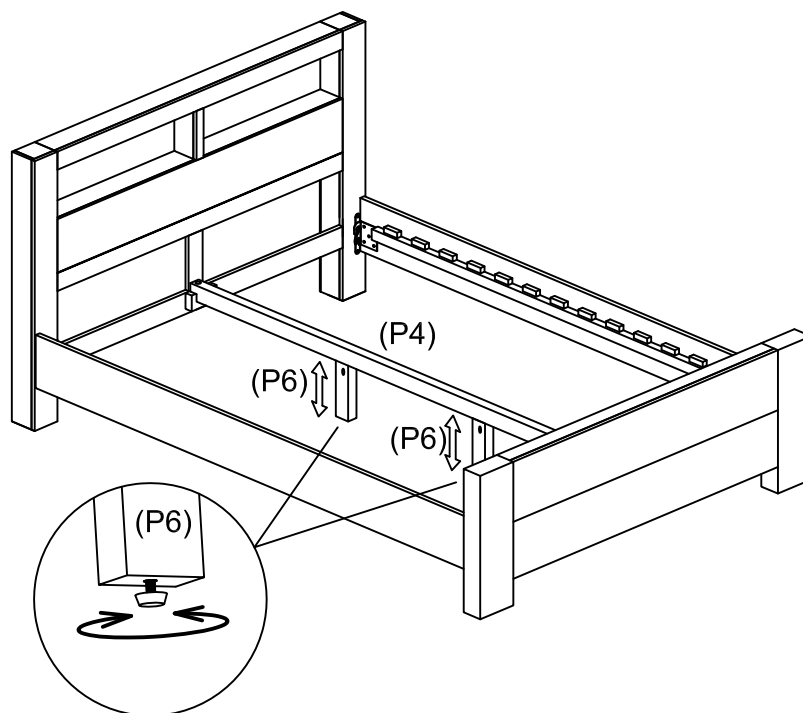

Adjust the Plastic feet.



Step 8


| You will need | |
|---|---|
|  |  |
| 1 x Screw (H4) | Phillips head screwdriver |

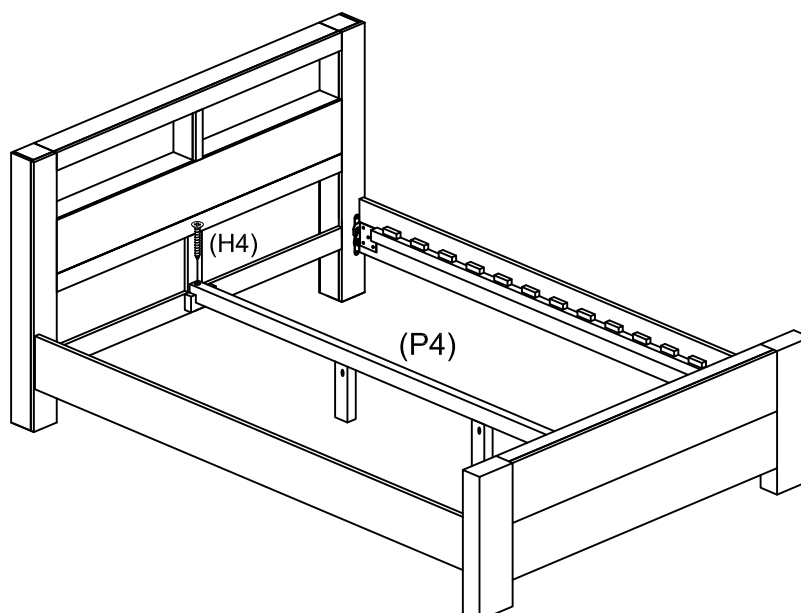

Fix the Center rail (P4) into the Headboard with Screws (H4).


Step 9

| You will need | |
|---|---|
|  |  |
| 45 x Screws (H5) | Phillips head screwdriver |

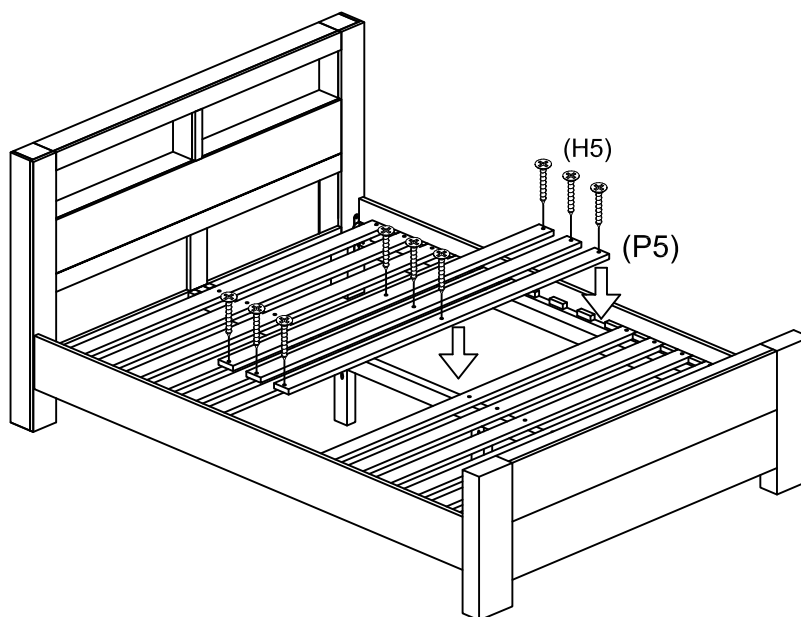

Place the Slats (P5) into the Bed frame, fix the Slats to the Bed frame with Screws (H5).

Step 10

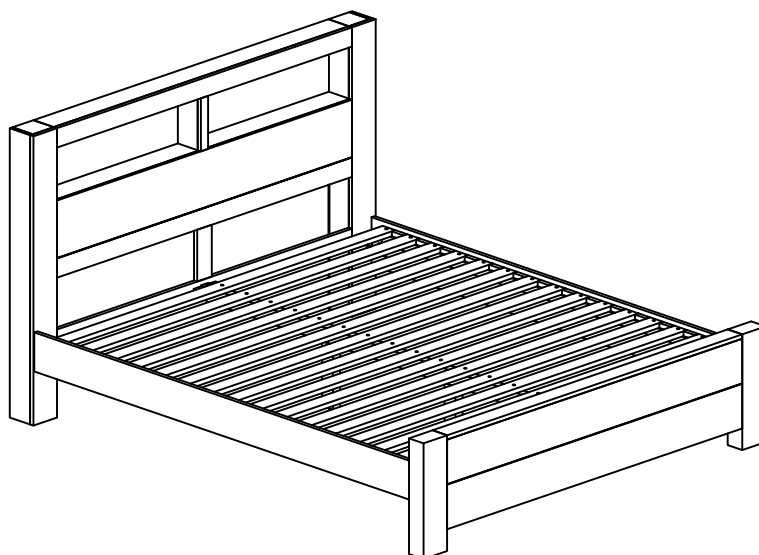

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.