




Version 2.0

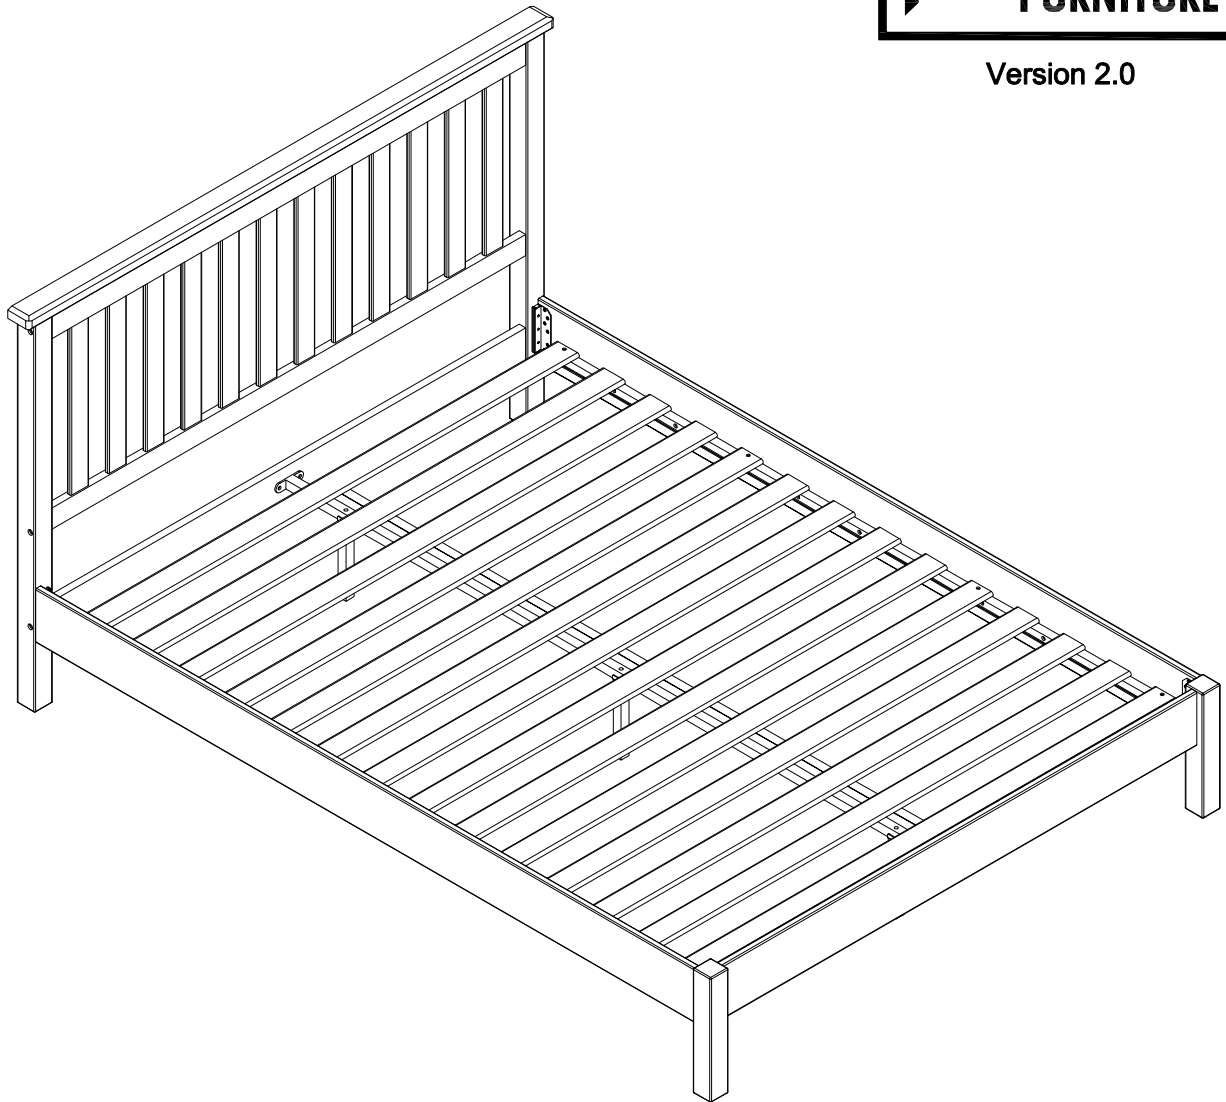

TWO PEOPLE



REQUIRED

Ashford

Queen Bed

www.fantasticfurniture.com.au

Enjoy
Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools.
Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

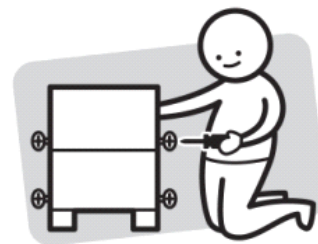

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What You Need

To Assemble the Product



(Other Tools You Need)
Phillips Head Screwdriver
Mallet

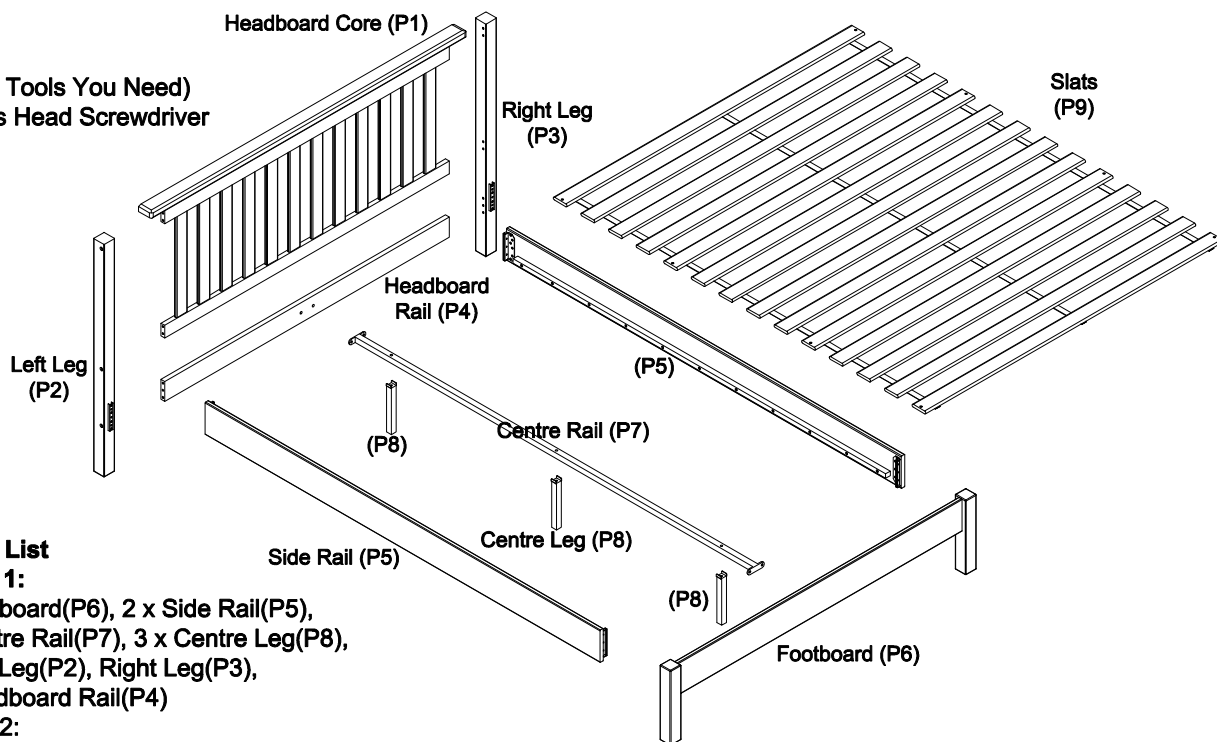

Part List

Box 1:


Footboard(P6), 2 x Side Rail(P5),
Centre Rail(P7), 3 x Centre Leg(P8),
Left Leg(P2), Right Leg(P3),
Headboard Rail(P4)

Box 2:


Headboard Core(P1), Slats(P9)



4 x Bolts
(H1)




3 x Bolts
(H2)



3x Washer
(H3)



8 x Wood
Screws
(H4)

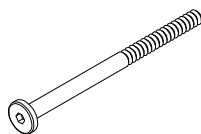

6x Bolts
(H5)



6x Nuts
(H6)



8 x Wooden
Dowels
(H7)



1 x Allen
Key
(H8)





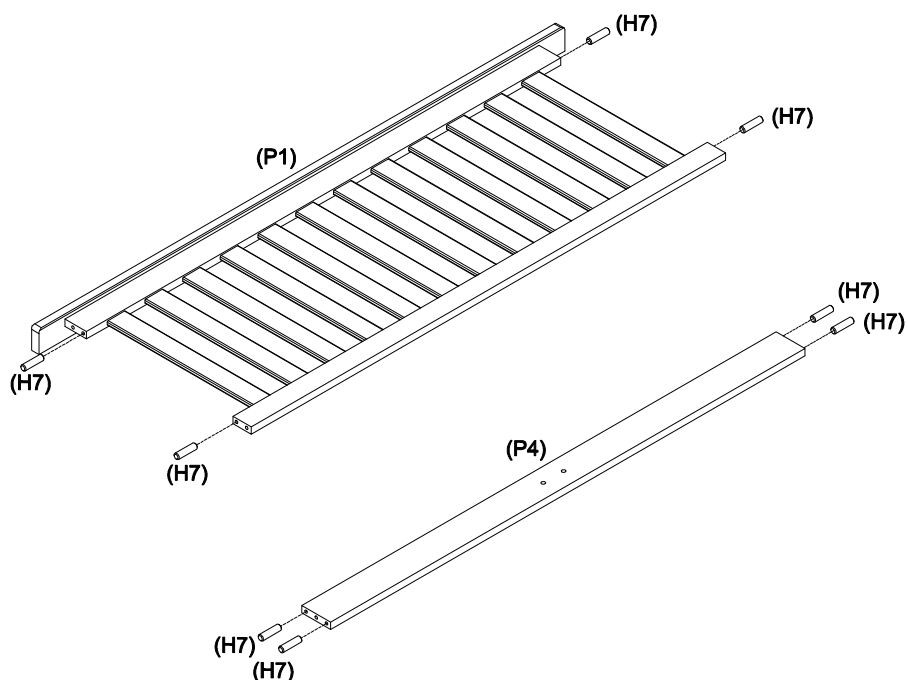
8x Bolts
(H9)

Please make sure you have all these parts before you start.

Step 1

You will need:




8 x Wooden Dowels (H7)	
Mallet	




Insert Wooden Dowels (H7) into the Headboard Core (P1) and Headboard Rail (P4) as shown.

Step 2

You will need:

6 x Bolts (H5)	
6 x Nuts (H6)	
1 x Allen Key (H8)	




opening on Nut face incoming Bolt

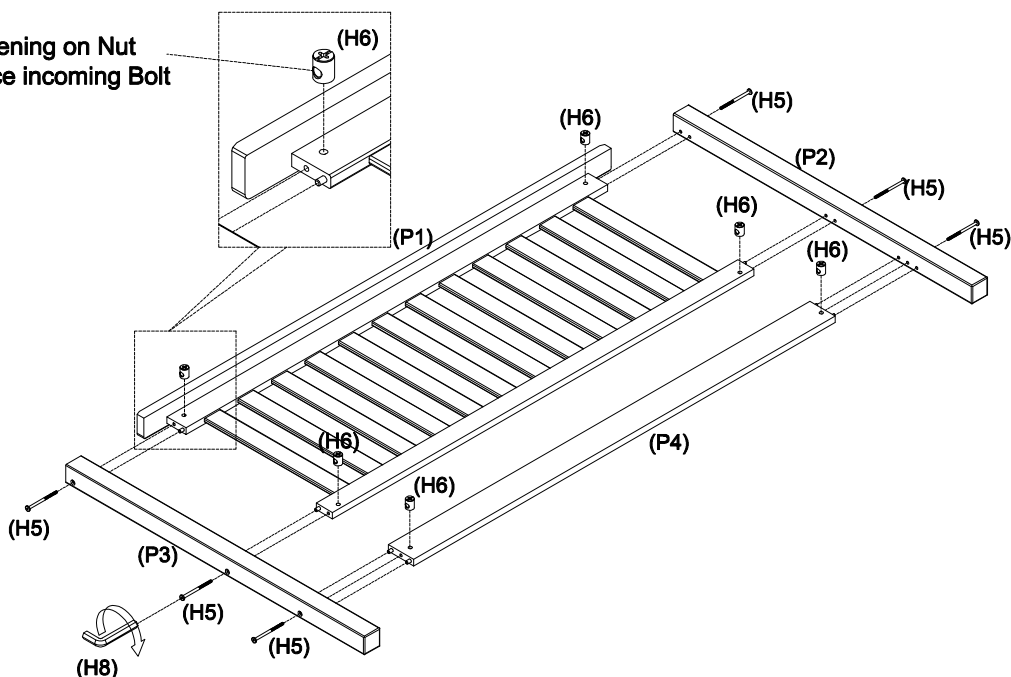


Attach the Legs (P2 & P3) to the Headboard Core (P1) and Headboard Rail (P4), insert 6 x Nuts (H6) into Rail (P4) and Headboard Core (P1) as shown. Make sure the opening on Nut is facing incoming Bolts, then insert Bolts (H5), use Allen Key (H8) turning clockwise to fix.

Step 3

You will need:




3 x Bolts (H2)	
3x Washer (H3)	
1 x Allen Key (H8)	

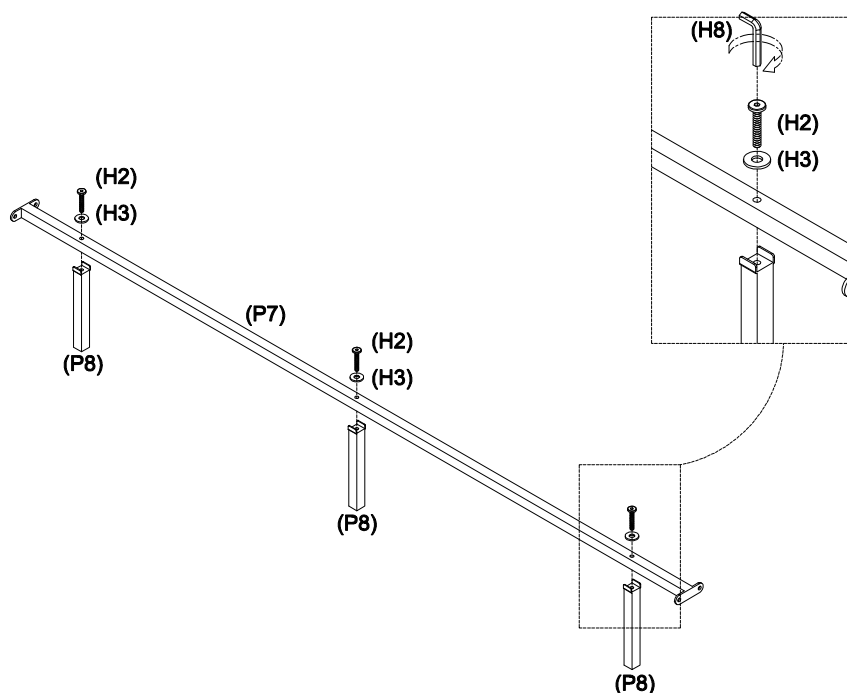


Attach Centre Legs (P8) to Centre Rail (P7), insert Washer (H3) and Bolts (H2) using the Allen Key (H8), Turn bolts clockwise to lock.

Step 4

You will need:

4 x Bolts (H1)	
8x Bolts (H9)	
1 x Allen Key (H8)	

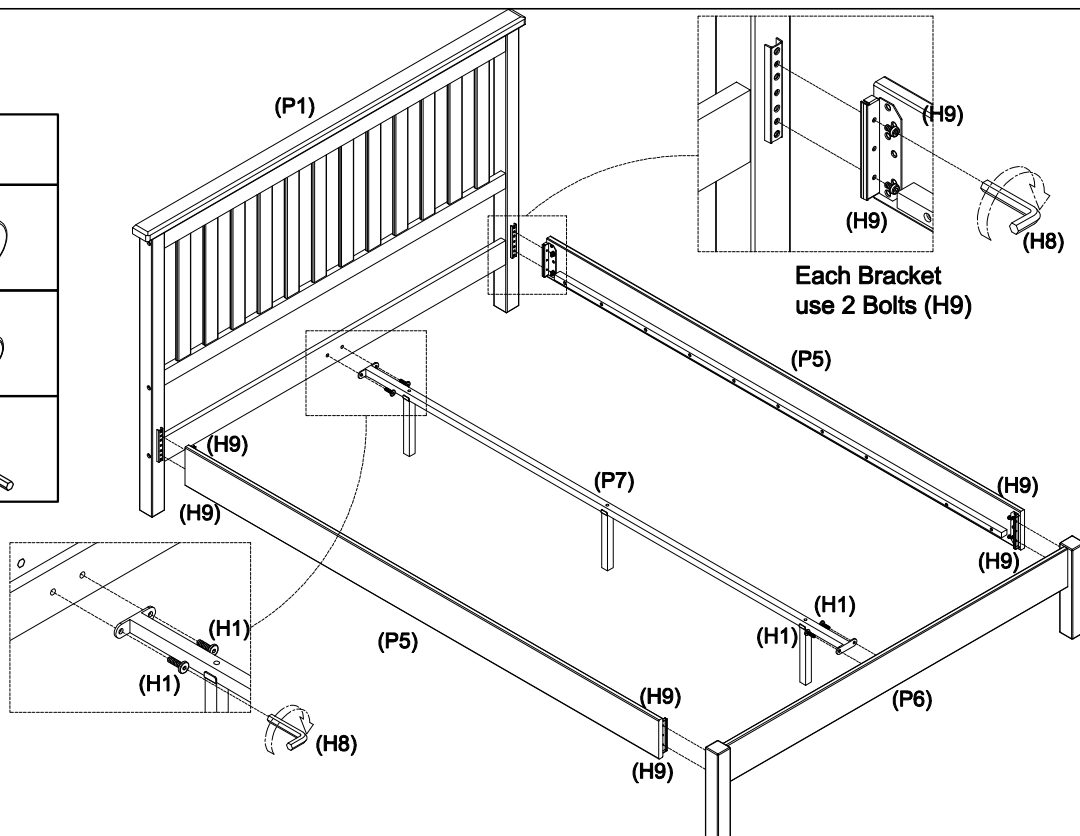


Connect Side Rails (P5) with Headboard and Footboard (P6), using the Allen Key (H8), turn Bolts (H9) clockwise to fix. Connect Centre Rails (P7) with Headboard and Footboard (P6), using the Allen Key (H8) to turn the Bolts (H1) clockwise to fix.


Step 5

You will need:


8 x Wood
Screws
(H4)



Phillips head
screwdriver

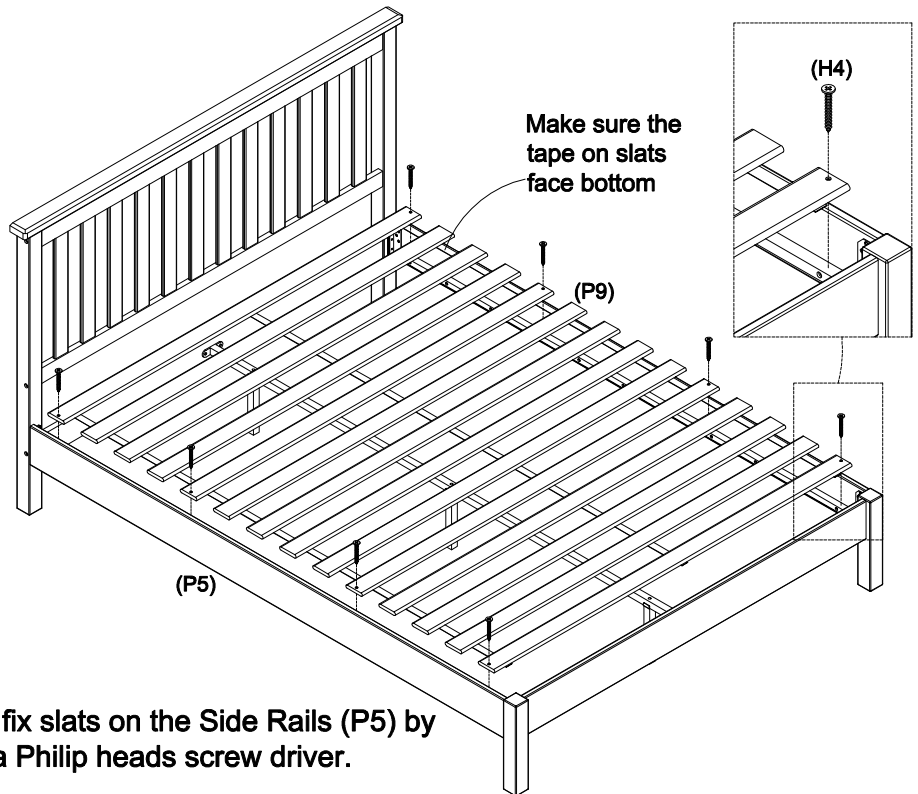

Put Slats (P9) on the bed, and fix slats on the Side Rails (P5) by using Wood Screws (H4) and a Philip heads screw driver.

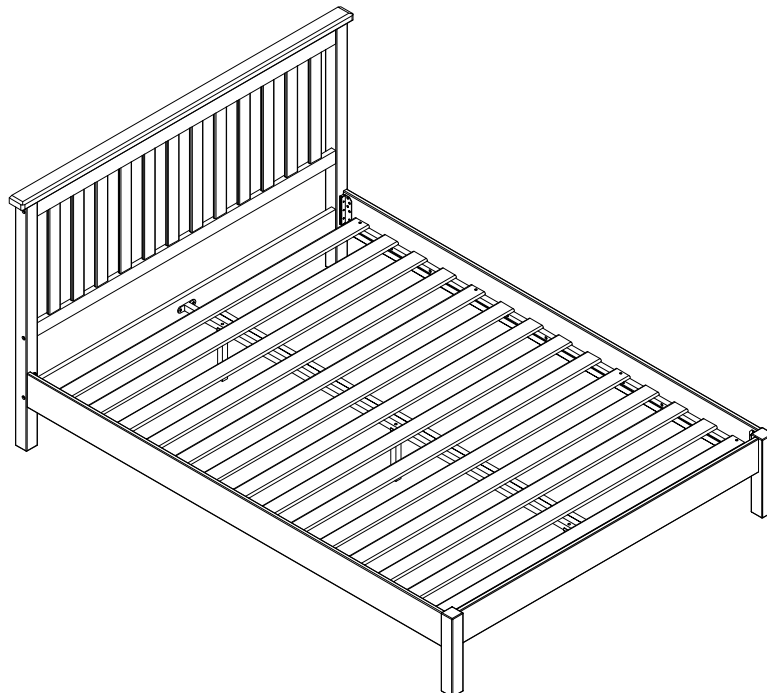

Job Complete!

In the interest of our environment
please dispose of all packing thoughtfully.