



Version 1.0

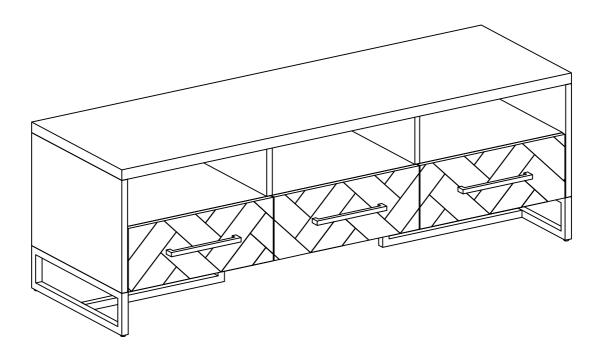

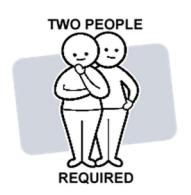

# PORTOFINO

Lowline Medium

www.fantasticfurniture.com.au

# **Enjoy**

# Your purchase from Australia's Best Value Furniture Store





WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been fitted with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.


## **Assembly Checklist**



Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

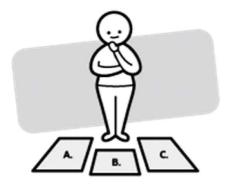

Identify and lay out all of the components before you begin assembly.




Unless instructed, do not fully tighten screws until the item is fully assembled.


### **Useful Information**

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re\_tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

## What you need

to assemble the product 1 x Philips head Screwdriver (NOT PROVIDED)

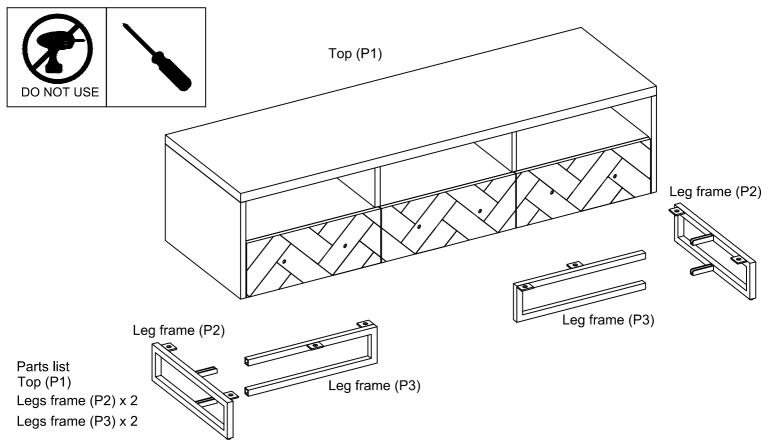


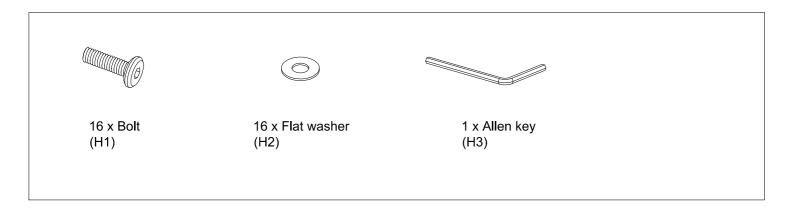


### Step 1

You will need 8 x Flat washer 8 x Bolt (H1) (H2)1 x Allen key (H3)

Note: Assemble the lowline on a soft flat surface to prevent unit from being damaged during assembly.

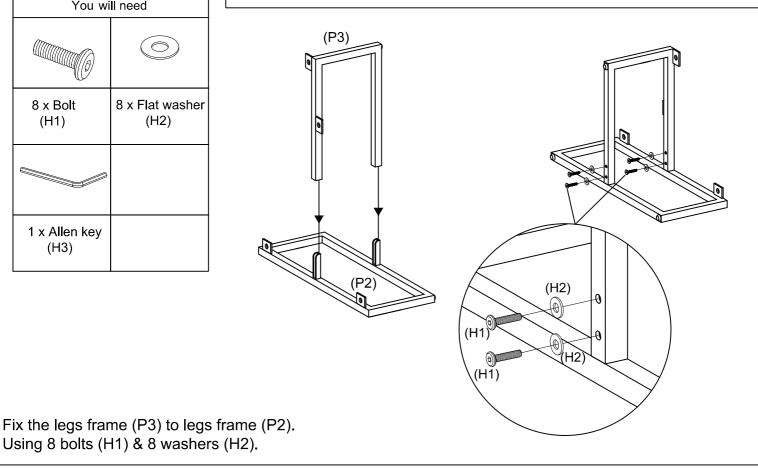


Step 2

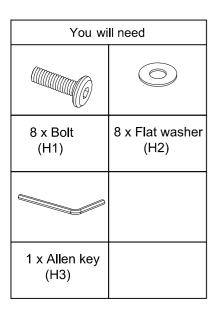


(H2)

Fix the legs frame to Top (P1). Using 8 bolts (H1) & 8 washers (H2).

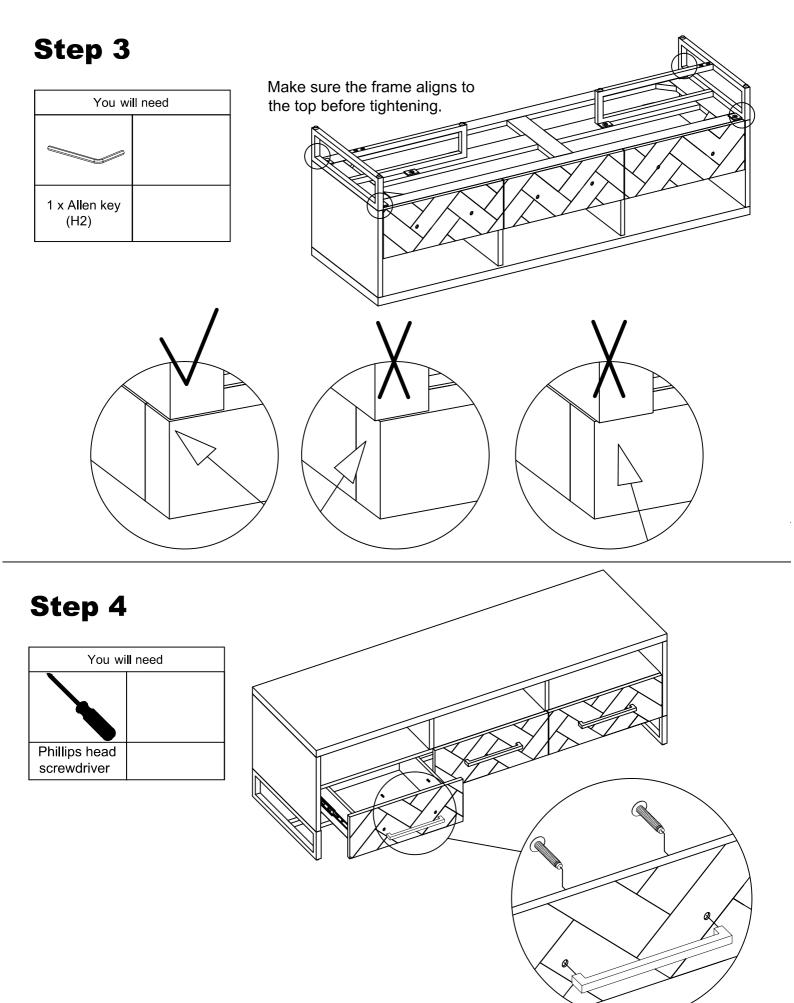


The handles are fitted on the inside of the drawers to protect them during transport. Open the drawers, unscrew the handles, and then fix them on the outside as shown.



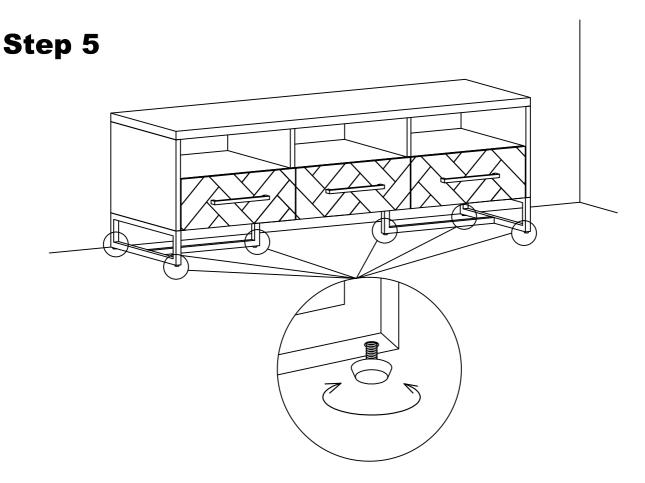

Stabilize your unit by adjusting the plastic feet as maybe required.

#### Step 6

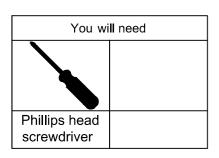


Screw, Washer and Wall Plug are not provided.


Please use appropriate fixtures for your wall

Seek advice from a qualified trades person on how to attach safety strap to the wall.

Move the lowline medium to the final position and attach the safety strap to the wall securely

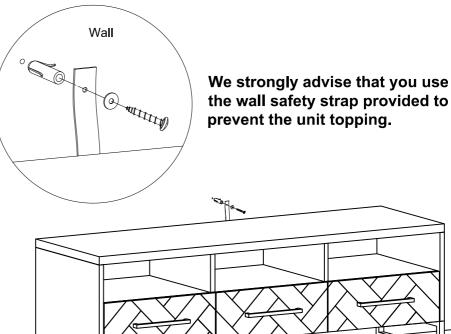

#### Step 7

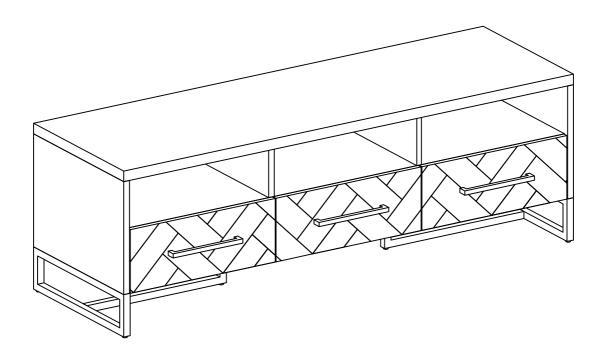

# **Job Complete!**

In the interest of our environment please dispose of all packaging thoughtfully.

