


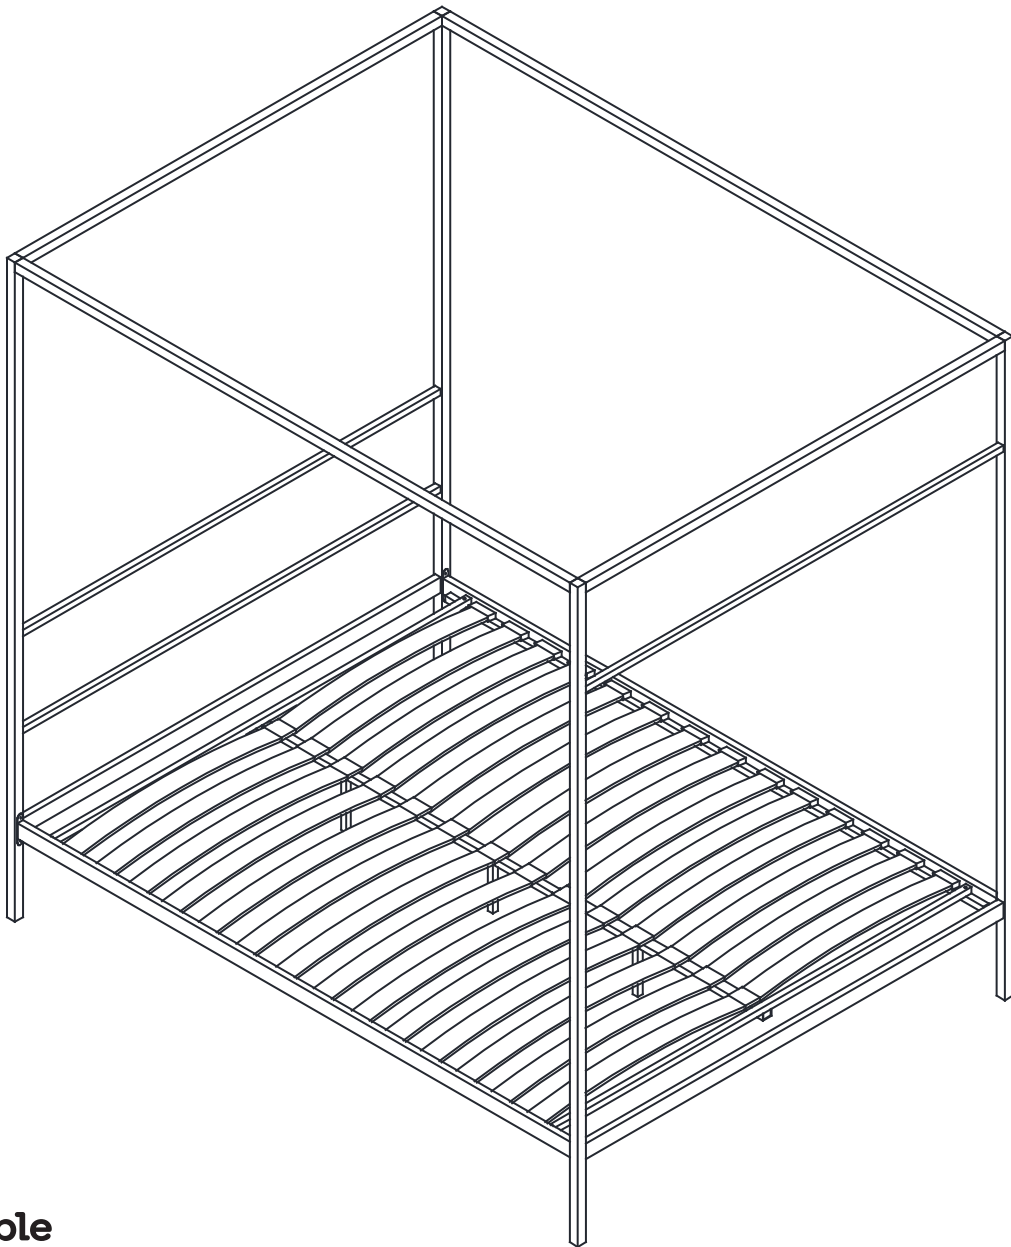


**Fantastic
Furniture**

Version 1.0



Two People

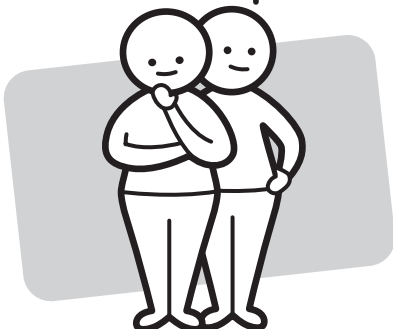

Required

Toulon

Queen

fantasticfurniture.com.au

Look like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



**Fantastic
Furniture**

Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

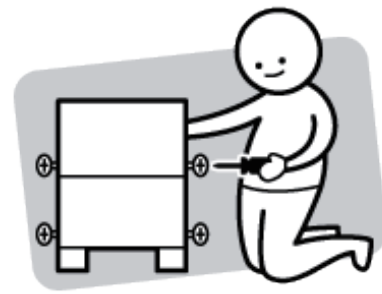

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.

! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.


! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE

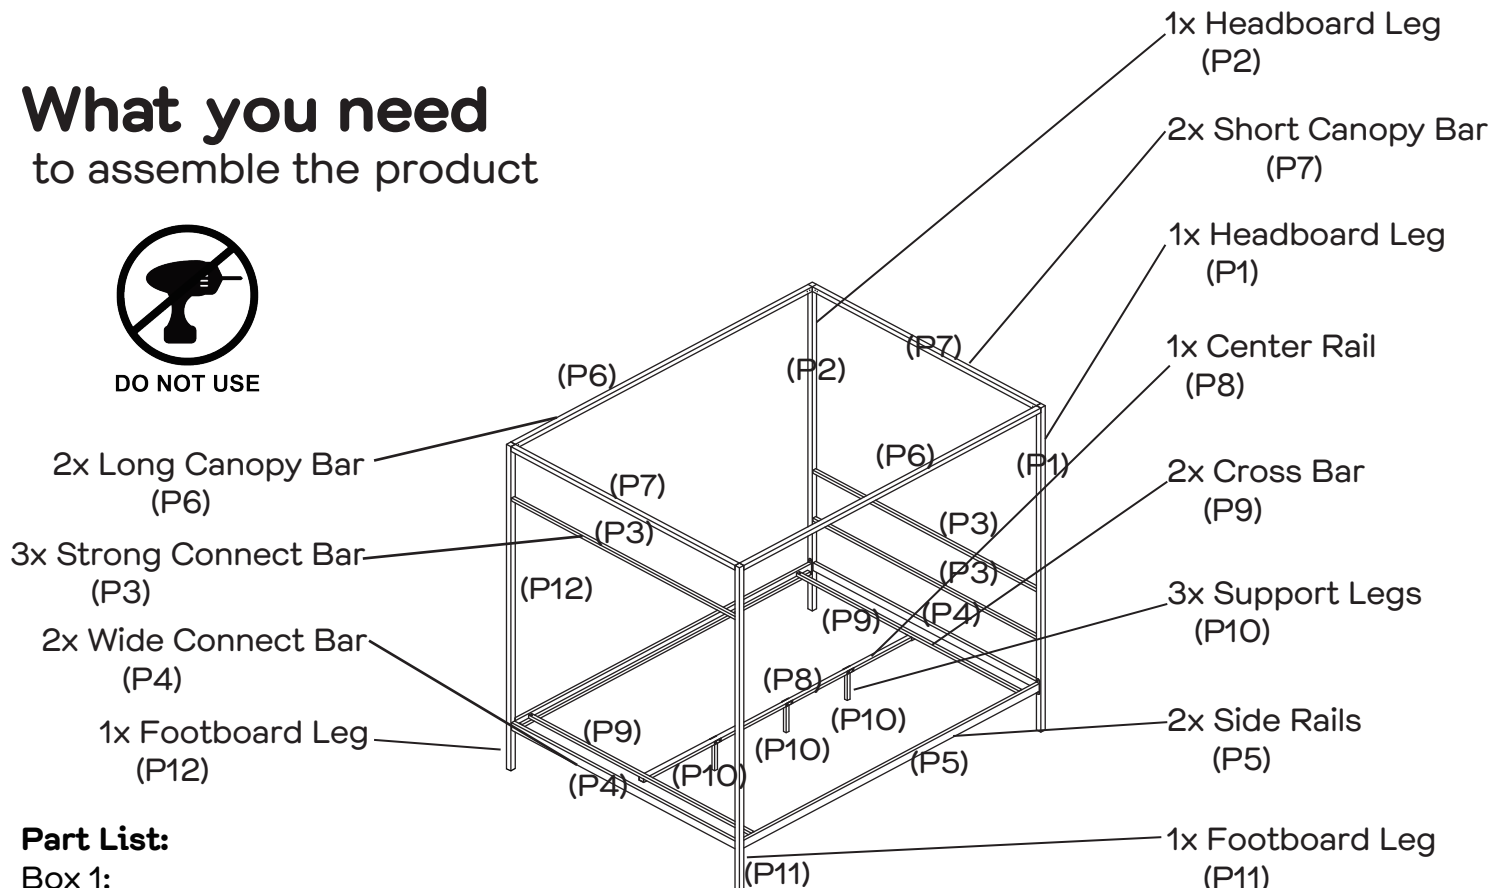


Part List:

Box 1:


- 2 x Headboard Legs (P1&P2)
- 2 x Footboard Legs (P11&P12)
- 3 x Strong Connect Bar (P3)
- 2 x Wide Connect Bar (P4)
- 2 x Long Canopy Bar (P6)
- 2 x Short Canopy Bar (P7)
- 2 x Side Rails (P5)
- 1 x Center Rail (P8);
- 2 x Cross Bar (P9);
- 3 x Support Legs (P10);

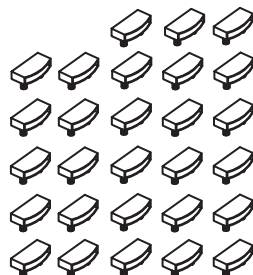

28 x Plastic Slat Caps (P13)

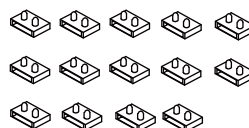

14 x Center Plastic Slat Caps (P14)

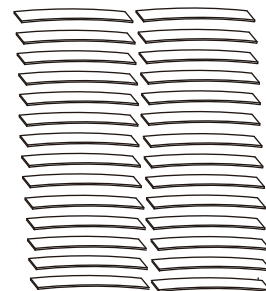

28 x Slats (P15)

Box 2:

- 28 x Slats (P15)
- 28 x Plastic Slat Caps (P13);
- 14 x Centre plastic slat caps (P14)





Hardware pack


| | | | | | |
|-----------------------------------|--|---|--|-------------------------------------|------------------------------------|
| | | | | | |
| 14 Big Bolts M8 x 45mm (H1) | 4 Thin Long Bolts M6 x 55mm (H2) | 6 Thin Short Bolts M6 x 40mm (H3) | 20 x Thin Short Bolts M6 x 14mm (H4) | 8 x Thin Bolts M6 x 25mm (H5) | 8 x Metal Cap M6 x 18mm (H6) |
| | | | | | |
| 24 x Metal Washer (H7) | 10 x Hex Nuts (H8) | 1 x Spanner (H9) | 2 x Small Allen Key (H10) | 1 x Large Allen Key (H11) | |

Please make sure you have all these parts before you start.



Step 1

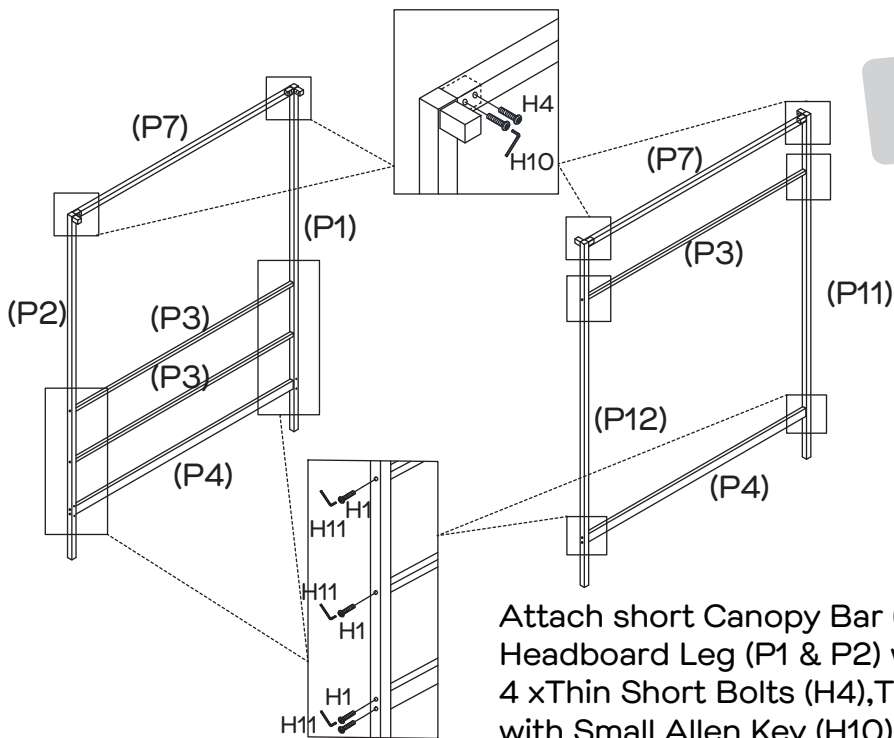

| You will need | |
|--|---|
| 14 X Big Bolts M8 x 45mm (H1) |  |
| 1 x Large Allen Key (H11) |  |
| 8 x Thin Short Bolts M6 x 14mm (H4) |  |
| 1 x Small Allen Key (H10) |  |




Attach short Canopy Bar (P7) to Headboard Leg (P1 & P2) with 4 xThin Short Bolts (H4),Tighten with Small Allen Key (H10); Repeat this step with (P11&P12);

Attach 2 x Connect Bar (P3) and 1 x Wide Connect Bar (P4) to Headboard Leg (P1&P2) by using 8 x Big Bolts (H1) tighten with Large Allen Key (H11). Attach 1 x Connect Bar (P3) and 1 x Wide Connect Bar (P4) to Footboard Leg (P11&P12) by using 6 x Big Bolts (H1), tighten with a Large Allen Key (H11).





Step 2


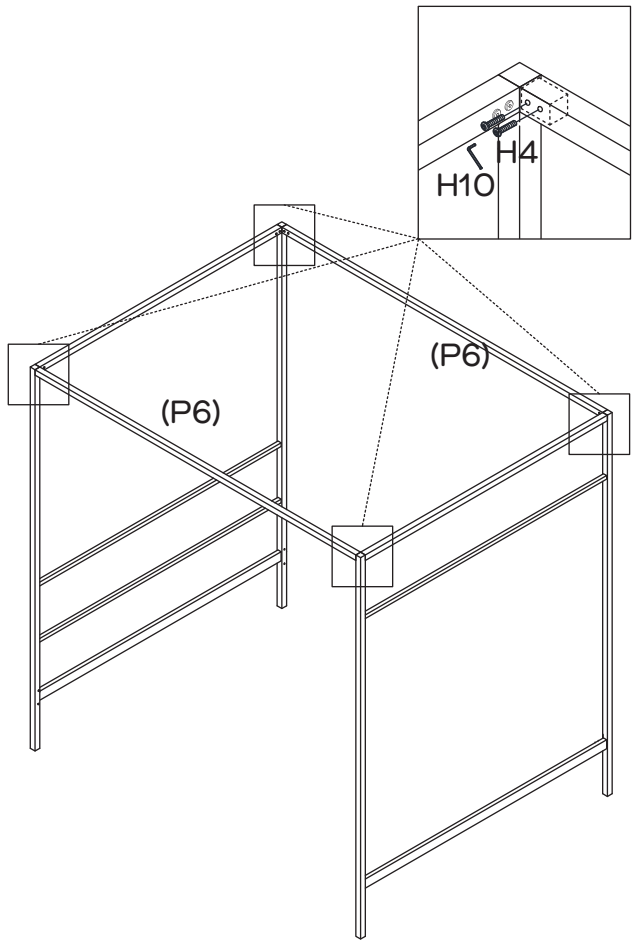
| You will need | |
|---|---|
| 8 xThin Short Bolts M6x14mm (H4) |  |
| 1 x Small Allen Key (H10) |  |



Attach Long Canopy Bar (2 x P6) using 8 xThin Short Bolts (H4), Tighten with a Small Allen Key (H10).



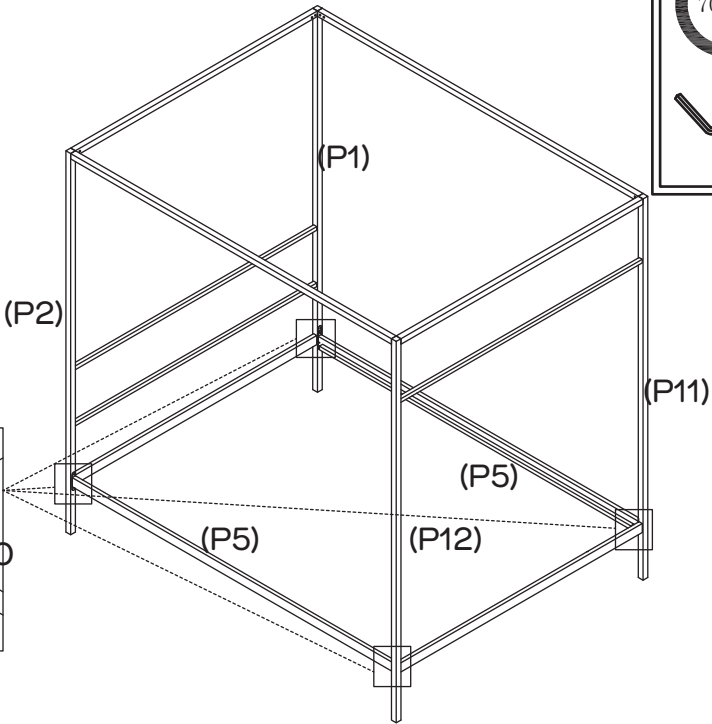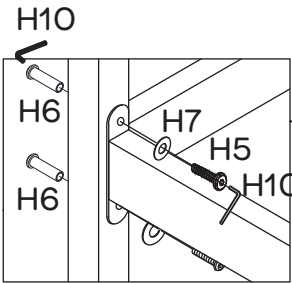


Step 3


| You will need | |
|-------------------------------------|---|
| 8 x Thin Bolts M6x25mm (H5) |  |
| 2 x Small Allen Key (H10) |  |
| 8xMetal Washer (H7) |  |
| 8 x Metal Cap M6x18mm (H6) |  |



Attach 2 x Side Rails (P5) to Headboard Leg (P1&P2) and Footboard Leg (P11&P12) using 8x Metal Washer (H7), 8 xThin Bolts (H5) and 8 x Metal Cap (H6). Do not tighten fully.



Step 4

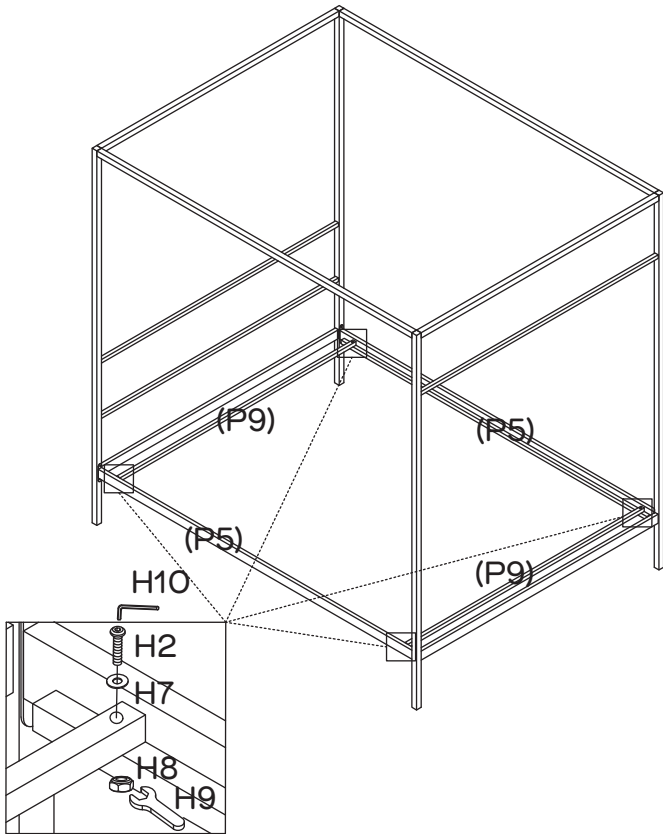
| You will need | |
|--|---|
| 4 xThin Long Bolts M6 x 55mm (H2) |  |
| 1 x Small Allen Key (H10) |  |
| 4 x Metal Washer (H7) |  |
| 4 x Hex Nuts (H8) |  |
| 1 x Spanner (H9) |  |



Attach the Cross Bar (P9) onto the 2 x Side Rails (P5) using 4 x Long Bolts (H2) and 4 x Hex Nuts (H8).
Tighten with the Allen Key (H10) and Spanner (H9) as shown.



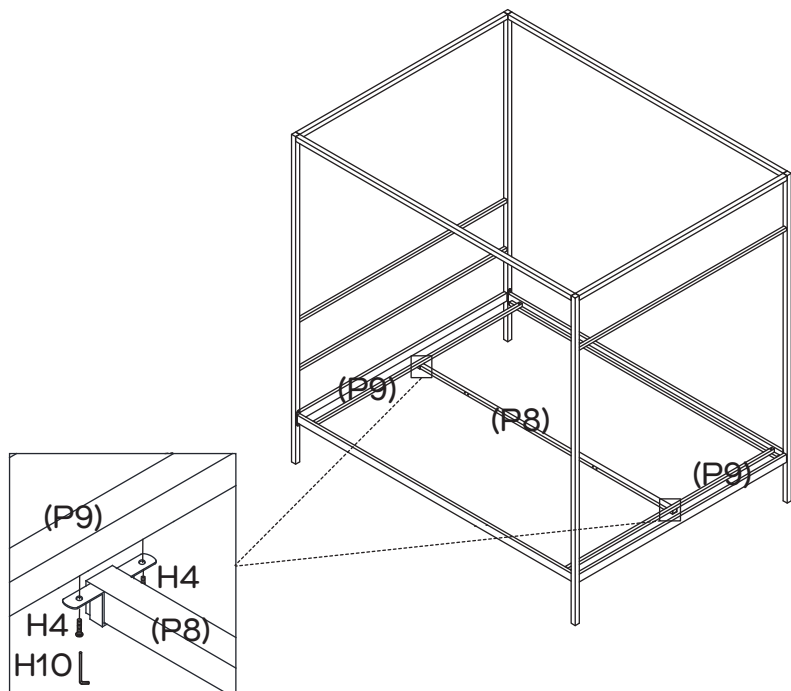


Step 5


| You will need | |
|-------------------------------------|---|
| 1 x Small Allen Key (H10) |  |
| 4 x Thin Short Bolts M6 x 14mm (H4) |  |



Attach the Center Rail (P8) under the Crossbar (P9) by using 4 x Thin Short Bolts (H4), Tighten with a small Allen Key (H10).

Step 6


| You will need | |
|-------------------------------------|---|
| 12 x Metal Washer (H7) |  |
| 1 x Small Allen Key (H10) |  |
| 6 x Thin Short Bolts M6 x 40mm (H3) |  |
| 6 x Hex Nuts (H8) |  |
| 1 x Spanner (H9) |  |

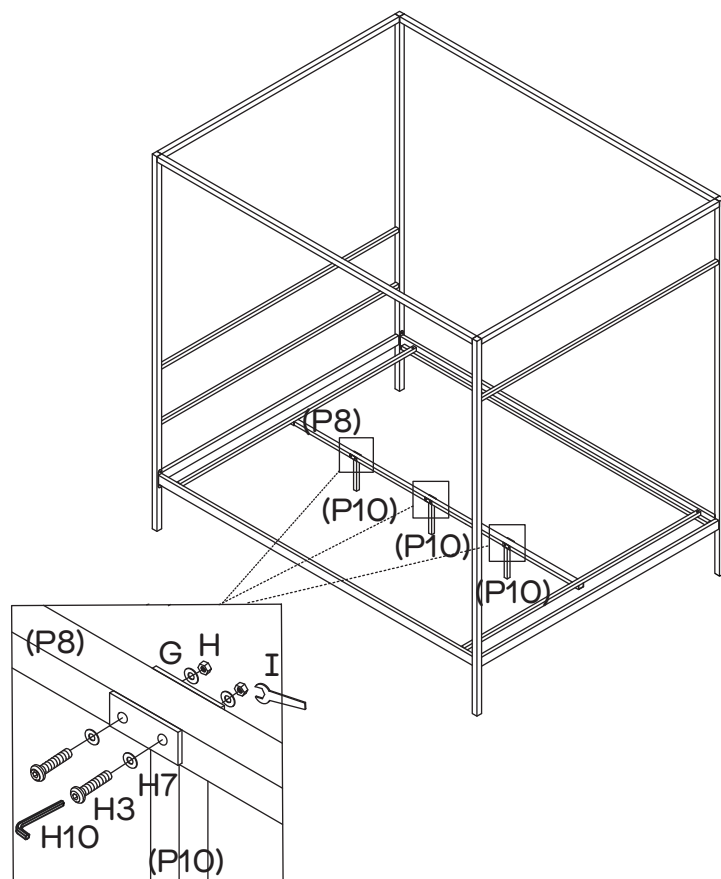

Attach 3 x Support Legs (P10) under the Centre Rail (P8), Using 12 x Metal Washer (H7), 6 x Thin Short Bolts (H3) and 6 x Hex Nuts (H8). Tighten with a small Allen Key (H10) and a Spanner (H9).



Step 7

| You will need: | |
|-------------------------------------|--|
| 28 x Plastic Slat Caps (P13) | |
| 14 x Center Plastic Slat Caps (P14) | |

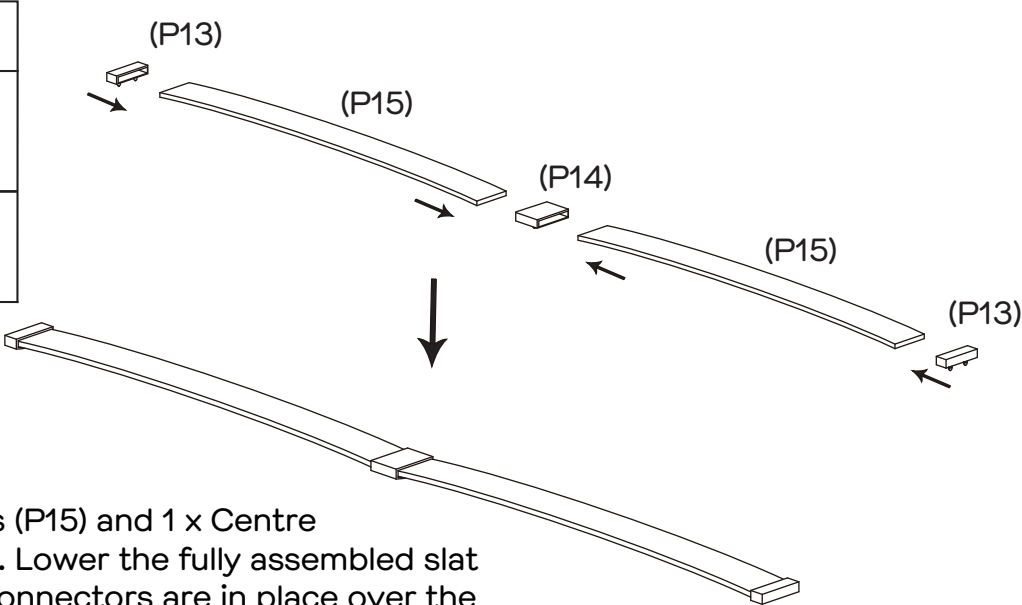

Push 2 x Slat Caps (P13), 2 Slats (P15) and 1 x Centre Plastic Slat Caps (P14) together. Lower the fully assembled slat into side rails (P5). Ensure the connectors are in place over the side rail holes and apply down ward pressure on the slat with the end connectors until the end plastic cap is fully inserted into the rail. Repeat for all 13 Slats.

Step 8

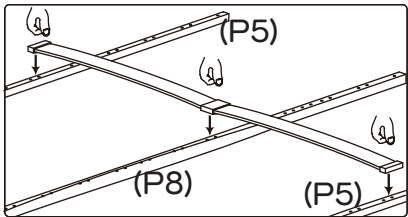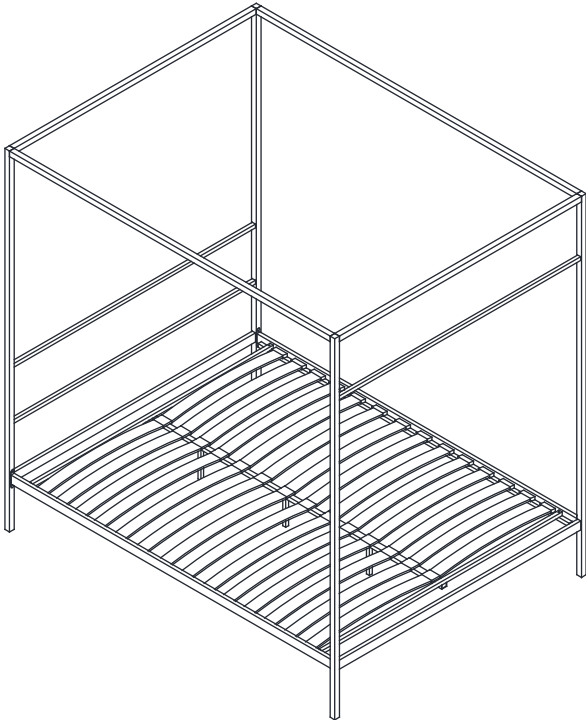

IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.