


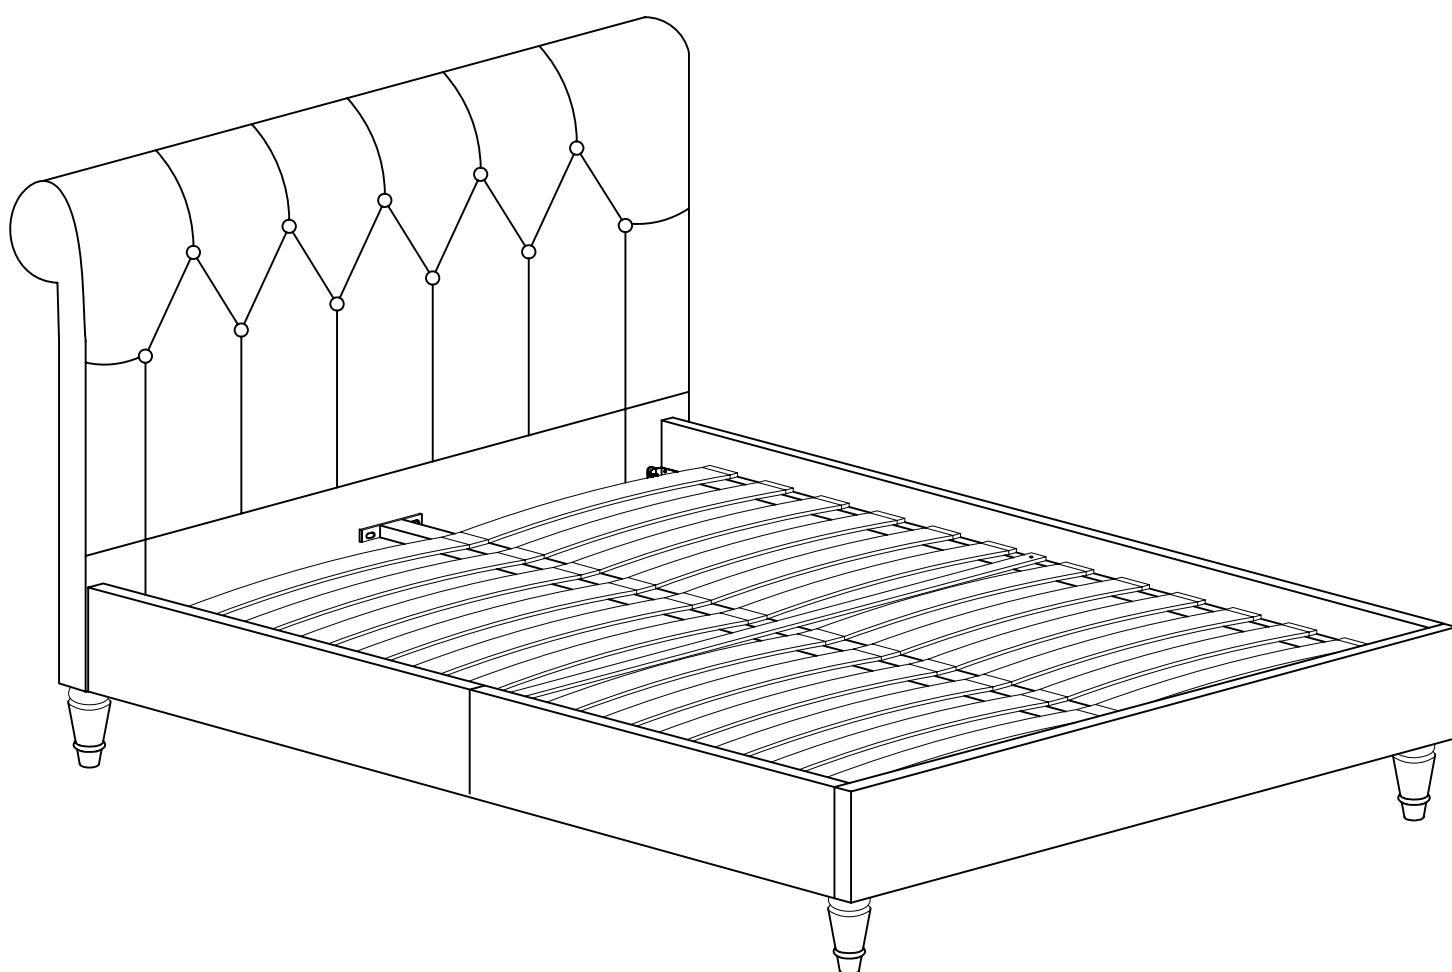

**Fantastic
Furniture**

Version 1.0



Two People



Required

Chester

Queen Bed

fantasticfurniture.com.au

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

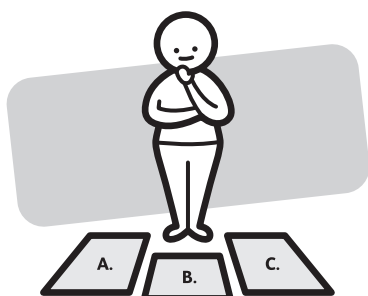

Identify and lay out all of the components before you begin assembly.

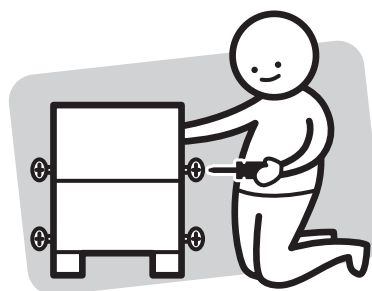

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE

Other tools you need:

Phillips head screwdriver;



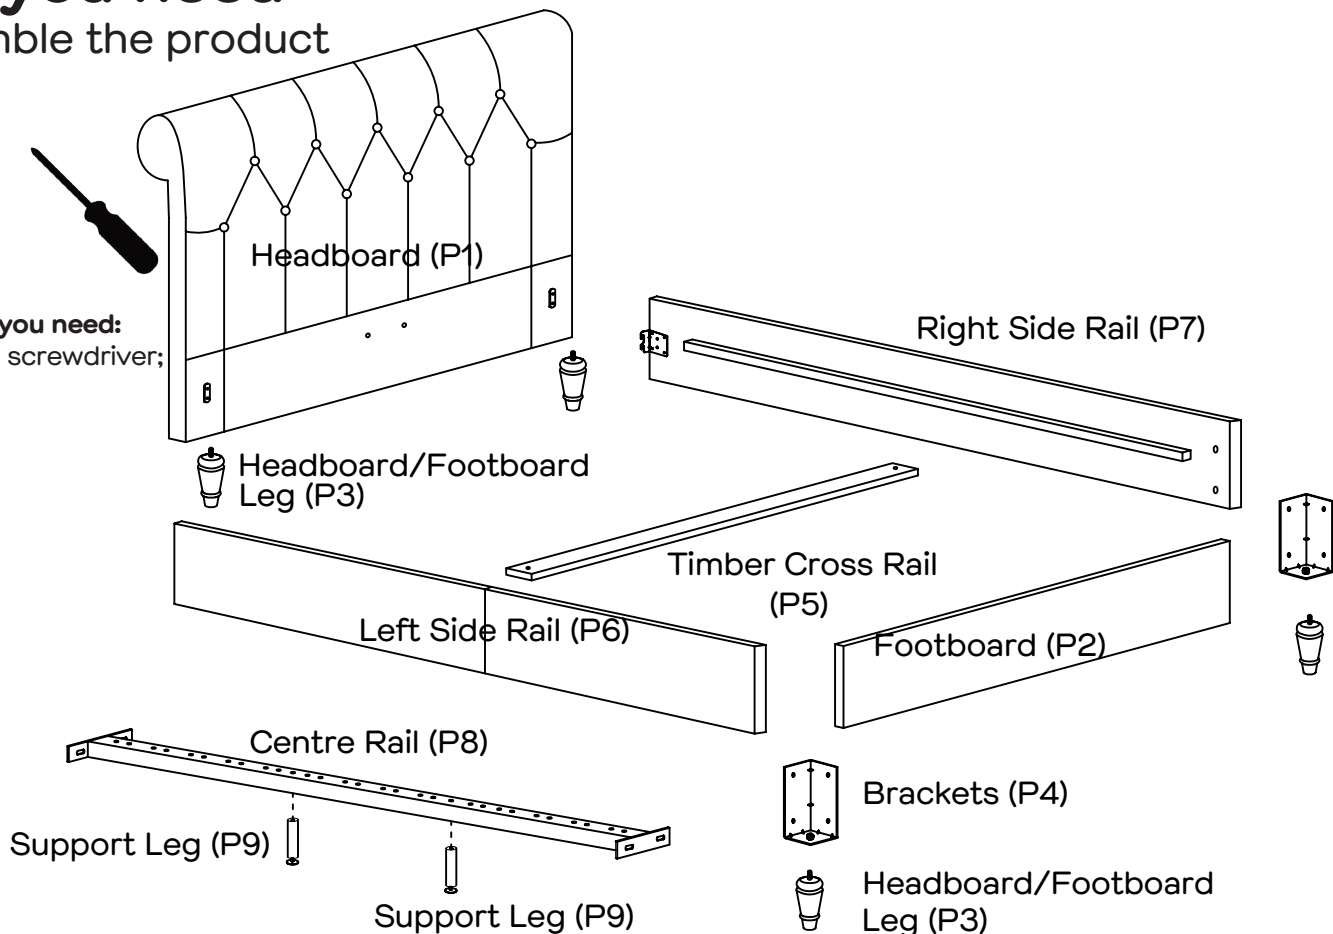


Parts list

Box 1 : Footboard (P2) ; 4 x Headboard/Footboard Legs (P3) ; 2 x Brackets (P4) ; Timber Cross Rail (P5) ; Left Side Rails (P6) ; Right Side Rail (P7) ; Centre Rail (P8) ; 2 x Support Legs (P9) ; End Connectors (P10) ; Centre Connectors (P11) ; Hardware Pack.

Box 2 : Headboard (P1) ; Slats (P12)

28 x End Connectors (P10) 14 x Centre Connectors (P11)

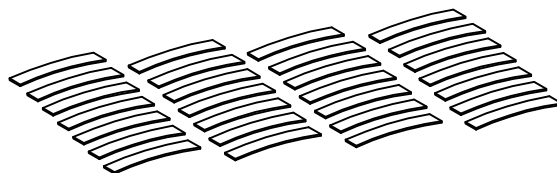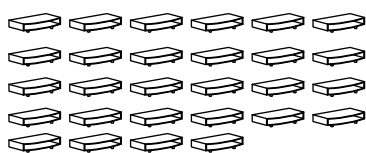

28 x Slats (P12)

Hardware pack



(Bolt)
4 x M8 x 16mm
(H1)



1 x M5 (Allen Key)
(H2)



(Bolt)
14 x M8 x 25mm
(H3)



(Washer)
14 x M8 x 19mm
(H4)



(Screw)
2 x M4 x 32mm
(H5)





(Felt Pad)
1 x 40 x 20mm
(H6)



(Spring Washer)
4 x M8
(H7)

Step 1


Two People

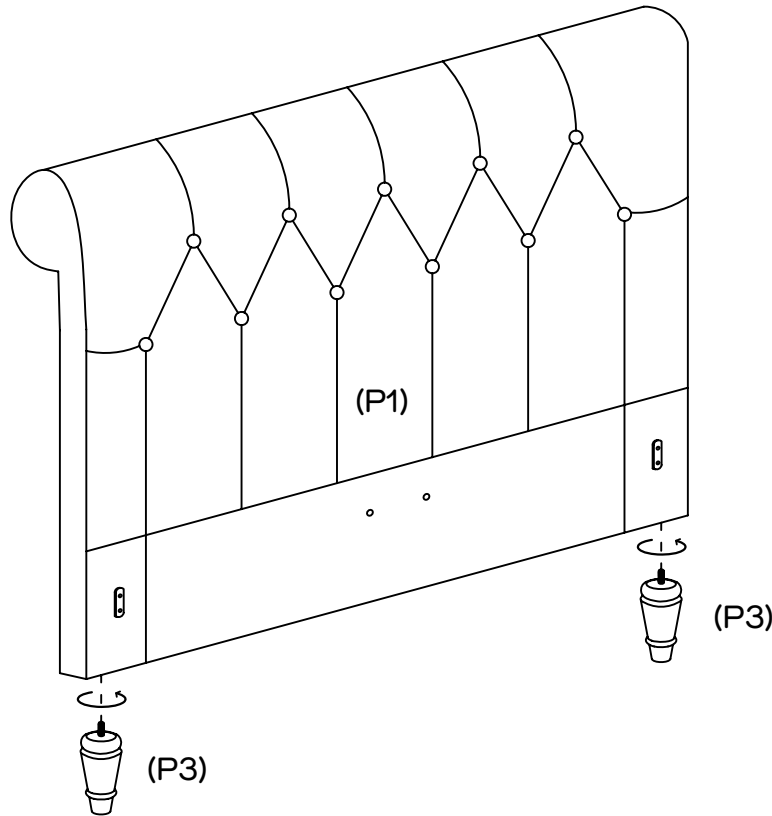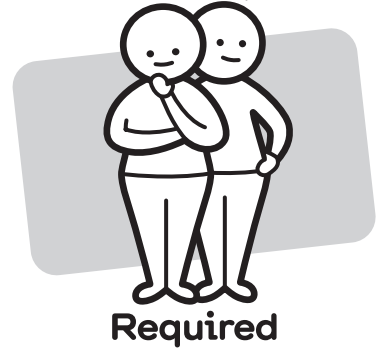

Attach 2 x headboard legs (P3) to the bottom of headboard (P1) and rotate as shown.

Step 2

You will need		
Allen Key (H2)	4 x Bolts 25mm (H3)	4 x Washers M8 (H4)

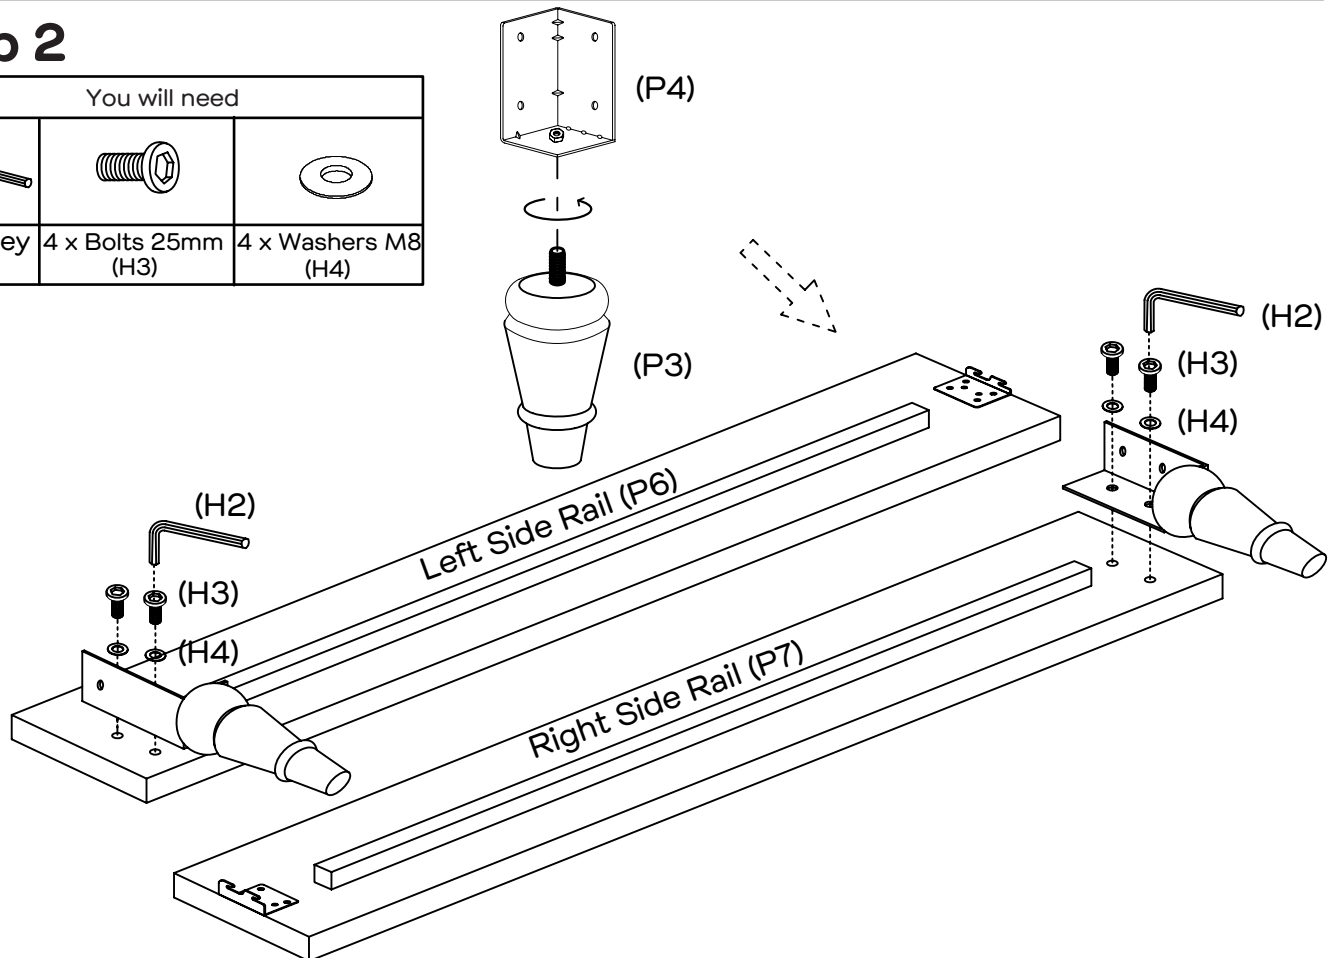






Attach footboard legs (P3) to the bottom of the bracket (P4) and rotate as shown. Then, attach brackets (P4) to the left side rail (P6) with 2 x bolts (H3) and 2 x washers (H4) by using the allen key (H2). Repeat for the right side rail (P7). Do not fully tighten the bolts (H3) until step 7.

Step 3

Two People




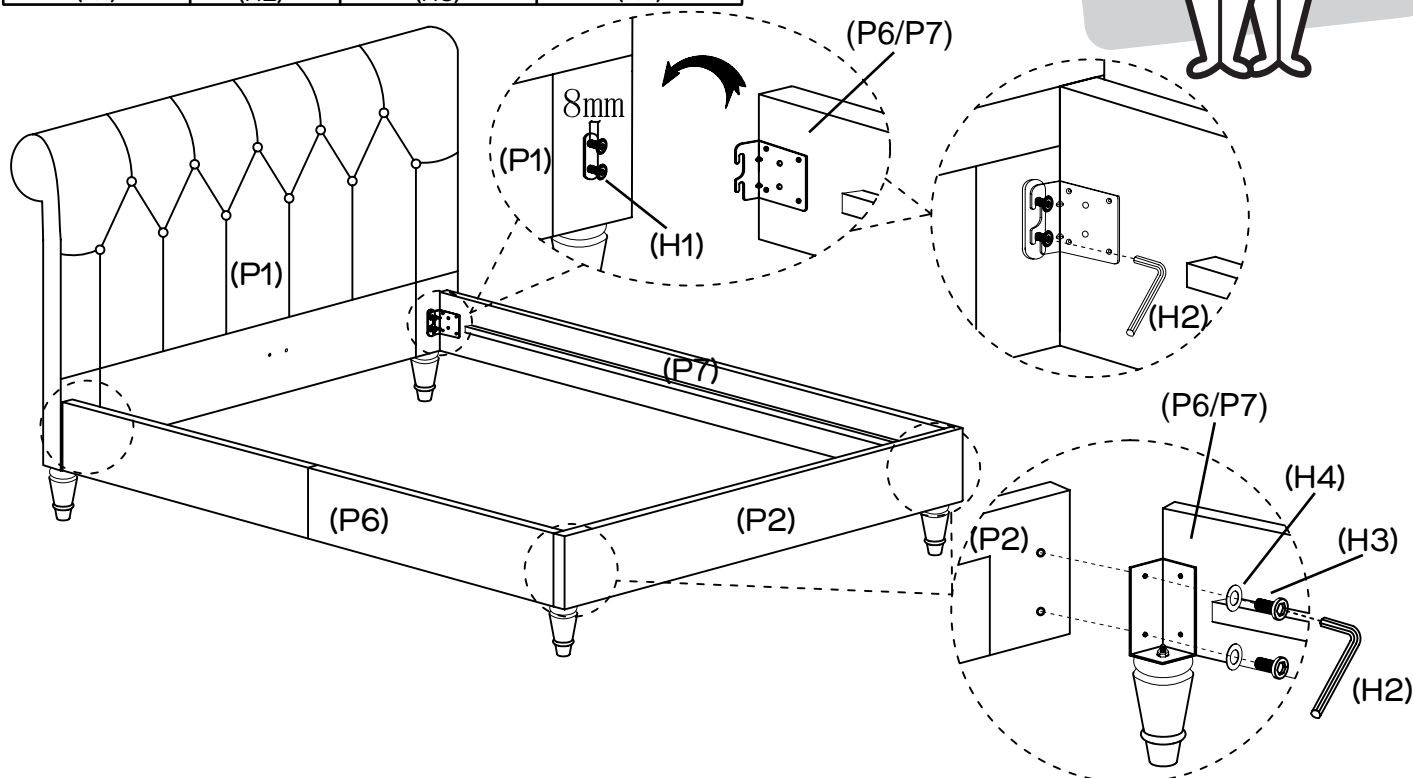


You will need			
			
4 x Bolts 16mm (H1)	Allen Key (H2)	4 x Bolts 25mm (H3)	4 x Washers M8 (H4)



Install 4 x bolts (H1) to the brackets of headboard (P1) by using allen key (H2) as shown, do not tighten the bolts and keep them 8mm loose. Then attach the side rails (P6/P7) to the headboard (P1) over the bolts (H1) as shown. Finally, attach the side rails (P6/P7) to the footboard (P2) with 4 x bolts (H3) and 4 x washers (H4) by using the allen key (H2). Do not fully tighten the bolts (H3) until step 7.

Step 4

You will need		
		
Allen Key (H2)	2 x Bolts 25mm (H3)	2 x Washers M8 (H4)

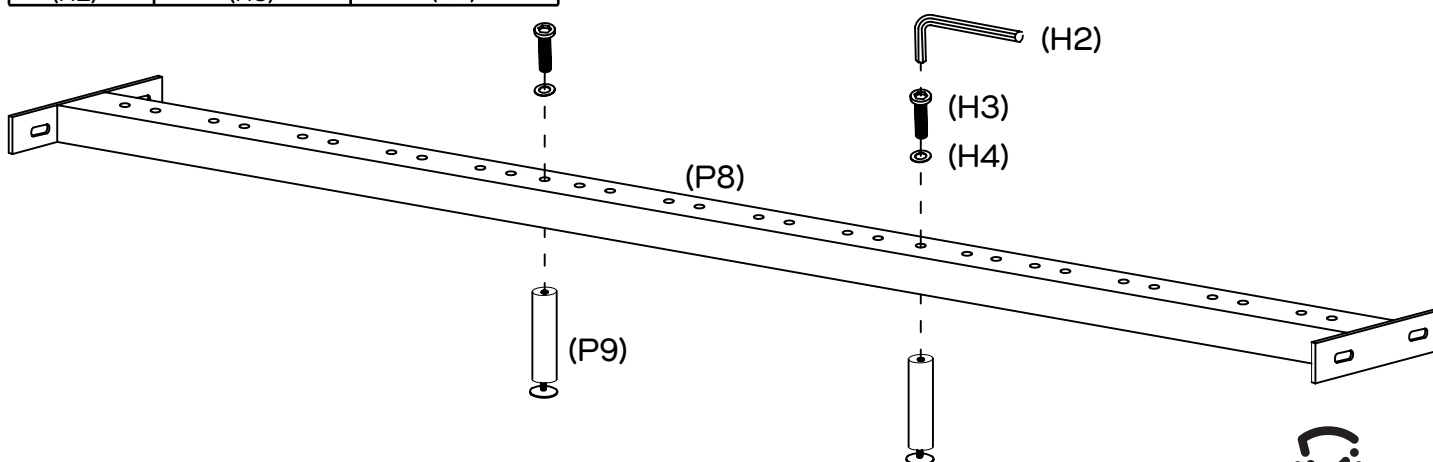





Attach 2 x support legs (P9) to the centre rail (P8) with 2 x bolts (H3) and 2 x washers (H4) by using allen key (H2).


fantasticfurniture.com.au



Fantastic
Furniture




Step 5

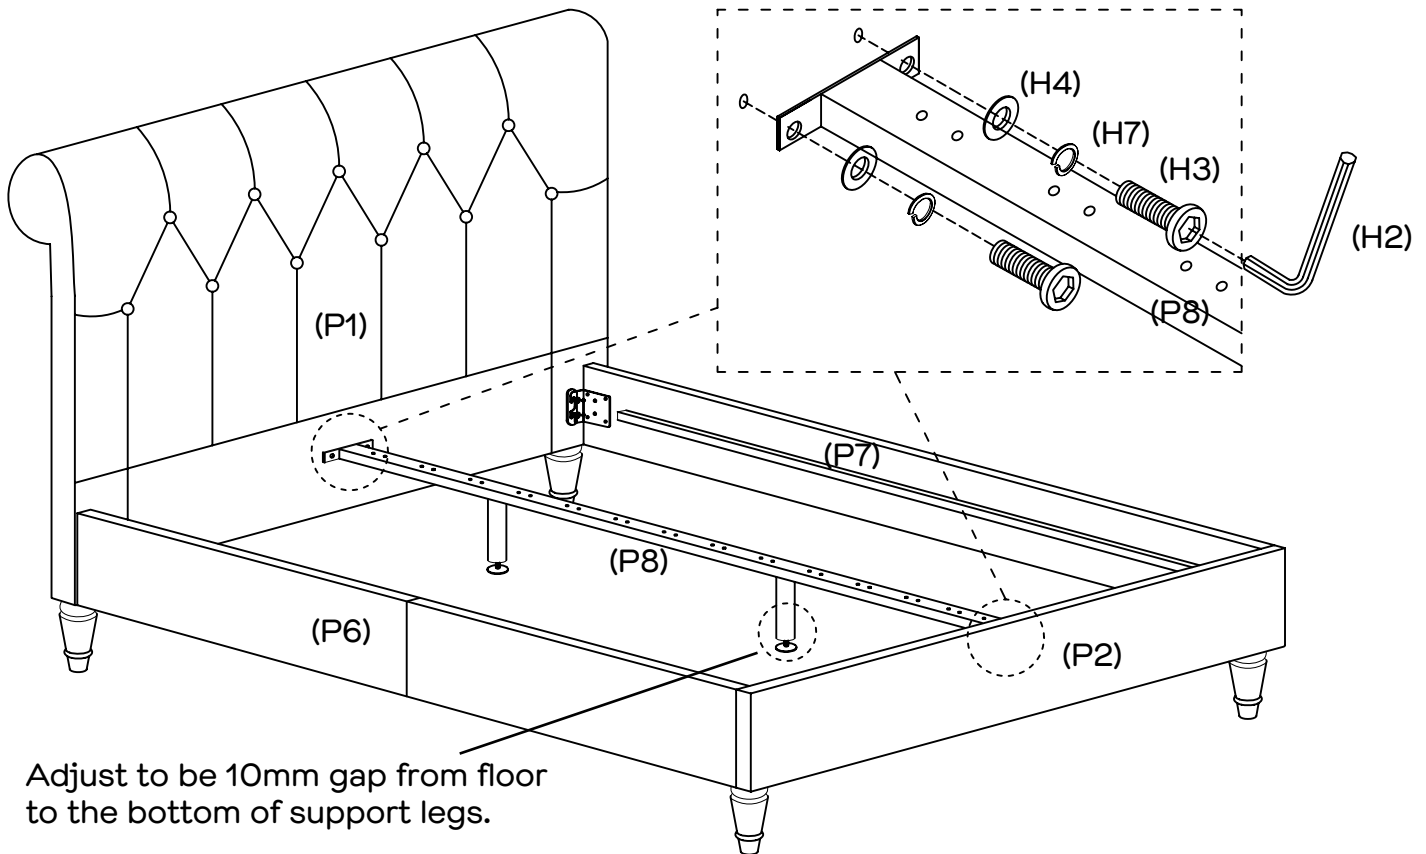
You will need			
			
Allen Key (H2)	4 x Bolts 20mm (H3)	4 x Washers M8 (H4)	4 x Spring Washer (H7)



Slot the centre rail (P8) into the headboard (P1) and footboard (P2).
Rotate 4 x bolts (H3), 4 x washers (H4) and 4 x spring washers (H7) to the headboard (P1) and footboard (P2) by using alley key (H2). No need to tighten bolts until step 7.


Step 6

You will need	
	
28 x End Connectors (P10)	14 x Centre Connectors (P11)
	
28 x Slats (P12)	

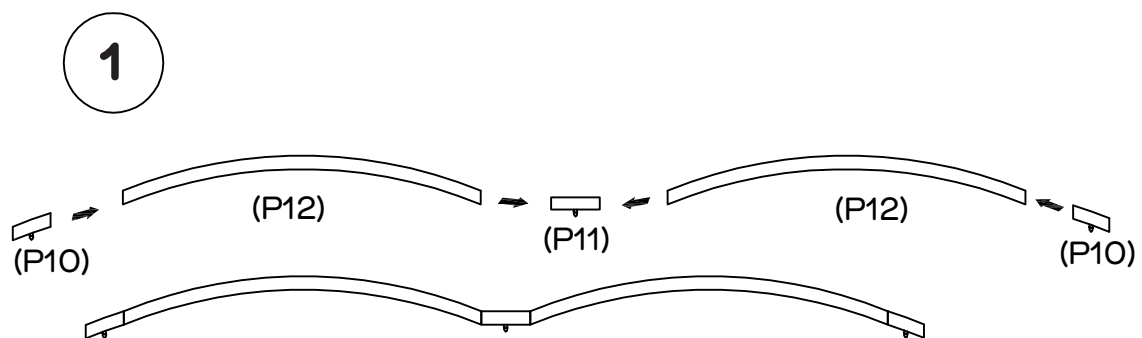


Push 2 end connectors (P10), 2 pcs slats (P12) and a centre connector (P11) together.

2

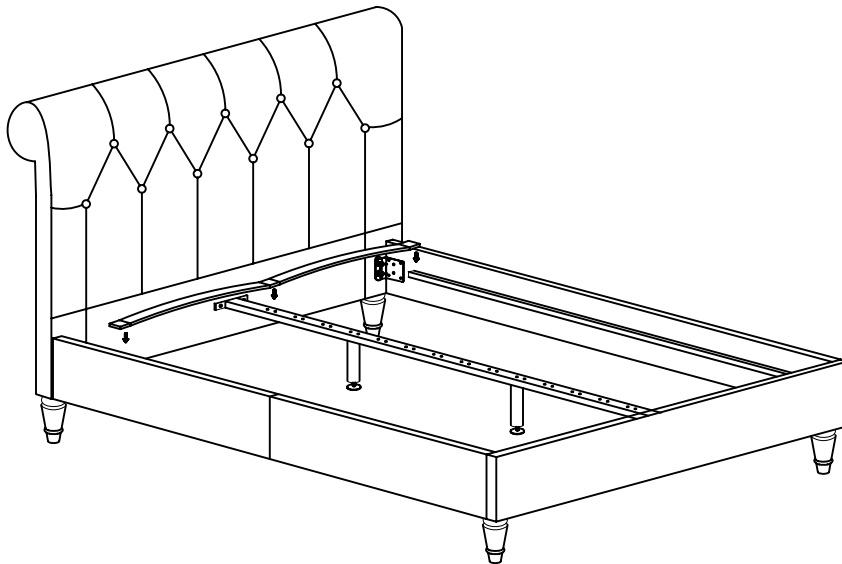


Insert the full slat into the side rail and centre rail one by one.

3

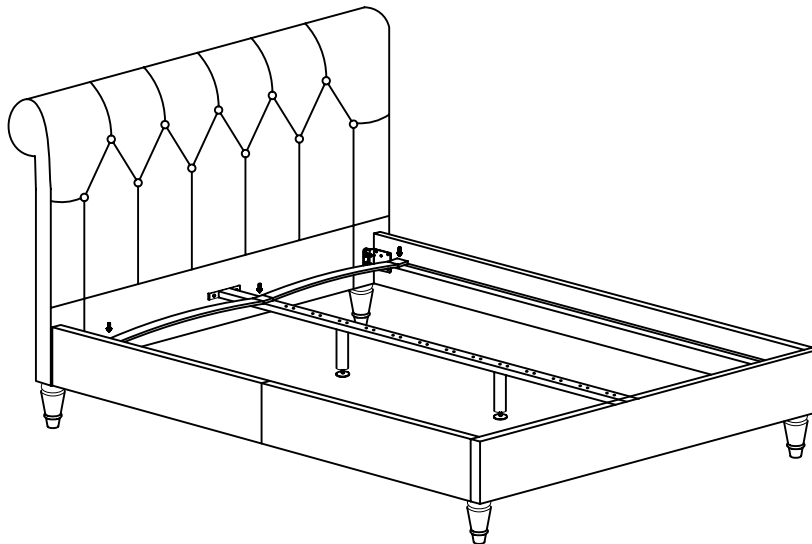



Sometimes it makes it easier to line up the hole if you press down in the middle of the slat to flatten it out.

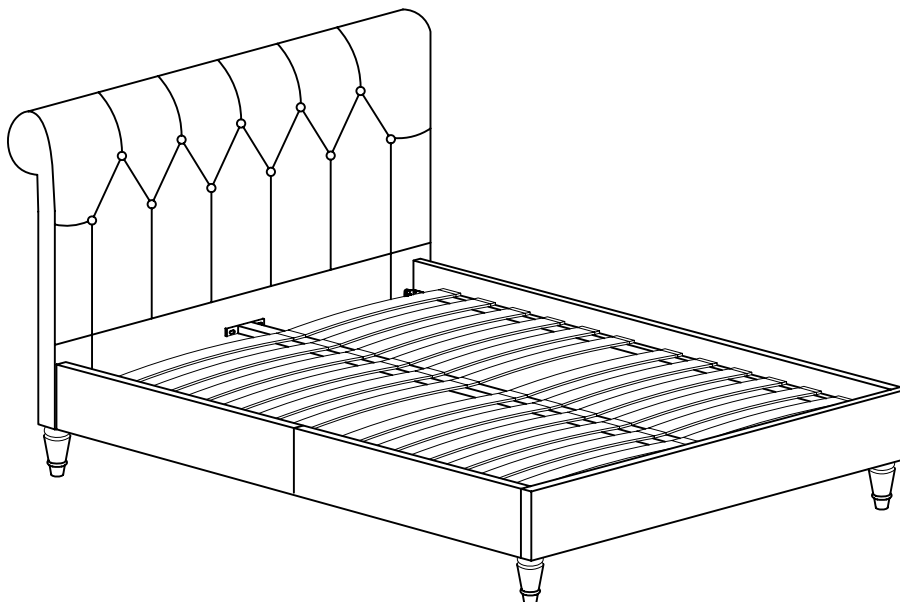
4



Repeat for every bed slat until finished.

Step 7

You will need	
	
Allen Key (H2)	2 x Screws 32mm (H5)
	
Felt Pad 1 x 40 x 20mm (H6)	Phillips head Screwdriver (not provided)

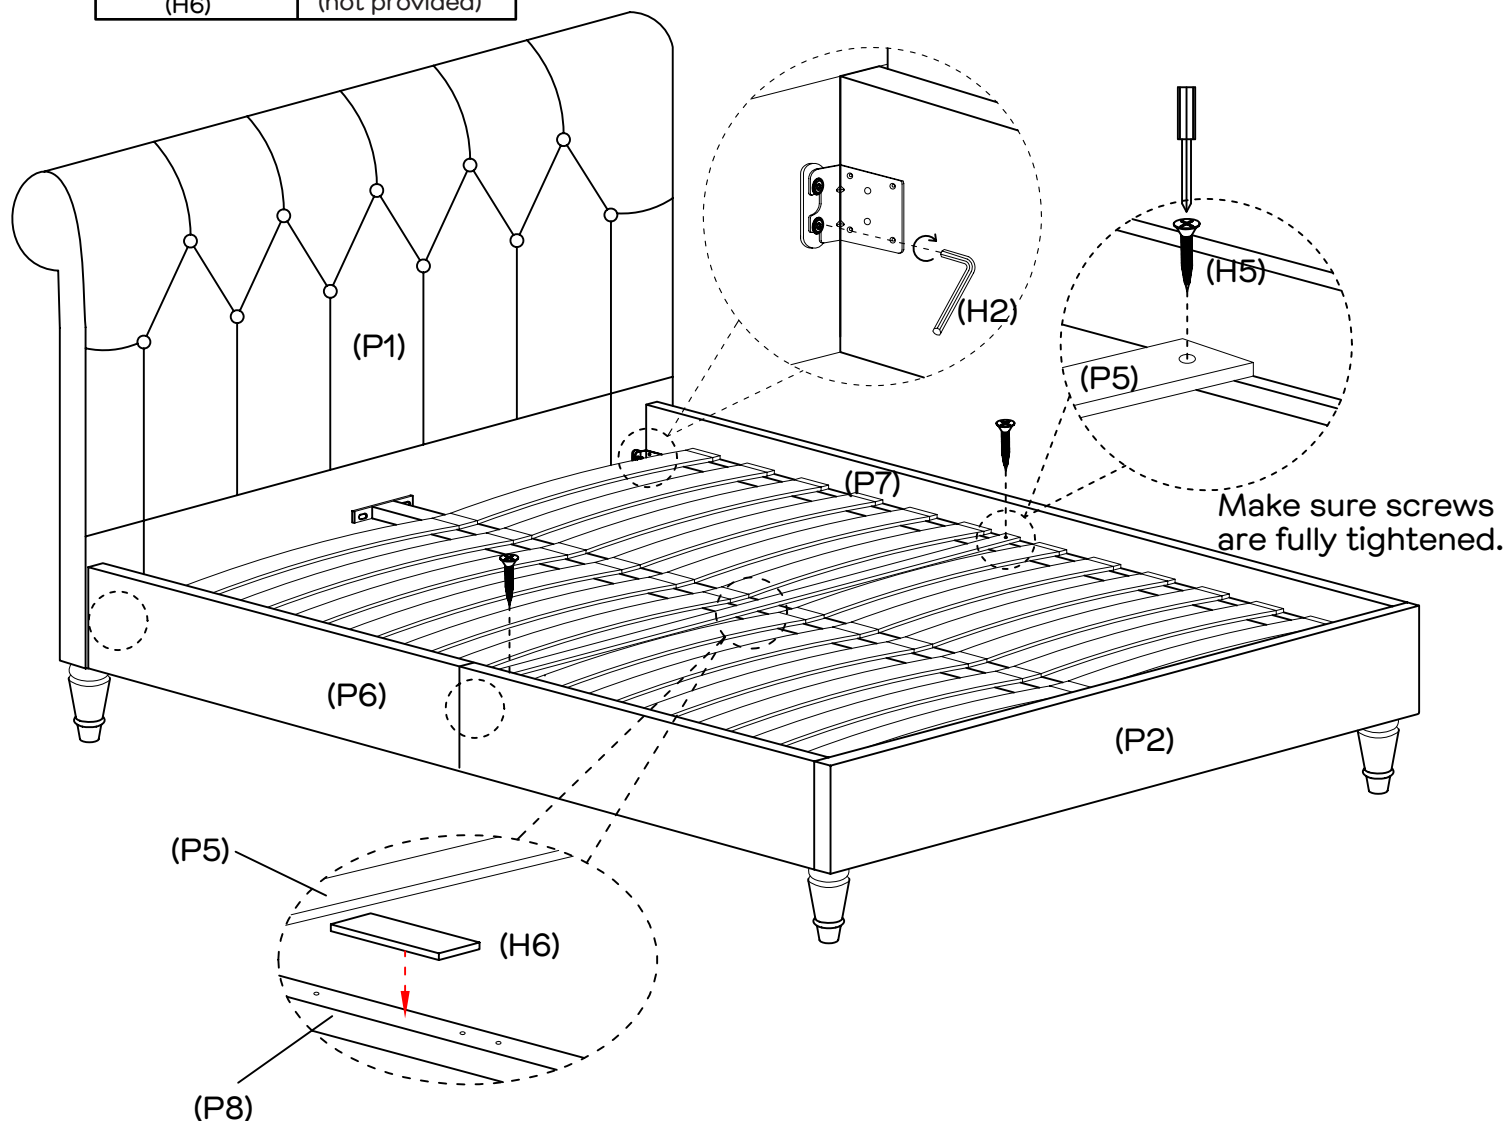


Make sure the inner space is square.

Attach the felt pad (H6) to the centre of centre rail (P8).

Then attach the timber cross rail (P5) to the centre of side rails (P6/P7) by using 2 x screws (H5). Now tighten all the bolts on the centre rail (P8) and tighten bolts on the headboard (P1), footboard (P2) and side rails (P6/P7).

Step 8

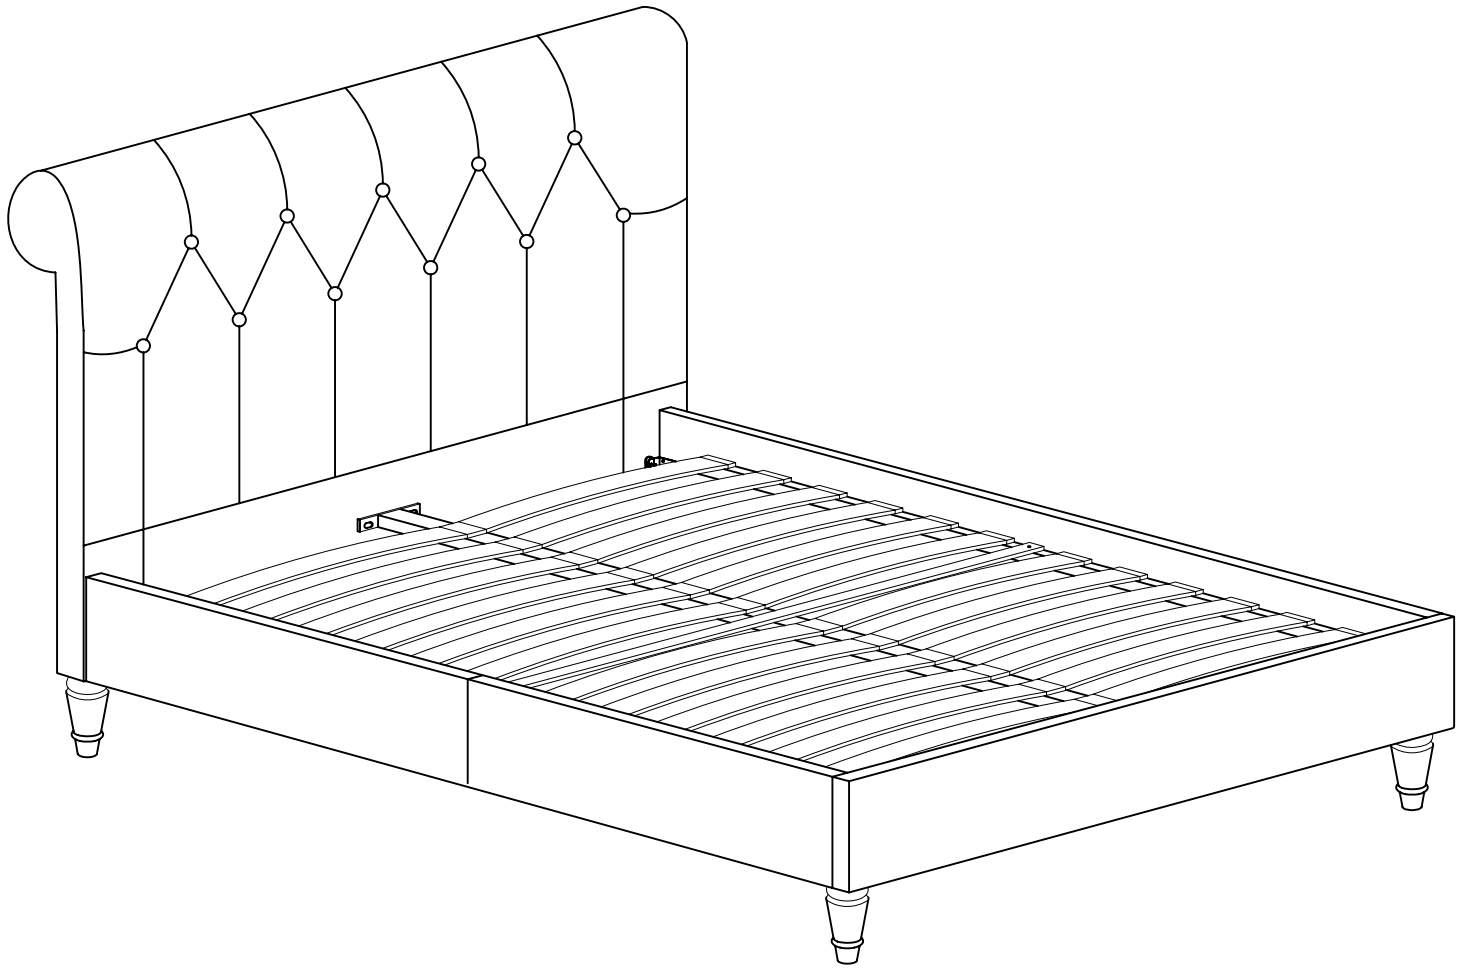

Job complete!

In the interest of our environment please dispose
of all packaging thoughtfully.