


APPROVED LP 10/06/2020

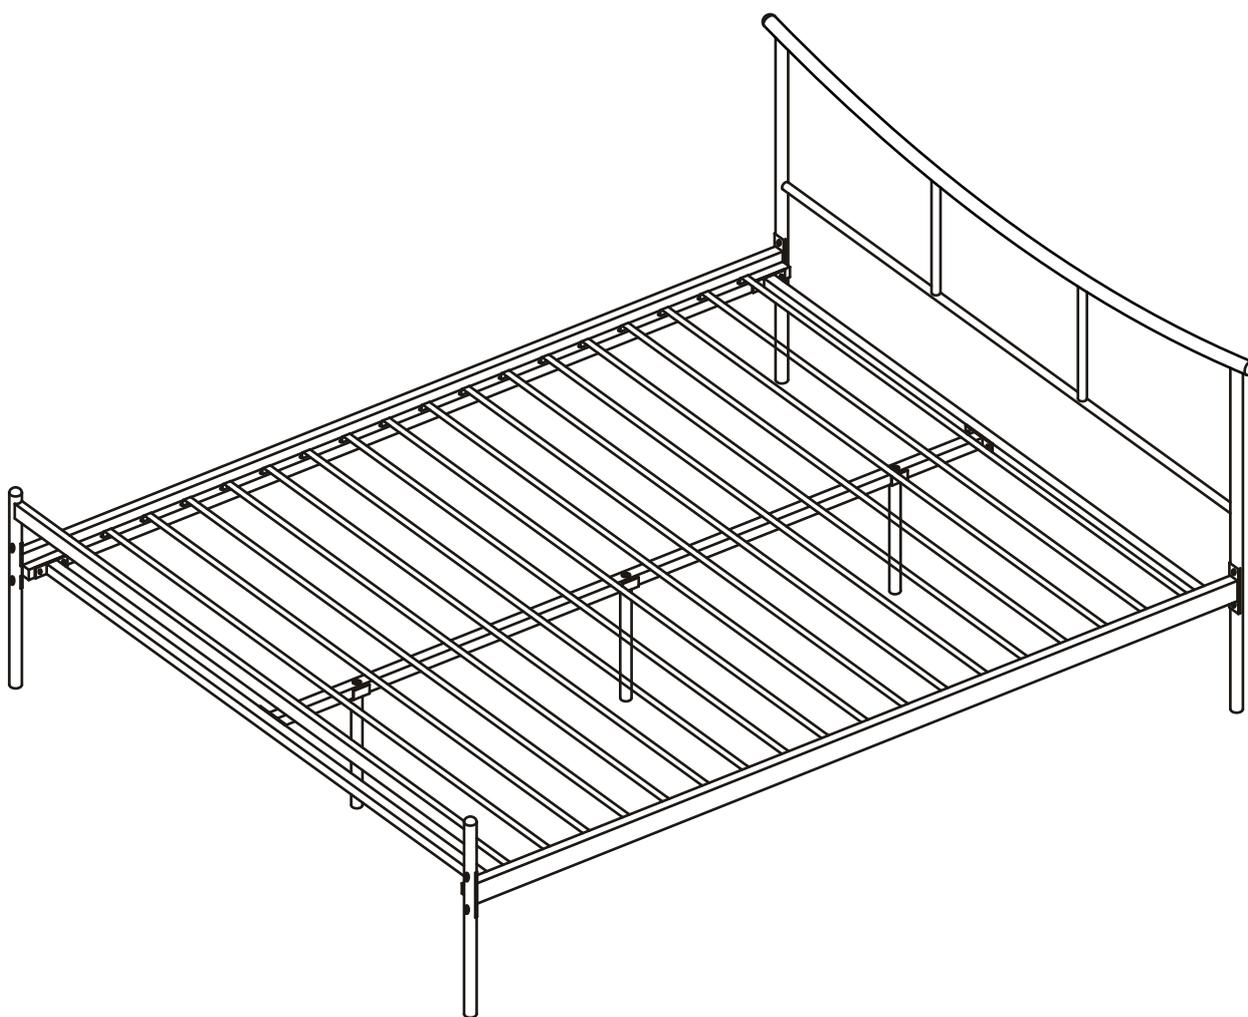

**Fantastic
Furniture**

Version 1.0



Two People



Required

Scout
Bed Double Black

fantasticfurniture.com.au



WARNING: Do not drag this bed

To move this bed it must be lifted and moved.
The bed has a centre rail and support legs that may be damaged when dragged, which may in turn damage the bed frame.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!

@fantasticfurniture



**Fantastic
Furniture**


Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

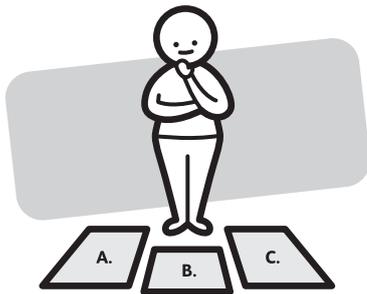

Identify and lay out all of the components before you begin assembly.

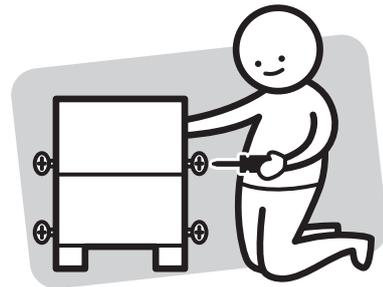

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need


to assemble the product



DO NOT USE

Parts list

- 1 x Headboard (P1);
- 1 x Footboard (P2);
- 2 x Side Rails (P3);
- 2 x Head/Foot Rails (P4);
- 1 x Centre Rail (P5);
- 18 x Slats (P6);
- 3 x Support Legs (P7)

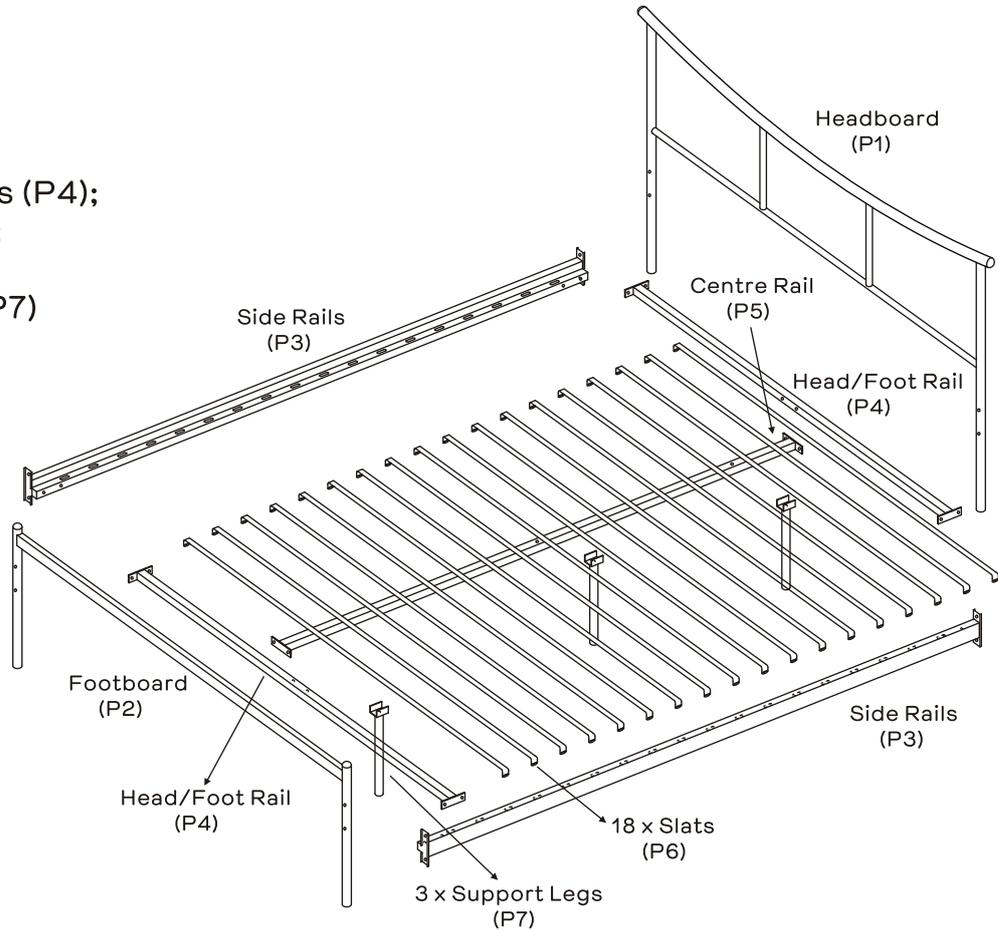

Hardware pack



3 x Bolts (35mm)
(H1)



8 x Bolts (30mm)
(H2)



12 x Bolts (12mm)
(H3)



8 x Washers
(H4)



8 x Sleeve Nuts
(H5)



3 x Flat Washers
(H6)



36 x Plastic Connectors
(H7)



2 x Allen Keys
(H8)


Step 1

Two People



Required

You will need			
			
4 x Bolts (H2)	4 x Washers (H4)	4 x Sleeve Nuts (H5)	2 x Allen Keys (H8)

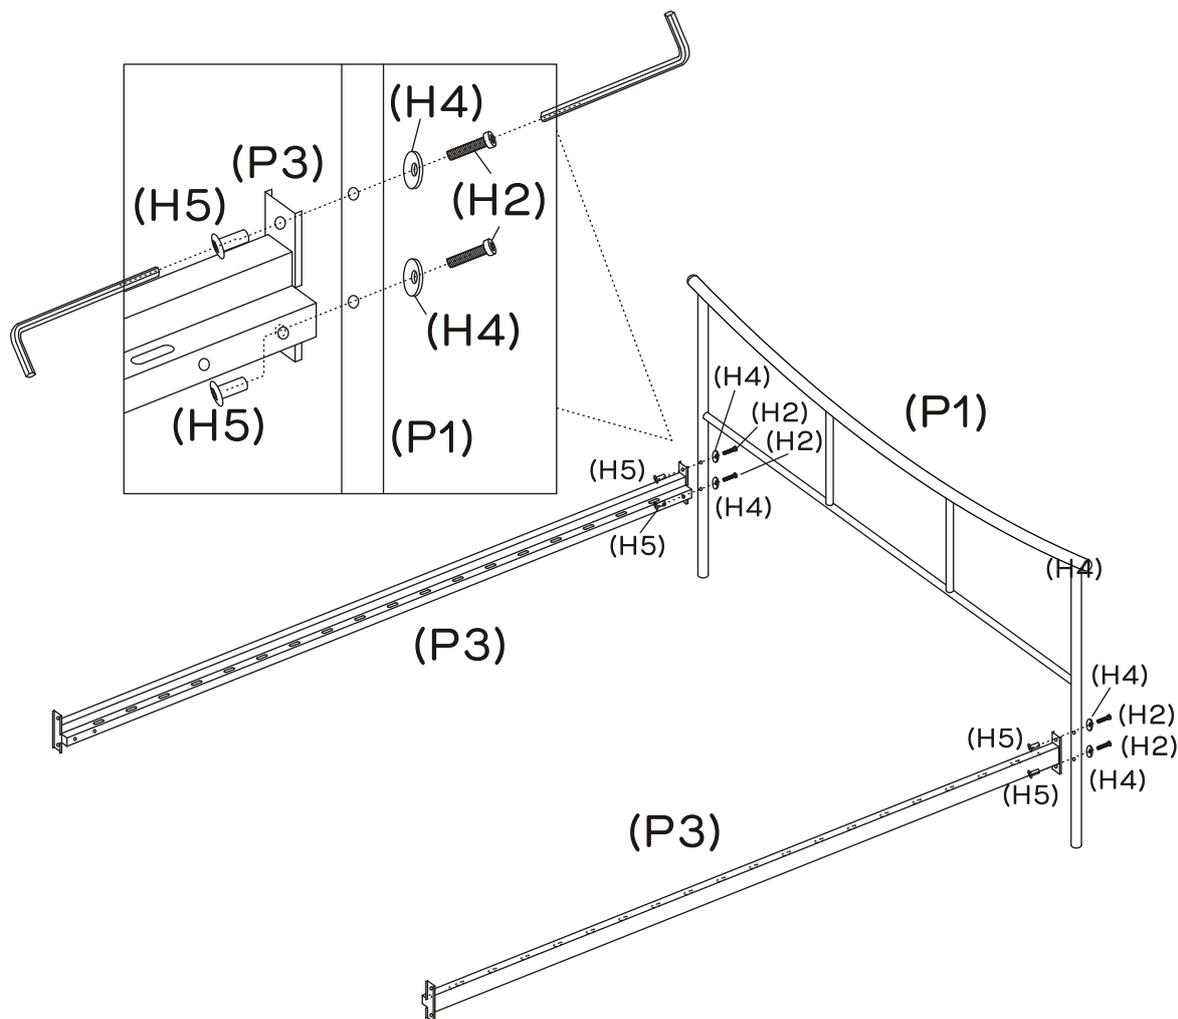

Attach 1 x side rail (P3) to headboard (P1) with 2 x sleeve nuts (H5), 2 x bolts (H2) and 2 x washers (H4) using 2 x allen keys (H8).

Do not fully tighten the bolts.


Repeat process for the other side rail (P3).



Fantastic
Furniture

Step 2

You will need			
			
4 x Bolts (H2)	4 x Washers (H4)	4 x Sleeve Nuts (H5)	2 x Allen Keys (H8)

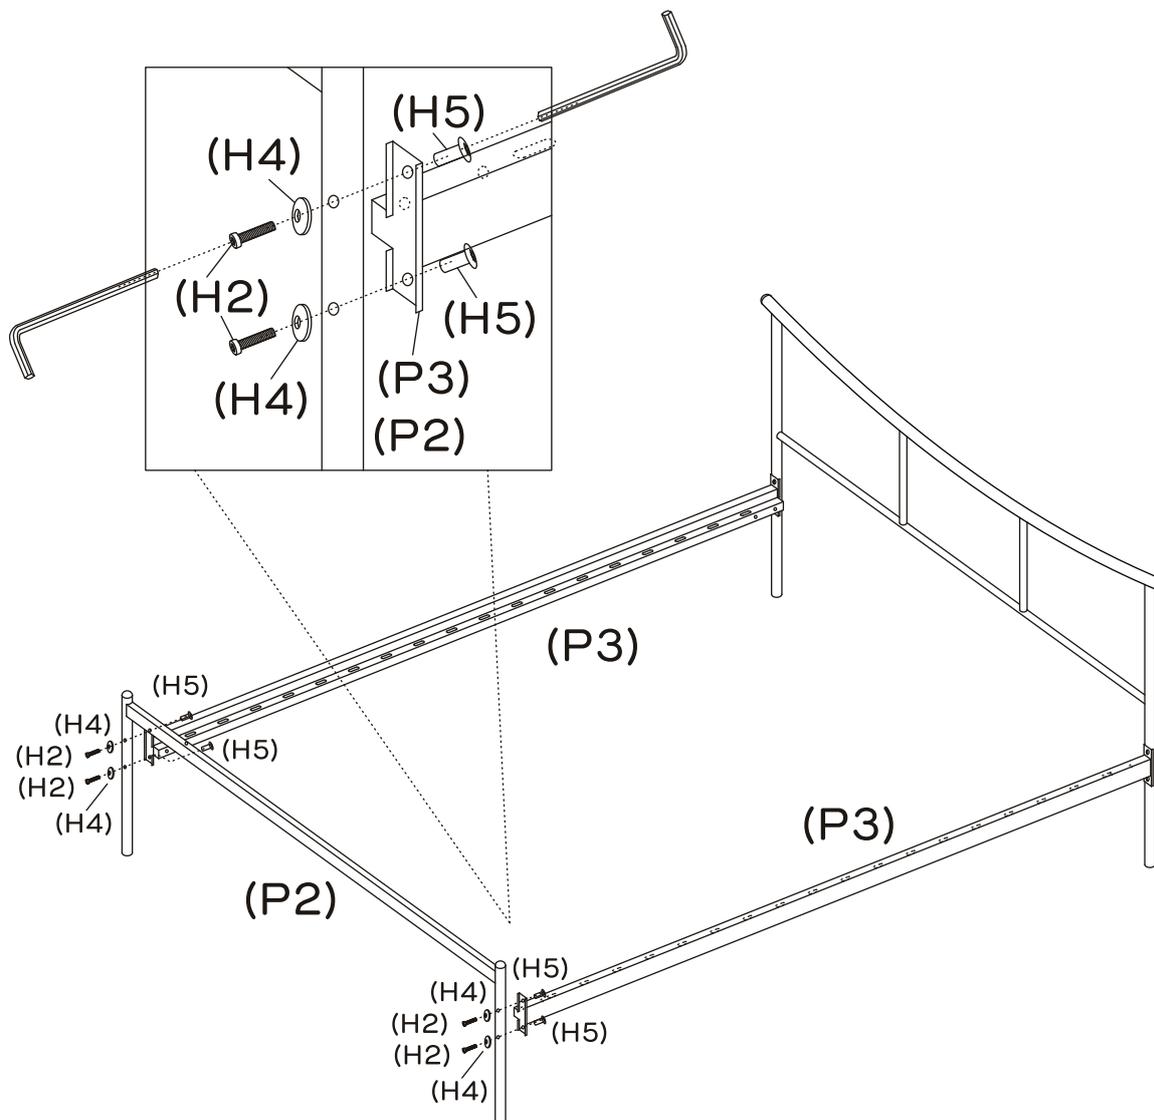


Attach 1 x side rail (P3) to the footboard (P2) with 2 x sleeve nuts (H5), 2 x bolts (H2) and 2 x washers (H4) using 2 x allen keys (H8).

Do not fully tighten the bolts.

Repeat process for the other side rail (P3).

Step 3


You will need	
	
8 x Bolts (H3)	1 x Allen Key (H8)

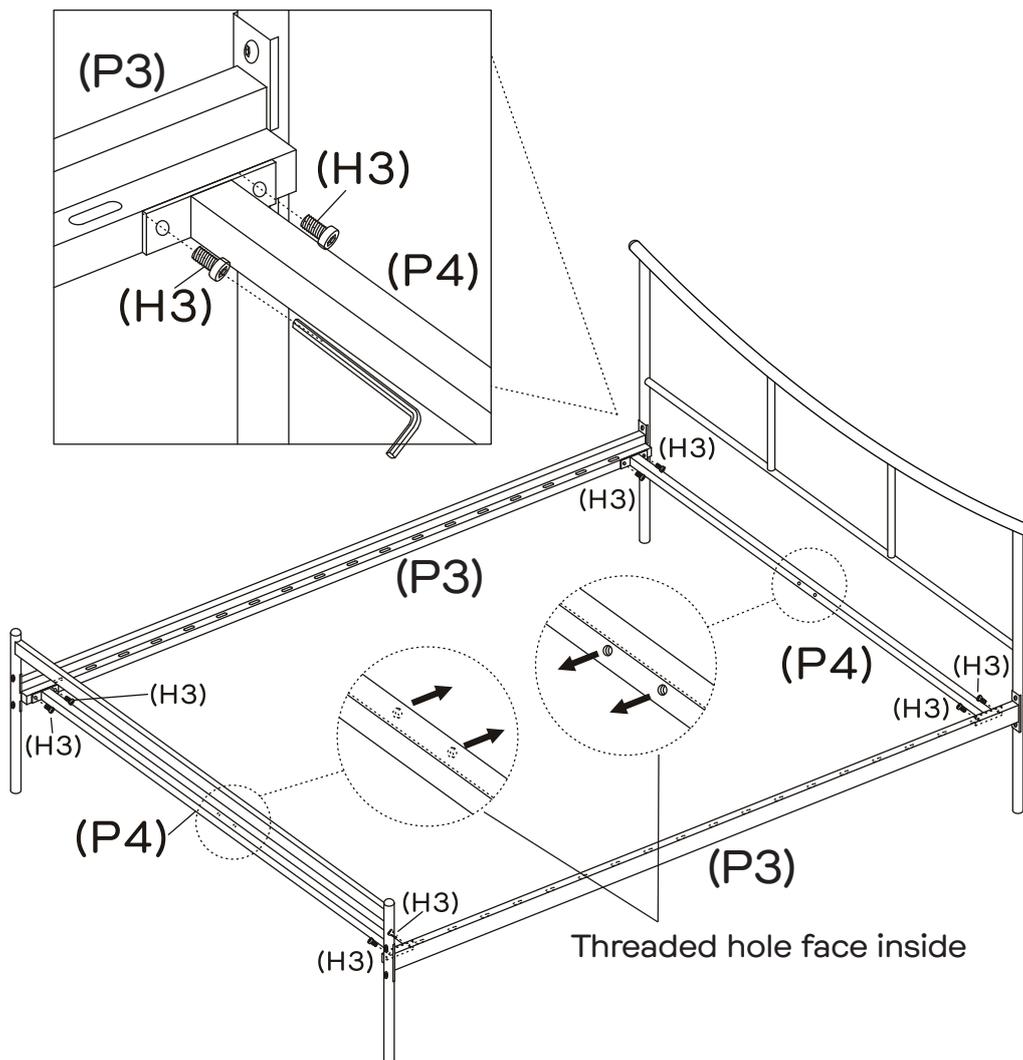

Attach 2 x head/foot rails (P4) to the side rails (P3) with 8 x bolts (H3) using an allen key (H8).
Do not fully tighten the bolts.

Step 4


You will need	
	
4 x Bolts (H3)	1 x Allen Key (H8)

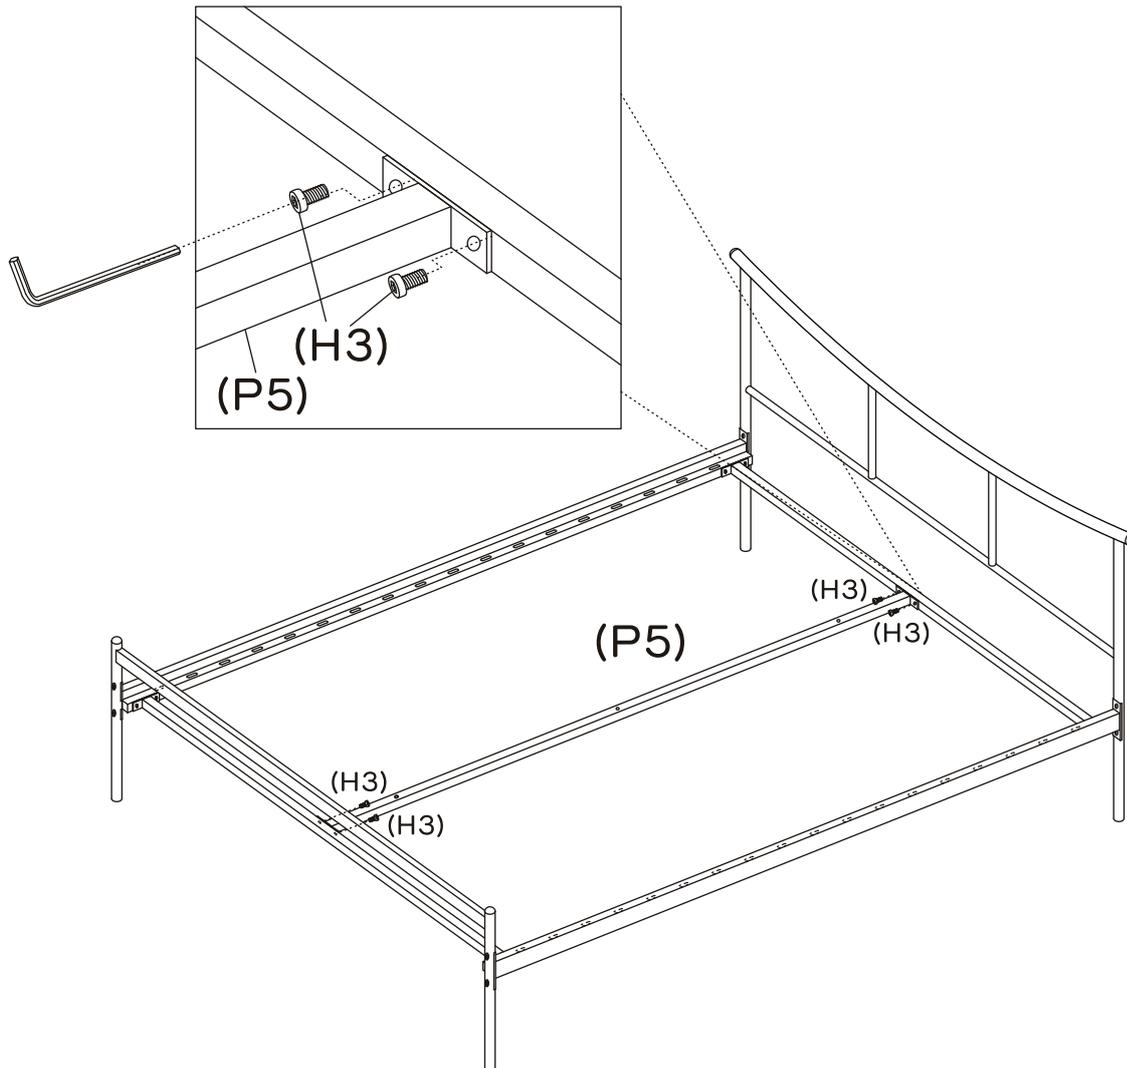

Attach the centre rail (P5) to the 2 x head/foot rails (P4) with 4 x bolts (H3) using an allen key (H8).
Do not fully tighten the bolts.

Step 5

You will need		
		
3 x Bolts (H1)	3 x Flat Washers (H6)	1 x Allen Key (H8)

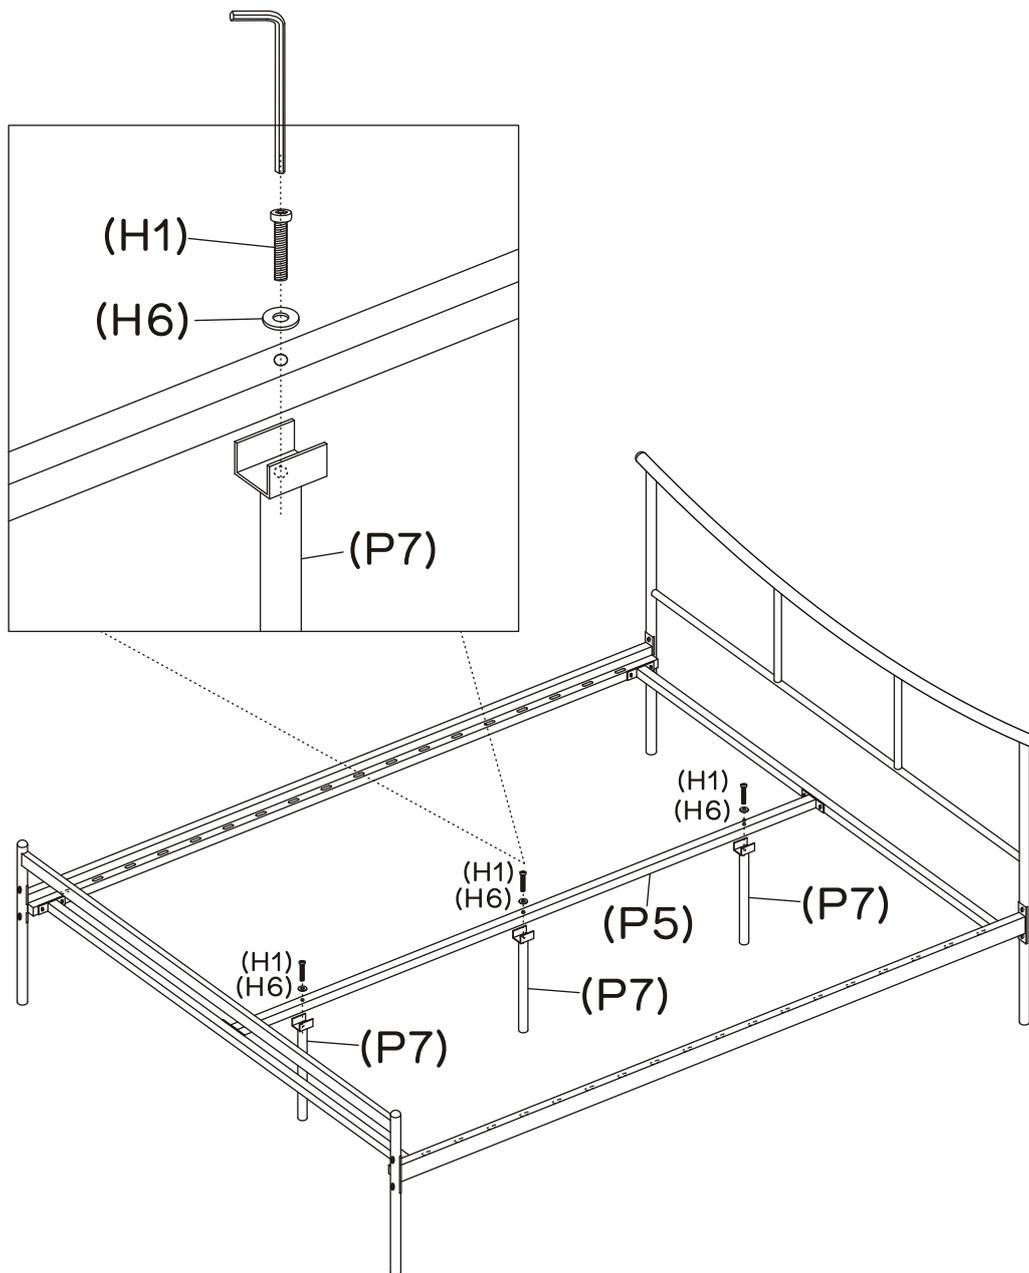


Attach the 3 x support legs (P7) to the centre rail (P5) with 3 x flat washers (H6) and 3 x bolts (H1), tightening with an allen key (H8).
You may now fully tighten all bolts on the bed frame.

Step 6


You will need

36 x Plastic Connectors (H7)

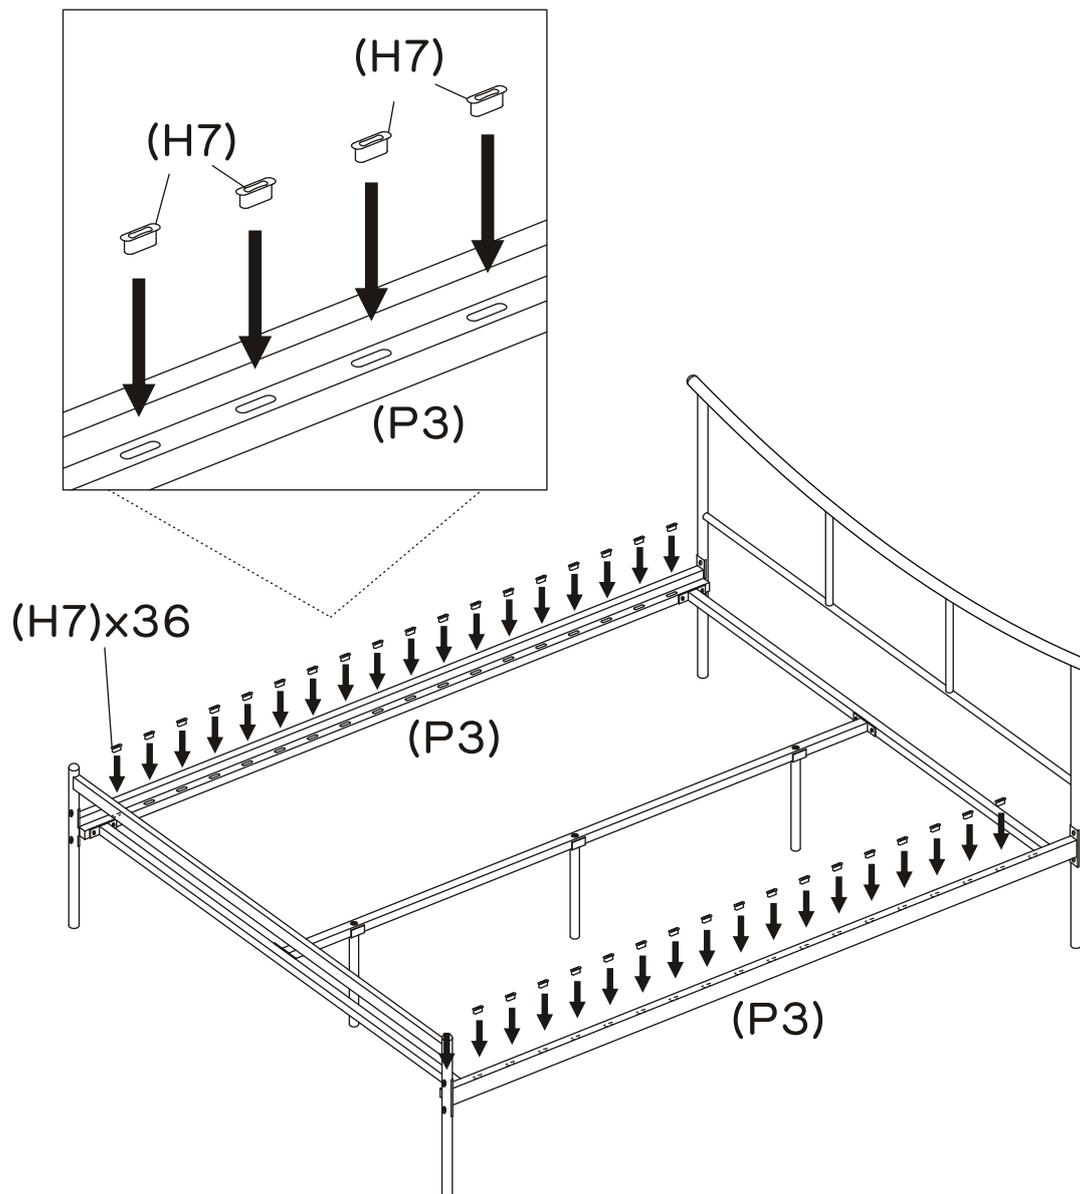


Insert 36 x plastic connectors (H7) into the holes on the 2 x side rails (P3).

Step 7

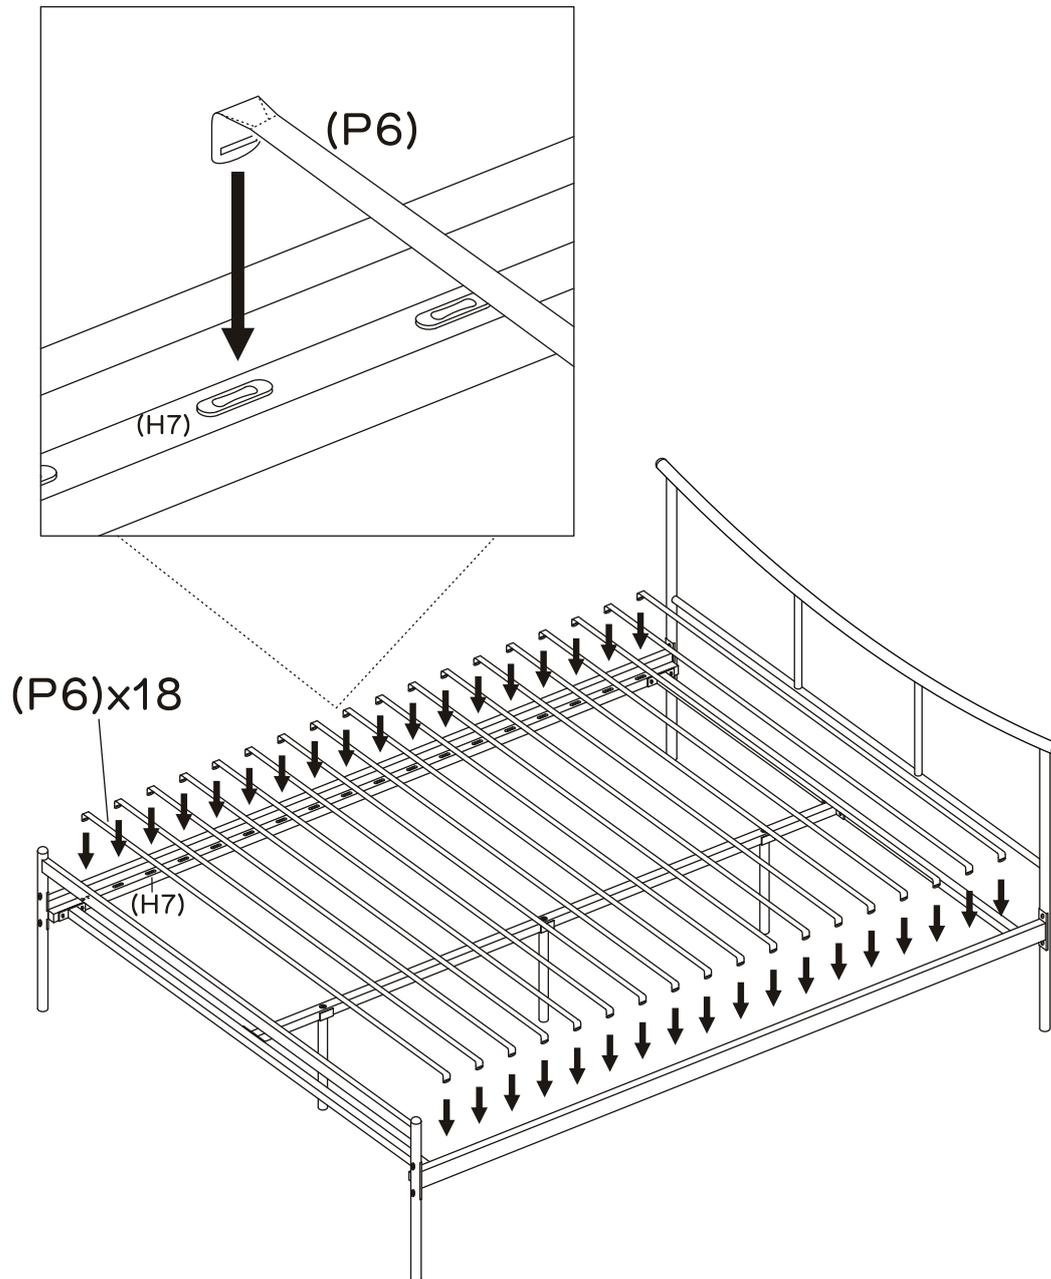

Insert the 18 x slats (P6) into the holes on the plastic connectors (H7) in the side rails (P3).

Step 8

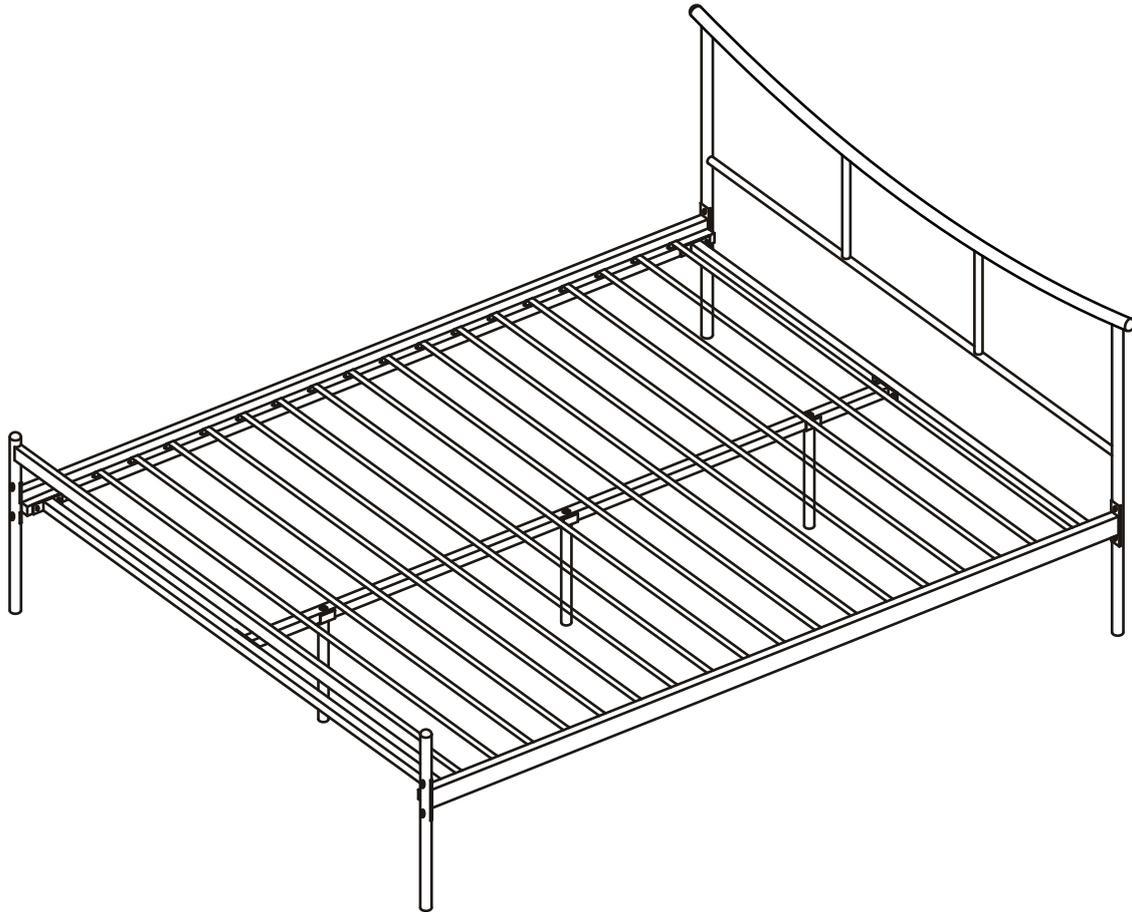

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.