


Assembly Instructions

3221B

BUZZ DESK STUDENT

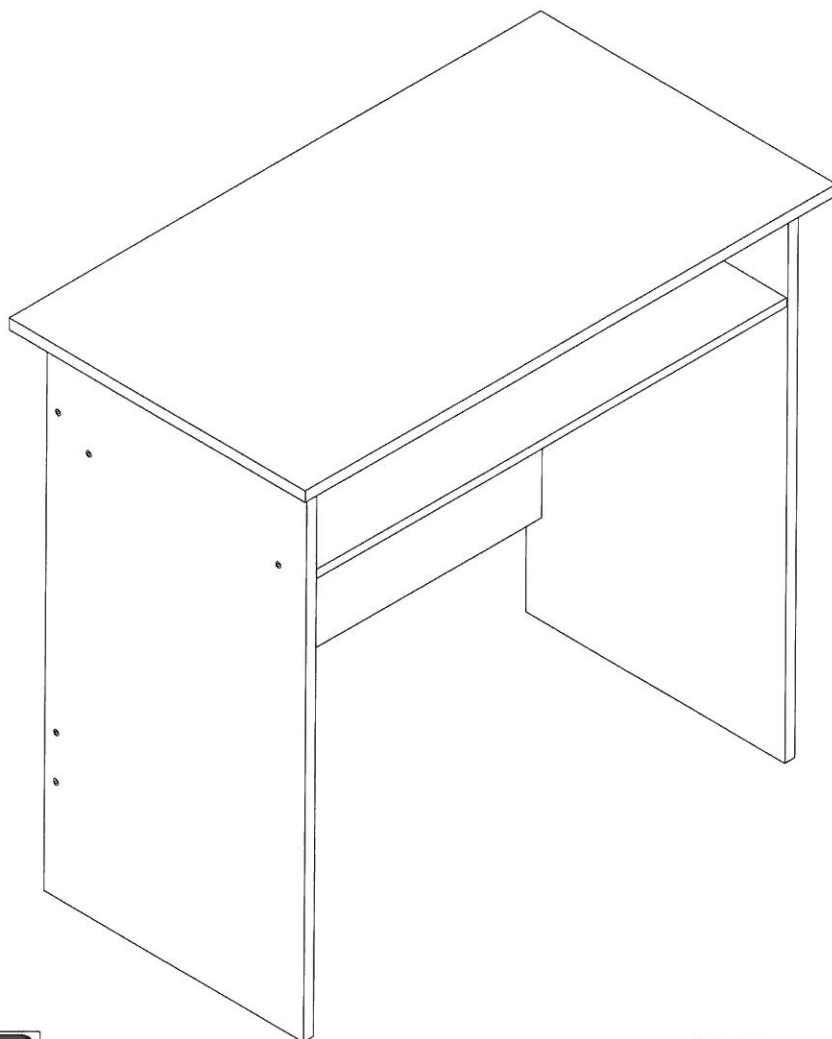

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1



Read Instructions carefully. Check no parts are missing.

2

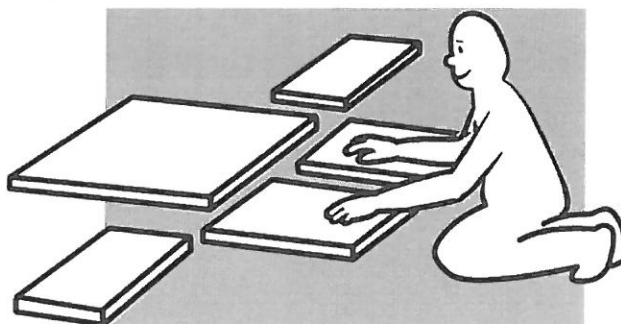


Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.

3




Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.

4

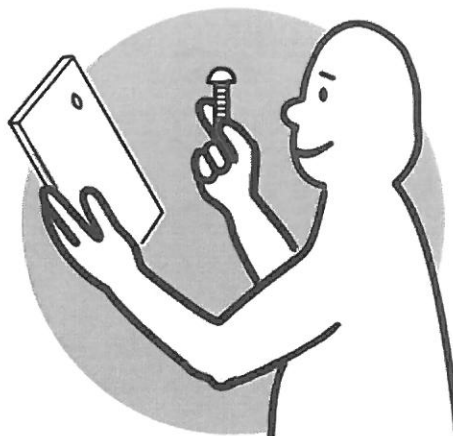


Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

5

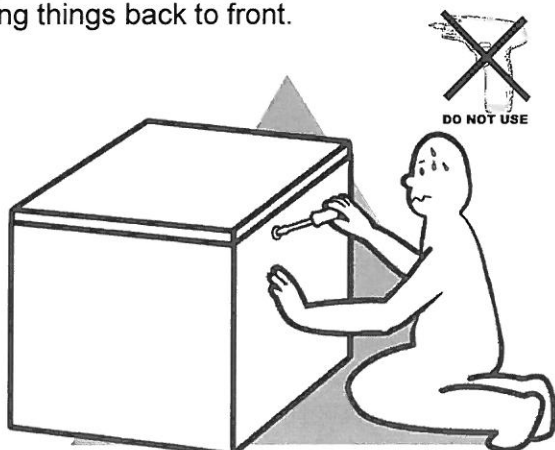


DO NOT fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.

6

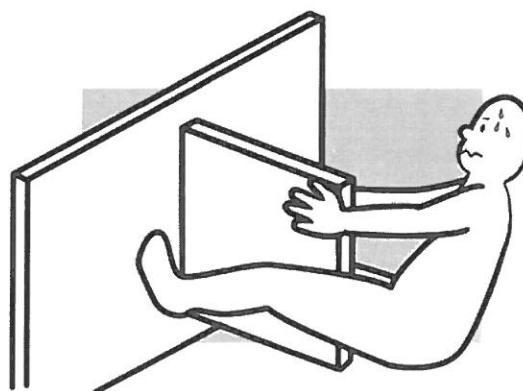


If glue is required **DO NOT** set until you are certain that the parts belong together.


What you Need

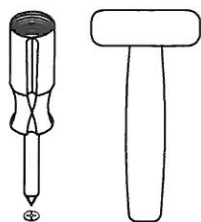

(Tools not provided)
Flat Blade Screwdriver
Philips Head Screwdriver
Mallet

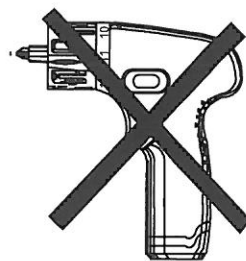


DO NOT USE

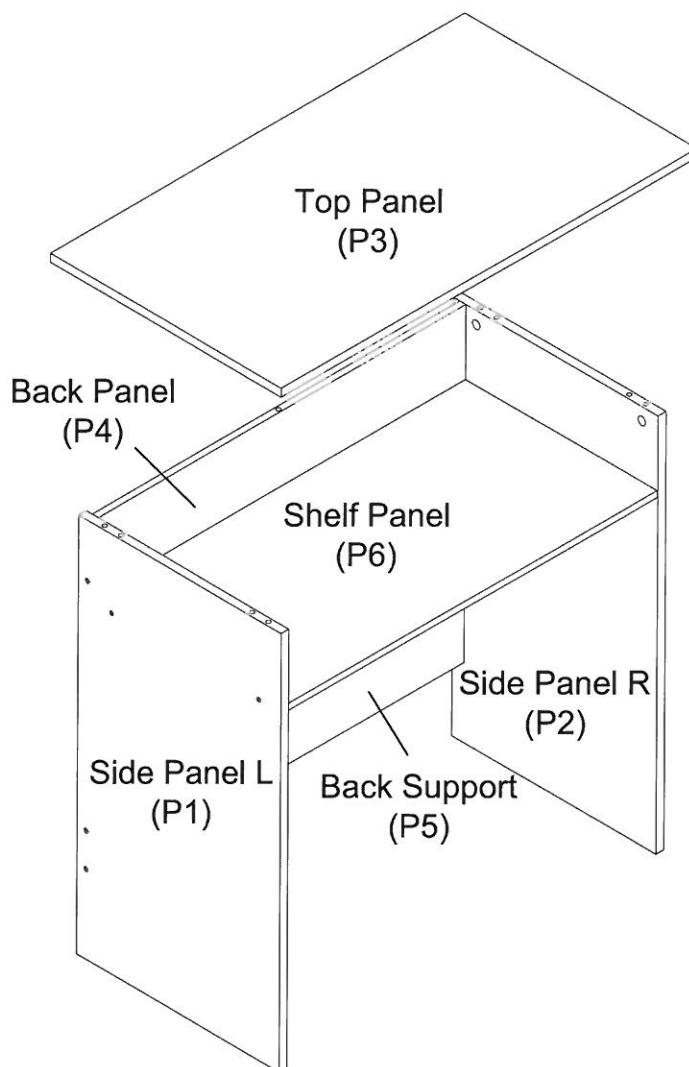

15 x Wood Dowel
M6 x 25mm
(H1)



11 x Screw #9 x 38mm
(H2)



4 x Euro Bolt
(H3)



4 x Housing
D15/12.5 MM
(H4)



4 x Leg Stud
(H5)



10 x Sticker
(H6)

Please make sure you have all these parts before you start.

Page 3




Step 1

You will need:


15 X WOOD DOWEL
M6 X 25mm
(H1)



DETAIL A

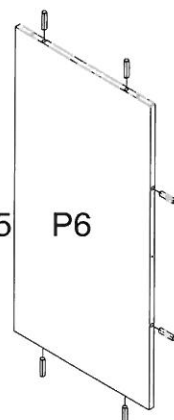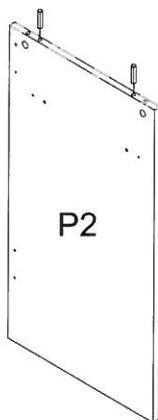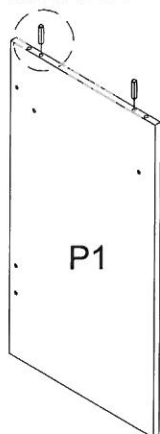

DETAIL A

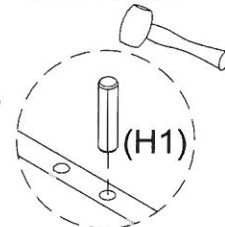


MAKE SURE DOWELS MATCH UP TO HOLES AND TAP GENTLY TILL ALL THE WAY IN.

Step 2

You will need:

1 X SCREW
#9 X 38mm
(H2)

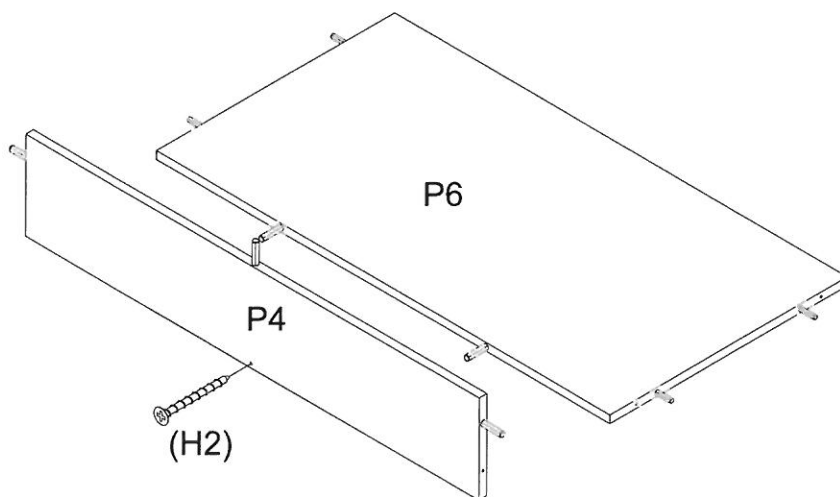



FIX BACK PANEL (P4) TO SHELF PANEL (P6) AND
TIGHTEN WITH SCREWS (H2).

FIX BOARD (P4) TO BOARD (P6) AND TIGHTEN WITH SCREW.

Step 3

You will need:

4 X EURO BOLT
(H3)

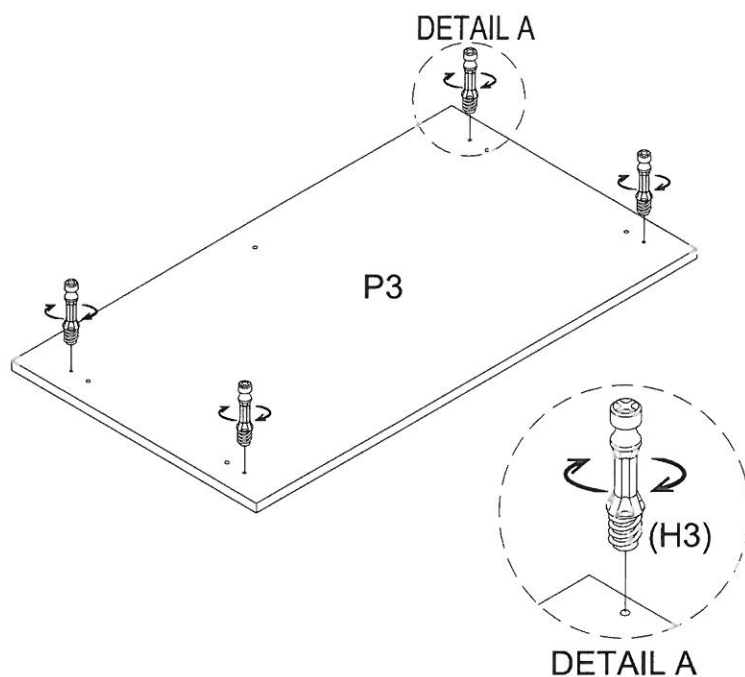


TURN EURO BOLT CLOCKWISE UNTIL TIGHTENED.

Step 4

You will need:

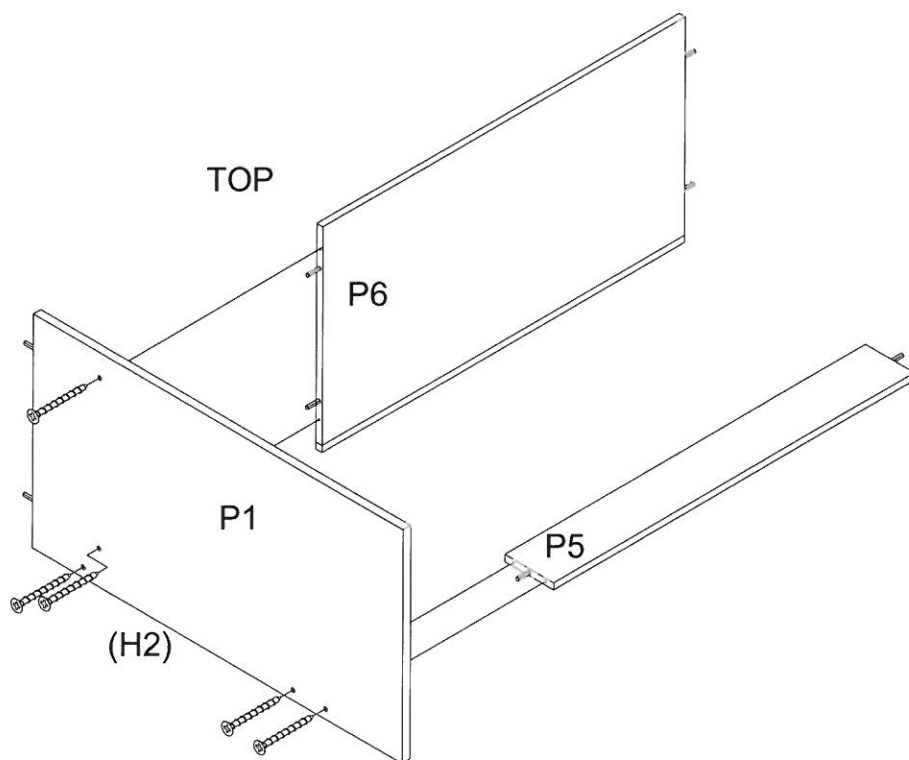

5 X SCREW
#9 X 38mm
(H2)




MATCH DOWELS TO HOLES AND PUSH IN, TIGHTEN WITH SCREW.

Step 5

You will need:


5 X SCREW #9 X 38mm (H2)	
4 X LEG STUD (H5)	

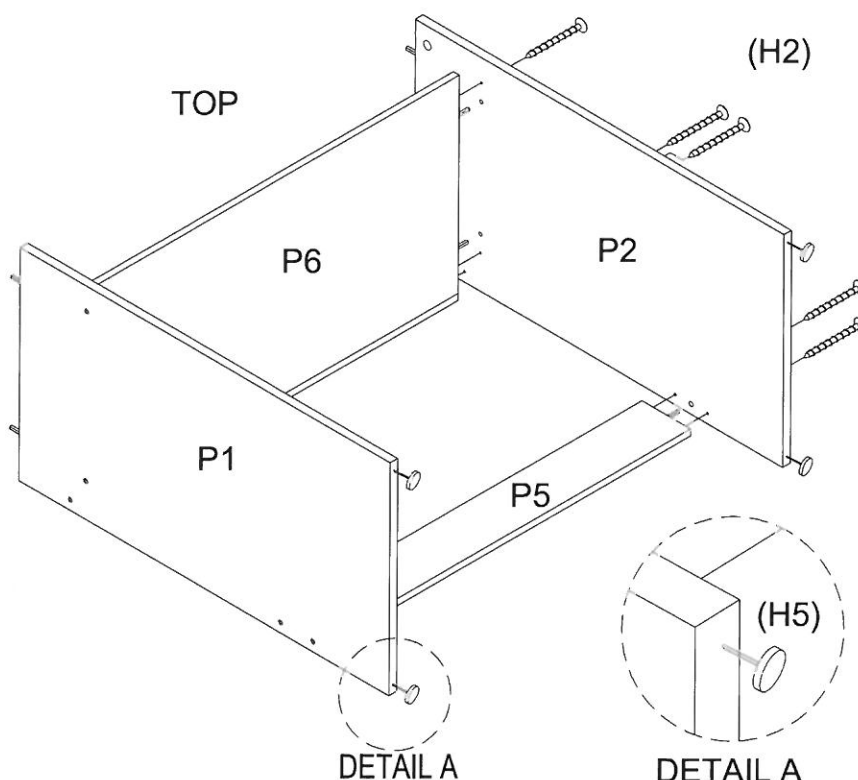


FIX SIDE PANEL (P2) TO UNIT BY MATCHING DOWELS TO HOLES AND TIGHTENING WITH SCREWS.

Step 6


You will need:

4 X HOUSING D15 / 12.5MM (H4)	
-------------------------------------	---

This is how a cam nut works...



The head of the bolt goes into the wide mouth of the nut. You then turn the nut so the narrow part closes over the bolt.

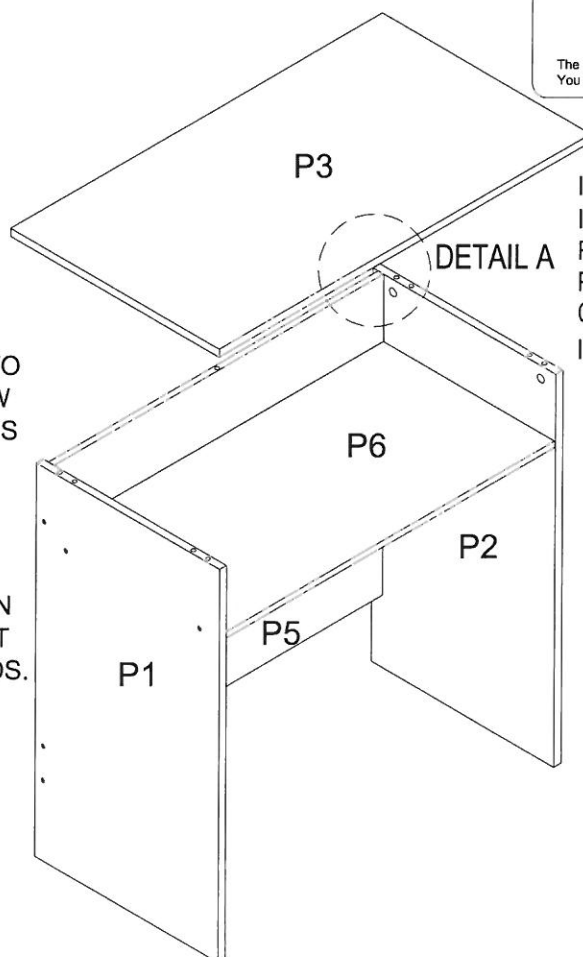


INSERT 4 SMALL CAM NUTS (H4) INTO HOLES OF SIDE PANEL (P1 AND P2) ROTATE THE CAM NUT SO THE ARROWS POINT TOWARDS THE INCOMING CAM BOLTS, PUSH TOP PANEL (P3) INTO PLACE AND TIGHTEN THE CAM NUTS.

DETAIL A

PUSH HOUSING INTO HOLE WITH ARROW POINTING TOWARDS EURO BOLT.

GENTLY PUSH BOARD DOWNWARDS AND TURN EURO BOLT UNTIL TIGHT REPEAT WITH ALL BOARDS.

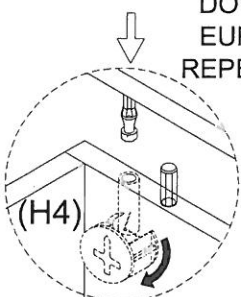


TURN TO LOCK

Step 7


You will need:

10 X Sticker
(H6)

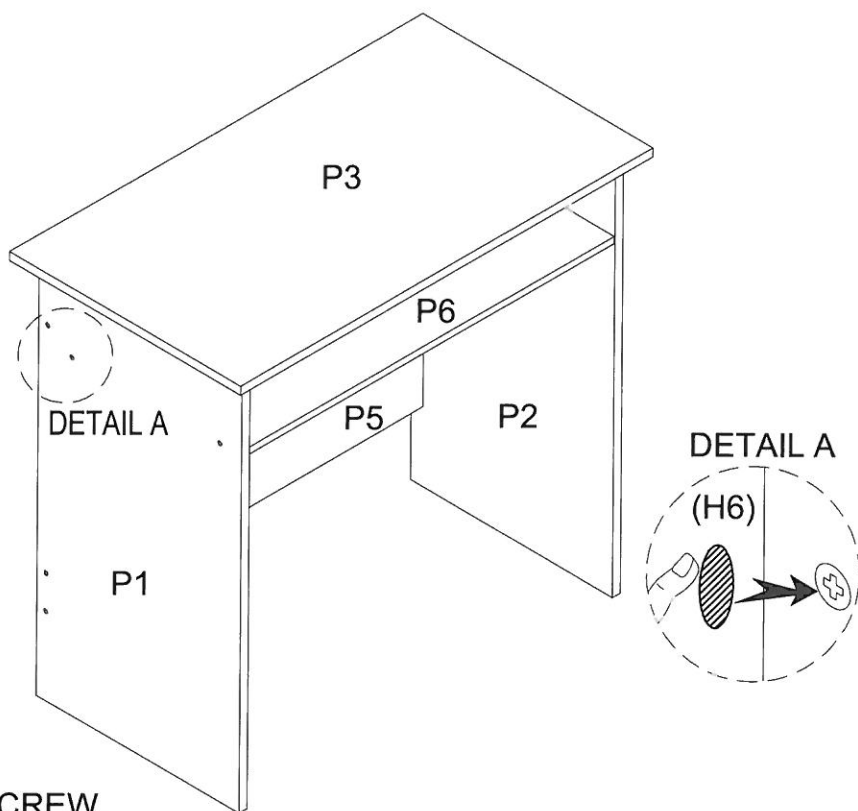

PLACE STICKER TO COVER ALL SCREW.


Step 8

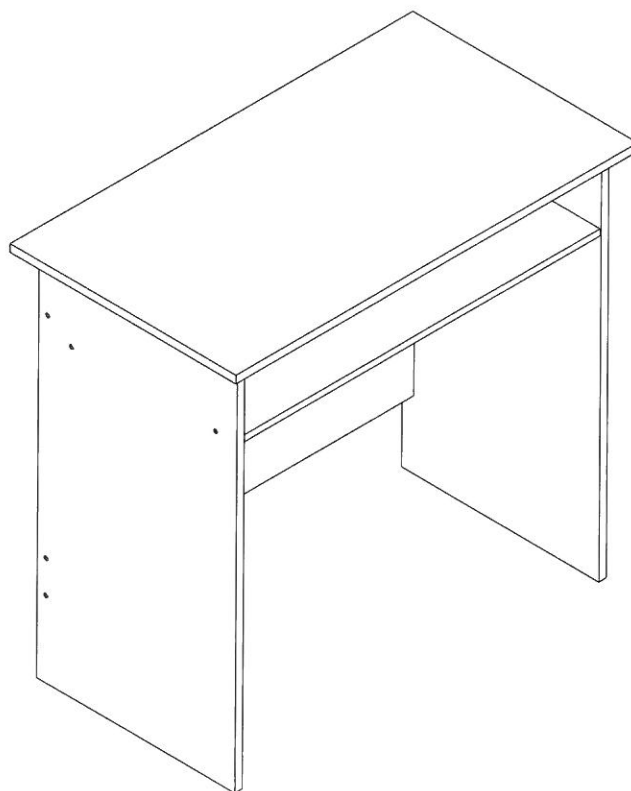

The job is now complete!

In the interest of our environment
Please dispose of all
packaging thoughtfully

Step 7

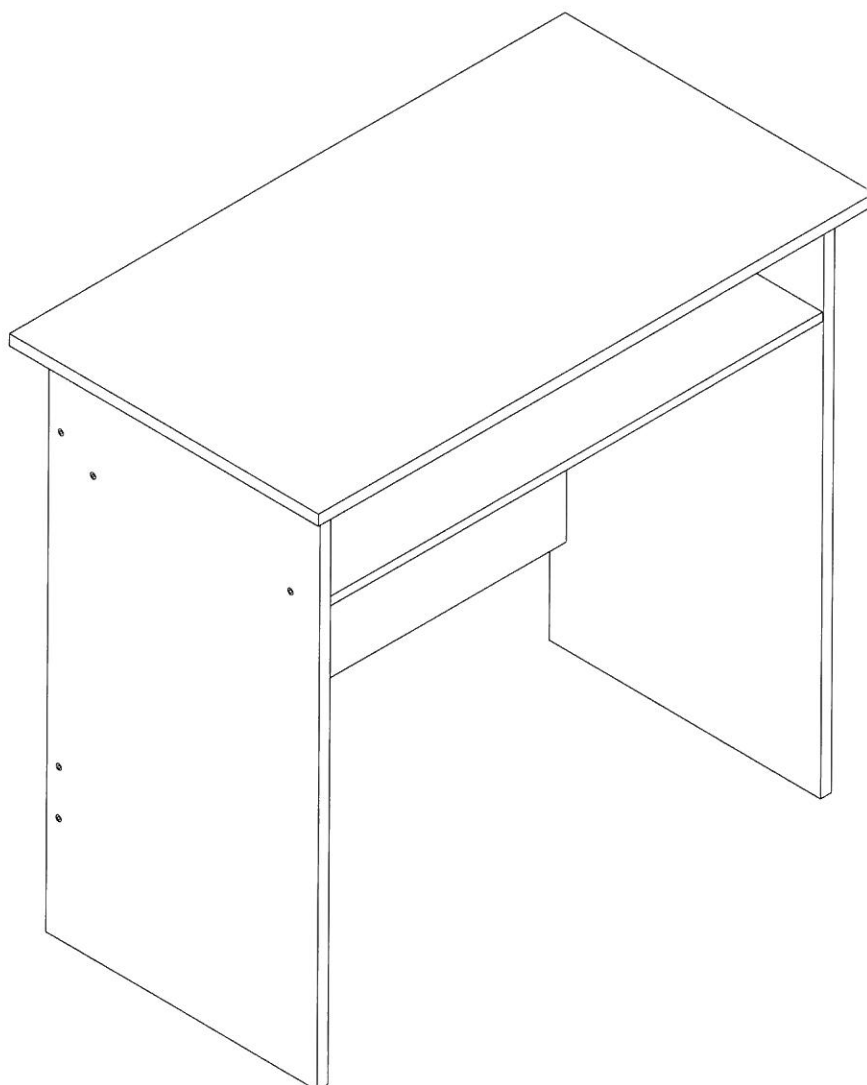

The job is now complete!

In the interest of our environment
Please dispose of all
packaging thoughtfully