


Version 1.0

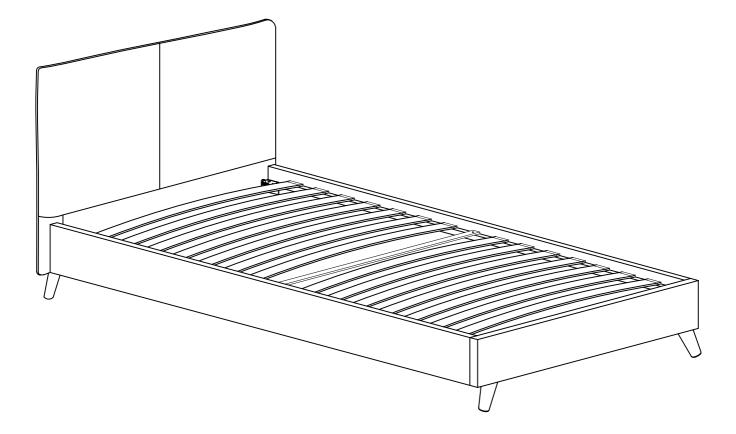





Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



Assembly checklist




Read through the instructions carefully before you begin.

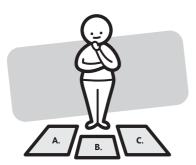



Make sure you have all the required tools. Never use power tools unless instructed.

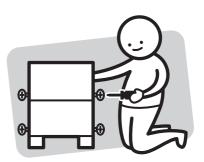

before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



What you need


to assemble the product

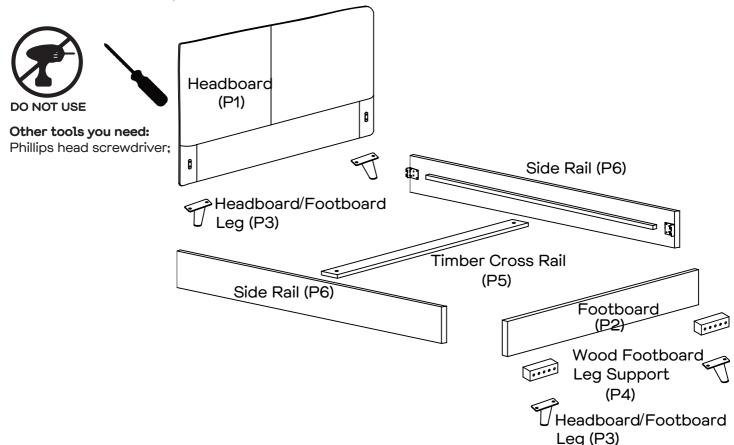


Parts list

Box 1: Footboard (P2); 4 x Headboard/Footboard Legs (P3); 2 x Wood Foodboard Leg Supports (P4); Timber Cross Rail (P5); 2 x Side Rails (P6); End Connectors (P7); Hardware Pack.


Box 2 : Headboard (P1) ; Slats (P8)

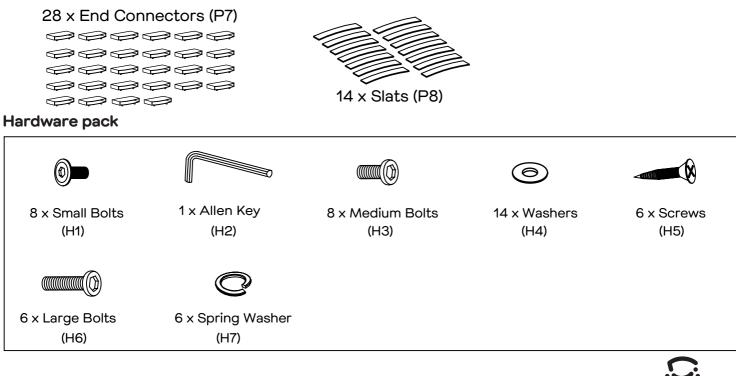




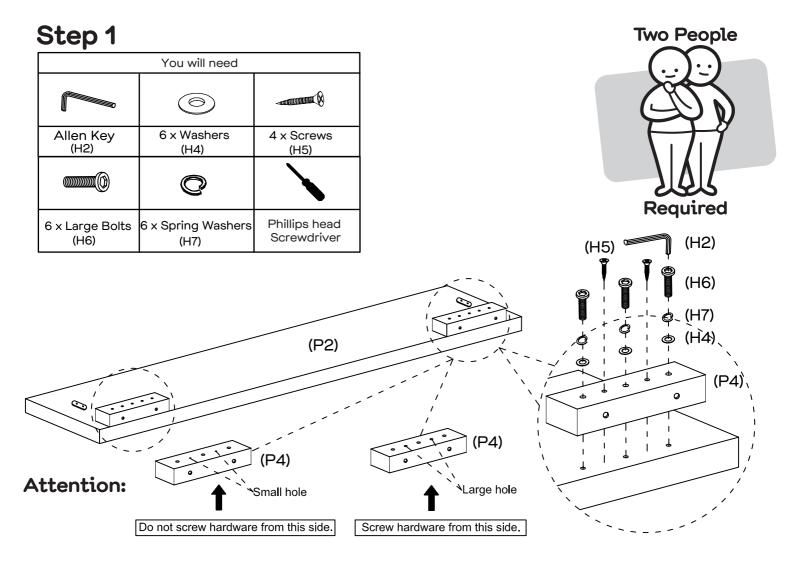

Attach 2 x wood footboard legs supports (P4) to the footboard (P2) with 6 x large bolts (H7), 6 x washers (H4) and 6 x spring washers (H8) by using allen key (H2). Then screw the 4 x screws (H5) by using a phillips head screwdriver (not provided).

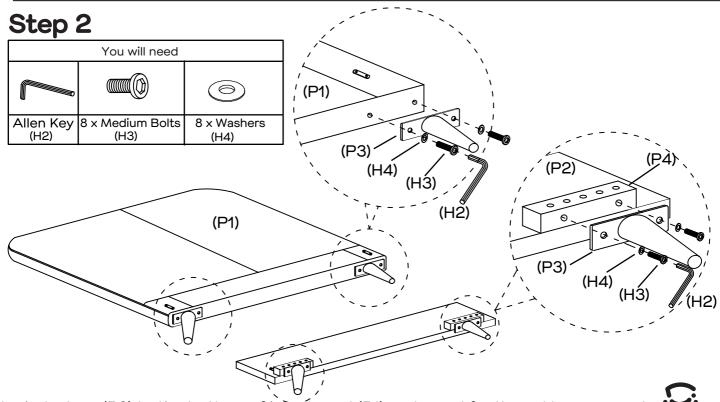


Attach 4 x legs (P3) to the bottom of headboard (P1) and wood footboard legs supports (P4) with 8 x medium bolts (H3) and 8 x washers (H4) by using allen key (H2).

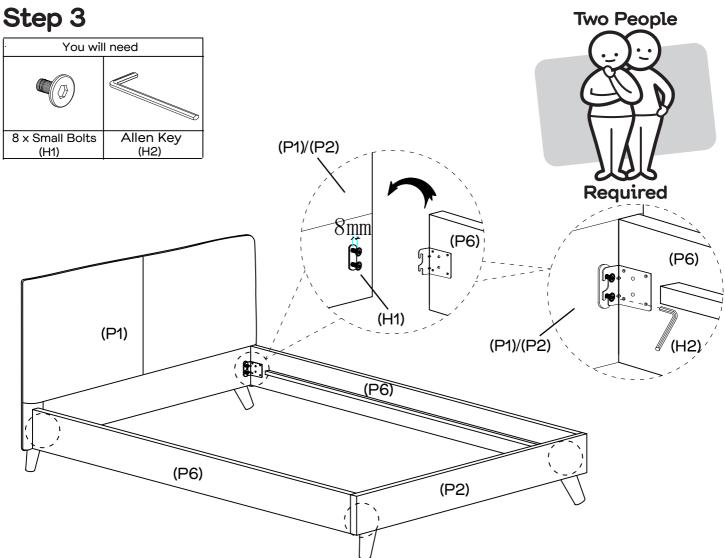


Install the bolts (H1) to the brackets by using allen key (H2) as shown, do not tighten the bolts and keep them 8mm loose. Then attach 2 x side rails (P6) to headboard (P1) and footboard (P2) by slotting the bracket on the side rails (P6) over the bolt as shown. Please do not tighten bolts until step 5.

Step 4

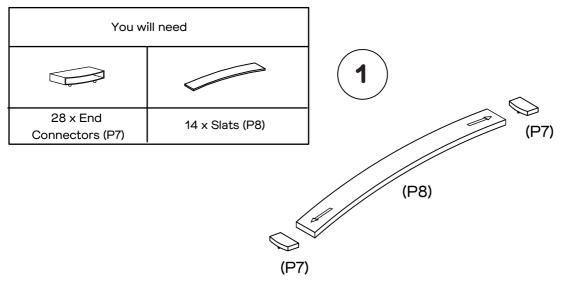


Attach 2 x end connectors (P7) to 1 x slat (P8) together as shown.




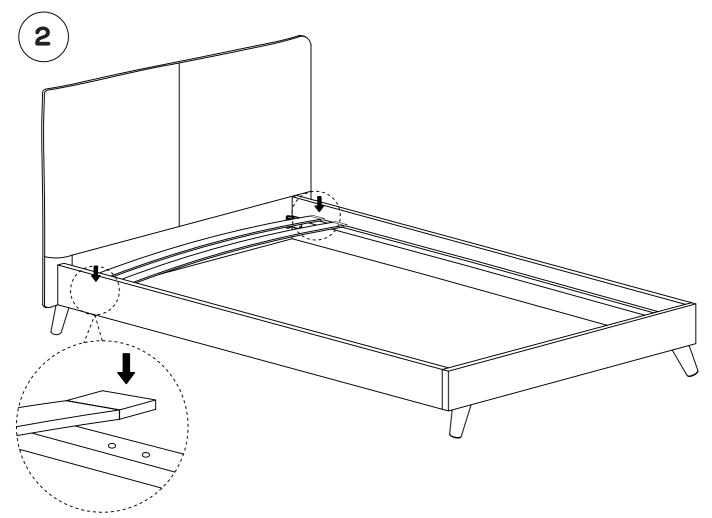

Attach the assembled slats by pressing down the connectors (P7) into the holes on 2×3 side rails (P6) until they lock.

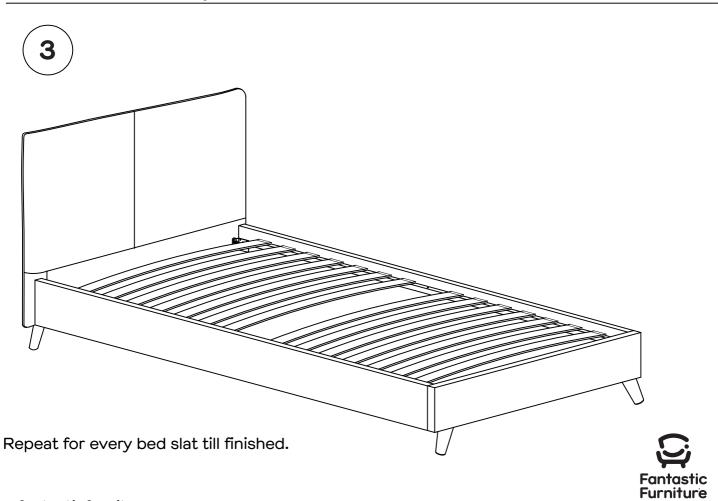


Step 5

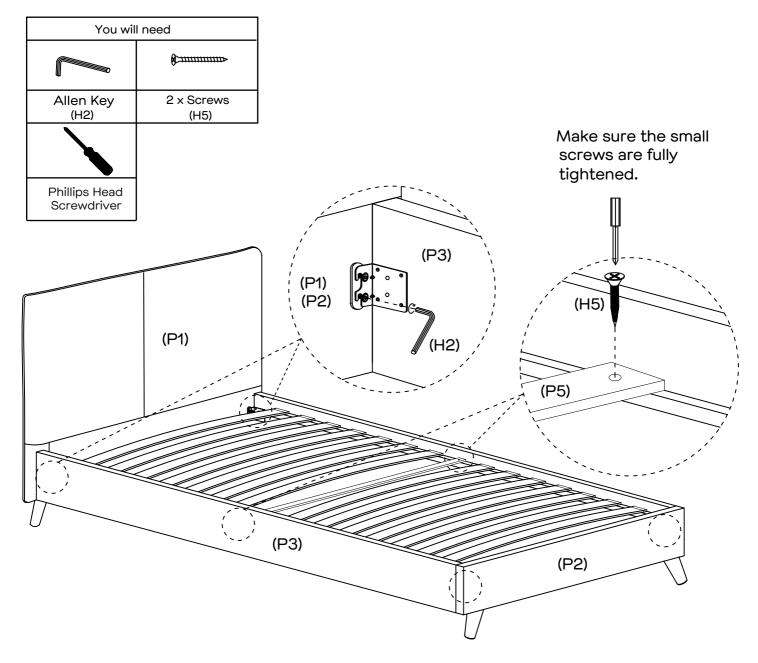

Attach the timber cross rail (P5) to the side rails (P3) with $2 \times$ screws (H5), fully tighten using a phillips head screwdriver. You may now fully tighten all the bolts on the headboard (P1) and footboard (P2) to $2 \times$ side rails (P3).



Step 6

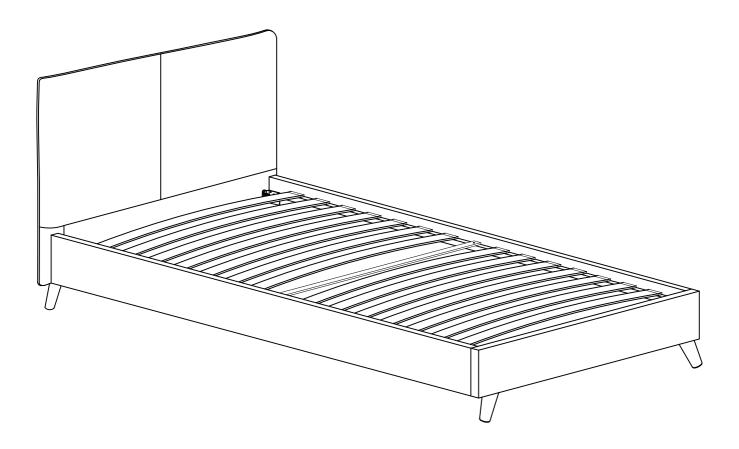

Job complete!

In the interest of our environment please dispose of all packaging thoughtfully.

