

BUZZ UTILITY

5 SHELF

Enjoy


Your purchase from Australia's Best Value Furniture Store




Assembly checklist




Read through the instructions carefully before you begin.

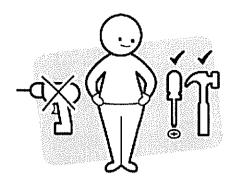

Make sure you have all the required tools. Never use power tools unless instructed.

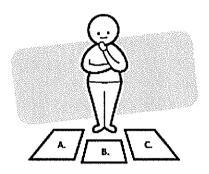

Identify and lay out all of the components before you begin assembly.

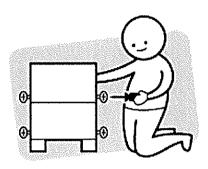



Unless instructed, do not fully tighten screws until the item is fully assembled.


Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

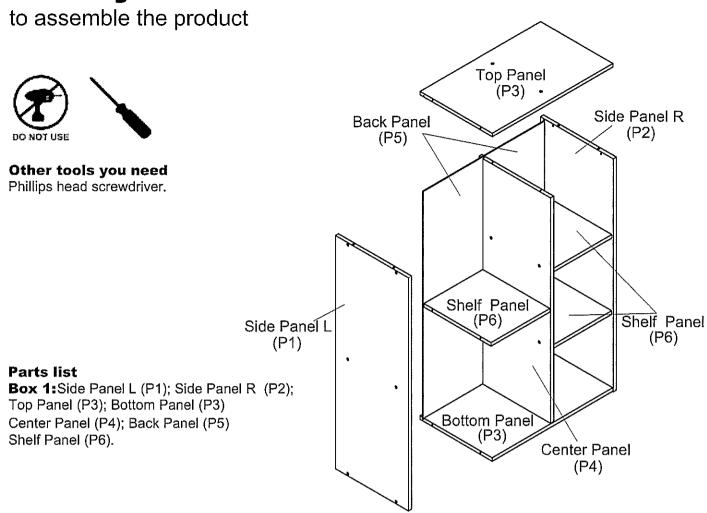

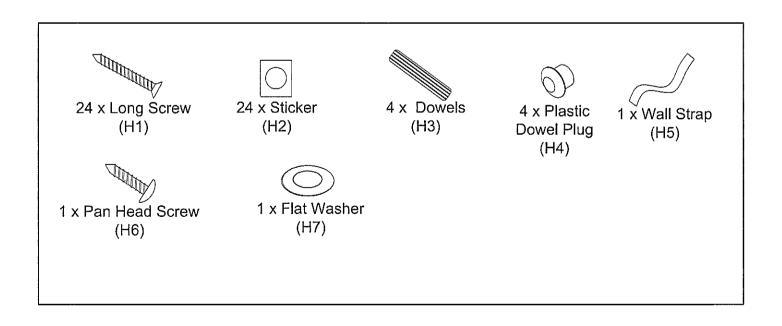


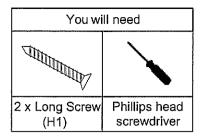


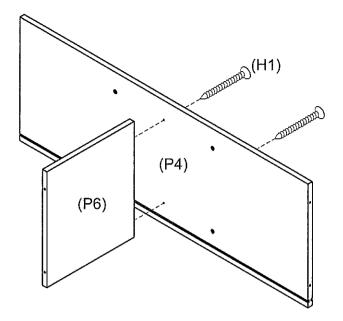

Attach shelf panel P6 to centre panel P4 using screws (H1).


Step 2

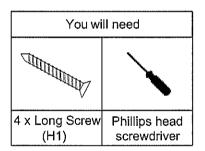

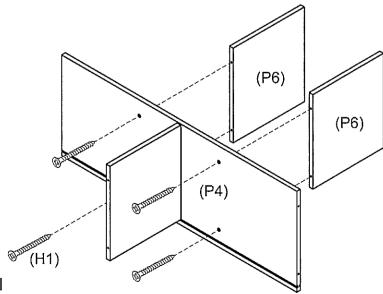


Attach shelf panels P6 to centre panel P4 using screws (H1).




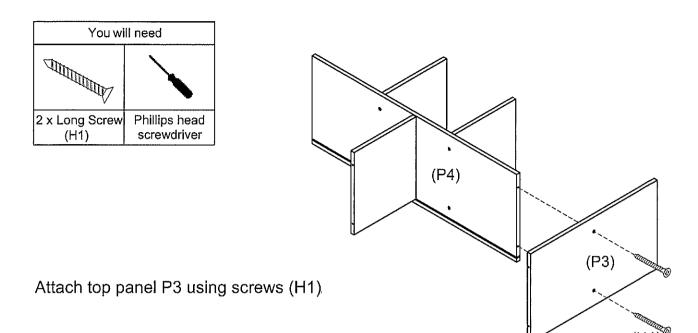

Step 4

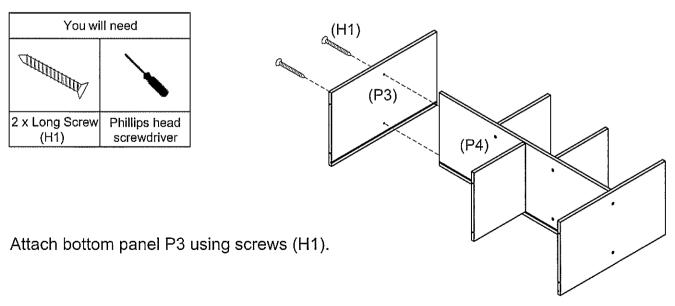




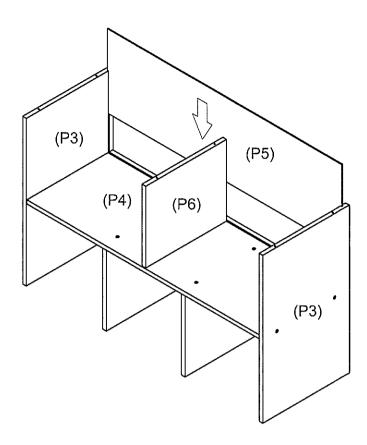


Slide panel P5 into place.


Step 6

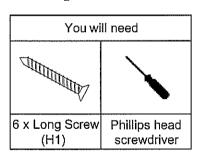

Attach side panel P1 using screws (H1).

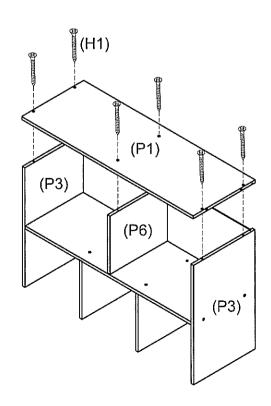




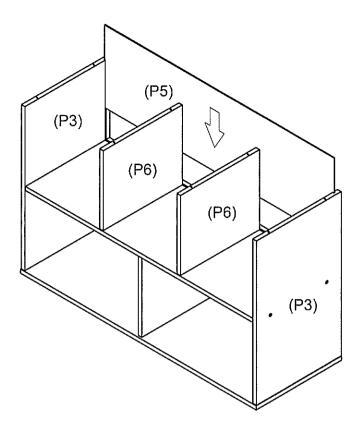


Slide panel P5 into place.


Step 8

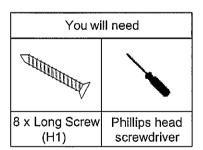


Attach panel P2 using screws (H1).

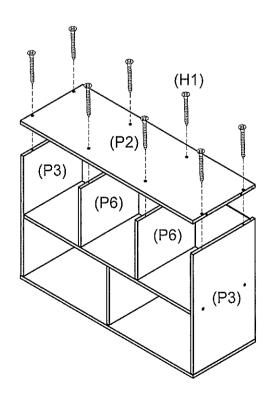




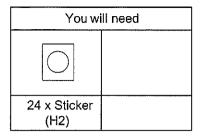


Place sticker to cover all screws as per Detail A.

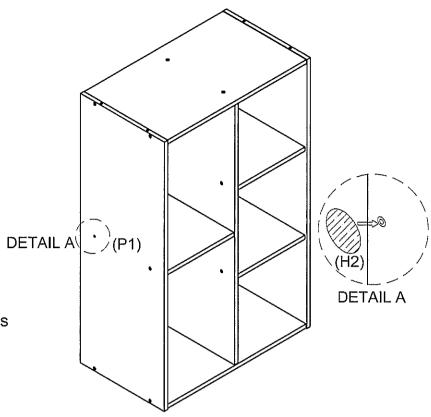


Step 10

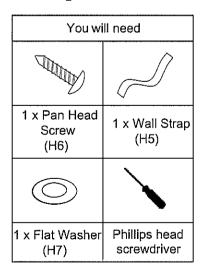


Attach safety wall strap to unit.

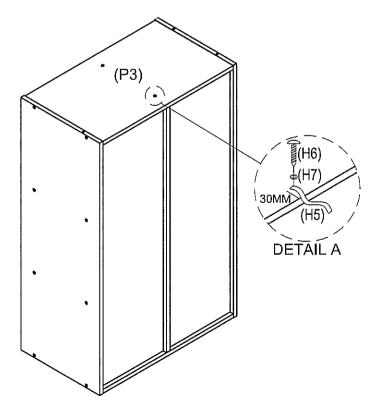




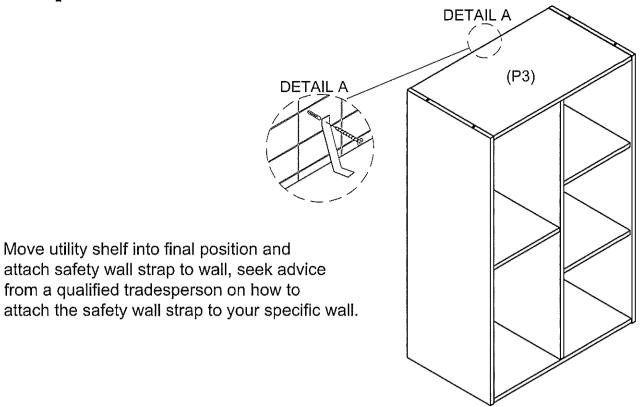



Step 12

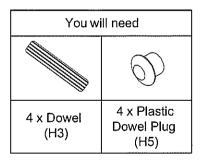

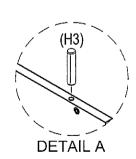

If you wish to stack insert wood dowels (H3) into panel P3 and tap down with mallet ,as per detail (A).If you do not wish to stack place plastic dowel plug into panel P3 as per detail (B).

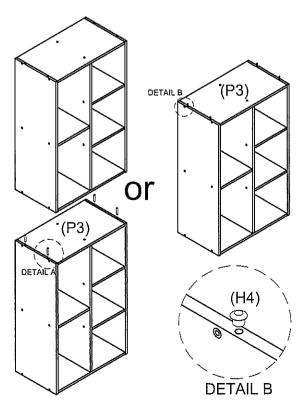

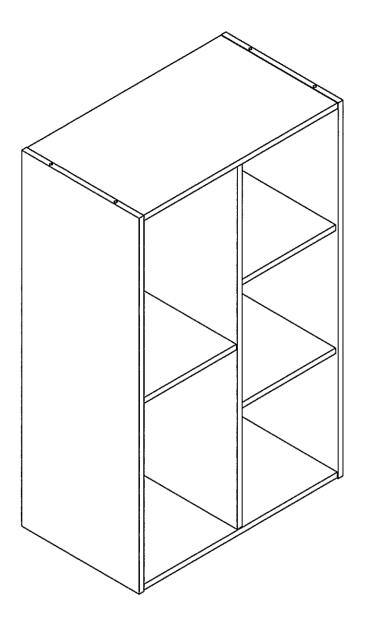

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.