


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9


**45 MIN**

APPROXIMATE ASSEMBLY TIME

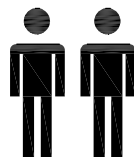


2 PERSON ASSEMBLY

FLOOR AREA  
2.5M X 2.0M

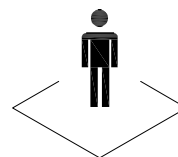


REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS




POZI SCREWDRIVER



HAMMER




MEASURING TAPE



DRILL

**ASSEMBLED DIMENSIONS**

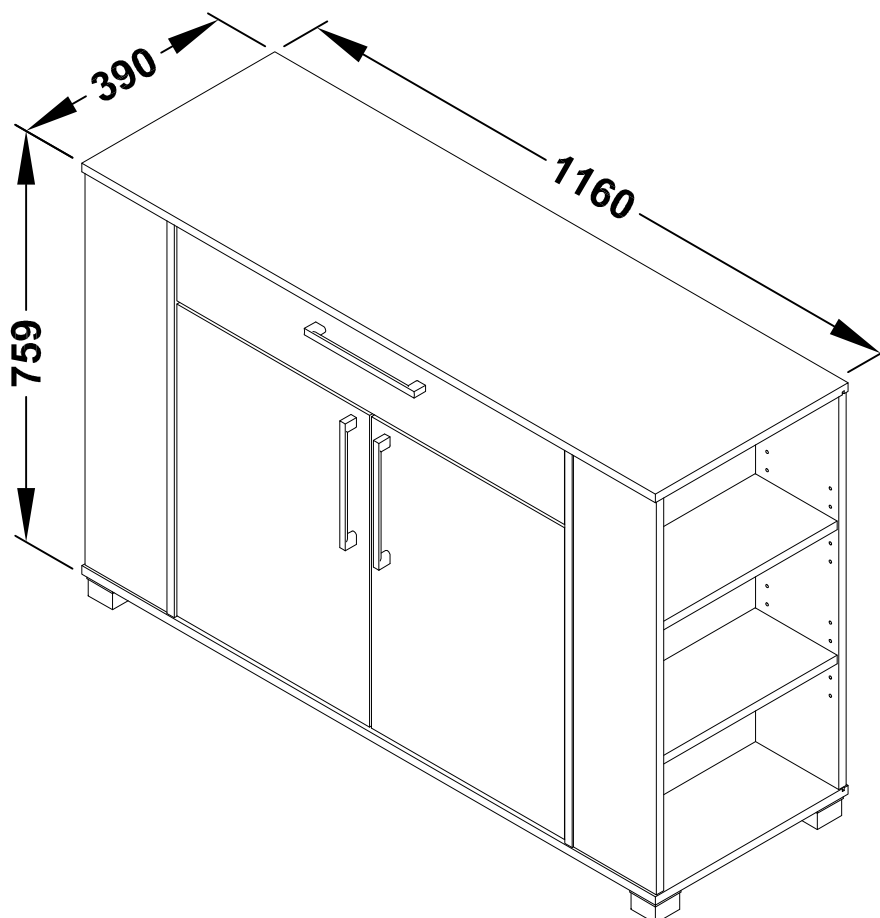

# **SORRENTO BUFFET WITH DRAWER & CUPBOARD**

**ITEM CODE: 8068-9**

## **Tips before you start:**

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people ( as indicated on page 1 ) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

## **Care and Maintenance of your Furniture**


- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot item ( e.g. hot drinks ) directly on to the wood surface.
- ☒ Please do not drag or pull your furniture.

# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9


Tips before you start:

## QUICKFIT

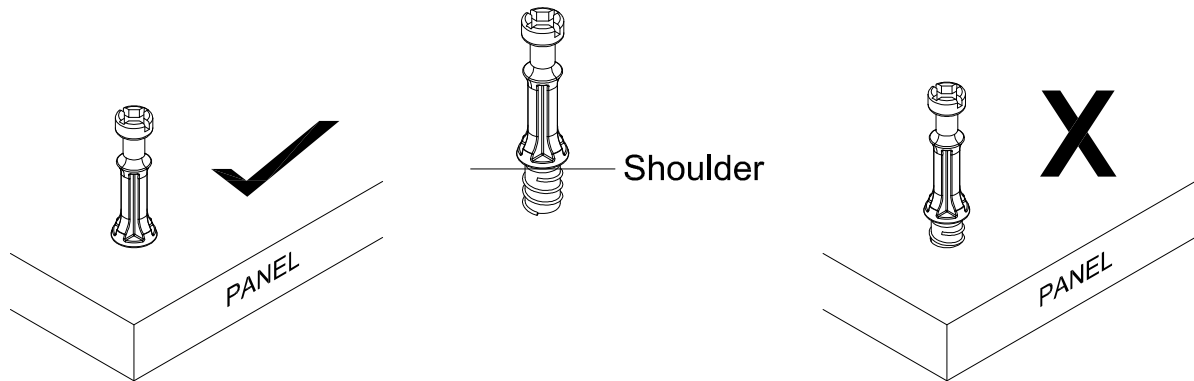

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

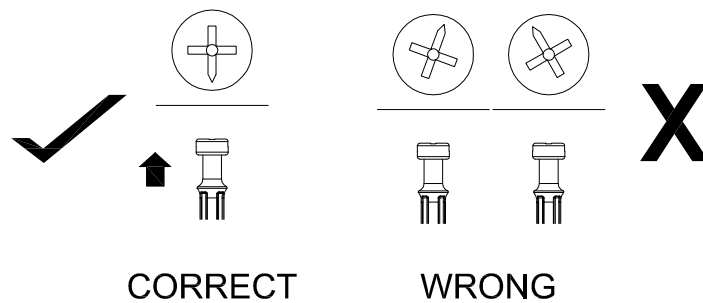

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

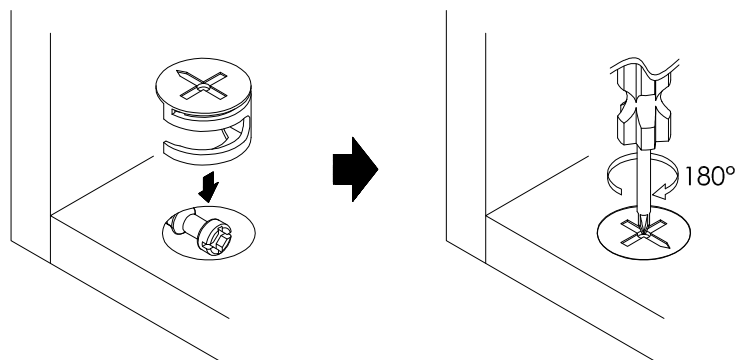

Turn camlock clockwise to tighten.

# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

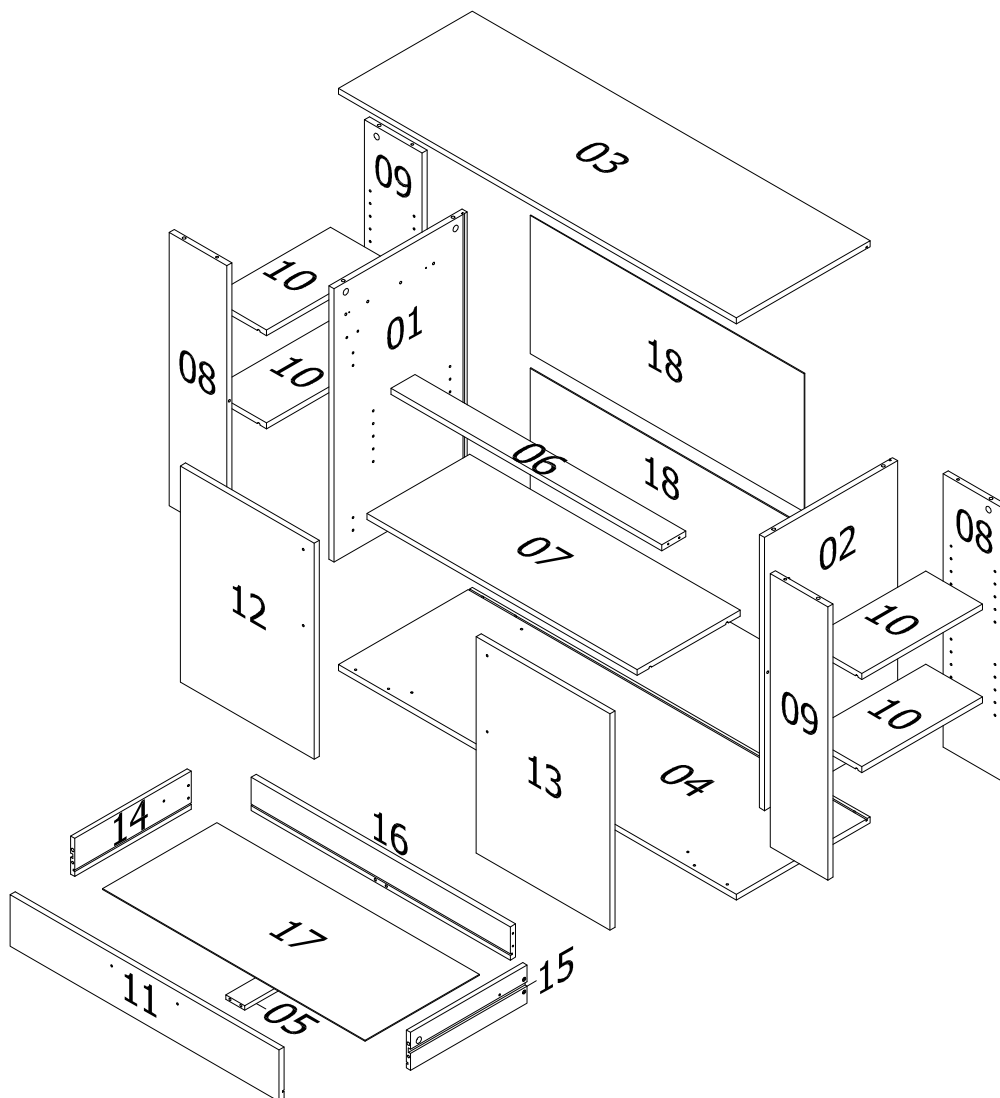

## PART LIST:

NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1	10	DIVIDER PANEL (SIDE)	4
2	SIDE PANEL (RIGHT)	1	11	DRAWER FRONT	1
3	TOP PANEL	1	12	DOOR PANEL (LEFT)	1
4	BOTTOM PANEL	1	13	DOOR PANEL (RIGHT)	1
5	DRAWER BOTTOM SUPPORT	1	14	DRAWER SIDE (LEFT)	1
6	RAIL PANEL	1	15	DRAWER SIDE (RIGHT)	1
7	DIVIDER PANEL (CENTER)	1	16	DRAWER BACK	1
8	FRONT PANEL (LEFT)	2	17	DRAWER BOTTOM	1
9	FRONT PANEL (RIGHT)	2	18	REAR PANEL	2

# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## HARDWARE LIST

(A) X16



SCREW  
M4.7 X 38MM

(B) X4



CSK SCREW  
M4.5 X 32MM

(C) X17




CSK SCREW  
M3.5 X 15MM

(D) X8



EURO SCREW  
M6 X 13MM

(E) X10



BOLT-9607 PARALEL  
NECK DOWEL 24 X 8.5

(F) X10




CAM-9642 CAM  
3000 12/13MM

(G) X14



WOOD DOWEL  
Ø6 X 20MM

(H) X2



PLASTIC DRAWER  
RUNNER WITH STOPPER  
(290MM)

(J) X20



METAL ADJUSTABLE  
SHELF STUD

(K) X1




H. PROFILE (789MM)

(L) X3



192MM PVC U-SHAPE  
HANDLE (1PC) WITH  
SCREW (M3.5 X  
25MM=2PCS)

(M) X4



METAL HINGES  
(7/8"W/SPRING)

(M2) X4



HINGES PLATE

(N) X5



PLASTIC SQUARE  
LEG(H39MM) =1PC  
WITH SCREW(M3.5 X  
15)=4PCS

(P) X4



BACKPLY STOPPER

(Q) X4




PLASTIC HOLE PLUG  
(Ø12MM)

(R) X4



ROUND STICKER  
(Ø18MM)

(S) X1



GLUE

(T) X1






WEBBING TAPE  
1.2 X 12 X 145MM

# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9



## STEP 1

Using glue (S) insert dowel (G) into pieces (5 , 8 , 9 , 14 & 15) as shown.

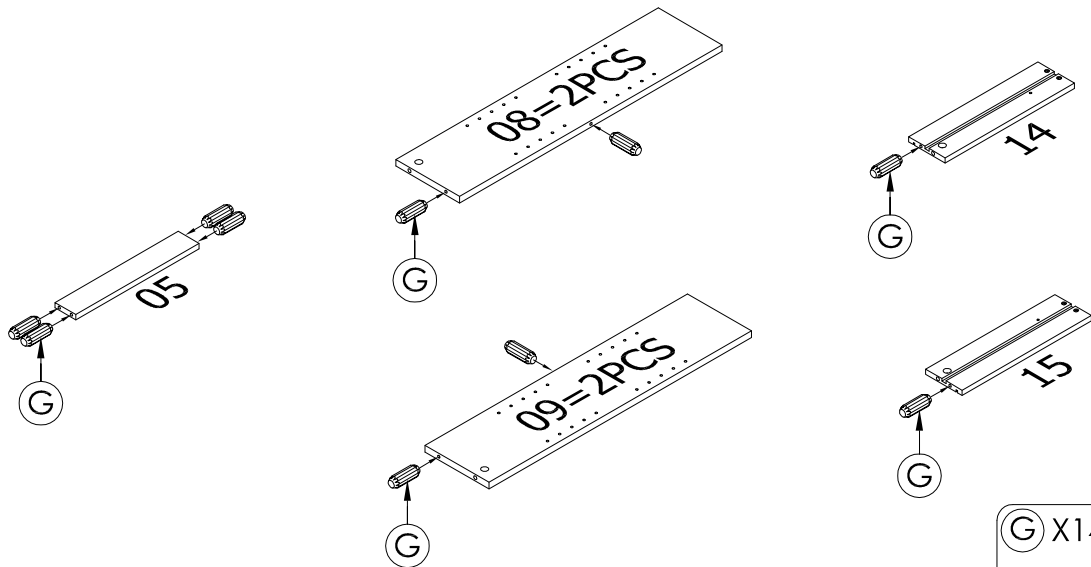

## STEP 2

Take both panels (3 & 11) , using a drill on low speed / torque or a phillips head screw driver CAM PINS (E) as shown.

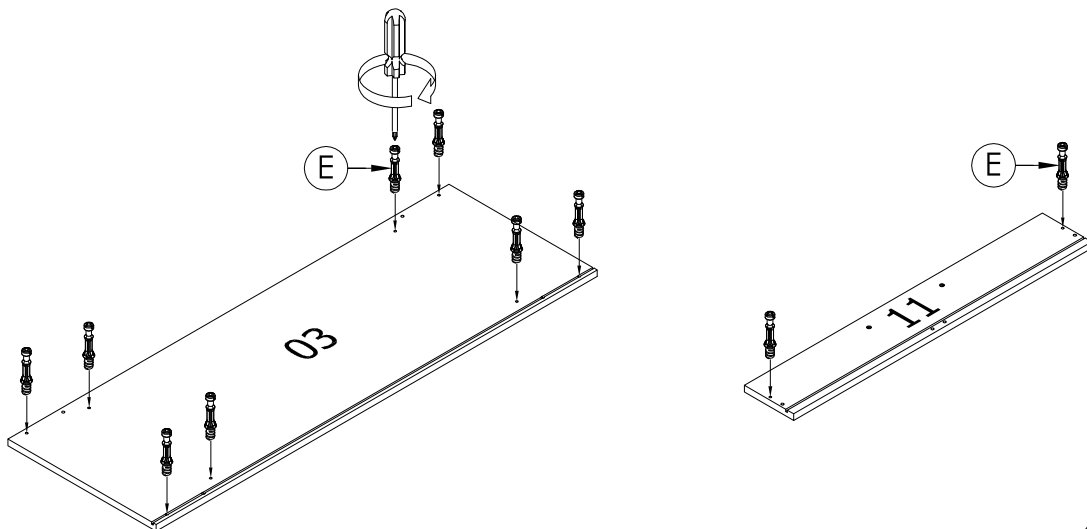


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 3

Attach drawer sides (14 & 15) to drawer backs (16) using 32mm screws (B).

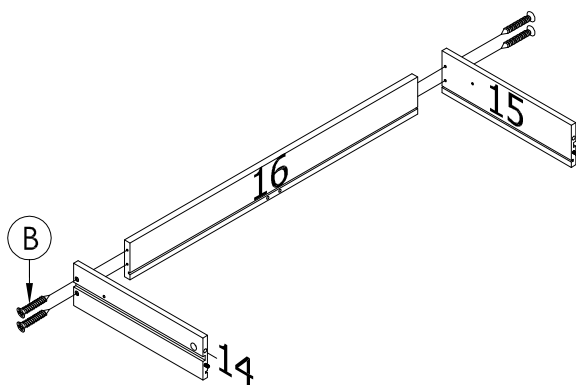


(B) X4




## STEP 4

Using glue (S) attach panels (05) to drawer backs (16) .

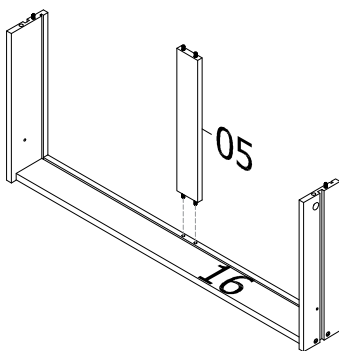

(S)




# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 5

Slot drawer bottoms (17) into drawer frames.

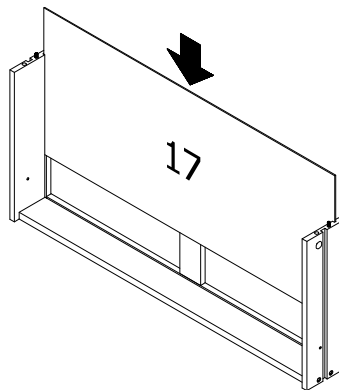





## STEP 6

Attach drawer front (11) to side of the drawer using the glue (S).

Then insert the 13mm CAM LOCK (F) into holes on the sides of the drawer as shown.

Turn CAM LOCK using screw driver until they tighten into place.

NOTE: Don't over tighten as this may cause damage.

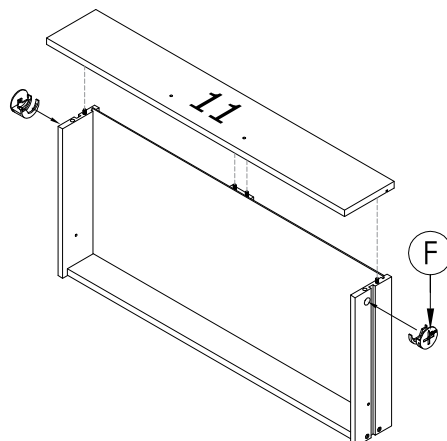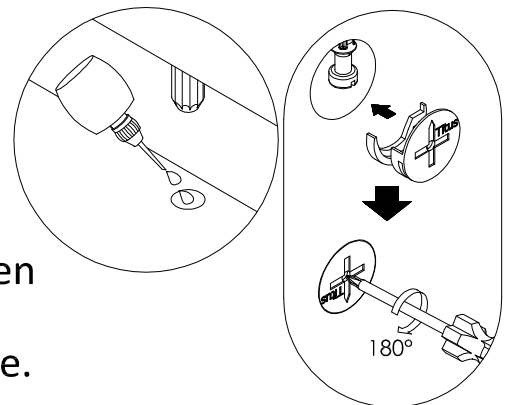





# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9






## STEP 7

Affix the handle (L) to the drawer front (11) with the 25mm screw.

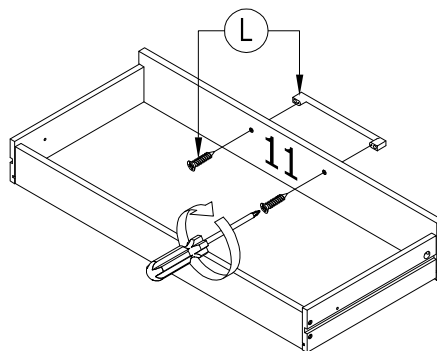

## STEP 8

Attach plastic drawer runner (H) to panels (1 & 2) using screw 15mm (C) as shown.




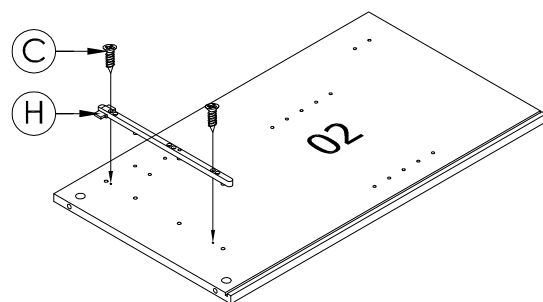
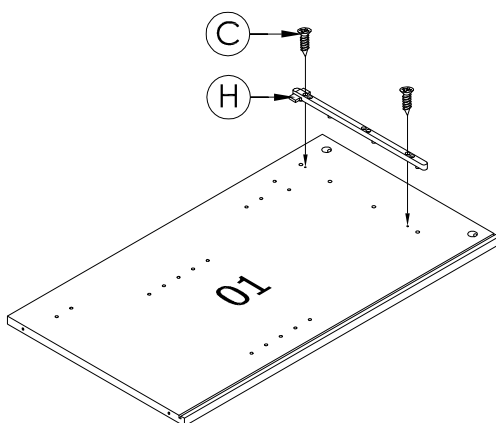
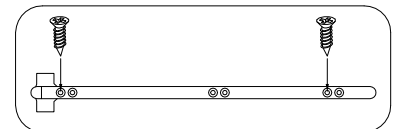


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 9

Affix the hinges plate (M2) with screw (D)  
to the side panel (1 & 2) .

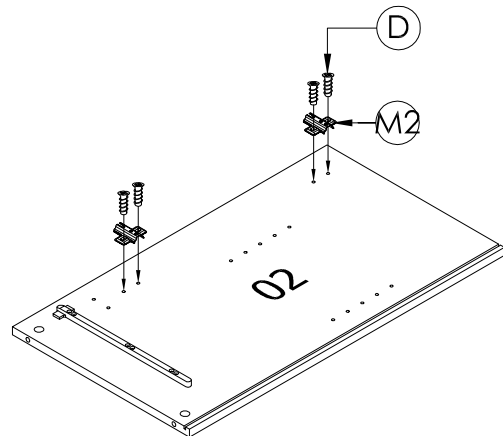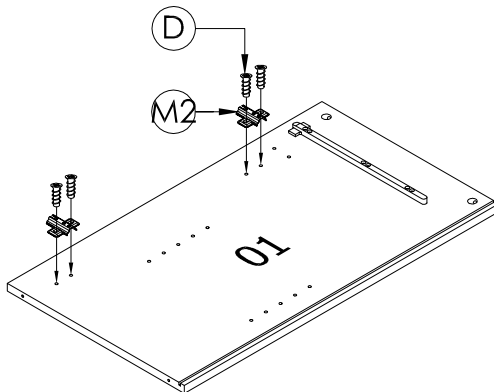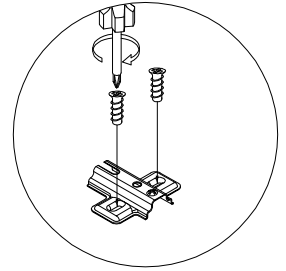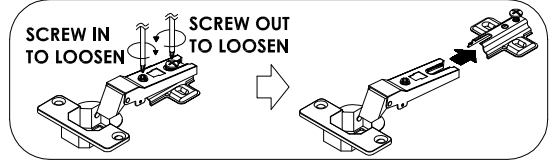


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 10



Lay panel (1 & 2) flat (on clean dry surface) with plastic drawer runner facing up.

Attach panel (1 & 2) to rail panel (6) using 38mm screw (A) .

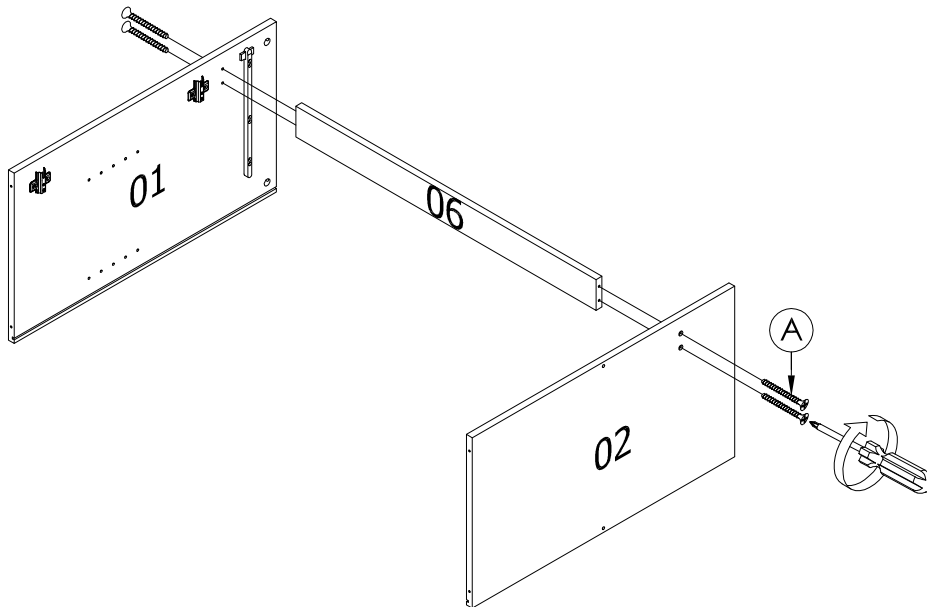

## STEP 11

Then attach plastic hole plug (Q) to top of the screw.

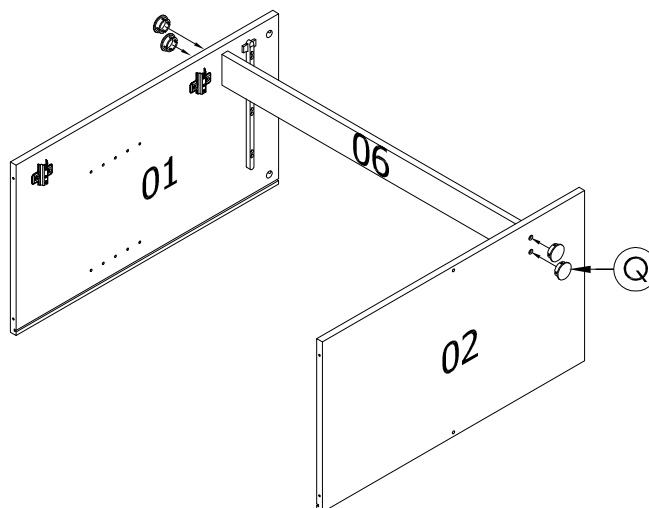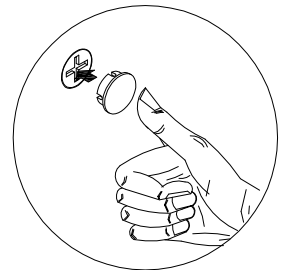


# SORRENTO BUFFET WITH DRAWER & CUPBOARD


ITEM CODE: 8068-9

## STEP 12

Using 38mm screws (A) attach panel 4 to panel (1 & 2) as shown.

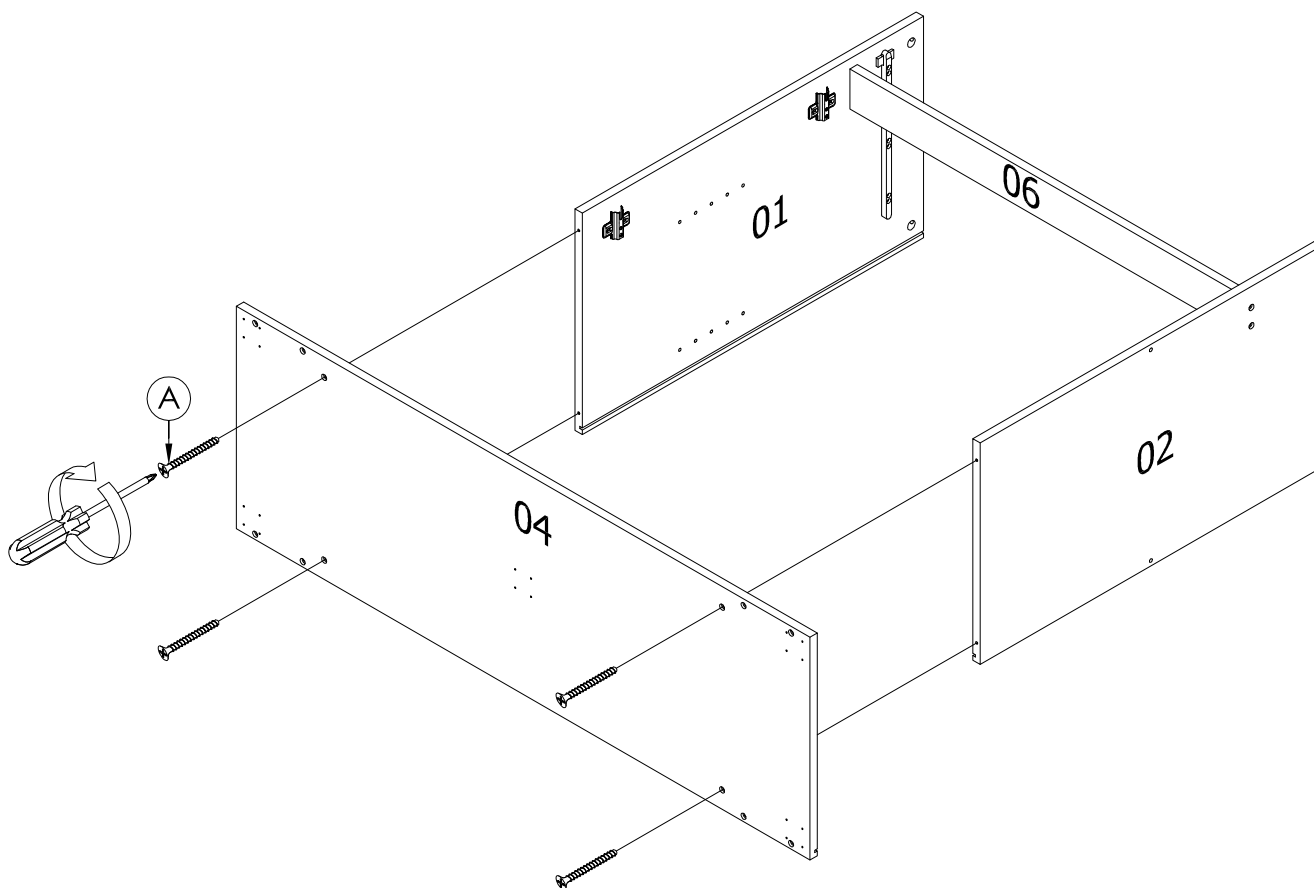

A X4







# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 13

Attach panel (8 & 9) with glue (S) to side panel.  
Then using 38mm screw (A) to attach panel (8 & 9) to  
panel (4) as shown.

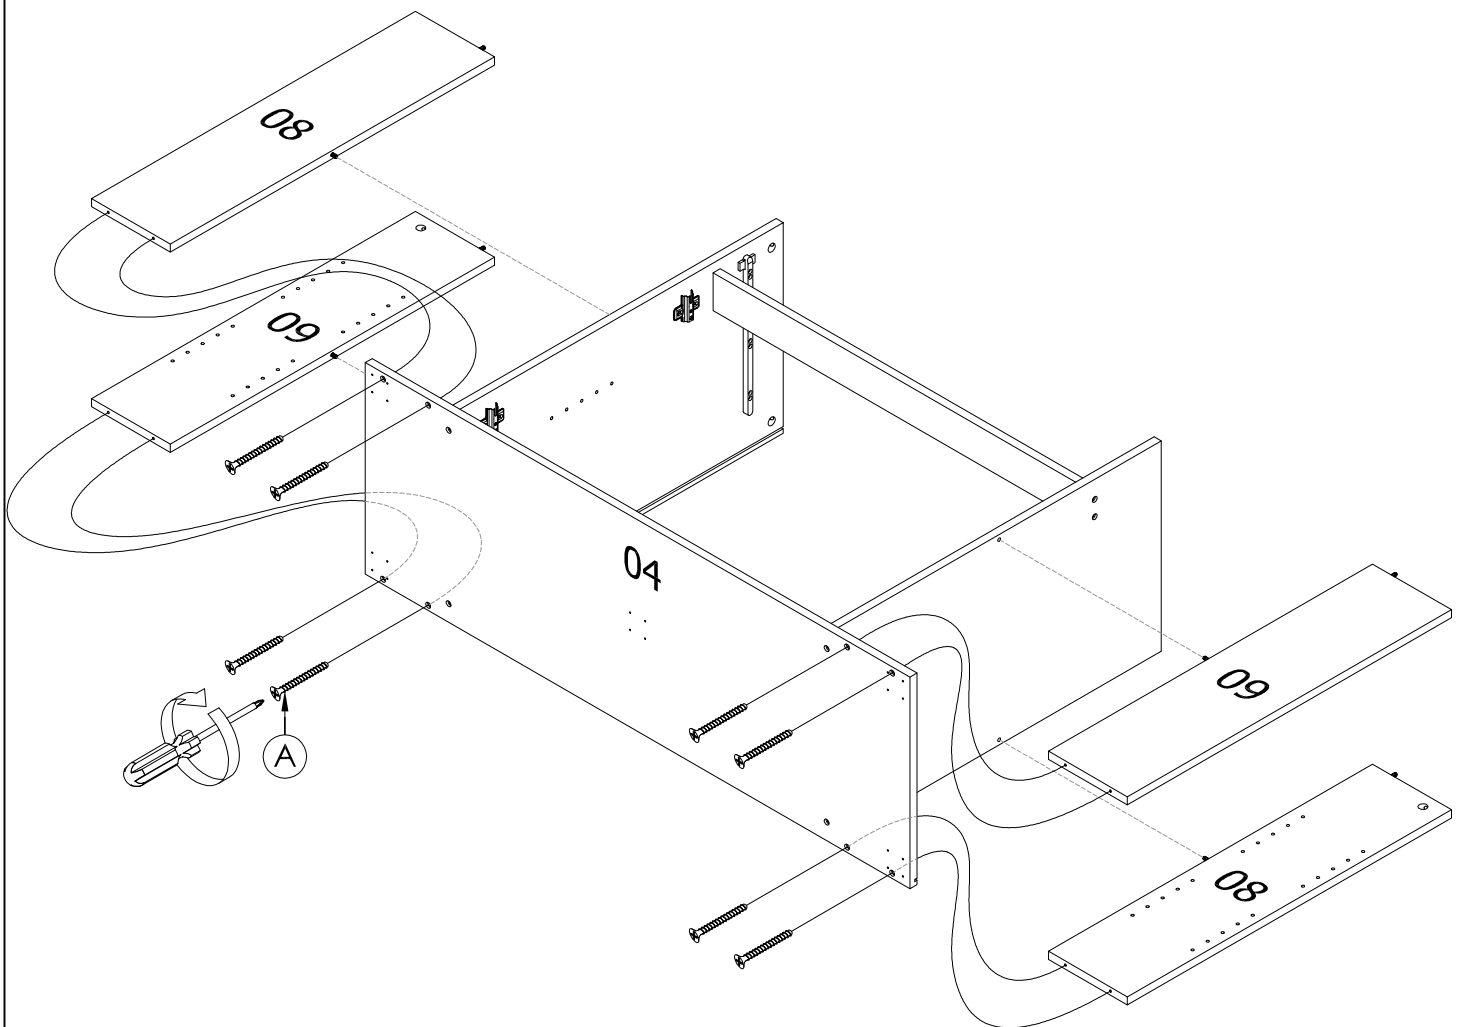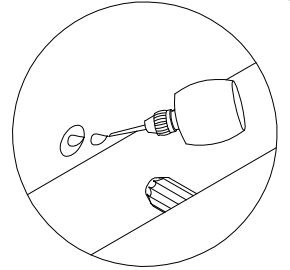


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9


## STEP 14

Attach plastic square leg (N) to bottom of chest as shown.



STEP 1

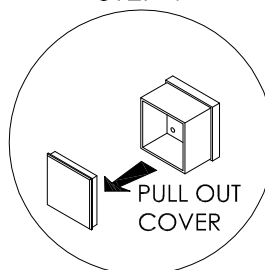


STEP 2

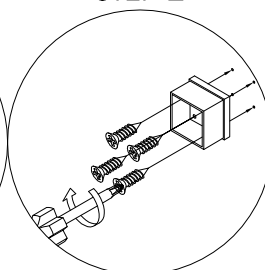

STEP 3

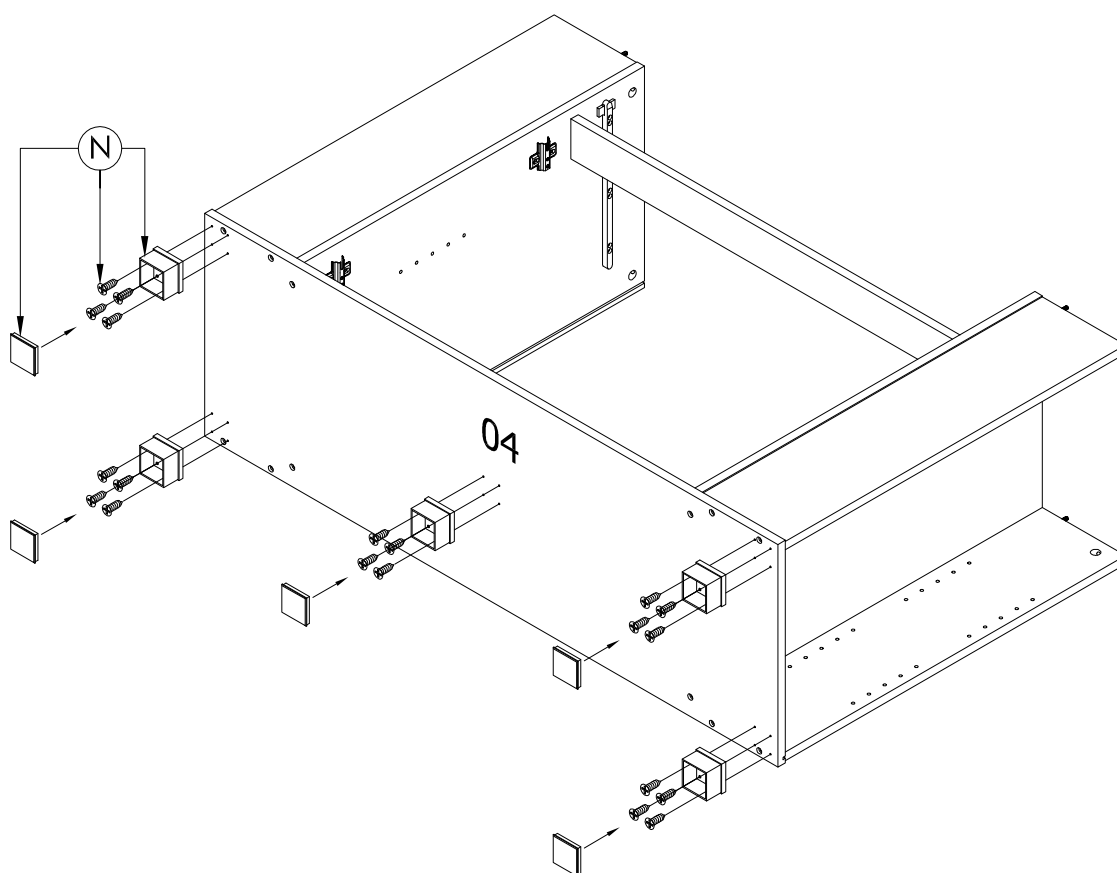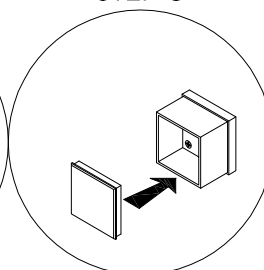

N X5






# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 15

Slot panel (18) to frame by insert H-Profile (K) in between.

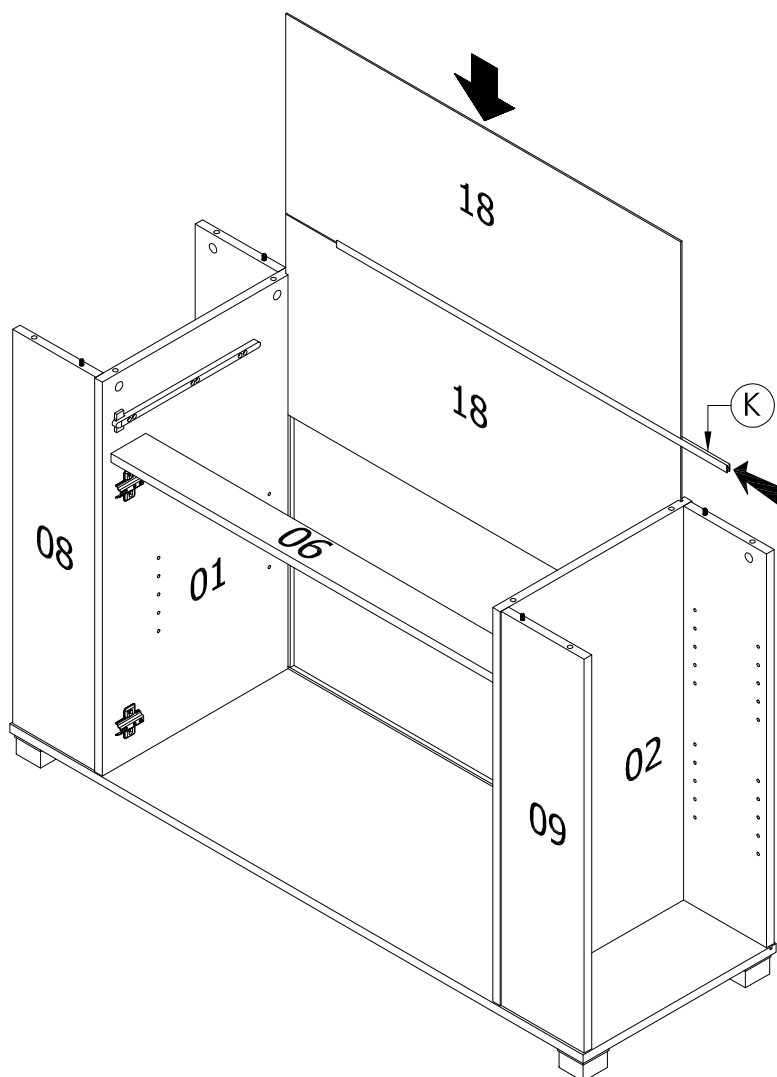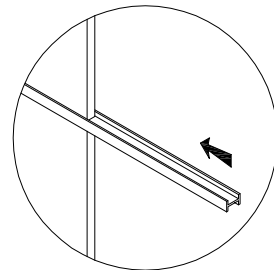

# SORRENTO BUFFET WITH DRAWER & CUPBOARD







ITEM CODE: 8068-9

## STEP 16

Using glue (S) attach top of the  
tall chest to frame.

Fasten into place using  
CAM LOCKS (F) as shown.

Attach 18mm round sticker (R)  
to top of the cam locks as shown.

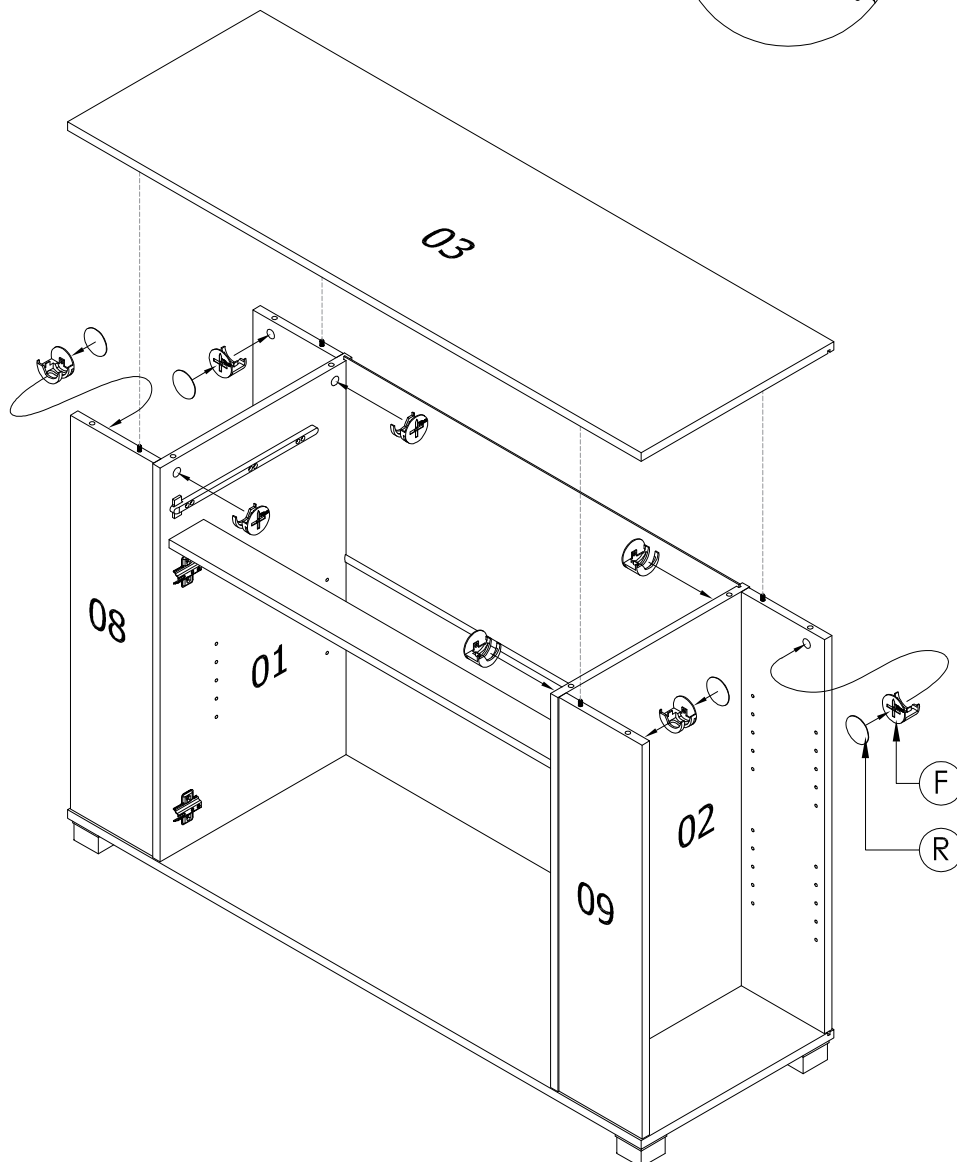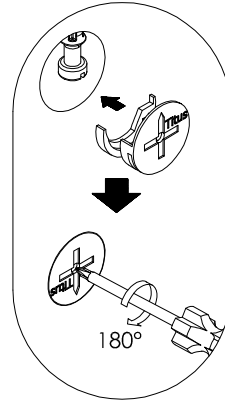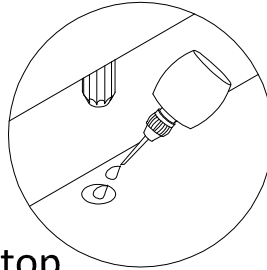






# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 17

Slot the shelf panel (7 & 10) into the body as shown.  
After fix in the metal adjustable shelf stud (J) into the holes.




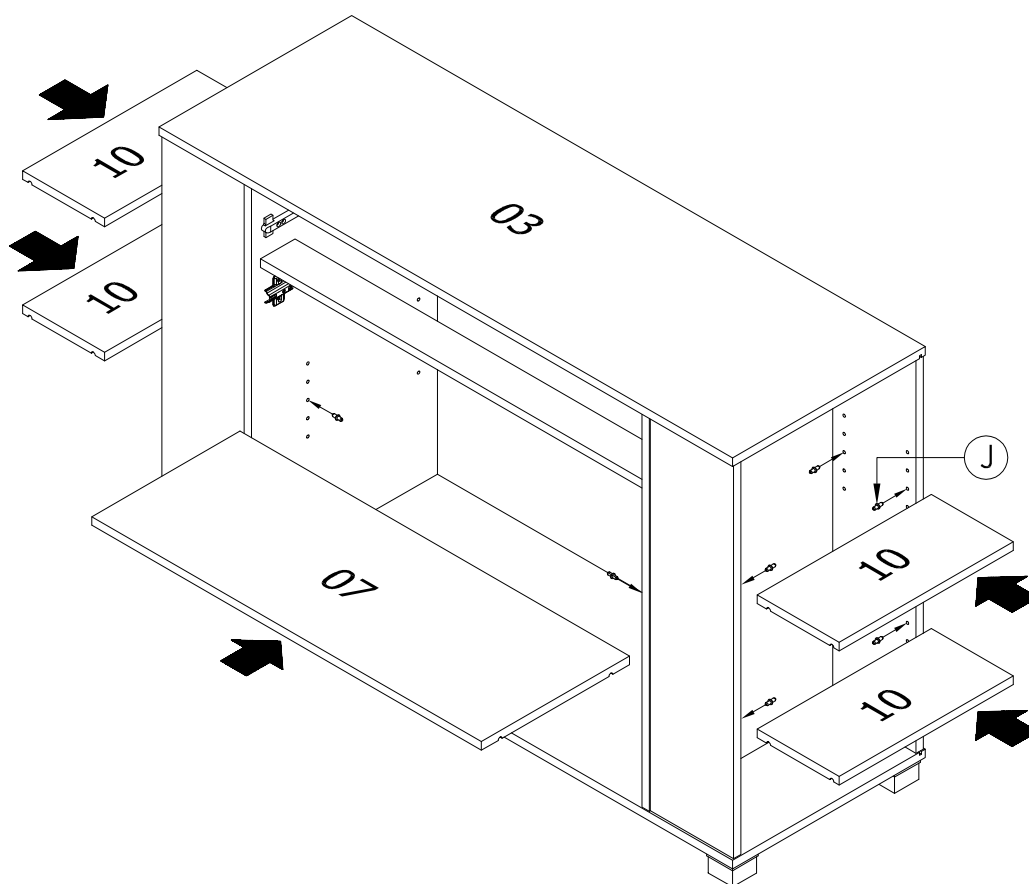
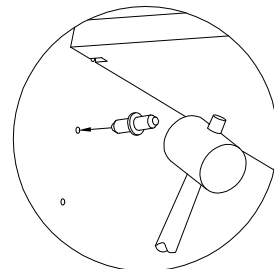


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 18

Affix the hinges (M1) with screw (C) and to the door panel (12 & 13).

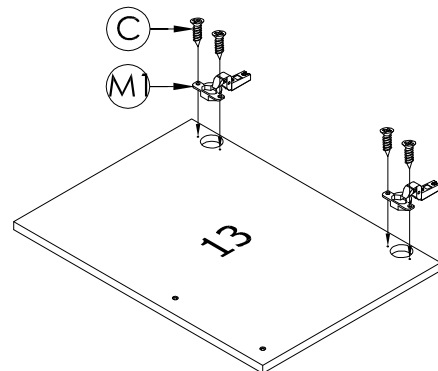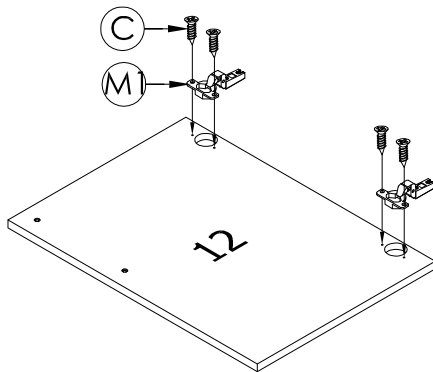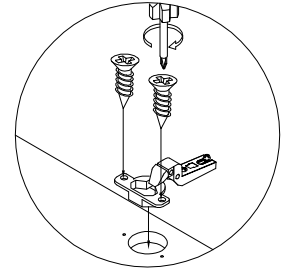


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9






## STEP 19

Attach the handle (L) to door panel (12) as shown. Then attach the door panel (12) to the side panel (1).

STEP 1

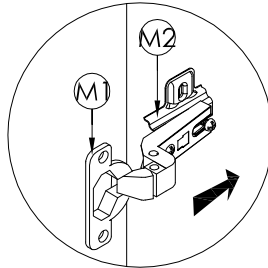

STEP 2

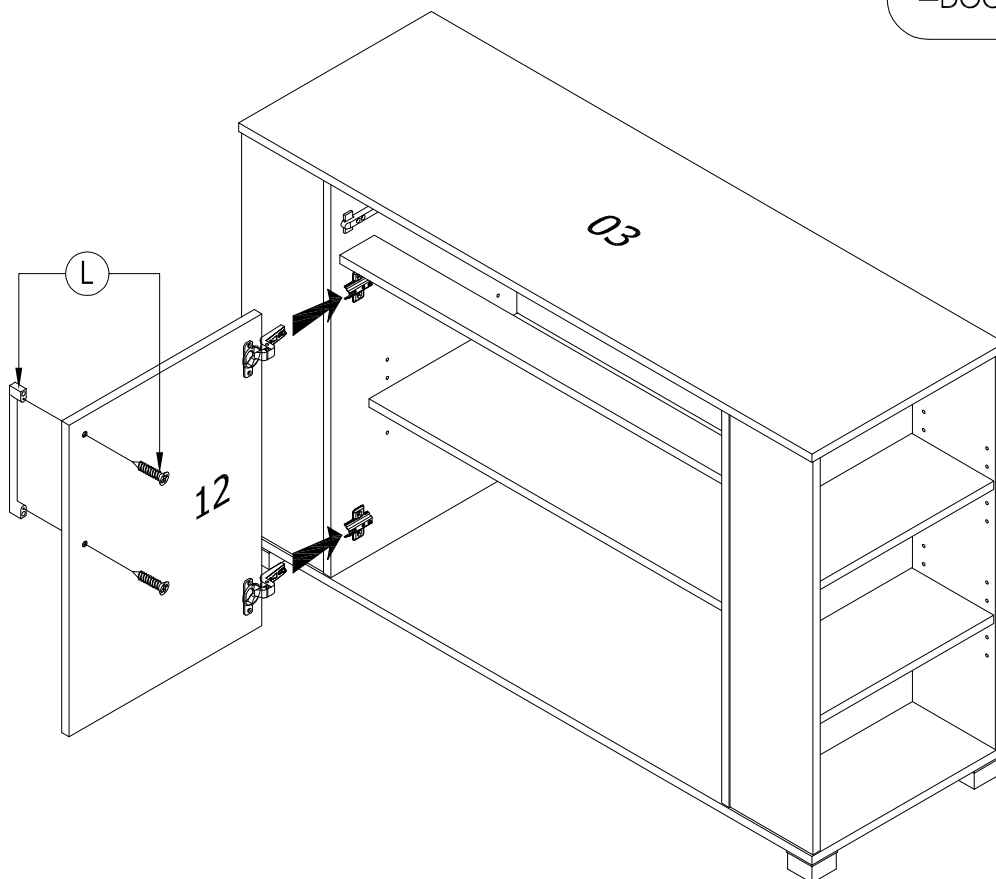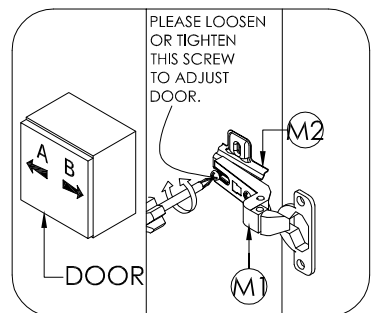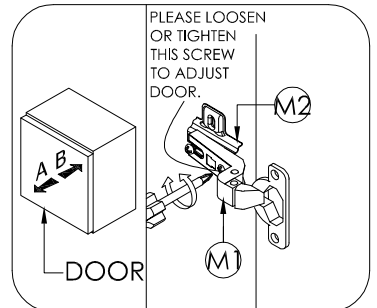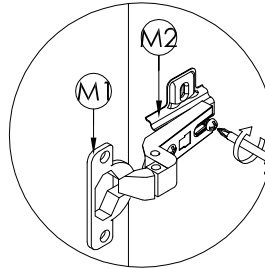


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9






## STEP 20

Attach the handle (L) to door panel (13) as shown. Then attach the door panel (13) to the side panel (2).

STEP 1

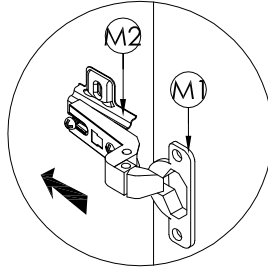

STEP 2

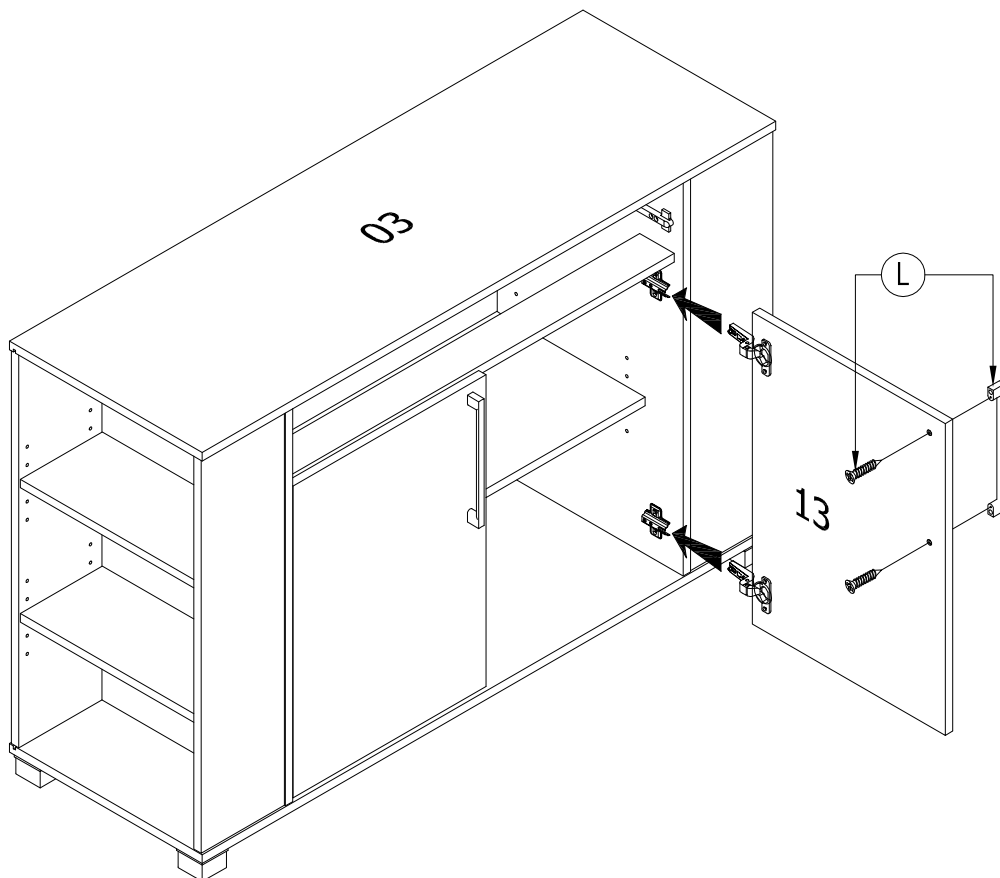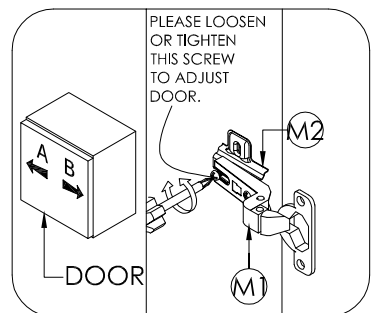
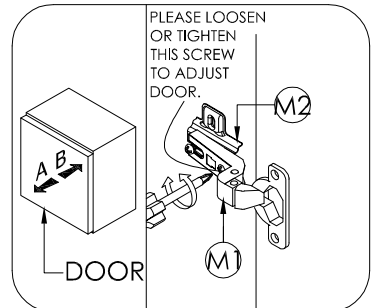
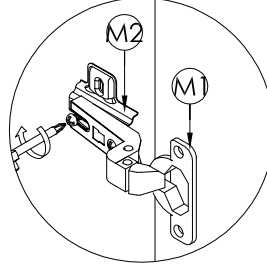


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 21

Insert the drawer to the cabinet and attach using plastic drawer runner stopper (H) into the drill hole at both drawer side panel as shown.




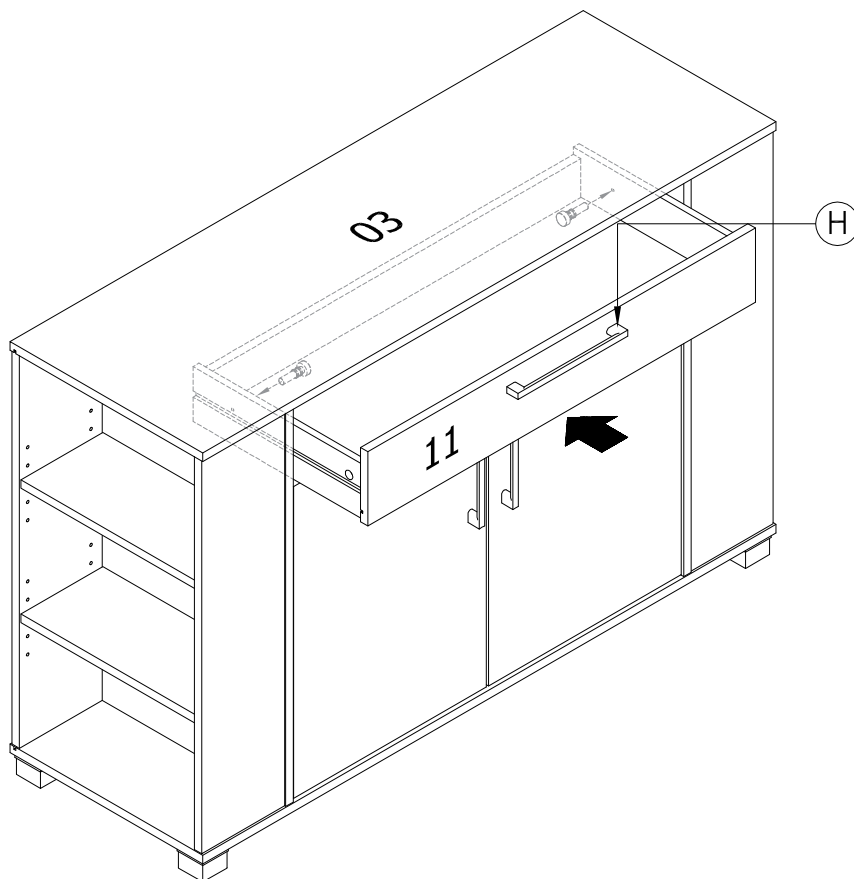
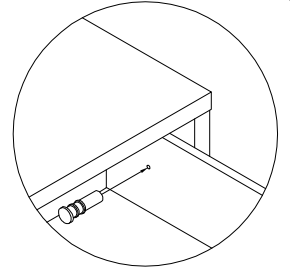


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

## STEP 22

Attach the backply stoppers (P) to the rear panel (18) using 15mm screw (C). Then attach webbing tape (T) on top panel (3) using M3.5 x 15mm screw (C).

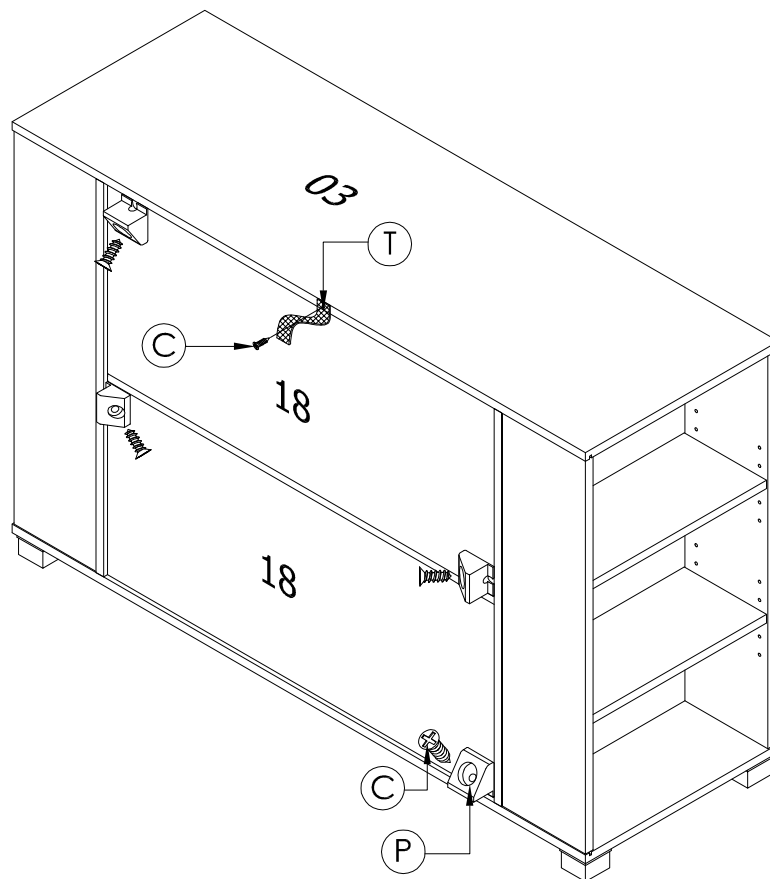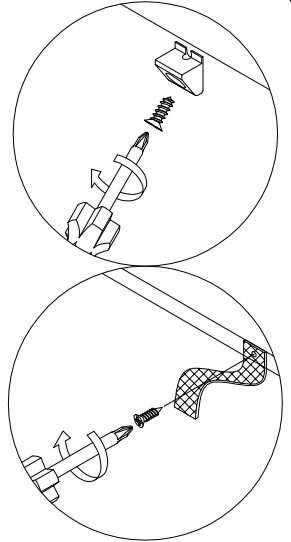


# SORRENTO BUFFET WITH DRAWER & CUPBOARD

ITEM CODE: 8068-9

**ASSEMBLY IS COMPLETE**

NOTE :

WALL PLUG & SCREW ARE NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING HARDWARE & YOU MUST USE SUITABLE FIXING HARDWARE FOR TYPE OF WALL YOU INTEND TO MOUNT THIS PRODUCT TO WALL.

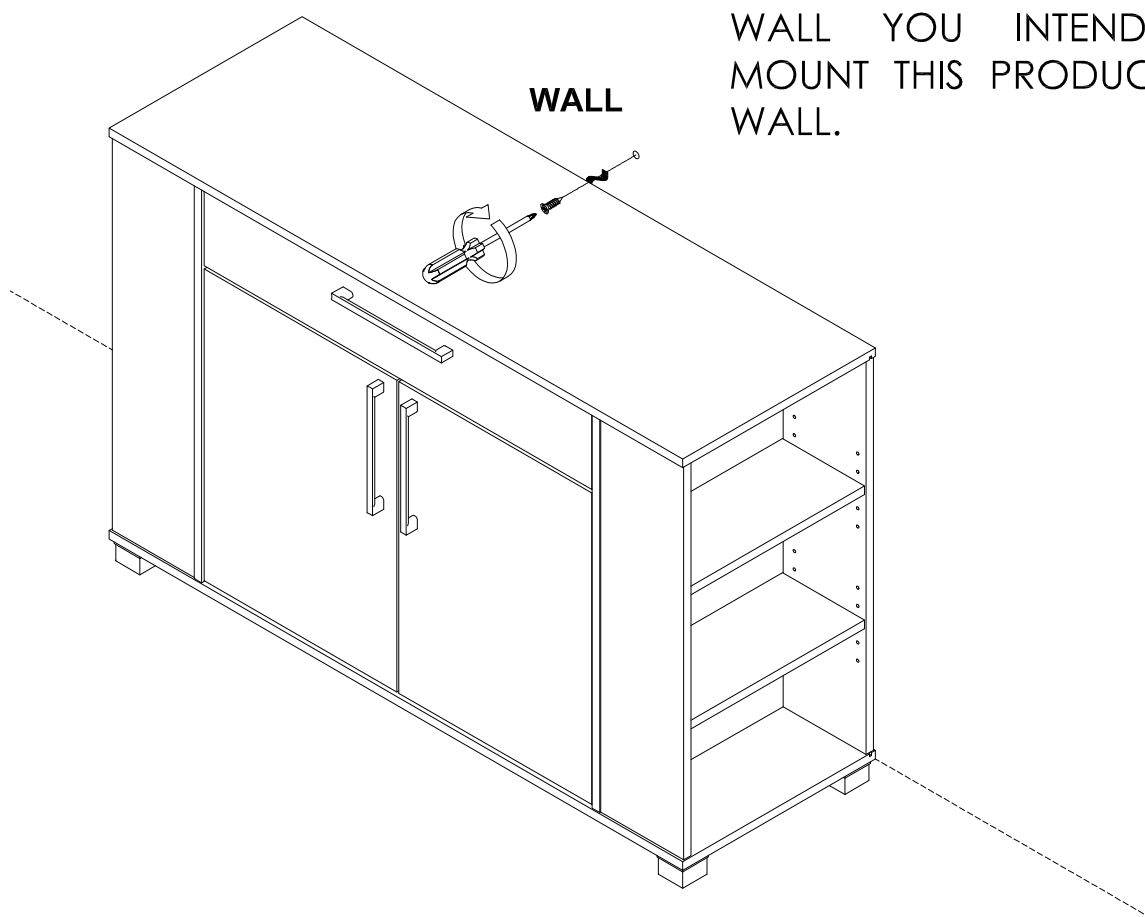



# Warranty Certificate

**Congratulations!** You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, **Meubilair Direct Imports** will provide you with a warranty against defects as follows:

## Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred

by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and

Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

## Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

## Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturers' operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

## MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Address: Unit 4, 4-5 Lambridge Place, Penrith, NSW, 2750

Opening Hours 9:00 am - 4:30pm (Mon-Fri)

When making a return, please ensure the product is properly packaged, so as to ensure that no damage occurs to the product during transit.

Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem.

Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above.

Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice.

Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

## AFTER SALES SUPPORT

EMAIL : [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Product code: 8068-9

04/2017







**MEUBILAIR**  
DIRECT IMPORTS

## Warranty Certificate

PRODUCT NAME      **SORRENTO BUFFET WITH DRAWER & CUPBOARD**

BRAND NAME

PRODUCT CODE      **8068-9**

NAME

ADDRESS

EMAIL

DAYTIME TEL NO

DATE OF PURCHASE

SERIAL NUMBER

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this Warranty certificate and **keep for your reference**.

In the event of a product fault, please email the Customer Service team. Please ensure that you include the product details (as shown on the card) at hand so that we are able to respond as quickly and efficiently as possible.

### MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: [cs@meubilair.com.au](mailto:cs@meubilair.com.au)

Address: Unit 4, 4-5 Lambridge Place, Penrith, NSW, 2750

Opening Hours 9:00 am - 4:30pm (Mon-Fri)

### AFTER SALES SUPPORT

Product code: 8068-9

04/2017

