


ASSEMBLY INSTRUCTION


MODEL : IQ16111W SINGLE BED (930 x 1930)MM

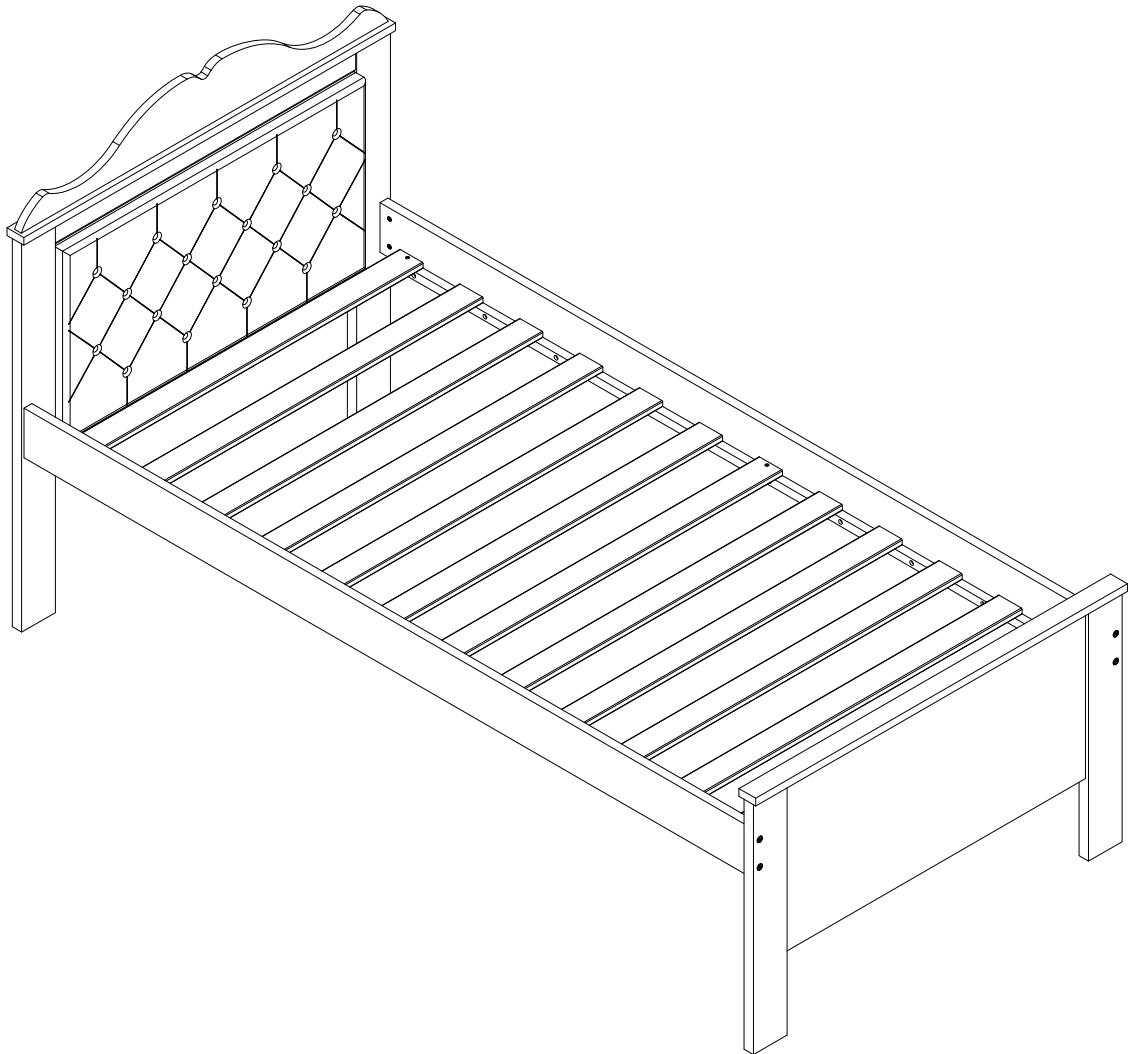

HARDWARE LIST

A


4 PCS



PLASTIC DOWEL (M10 x 35MM)

B


8 PCS

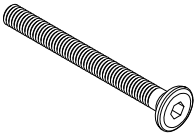

JCBC BOLT (M6 x 60MM)

C


8 PCS



JRN NUT (M6 x 13MM)

D


6 PCS



CSK C/B SCREW (M4 x 32MM)

E

1 PC




ALLEN KEY (M4 x 60MM)




Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.

Tools Required :
Crosshead Screw Driver


PART LIST

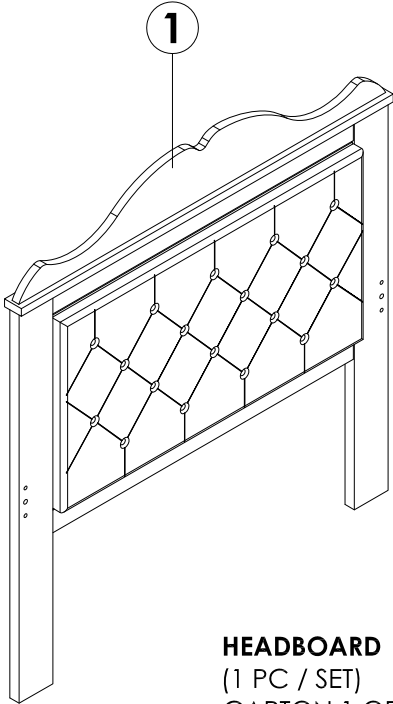


HEADBOARD
(1 PC / SET)
CARTON 1 OF 2

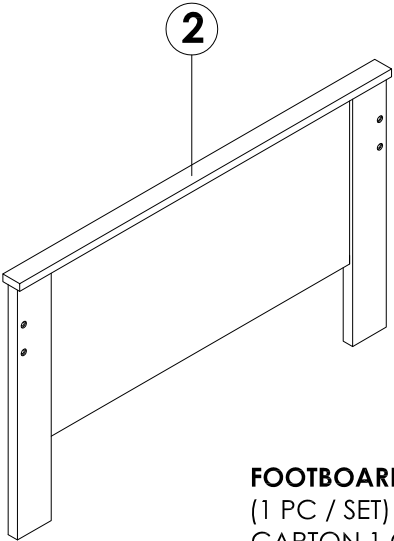


FOOTBOARD
(1 PC / SET)
CARTON 1 OF 2

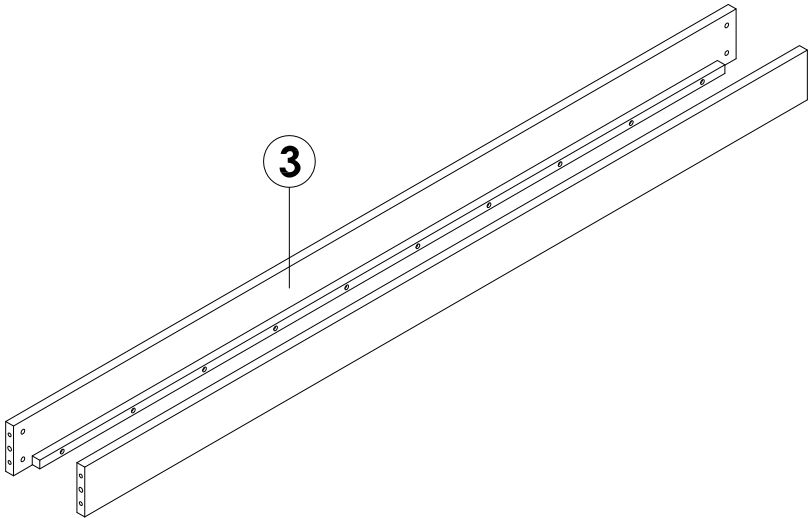

SIDE RAIL
(2 PCS / SET)
CARTON 2 OF 2

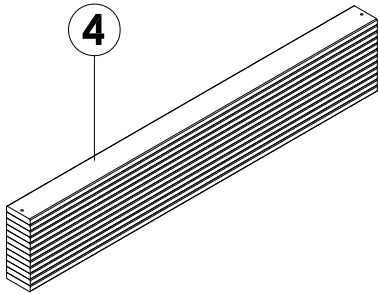


WOODEN SLAT
(12 PCS / SET)
CARTON 1 OF 2

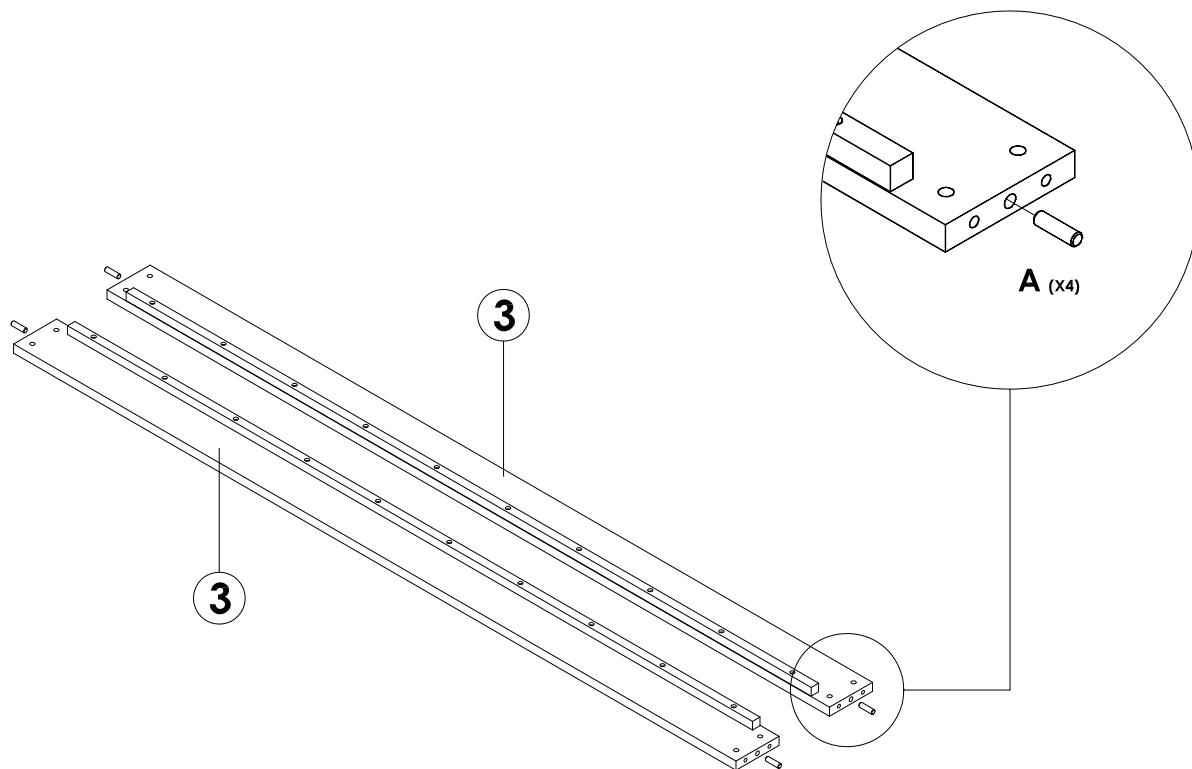


STEP 1

Insert **(A)** into Ø10MM holes on **Side Rail** by using a Rubber Hammer.

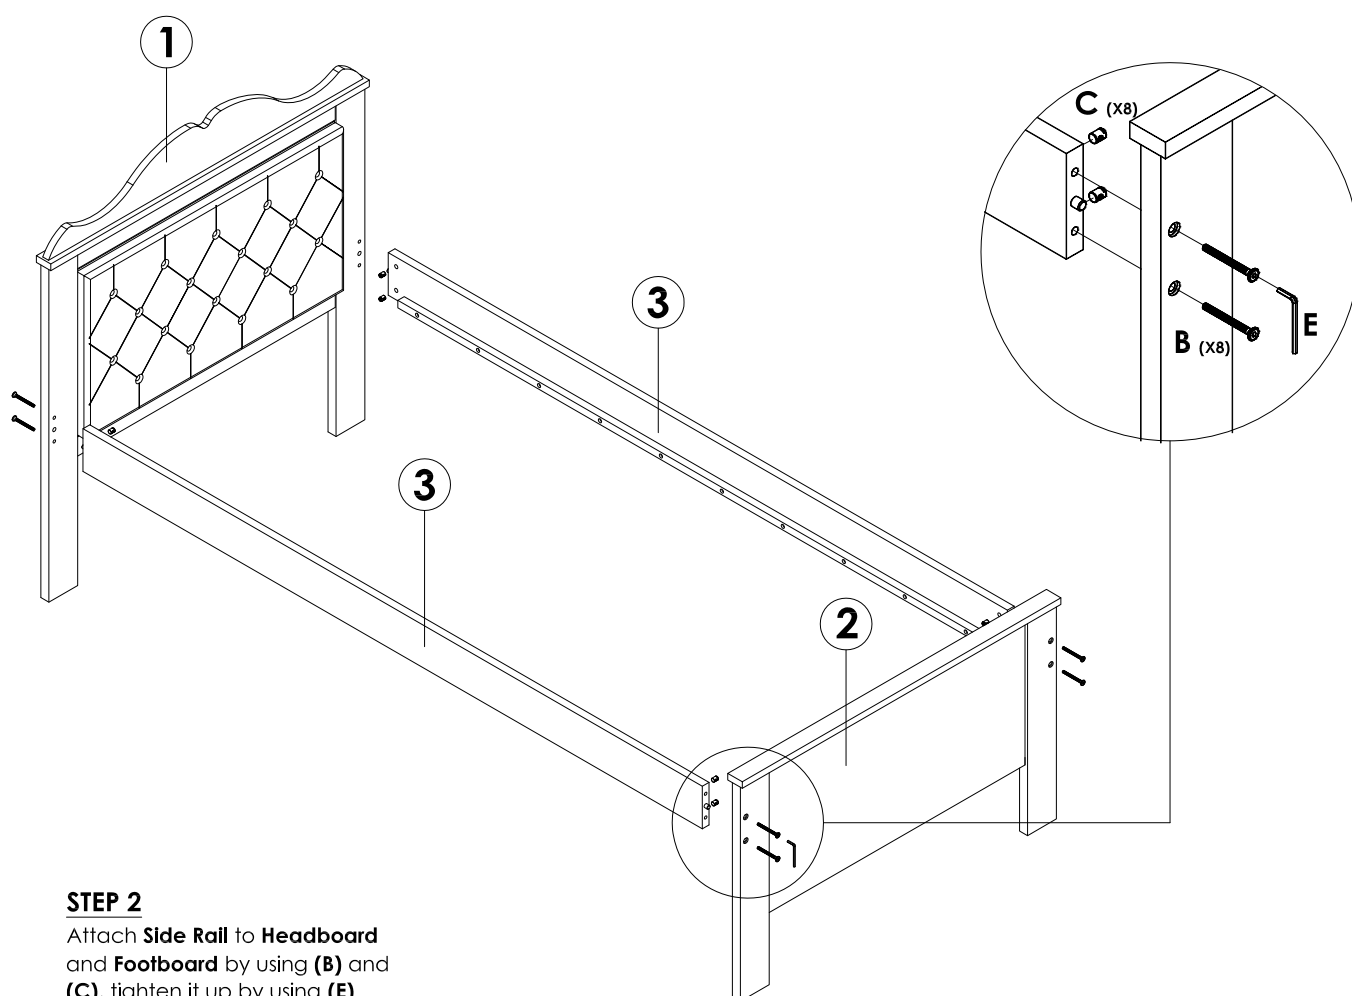

STEP 2

Attach **Side Rail** to **Headboard** and **Footboard** by using **(B)** and **(C)**, tighten it up by using **(E)**.

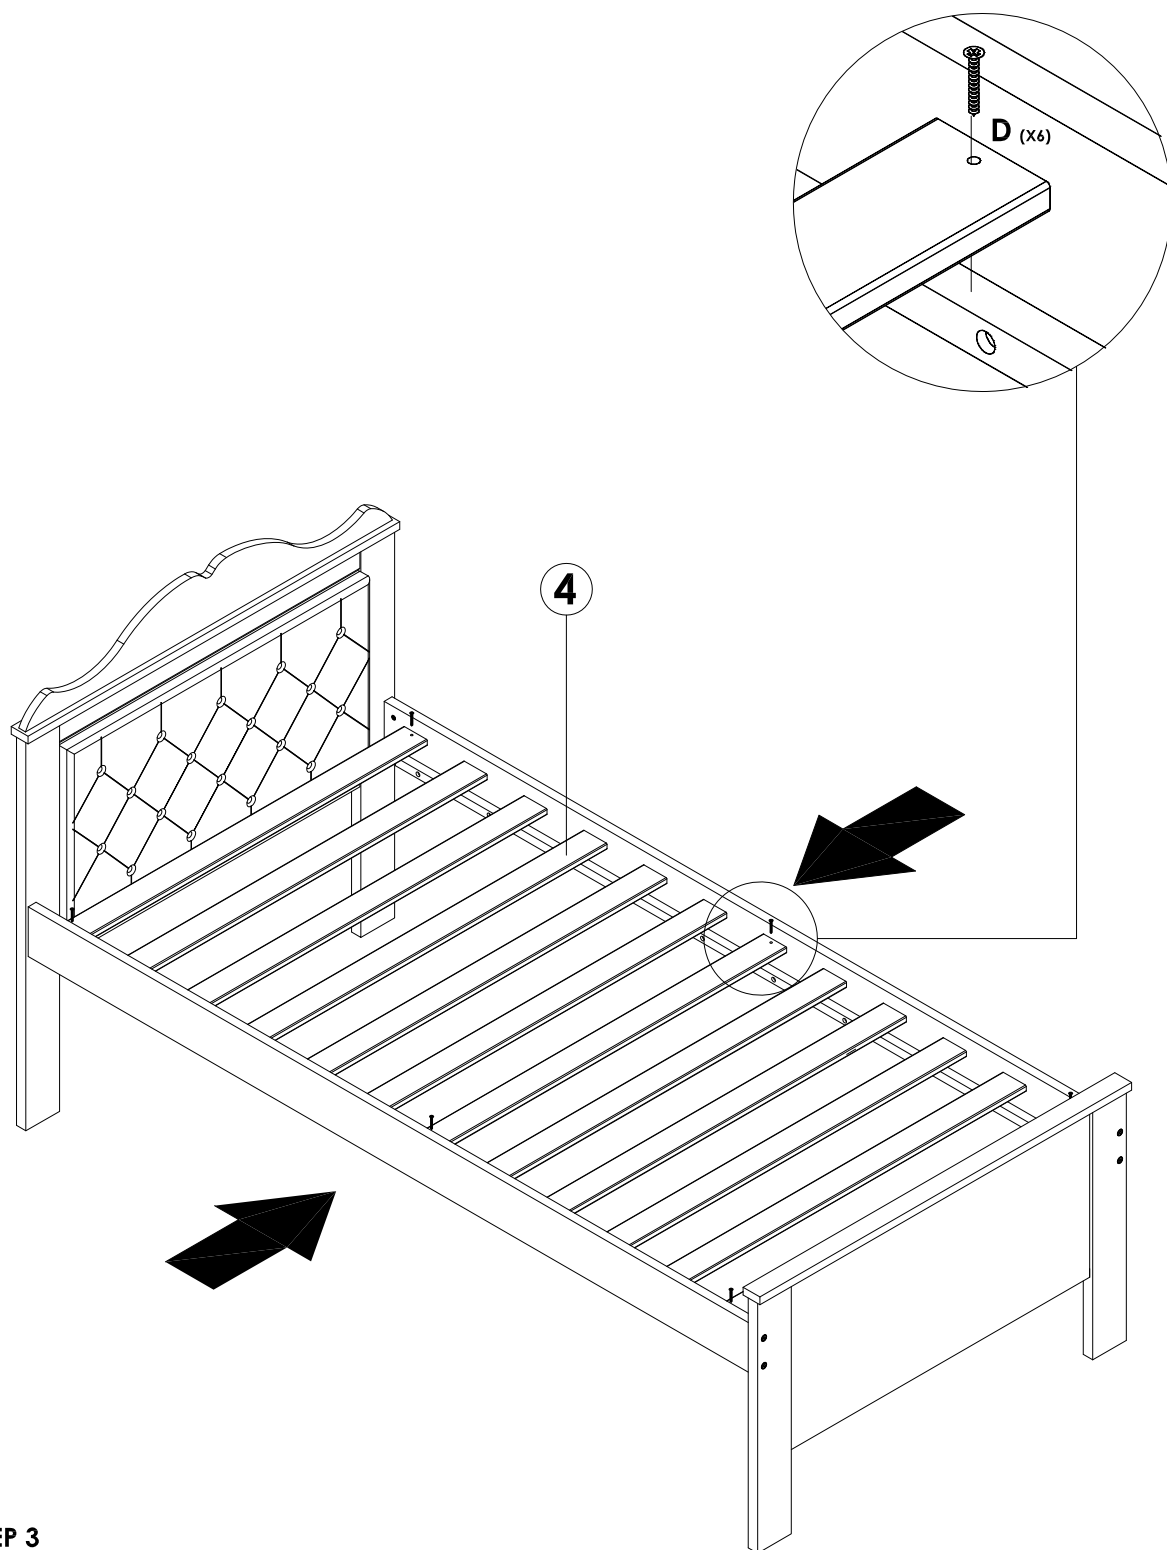

STEP 3

Attach **Wooden Slat** onto **Side Rail** by using **(D)**, tighten it up by using a Crosshead Screw Driver. Go on to complete the assembly.

* Align both **Side Rail** before tightening the screws.