

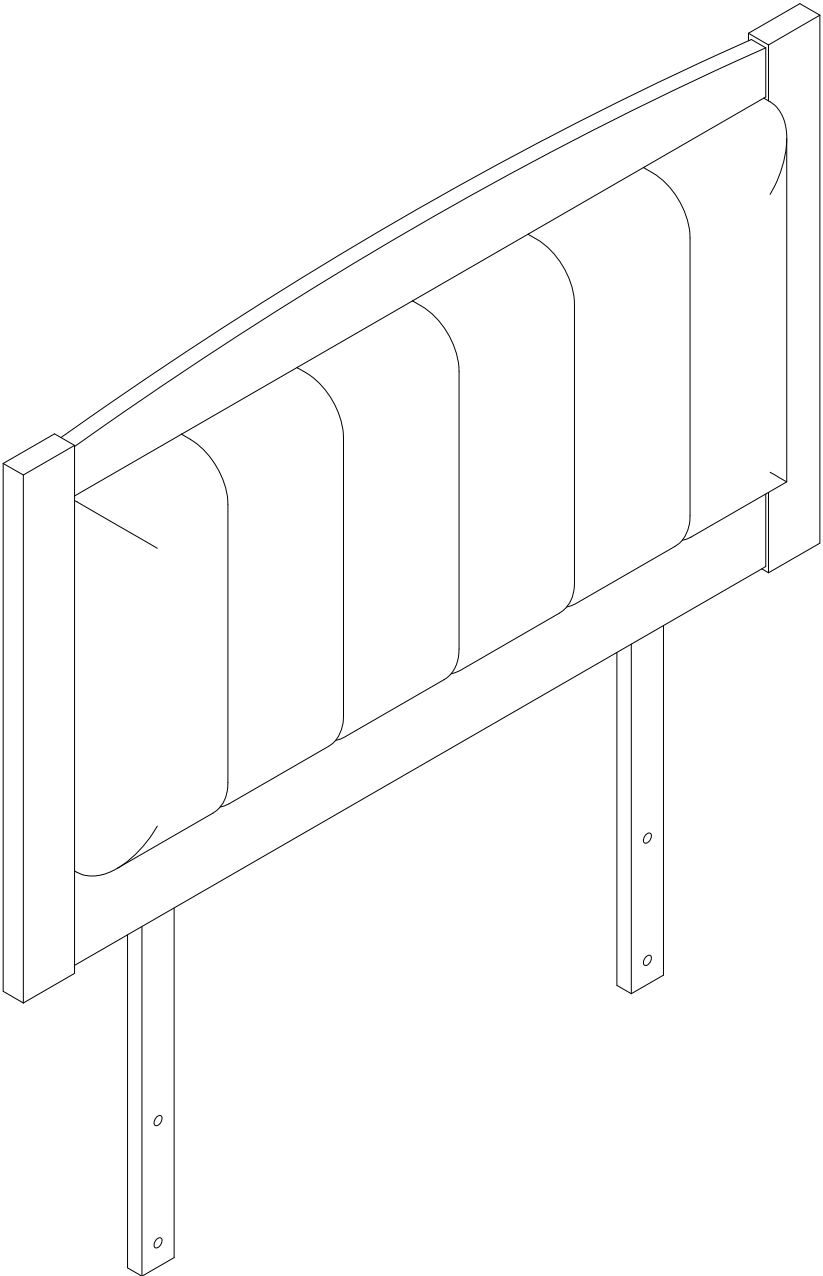



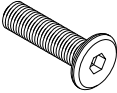


ASSEMBLY INSTRUCTION
MODEL : IQ181HB 3' HB WITH CONNECTOR

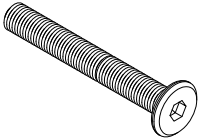



HARDWARE LIST


A  JCBB BOLT (M8 x 30MM) 4 PCS	B  JCBB BOLT (M8 x 60MM) 4 PCS	C  NYLON LOCK NUT (M8 x 13MM) 4 PCS
D  FLAT WASHER (M8) (5/16" x 22 x 1.2MM) 8 PCS	E  ALLEN KEY (M5 x 60MM) 1 PC	F  SPANNER (12.8MM) 1 PC

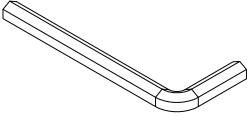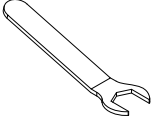

Do not recommend the use of power drills/drivers for inserting bolts/screws as this could damage the unit.



PART LIST

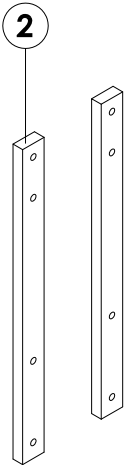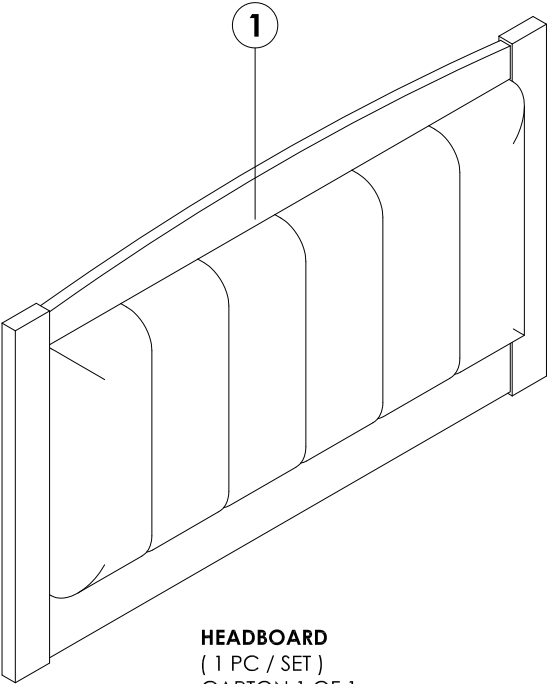

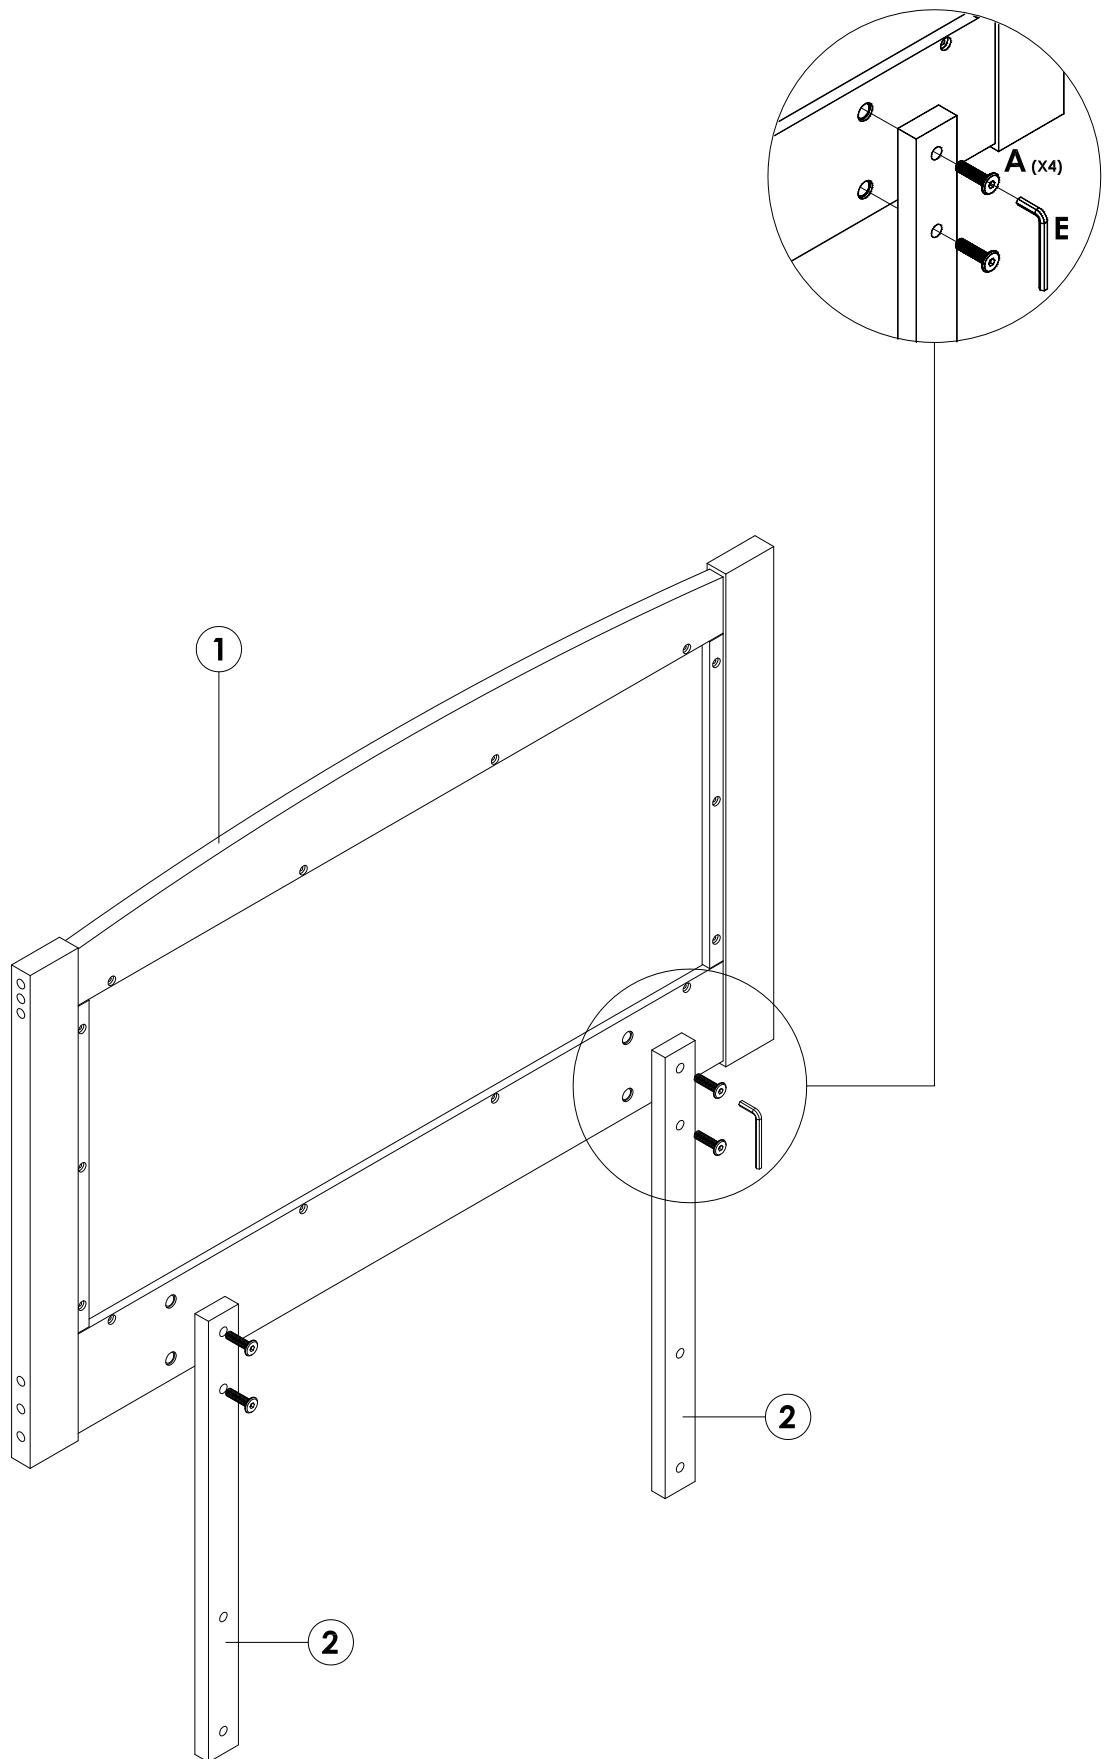

STEP 1

Attach and secure **Connector** onto **Headboard** by using **(A)**, tighten it up by using **(E)**.

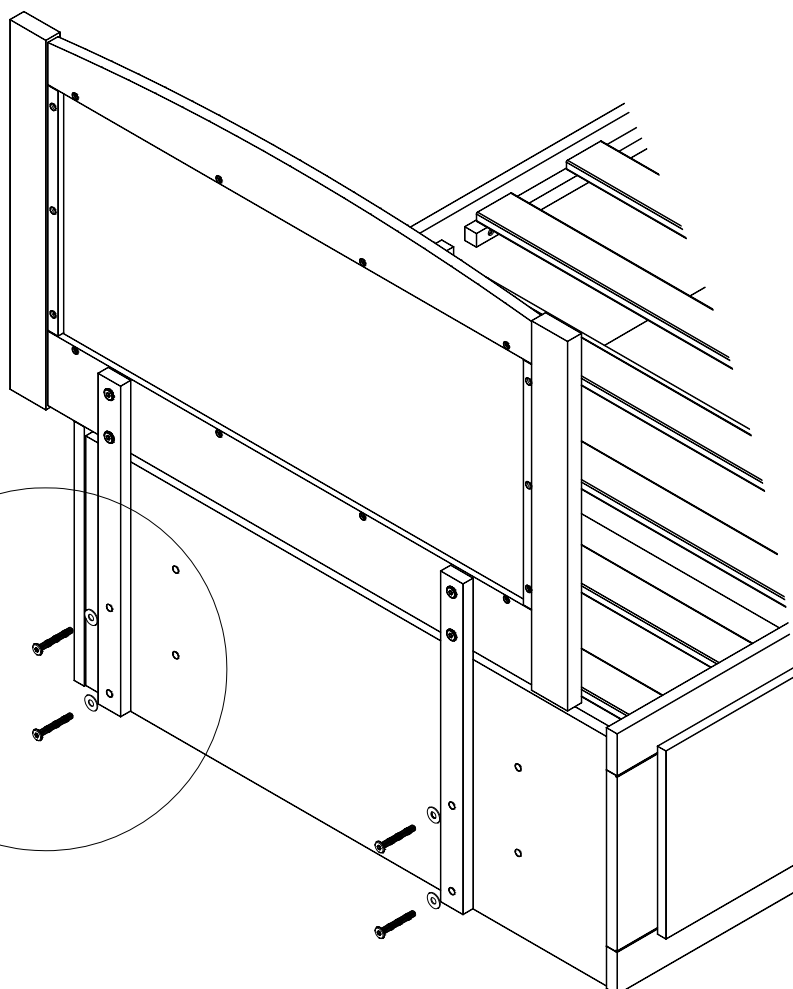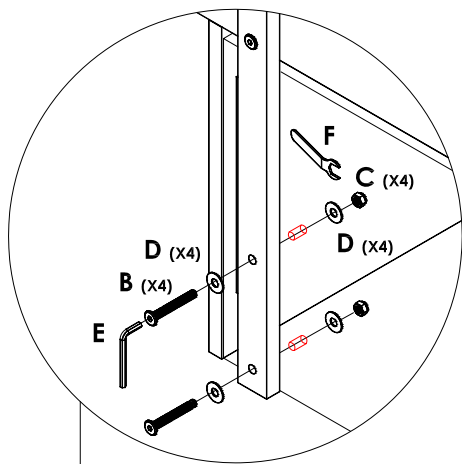

STEP 2

Attach and secure your own Headboard onto Bed Frame by using **(B)**, **(D)** and **(C)**. Tighten it up by using **(E)** and **(F)**.