


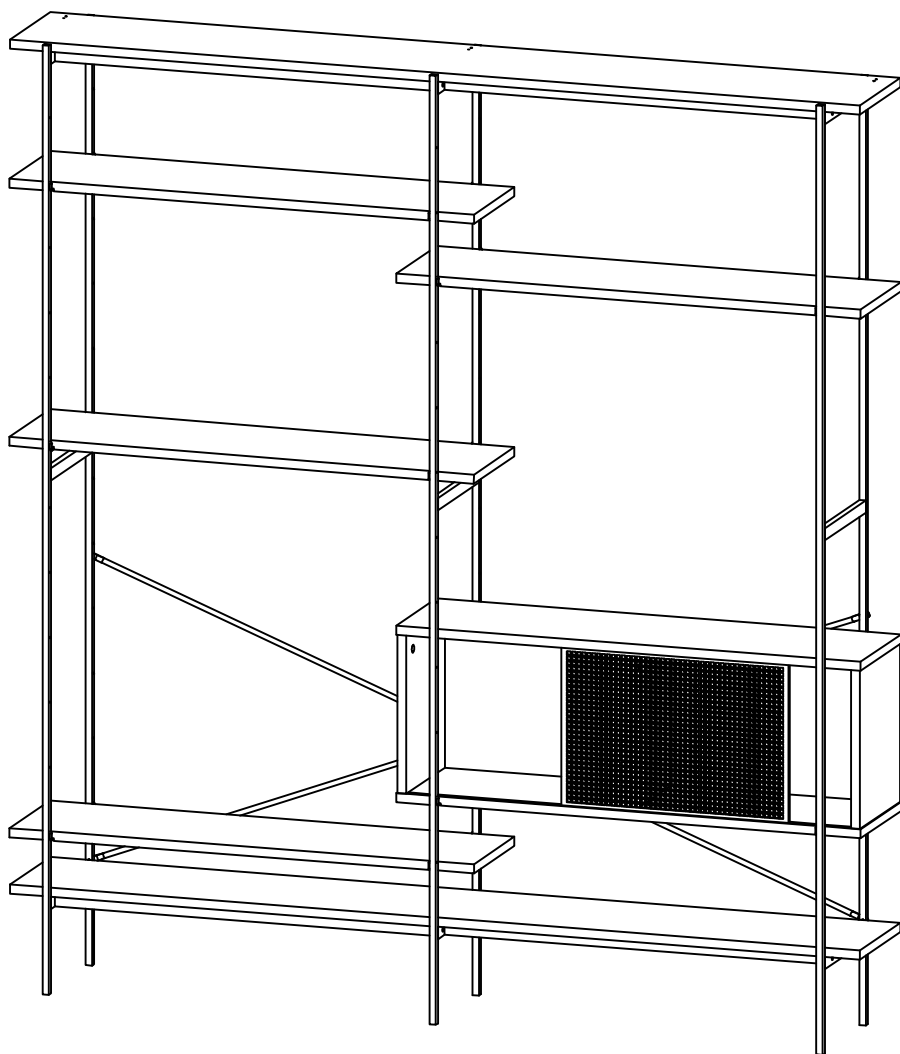

**Fantastic
Furniture**

Version 1.0



Two People



Required

Nicholls

Bookcase Unit

fantasticfurniture.com.au

RECOMMENDED WEIGHT CAPACITY 10 KG PER SHELF



**WARNING: ENSURE THE WALL STRAP IS ATTACHED TO
AVOID SERIOUS INJURY.**

To avoid any serious or fatal injury, this product has been provided with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Fixing devices are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what fixing device to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture
to help create a home you'll love!



Fantastic Furniture

Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for
your chance to win a \$250 Fantastic Furniture Gift Card!
@fantasticfurniture




Assembly checklist




Read through the instructions carefully before you begin.

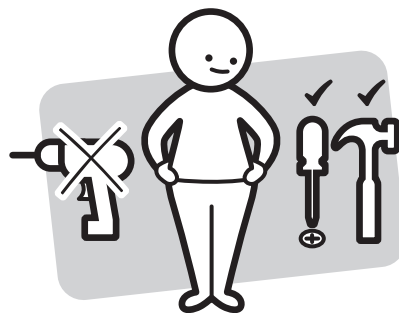

Make sure you have all the required tools. Never use power tools unless instructed.

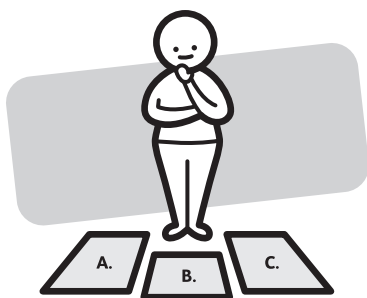

Identify and lay out all of the components before you begin assembly.

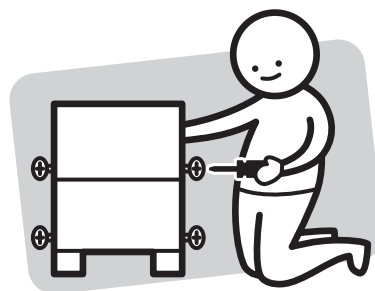

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need

to assemble the product




DO NOT USE



Other tools you need:

Phillips head screwdriver;
Hammer

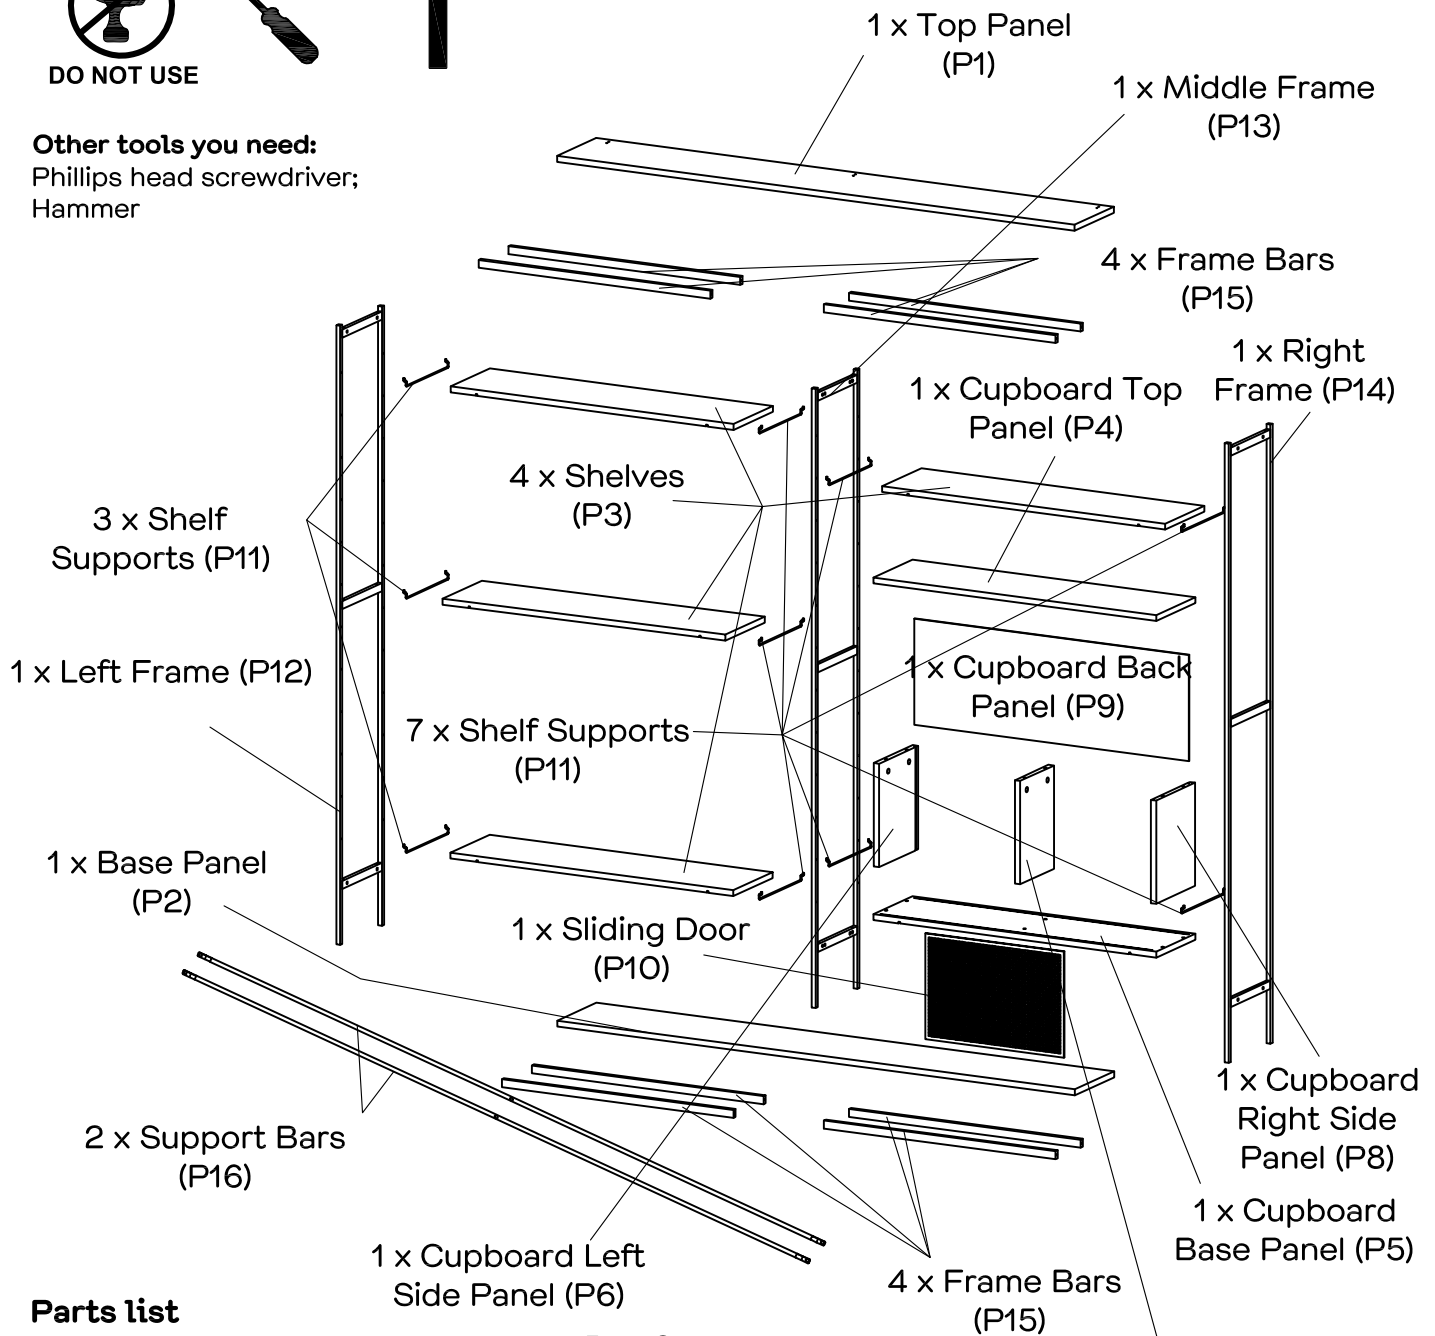

Parts list

Box 1:

1 x Top Panel (P1);
1 x Base Panel (P2);
4 x Shelves (P3);
1 x Cupboard Top Panel (P4);
1 x Cupboard Base Panel (P5);
1 x Cupboard Left Side Panel (P6);
1 x Cupboard Middle Panel (P7);
1 x Cupboard Right Side Panel (P8);
1 x Cupboard Back Panel (P9);
1 x Sliding Door (P10);

Box 2:


10 x Shelf Supports (P11);
1 x Left Frame (P12);
1 x Middle Frame (P13);
1 x Right Frame (P14);
8 x Frame Bars (P15);
2 x Support Bars (P16);

1 x Cupboard Middle Panel (P7)



What you need



to assemble the product

Hardware pack

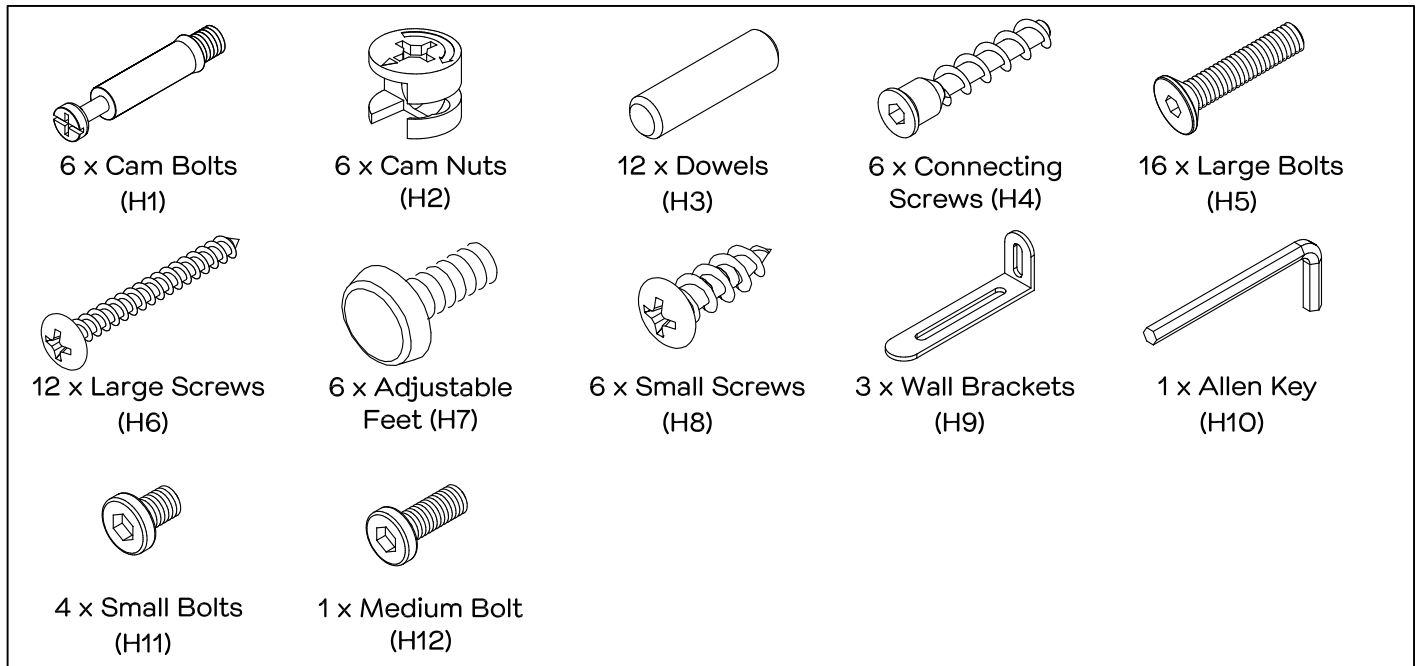

Step 1



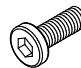
You will need	
	
16 x Large Bolts (H5)	1 x Allen Key (H10)

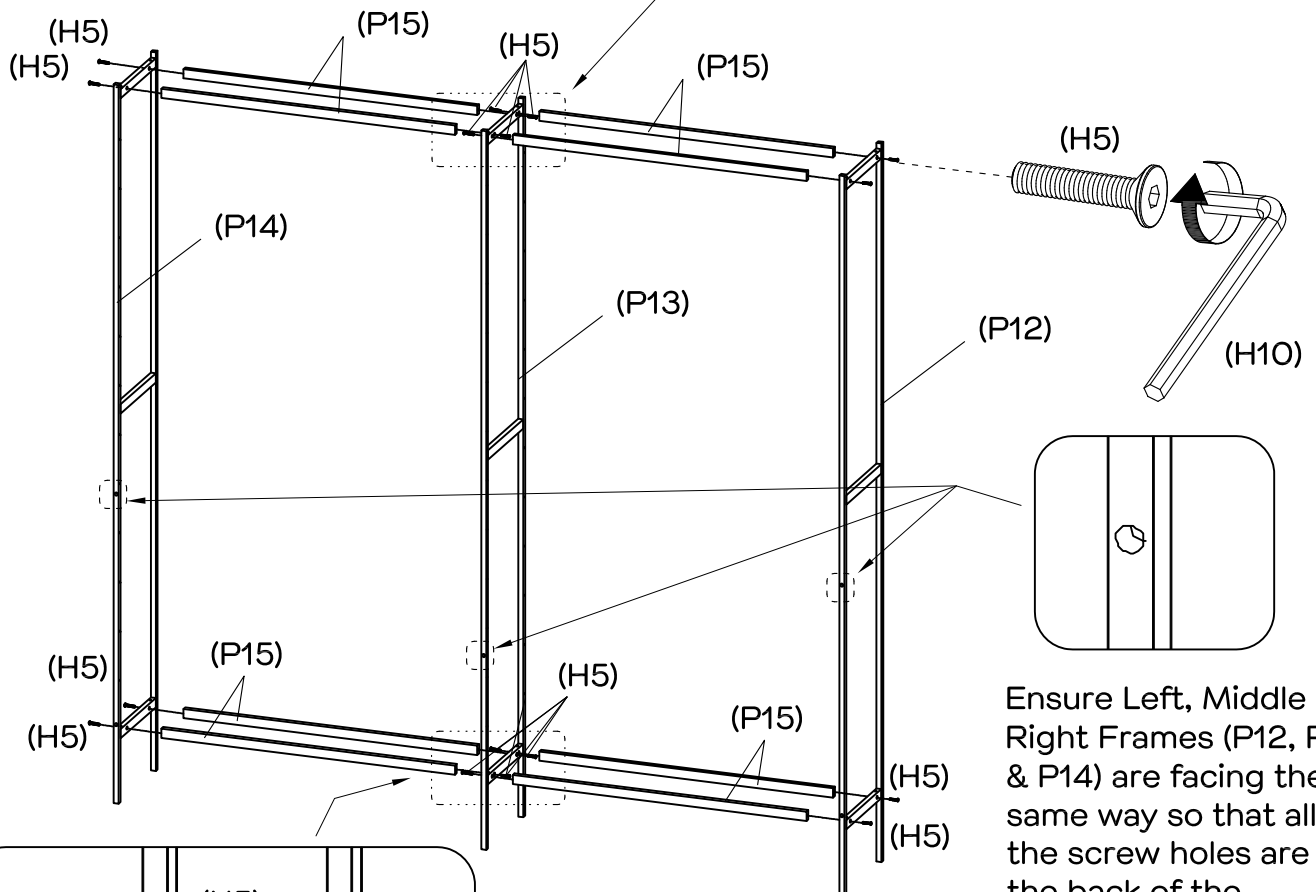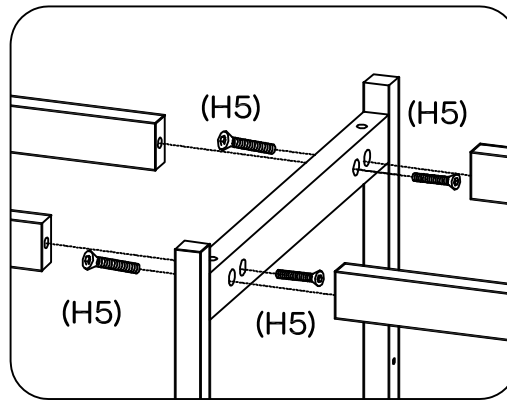


Ensure Left, Middle & Right Frames (P12, P13 & P14) are facing the same way so that all of the screw holes are on the back of the bookcase as shown.

Lay the bookcase on it's side and attach Frame Bars (P15x4) to Right Frame (P14) with 4 x Large Bolts (H5) using the Allen Key (H10). Attach Middle Frame (P13) to the ends of Frame Bars (P15x4) with 4 x Large Bolts (H5) using the Allen Key (H10). Attach the remaining Frame Bars (P15x4) to the other side of the Middle Frame (P13) with 4 x Large Bolts (H5) using the Allen Key (H10) and then secure the Left Frame to the ends of the Frame Bars (P15x4) with 4 x Large Bolts (H5) using the Allen Key.

Step 2

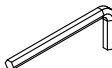

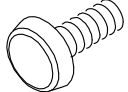
You will need	
	
1 x Allen Key (H10)	4 x Small Bolts (H11)
	
1 x Medium Bolt (H12)	

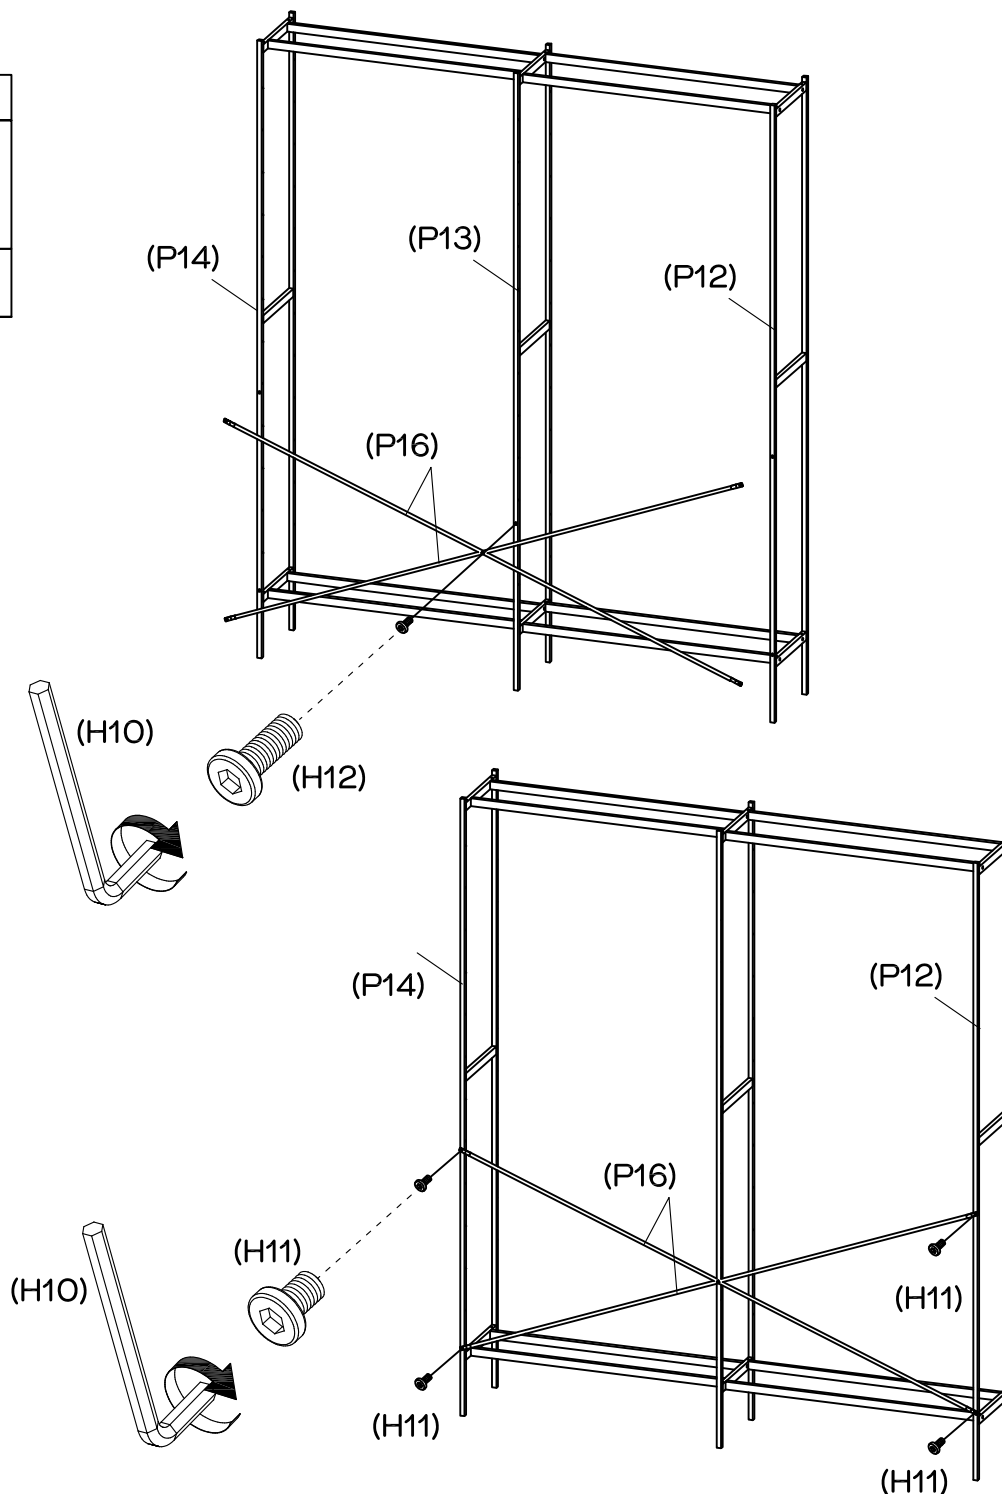


Attach Support Bars (P16x2) to the Middle Side Frame (P13) with 1x Medium Bolt (H12) by tightening with the Allen Key (H10) as shown.

Attach Support Bars (P16x2) to Right Side Frame (P14) and Left Side Frame (P12) with 4 x Small Bolts (H11) by tightening with the Allen Key (H10) as shown.

Step 3

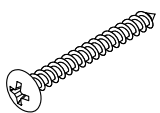You will need	
	
12 x Large Screws (H6)	Phillips head screwdriver
	
6 x Adjustable Feet (H7)	




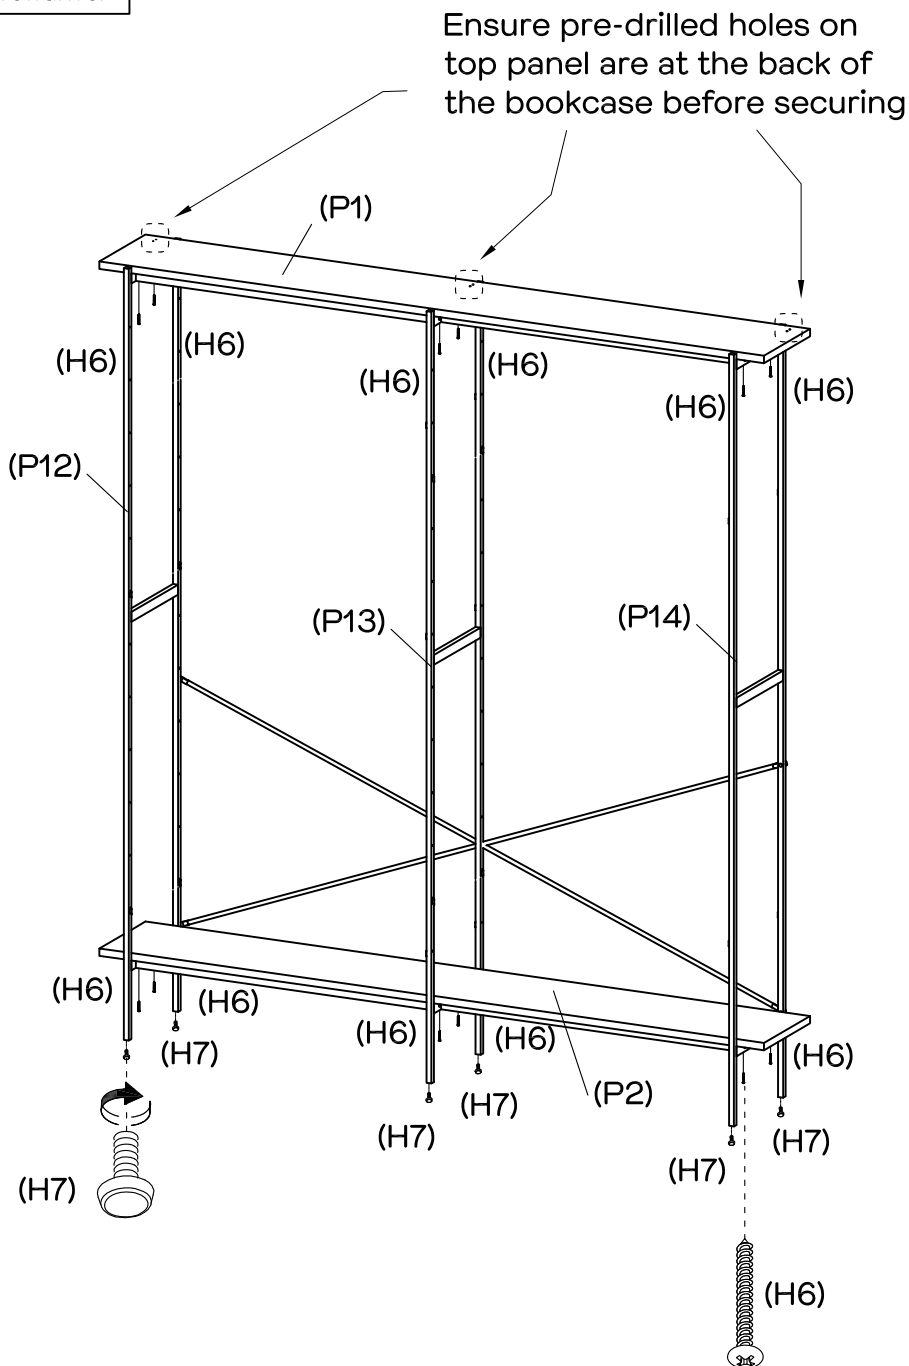


Attach the Top Panel (P1) and Base Panel (P2) to Right Frame (P14), Middle Frame (P13) and Left Frame (P12) with 12 x Large Screws (H6) using Phillips head screwdriver.

Screw in the 6 x Adjustable Feet (H7) to the bottom of Left, Middle & Right Frames (P12, P13 & P14).


Step 4

Two People

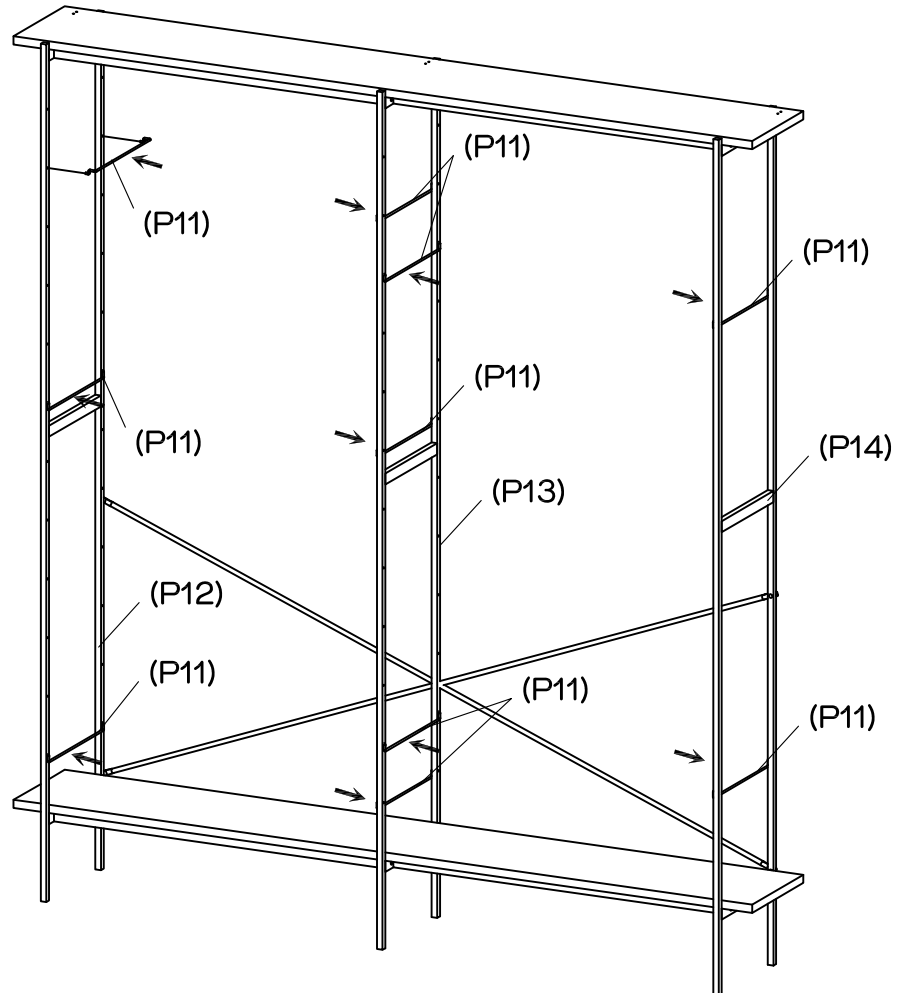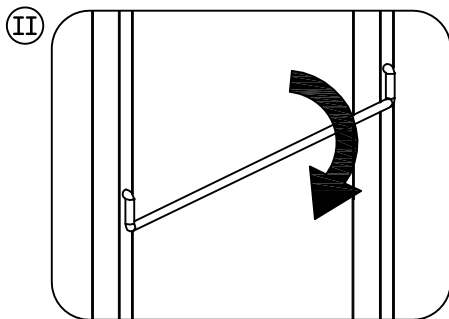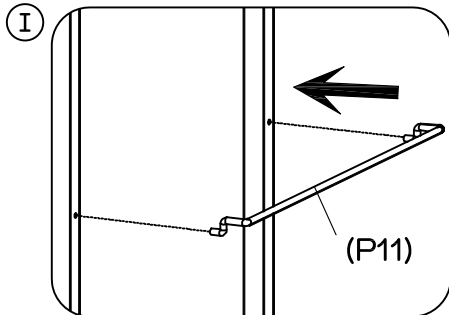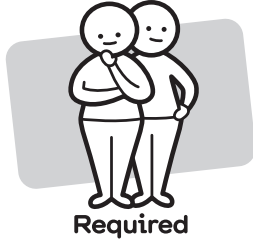



Gently stand the partially assembled bookcase upright.
Insert the Shelf Supports (P11x10) into the Right, Middle & Left Frames (P12, P13 & P14) as shown.


Step 5

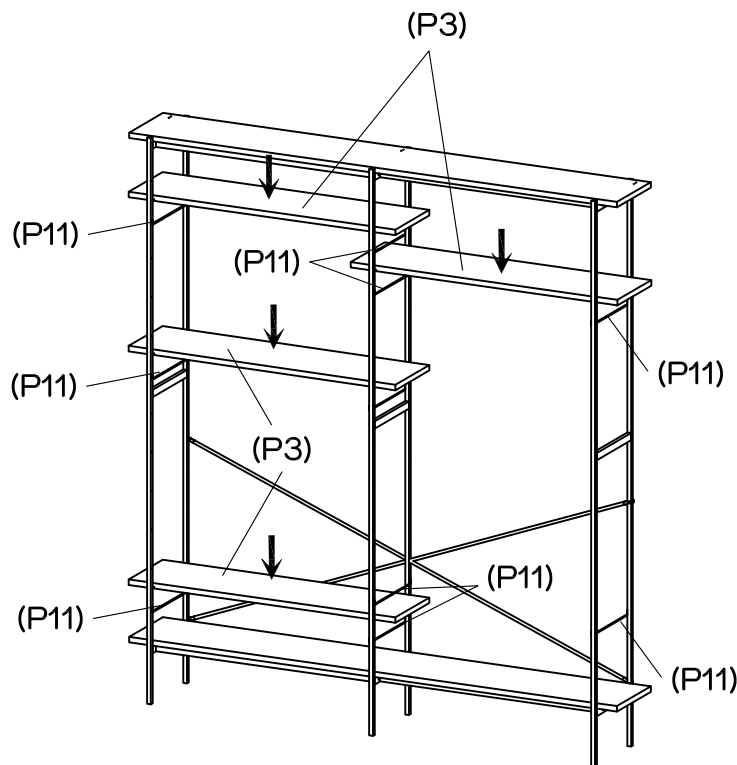

Place the Shelves (P3x4) into position by resting on the Shelf Supports (P11x10) as shown. Ensure that the grooves on the bottom of the shelves slot into the shelf supports and each shelf is firmly secure.



Step 6

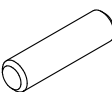
You will need	
	
12 x Dowels (H3)	Hammer

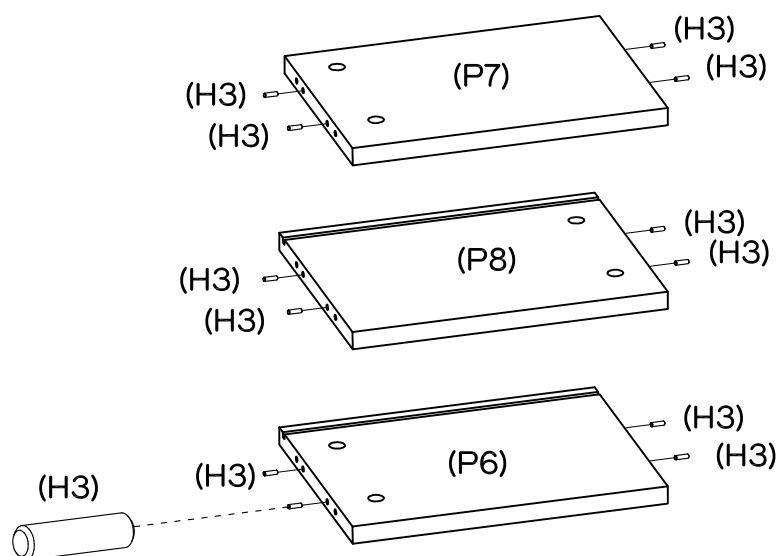

Insert 12 x Dowels (H3) into Cupboard Left, Middle & Right Side Panels (P6, P7 & P8) as shown by gently tapping in with the Hammer if needed.

Step 7

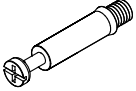
You will need	
	
6 x Cam Bolts (H1)	Phillips head screwdriver

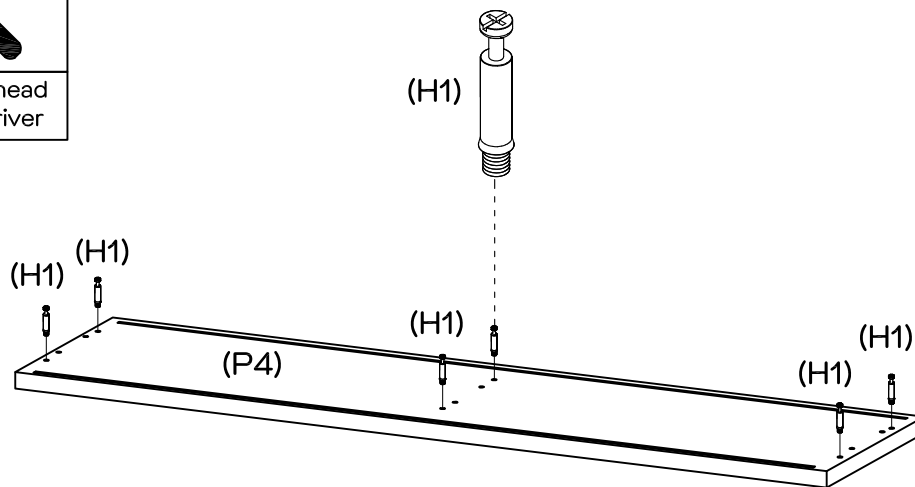


Attach 6 x Cam Bolts (H1) to Cupboard Top Panel (P4) as shown using Phillips head screwdriver.

Step 8

You will need	
	
6 x Cam Nuts (H2)	Phillips Head Screwdriver

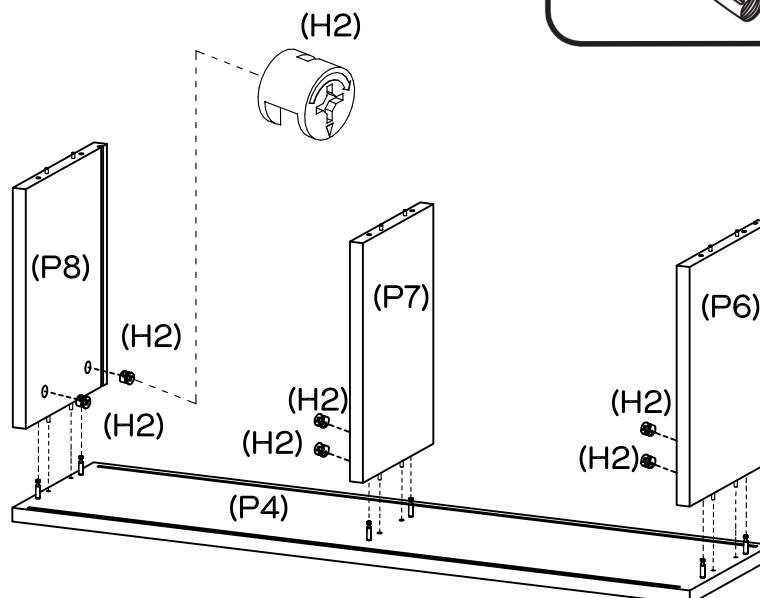



This is how a cam nut works.....

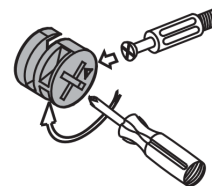


The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

Insert 6 x Cam Nuts (H2) into Cupboard Left, Middle & Right Side Panels (P6, P7 & P8) as shown. Rotate the Cam Nuts so the arrows point towards the incoming Cam Bolts. Attach Cupboard Left, Middle & Right Side Panels (P6, P7 & P8) to Cupboard Top Panel (P4) by tightening the Cam Nuts with the Phillips Head Screwdriver.



Step 9

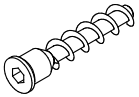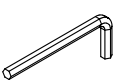You will need	
	
6 x Connecting Screws (H4)	1 x Allen Key (H10)

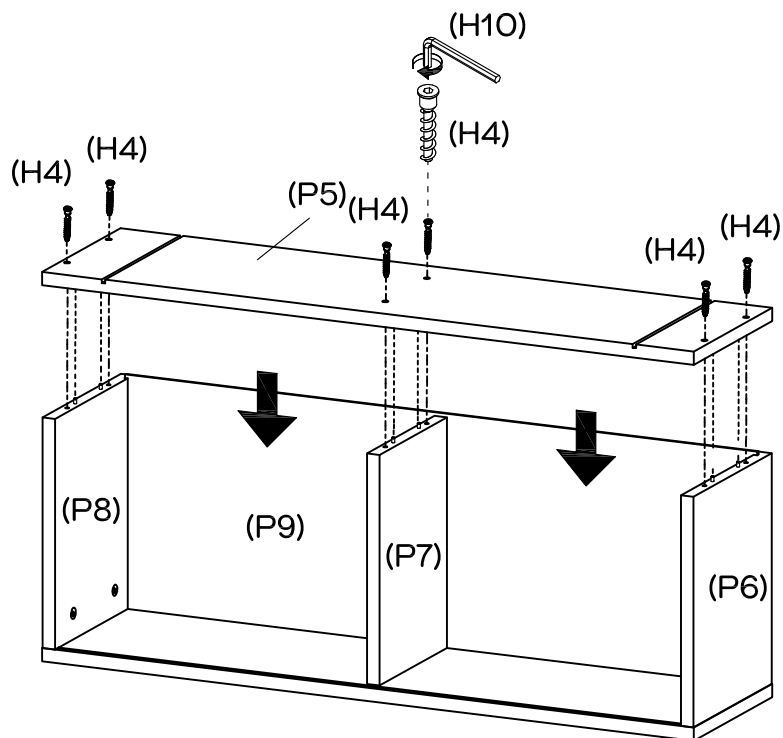


Slot Cupboard Back Panel (P9) into the grooves of Cupboard Top Panel (P4) and Left & Right Side Panels (P6 & P8) as shown. Attach Cupboard Base Panel (P5) to Cupboard Left, Middle & Right Side Panels (P6, P7 & P8) with 6 x Connecting Screws (H4) by tightening with the Allen Key (H10).

Step 10

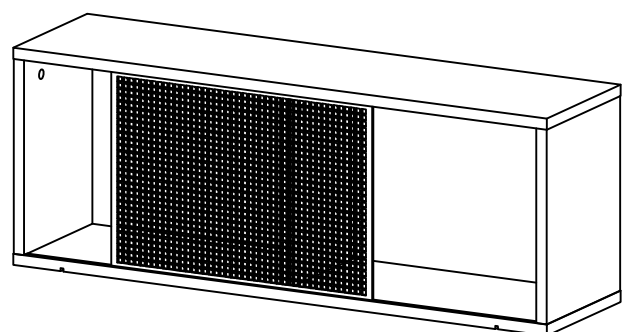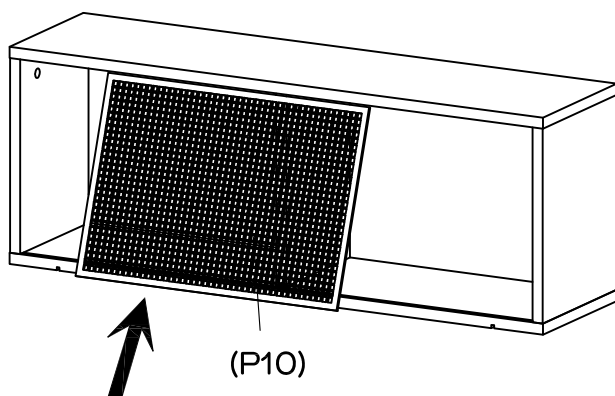




Insert the Sliding Door (P10) into the assembled cupboard as shown.

Step 11


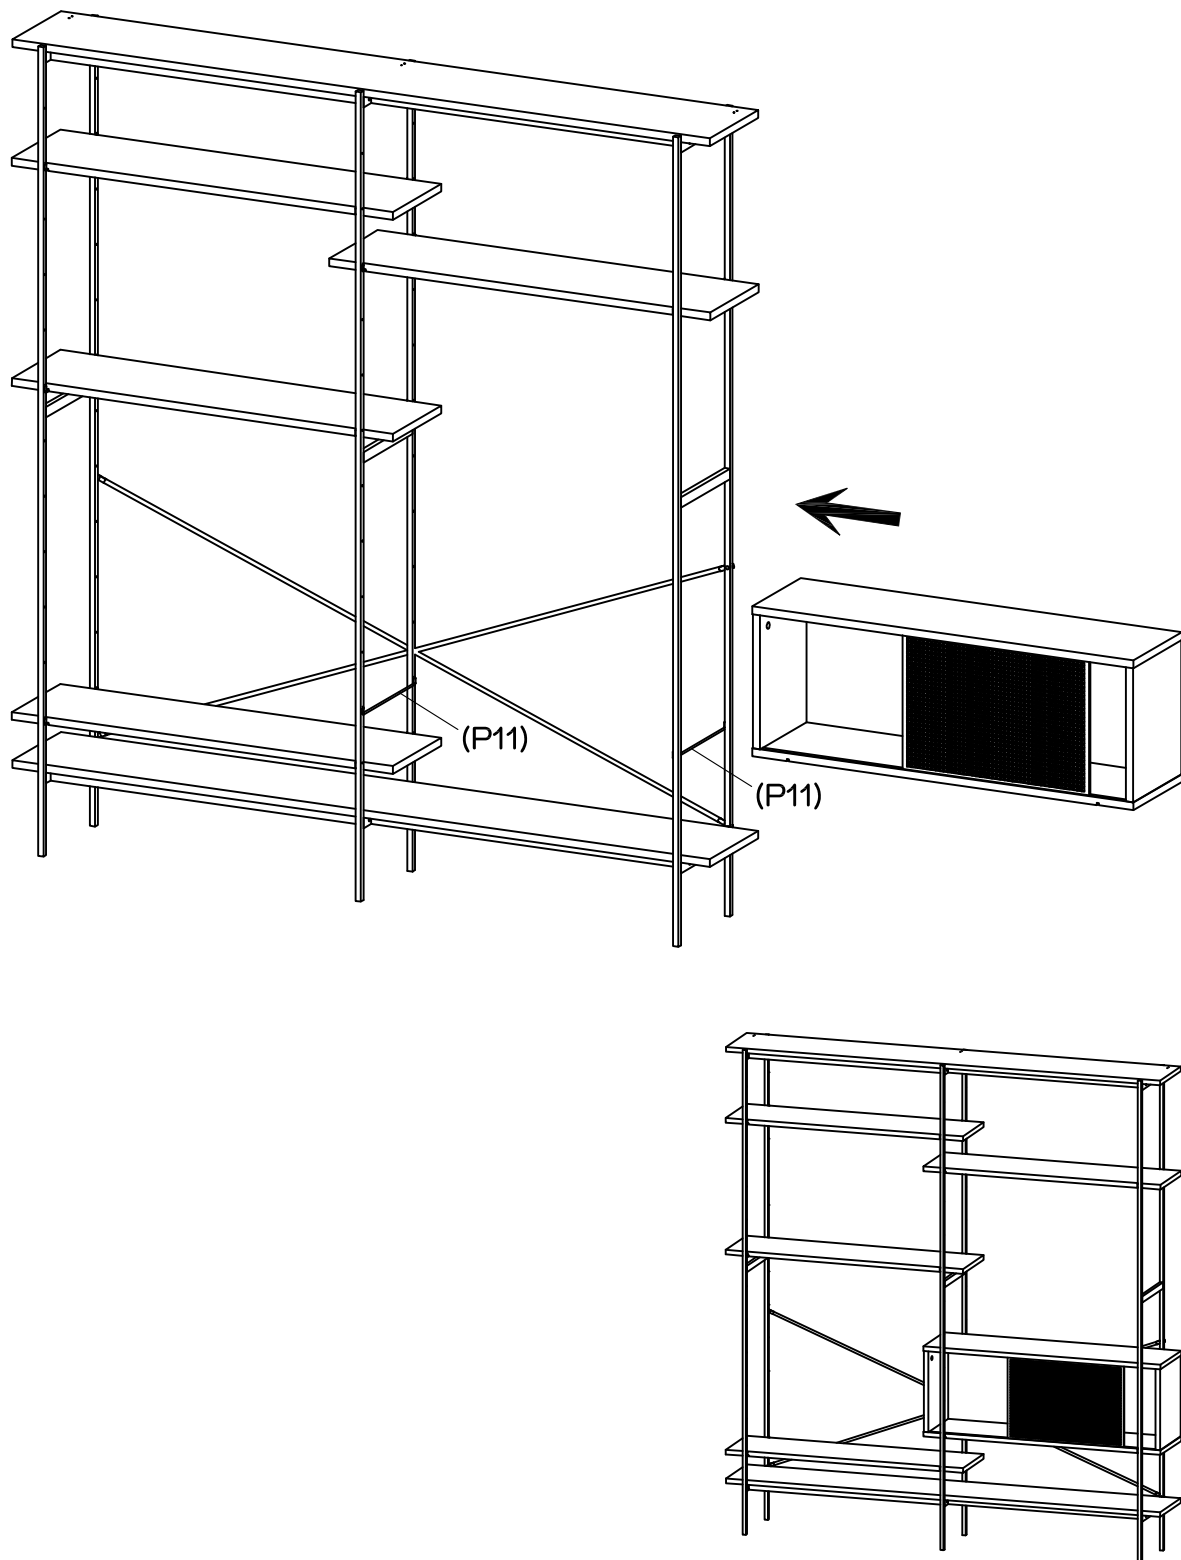


Gently place the assembled cupboard into position on the Shelf Supports (P11x2) as shown. Ensure that the grooves on the bottom of the cupboard slot into the shelf supports and the cupboard is firmly secure.

Step 12

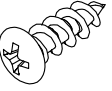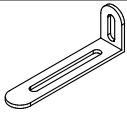
You will need	
	
6 x Small Screws (H8)	3 x Wall Brackets (H9)
	
Phillips head screwdriver	

We strongly advise that you use the Wall Brackets provided to prevent the unit from toppling

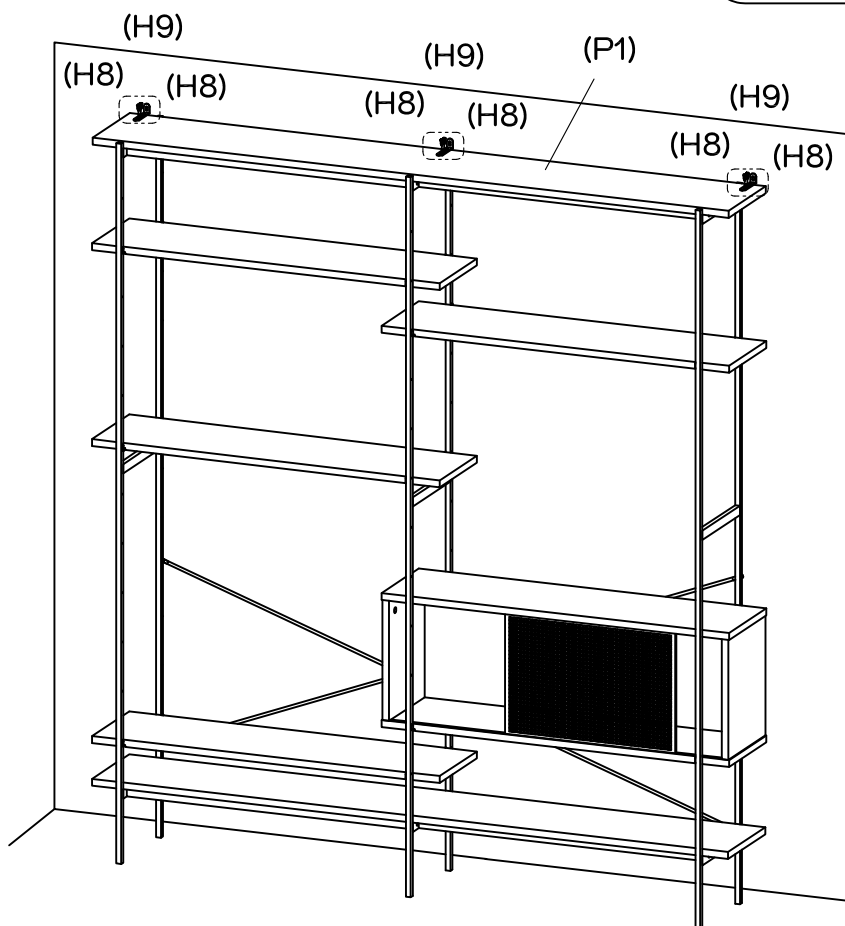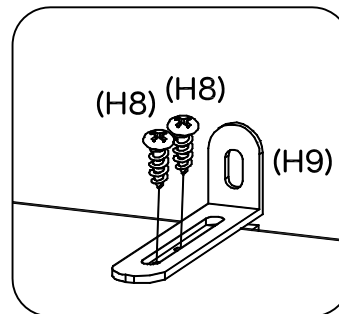

Attach 3 x Wall Brackets (H9) to Top Panel (P1) with 6 x Small Screws (H8) as show using Phillips head screwdriver.

Step 13

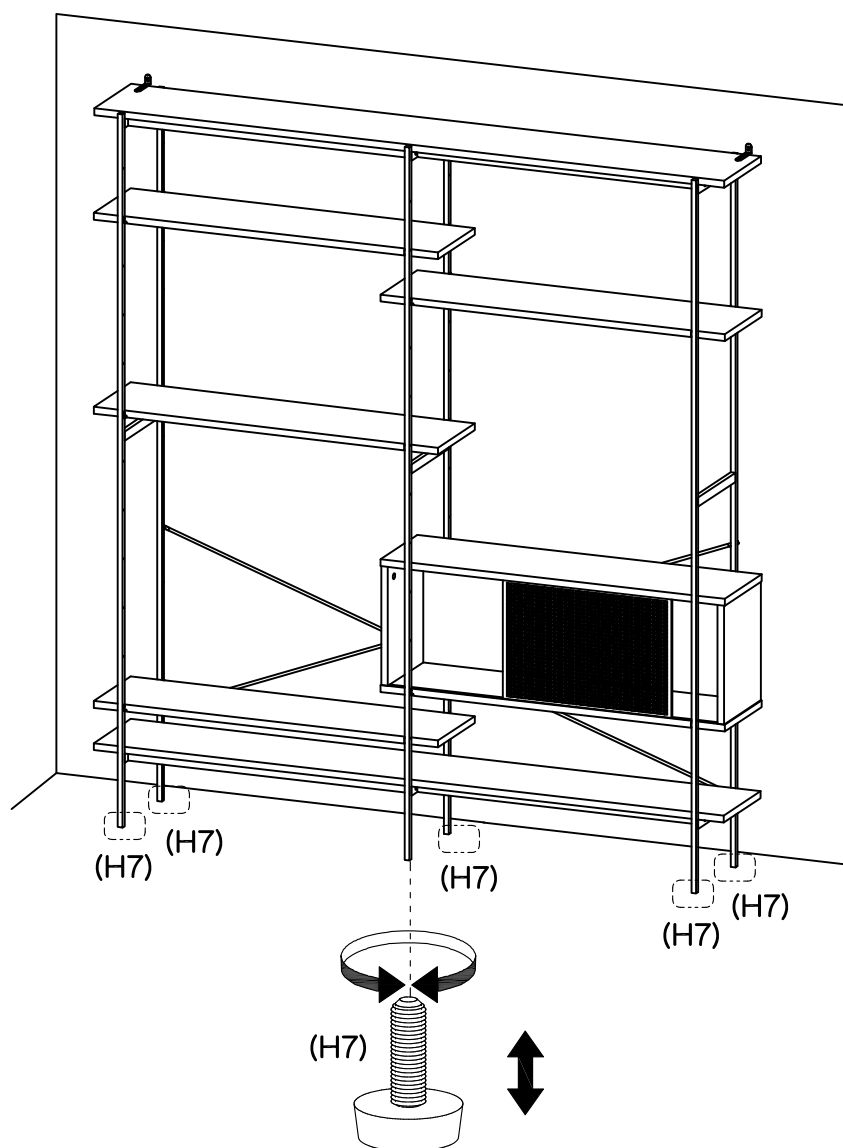


If the floor is uneven, adjust the 6 x Adjustable Feet (H7) to balance the Bookcase if needed.


Step 14

Screws and wall plugs are not provided, please use appropriate fixtures for your wall.

Seek advice from a qualified trades person on how to attach this to your specific wall.

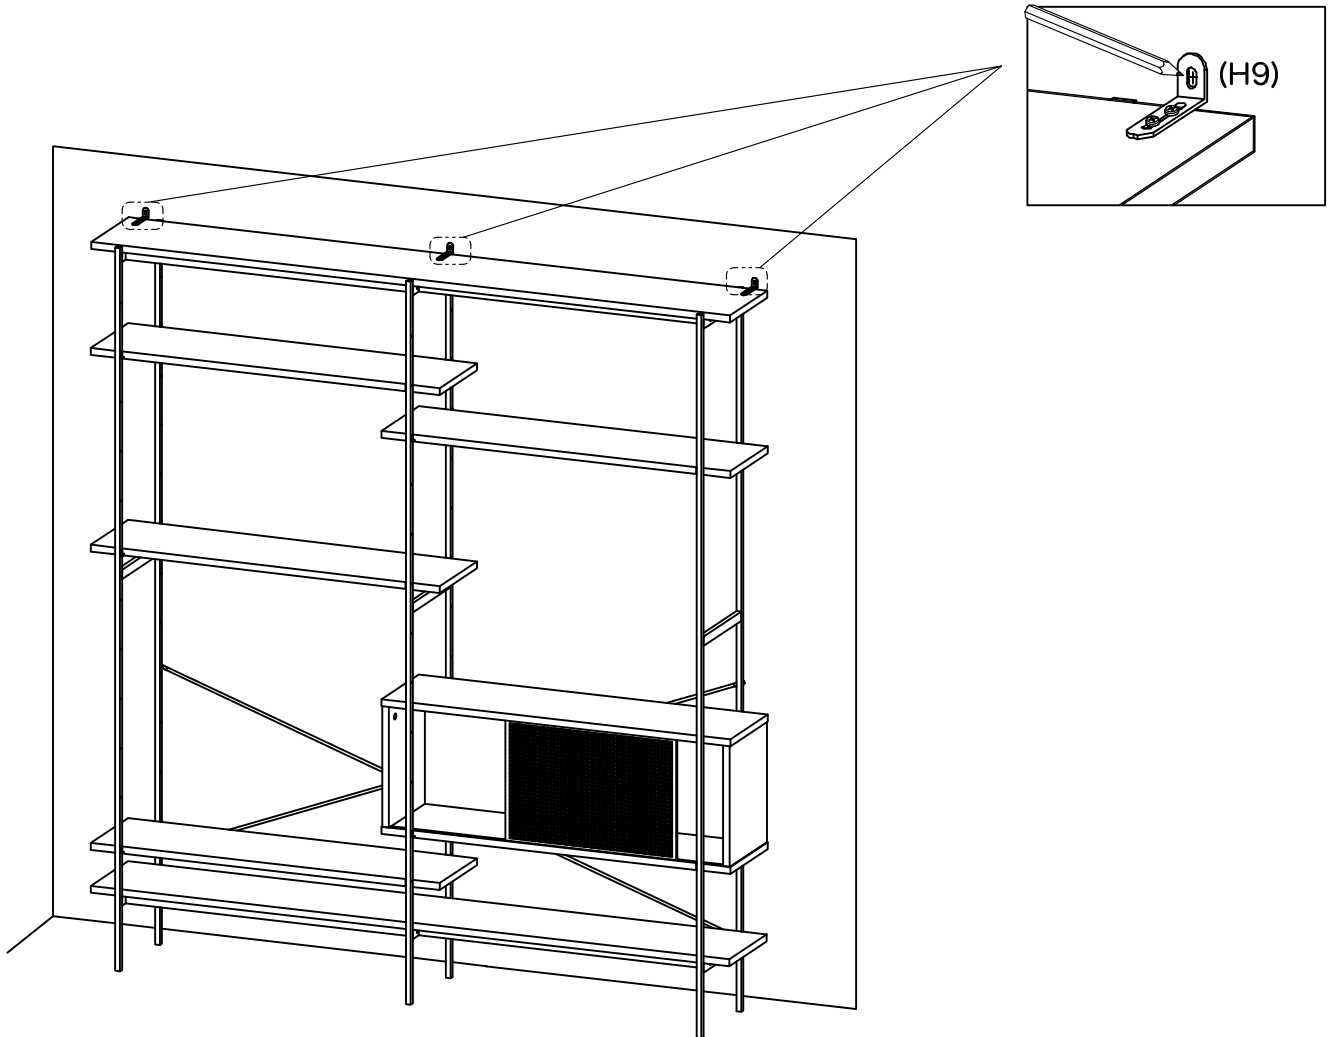

Connect the 3 x Wall Brackets (H9) to the wall.
Make sure it is firmly attached and a snug fit.

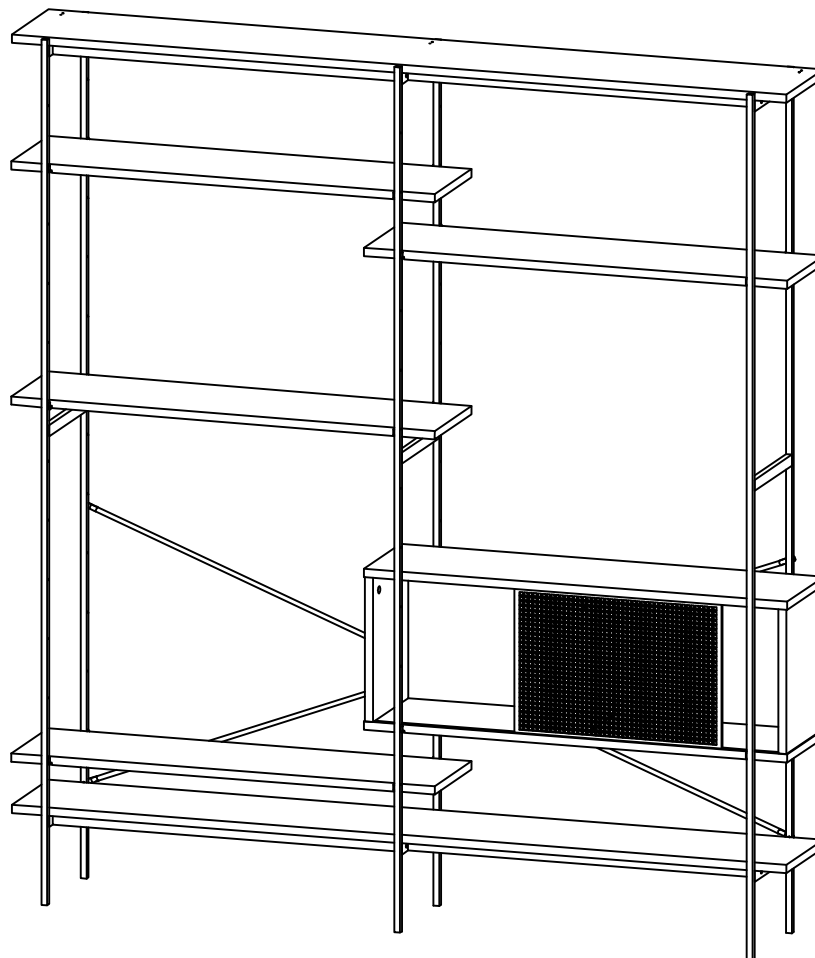

Job Complete!

In the interest of our environment please dispose
of all packaging thoughtfully.