




Version 1.0

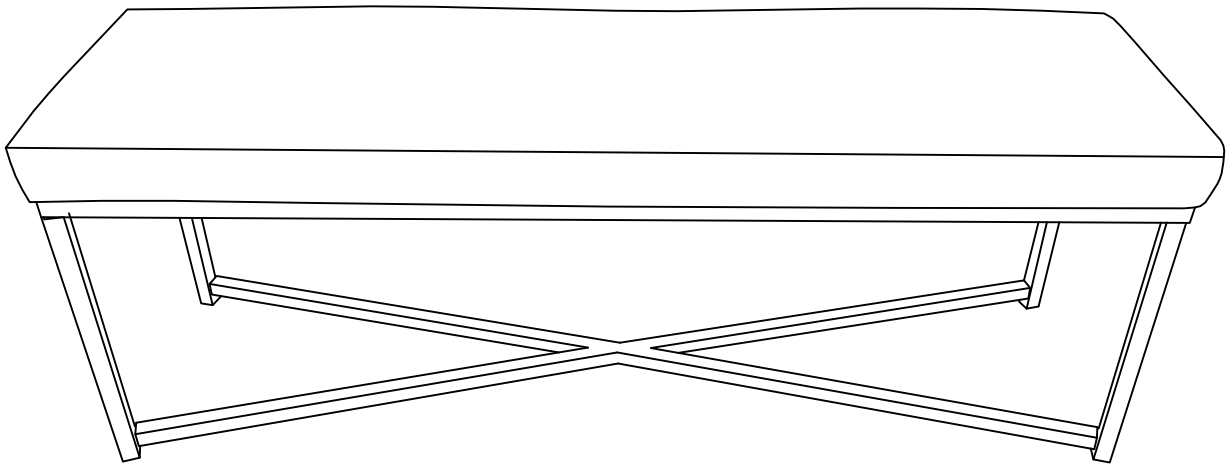

SOULMATE

OTTOMAN RECTANGLE

www.fantasticfurniture.com.au

CAUTION

Do not stand on, or use this ottoman as a step ladder.
Use this product for seating one person at a time.
This product should be checked periodically to ensure all components are secure and all hardware is tight.

RECOMMENDED WEIGHT CAPACITY 120 KG

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

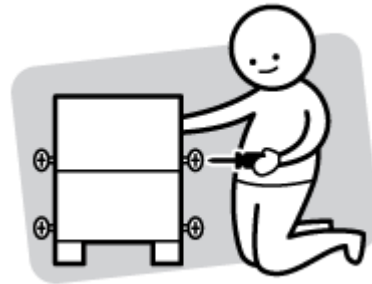

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product



DO NOT USE

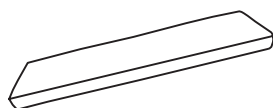

1 x Ottoman
(P1)



1 x Bottom Frame
(P2)



1 x Top Frame
(P3)



4 x Brace
(P4)



10 x Long Bolts
(H1)







8xShort Bolts
(H2)




Allen Key
(H3)

Please make sure you have all these parts before you start.

Step 1

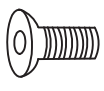You will need	
	
1 x Bottom Frame (P2)	4 x Brace (P4)
	
8 x Short Bolts (H2)	Allen Key (H3)

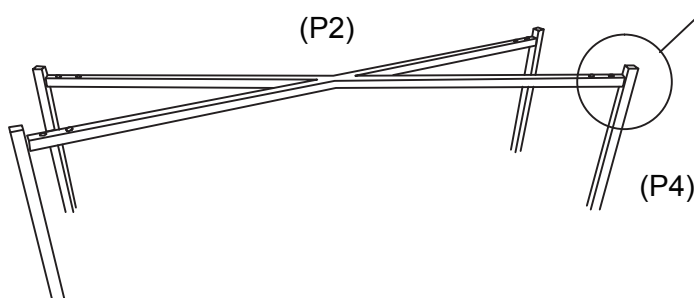
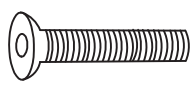



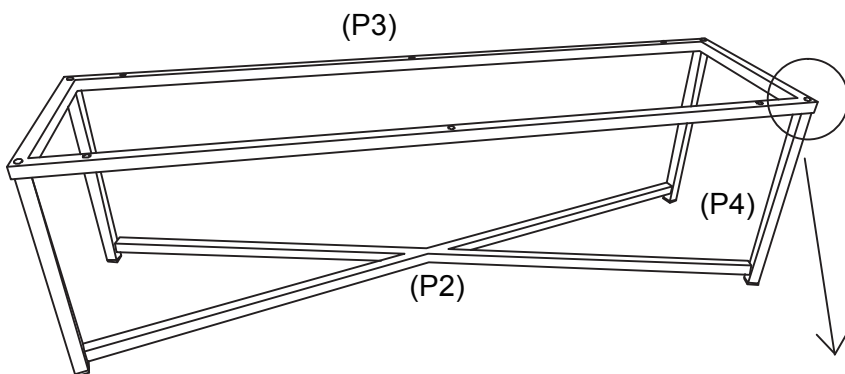
Attach the 4 x braces (P4) to the bottom frame (P2).

Slot 1 x brace (P4) in to the end of the bottom (P2).Screw in the 2 x short bolts (H2) with the allen key (H3) to attach the brace to the bottom frame.Repeat this for the 3 other braces (P4) on the other ends of the frame (P2).

Ensure that the bolts are fully tightened.

Step 2

You will need	
	
1 x Top Frame (P3)	
	
4 x Long Bolts (H1)	Allen Key (H3)




Attach the top frame (P3) to the 4 x braces (P4).

Place the top frame (P3) on top of the 4 x braces and align the holes.




Screw 1 x long bolt (H1) only halfway into the frame and make sure that the holes are aligned.


Screw in the remaining 3 x long bolts (H1) only halfway into the frame and make sure that the holes are aligned.

Once all the bolts are in,tighten them fully to attach the frame (P3) to the braces (P4).

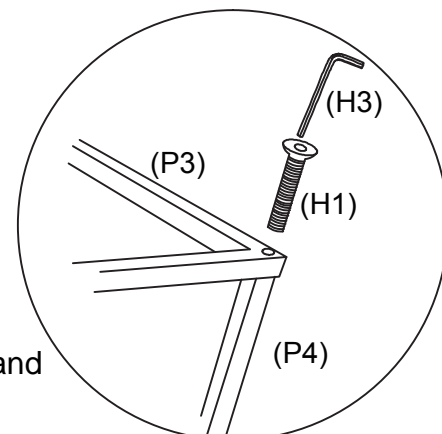

Step 3

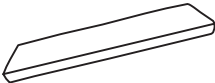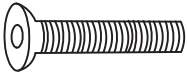You will need	
	
1 x Ottoman (P1)	
	
6 x Long Bolts (H1)	Allen Key (H3)

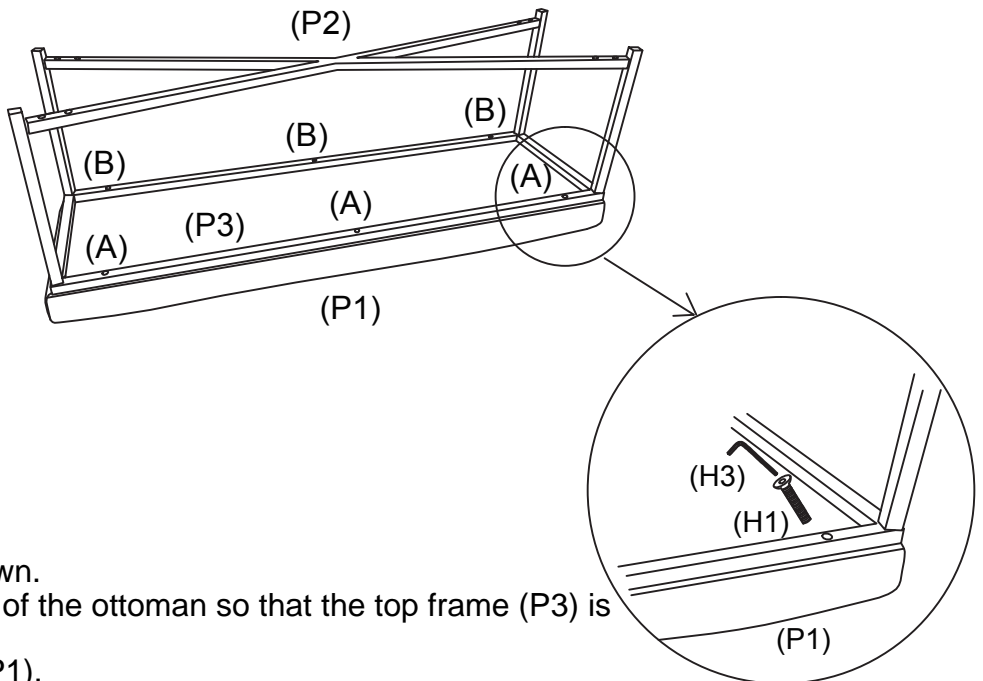

Place the ottoman (P1) upside down.

Place the completed frame on top of the ottoman so that the top frame (P3) is resting on the ottoman (P1).

Attach the frame to the ottoman (P1).


Screw 1 x long bolt (H1) into hole (A) only halfway into the frame with the allen key (H3) and make sure the holes align.

Screw 1 x long bolt (H1) into hole (B) across from the previous hole (A) only halfway, and make sure the holes align.

Repeat this for the 4 x remaining holes with the process of screwing in bolts into hole (A) and then (B) only halfway into the frame.

Once all the bolts are screwed into the frame, ensure to tighten all bolts fully.

Step 4

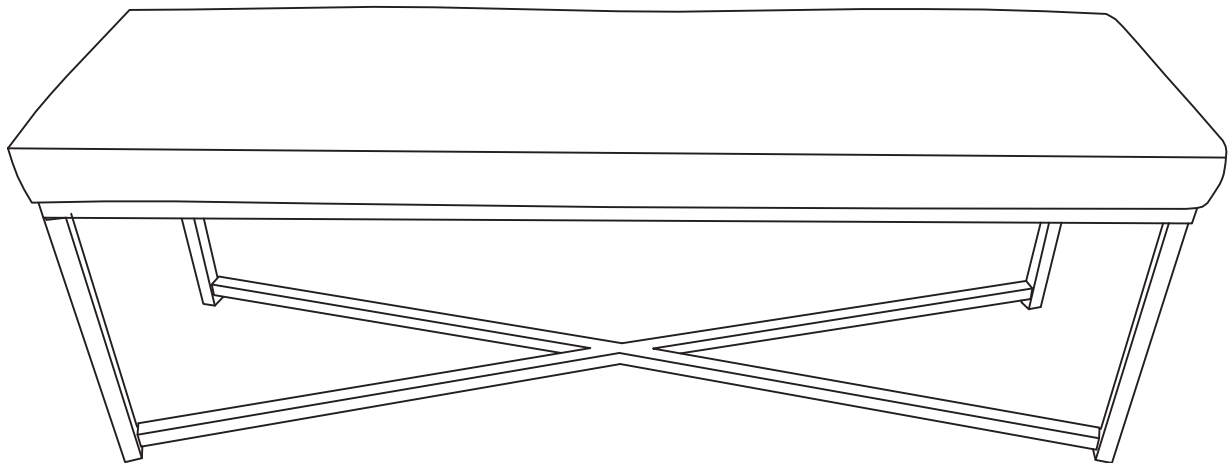

Job Complete!

In the interest of our environment
Please dispose of all packaging thoughtfully