




Version 1.0

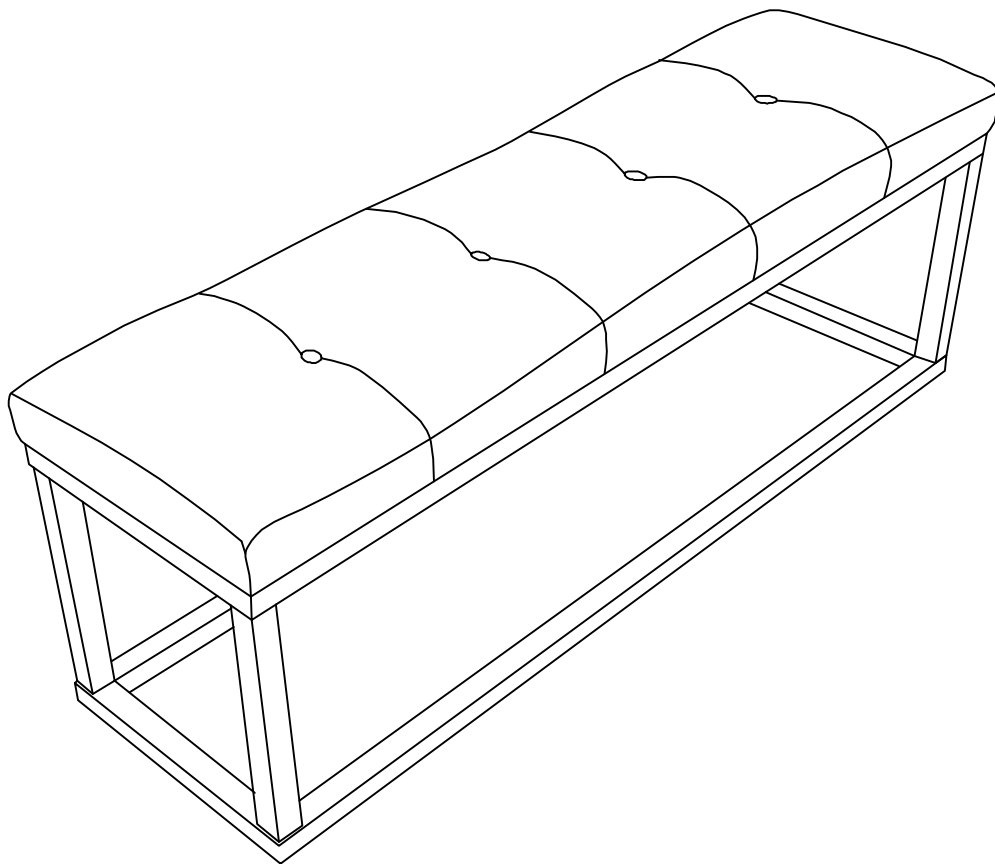

TRUELOVE

OTTOMAN RECTANGLE

www.fantasticfurniture.com.au

CAUTION

Do not stand on, or use this ottoman as a step ladder.
Use this product for seating one person at a time.
This product should be checked periodically to ensure all components are secure and all hardware is tight.

RECOMMENDED WEIGHT CAPACITY 120 KG

Enjoy

Your purchase from
Australia's Best Value Furniture Store



Assembly checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.



Identify and lay out all of the components before you begin assembly.

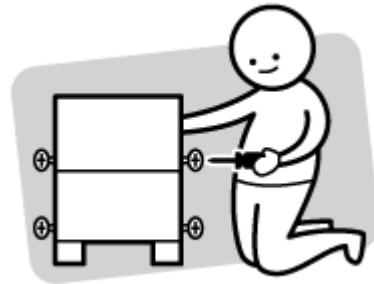

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

What you need

to assemble the product



DO NOT USE

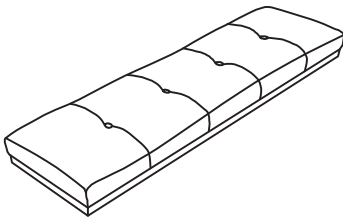

1 x Ottoman
(P1)




1 x Top Frame
(P2)



1 x Bottom Frame
(P3)



4 x Brace
(P4)



14 x Bolts
(H1)







6 x Felt Pad
(H2)




Allen Key
(H3)

Please make sure you have all these parts before you start.

Step 1

You will need	
	
1 x Bottom Frame (P3)	4 x Brace (P4)
	
4 x Bolts (H1)	Allen Key (H3)

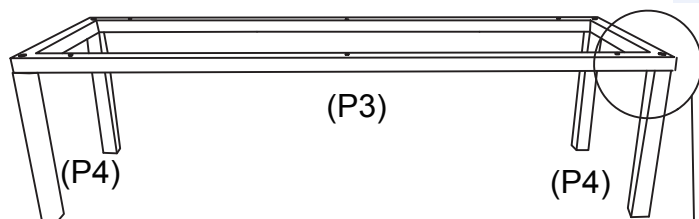




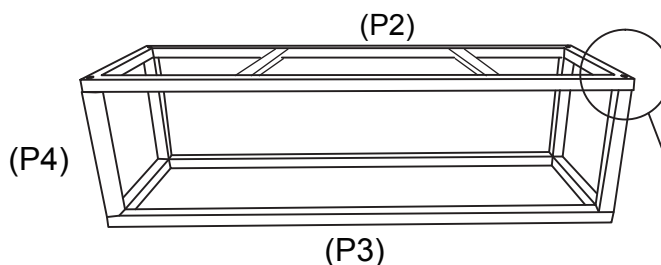
Attach the 4 x braces to the bottom frame (P3).

Align the holes in the braces (P4) to the holes in the bottom frame (P3) and make sure that braces are aligned with the corners of the frame and are facing the right way.

Screw in 4 x bolts into the bottom frame (P3) with the allen key (H3).

Step 2

You will need	
	
1 x Top Frame (P2)	
	
4 x Bolts (H1)	Allen Key (H3)



Flip the frame upside down and place the top frame (P2) on top of the braces (P4)




Align the holes of the top frame (P2) to the holes in the braces (P4).


Screw in 1 x bolt (H1) halfway into the frame.

Repeat this for the remaining 3 x bolts.

Once all bolts are in, ensure to tighten them fully to attach the top frame (P2) to the braces (P4).

Step 3

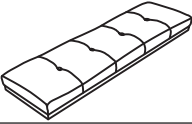You will need	
	
1 x Ottoman (P1)	
	
6 x Bolts (H1)	Allen Key (H3)

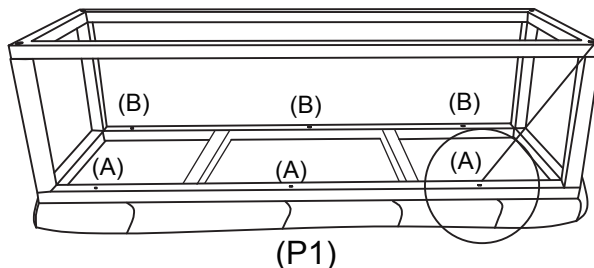

Place the ottoman (P1) upside down.

Place the completed frame on top of the ottoman (P1) so that the top frame is resting on the ottoman (P1).

Attach the frame to the ottoman (P1).


Screw 1 x bolt (H1) into hole (A) only halfway into the frame with the allen key (H3) and make sure the holes align.


Screw 1 x bolt (H1) into hole (B) across from the previous hole (A) only halfway, and make sure the holes align.

Repeat this for the 4 x remaining holes with the process of screwing in bolts into hole (A) and then (B) only halfway into the frame.

Once all bolts are screwed into the frame, ensure to tighten all bolts fully.


Step 4

You will need	
	
6 x Felt Pad (H2)	

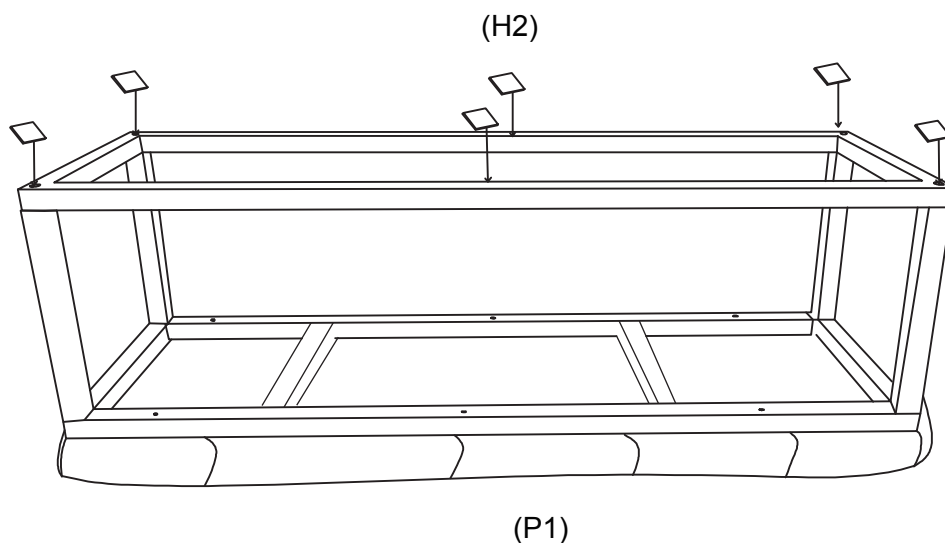

Attach the 6 x felt pads (H2) to the underside of the frame

Step 5

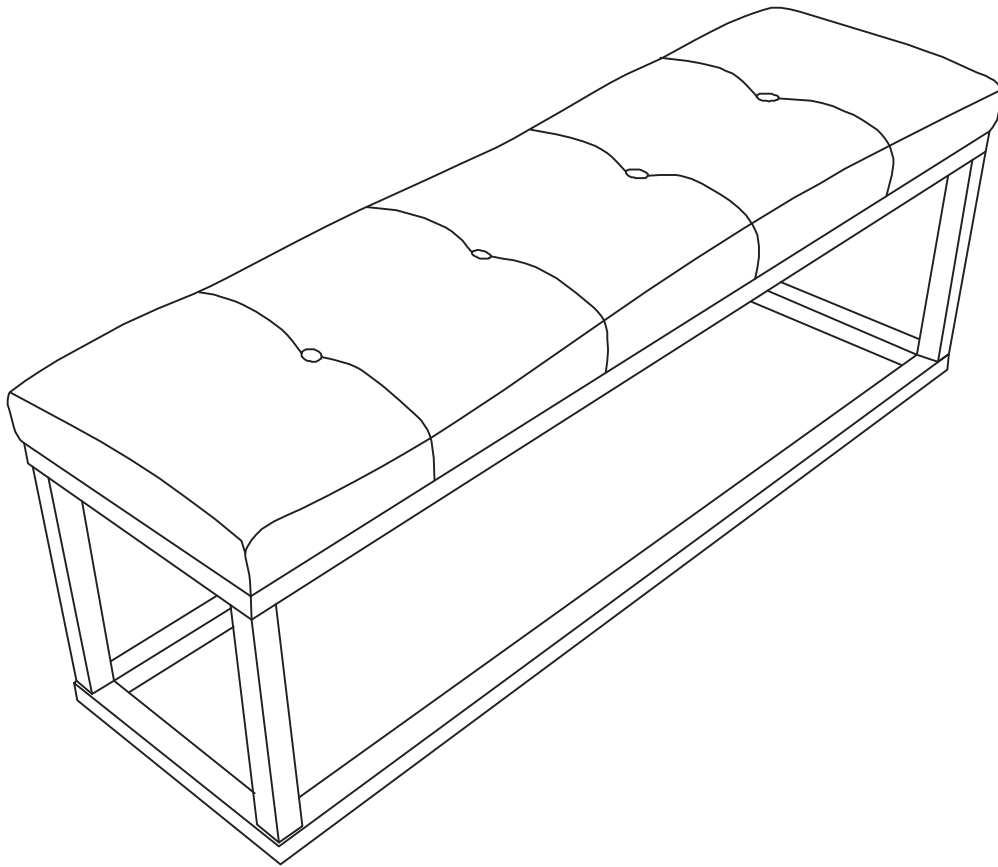

Job Complete!

In the interest of our environment
Please dispose of all packaging thoughtfully