


Assembly Instructions

1482


Buzz Utility 3 Shelf

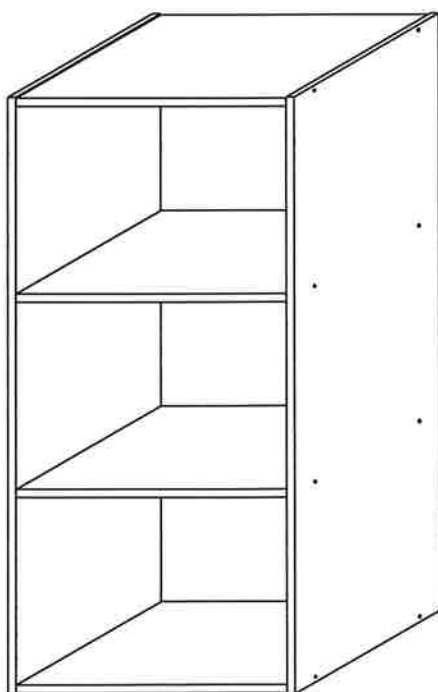

WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1

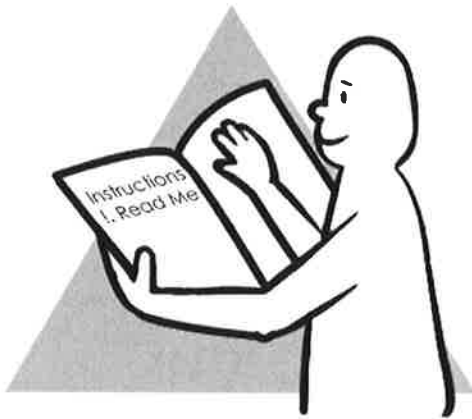


Read Instructions carefully.
Check no parts are missing.

2

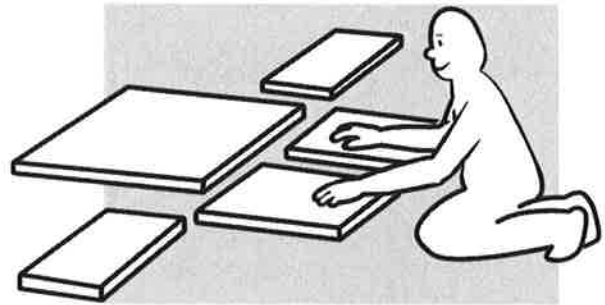


Lay out all of the components on a soft surface
as if you were preparing to do a jigsaw puzzle.

3

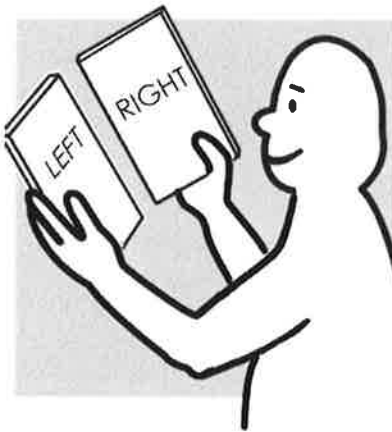


Carefully identify each component, especially
those that are similar. The most common mistake
is getting things back to front.

4

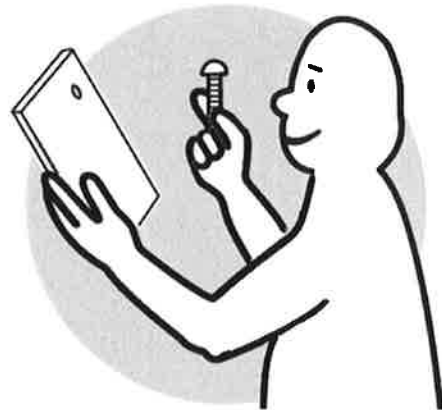


Separate and identify each component from the
hardware pack and rest each one in its proper
location before fastening.

5

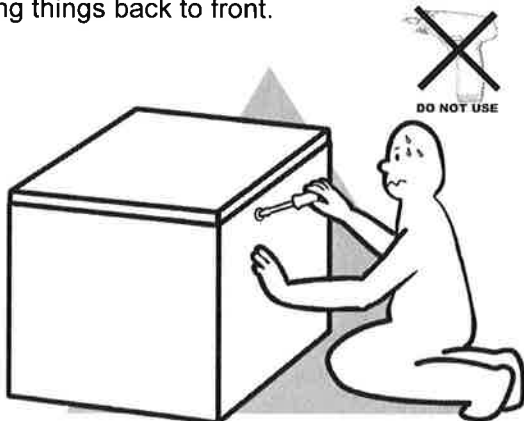


DO NOT fully tighten screws (leave slightly
loose). When the item is fully assembled
tighten the screws - but do not over tighten.

6

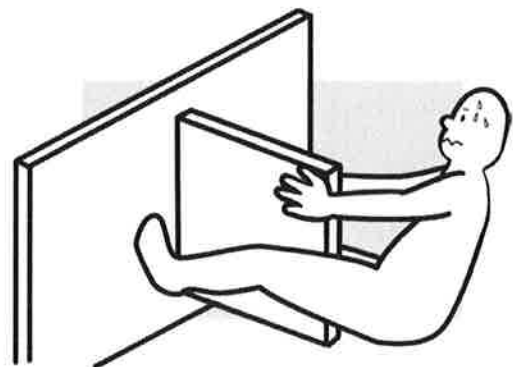

If glue is required **DO NOT** set until you are
certain that the parts belong together.

What you Need

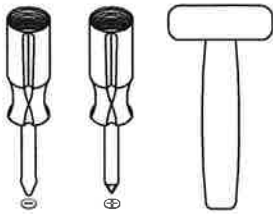

To Assemble the Body

(Tools not provided)



Flat Blade Screwdriver

Philips Head Screwdriver

Mallet



DO NOT USE

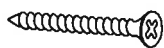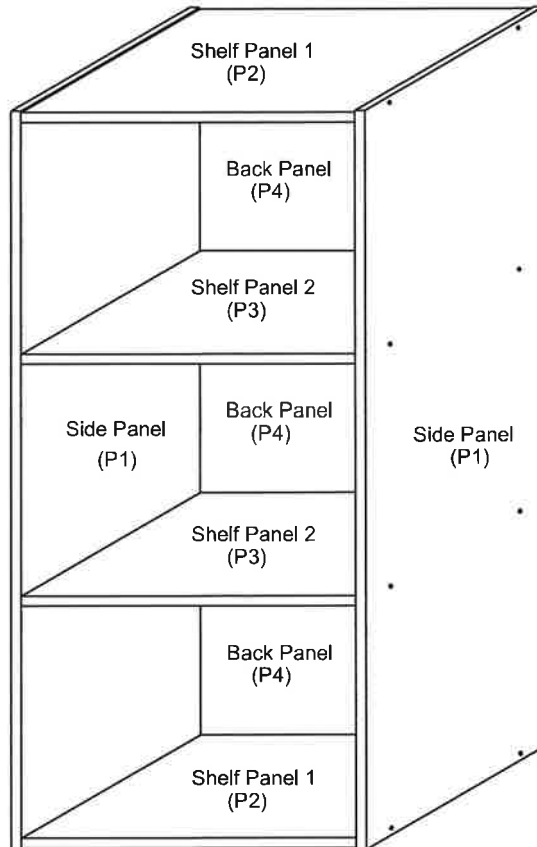

16 x Screw M4.5 x 38
(H1)



4 x Wood Dowel M6 x 25
(H2)



4 x Plastic Plug Ø6
(H3)



16 x Screw Cap Small
(H4)



1 x Webbing
150mm x 13mm
(H5)



1 x Pan Head
Screw M3.5 x 12
(H6)





1 x Flat Washer
M5.5 X 12 X 0.8mm
(H7)

Please make sure you have all these parts before you start.

Step 1


You will need:

8 x M4.5 x 38
Screw
(H1)

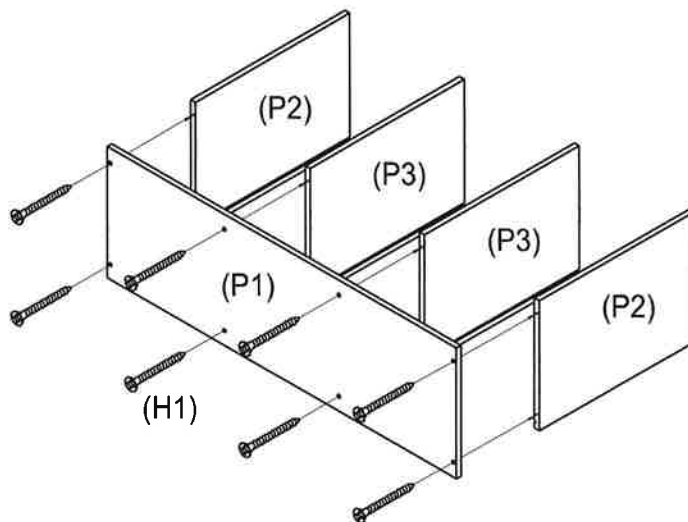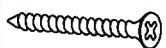

Attach shelf panels (P2) and (P3) to the side panel (P1)
Tighten screws (H1) with the philips head screwdriver.

Step 2


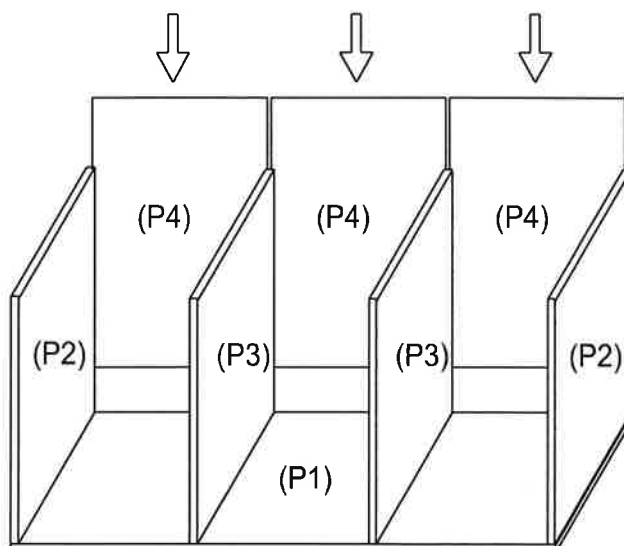


Insert back panel (P4)

Step 3

You will need:

8 x M4.5 x 38
Screw
(H1)

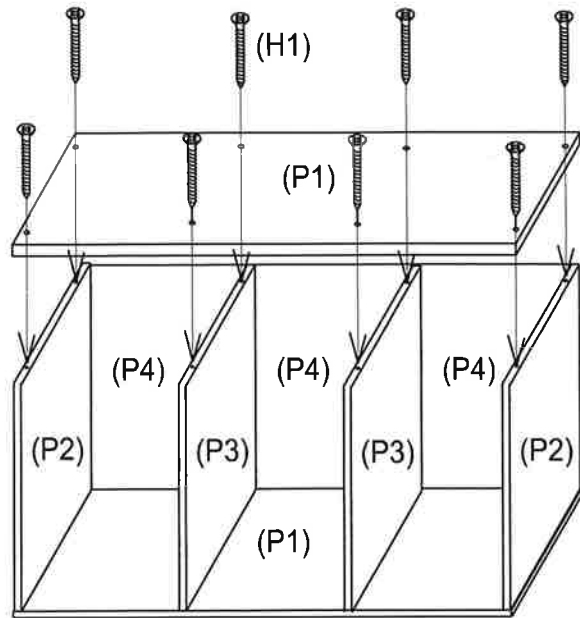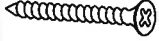


Attach the side panel (P1) to the rest of the assembly
Tighten screws with the screwdriver.

Step 4

You will need:

16 x Screw Cap
Small
(H4)

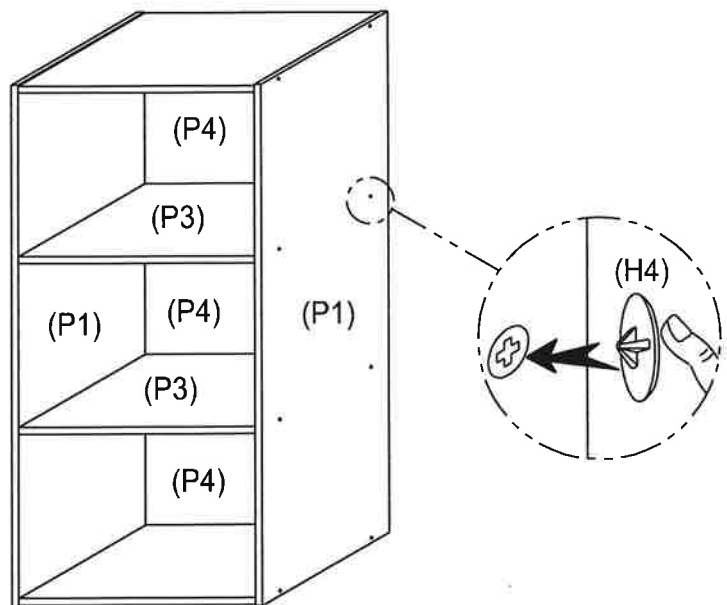

Cover the screw heads with the screw caps (H4)

Step 5

You will need:




1 x Pan Head
Screw M3.5 x 12
(H6)



1 x Webbing
150mm x 13mm
(H5)



1 x Flat Washer
M5.5 x 12 x 0.8mm
(H7)

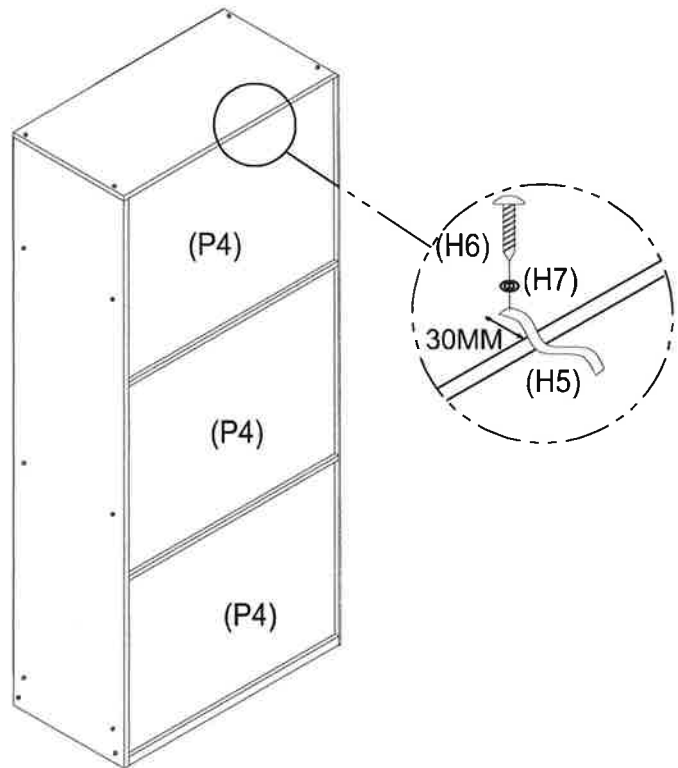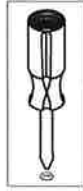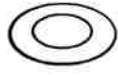



Use the screw (H6)
to connect the webbing (H5)
to the top panel

We strongly advise that you use the webbing
provided to prevent the unit toppling.

Step 6

Screws and wall plugs
are not provided please
use appropriate fixtures
for your wall.

Seek advice from a qualified trades person
on how to attach this to your specific wall.

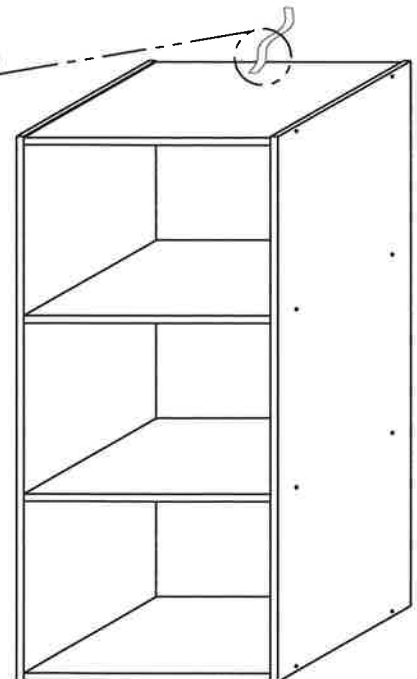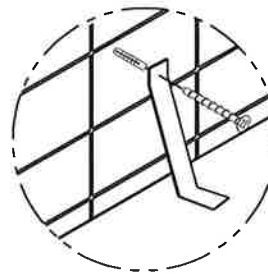


Move furniture to its final position, then connect
the end of (H5) webbing to the wall.

Make sure it is firmly attached and make sure it is snug fit.



Step 7

You will need:


4 x Wood Dowel
(H2)

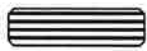

4 x Plastic Plug
Ø6
(H3)

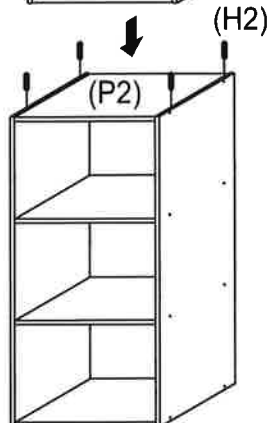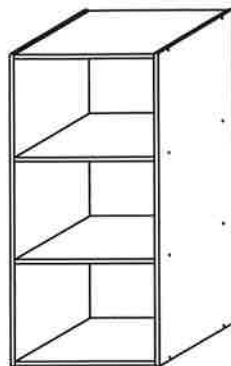

OR

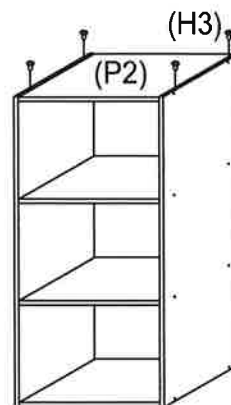

To stack multiple units together please use wooden dowels (H2) and align units to connect.

For individual units please use plastic plugs (H3)

Step 8

The job is now complete!

In the interest of our environment

Please dispose of all
packaging thoughtfully

