


Version 1.0



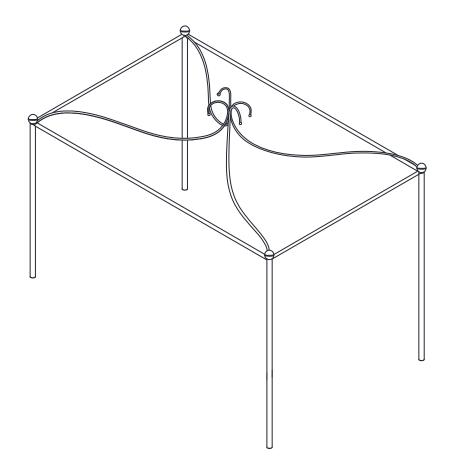



fantasticfurniture.com.au

# Look like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



## Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture




fantasticfurniture.com.au

## Assembly checklist




Read through the instructions carefully before you begin.

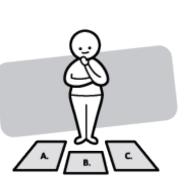



Make sure you have all the required tools. Never use power tools unless instructed.

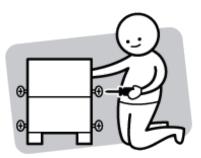

before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

# **Useful Information**

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.


!If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

! Please see page 2 for any safety requirements or weight restrictions.




### What you need

to assemble the product

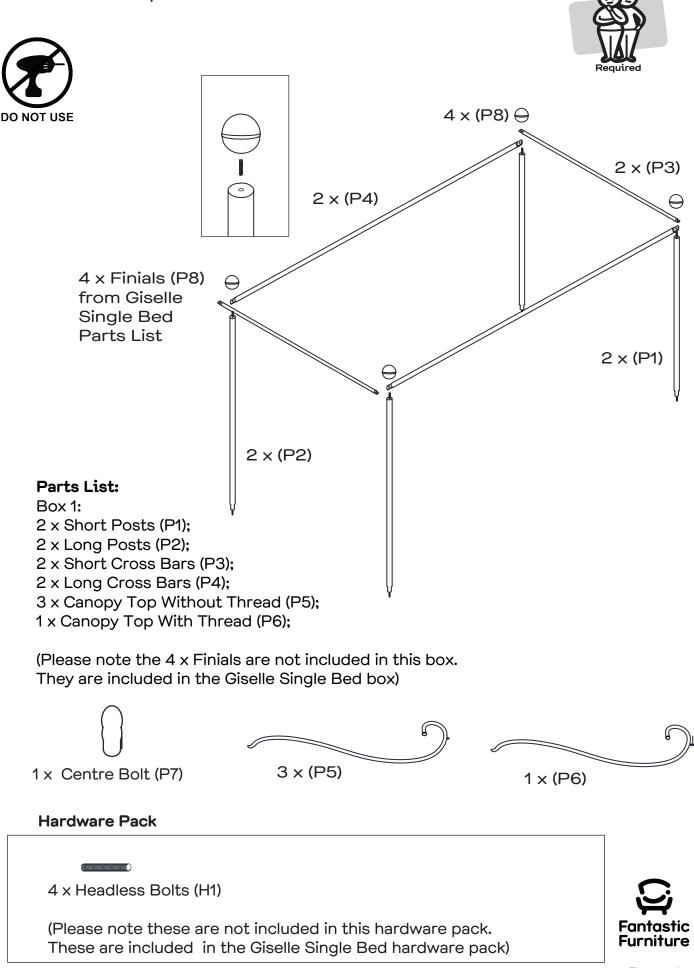


Two People



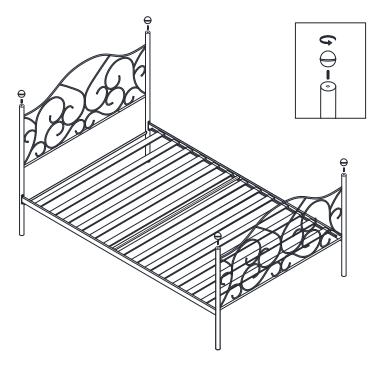


Begin with an assembled Giselle Single Bed (sold separately). Remove the 4 x finials (P8) and the 4 x headless bolts (H1) from the corner posts by unscrewing in an anti-clockwise direction and set aside.

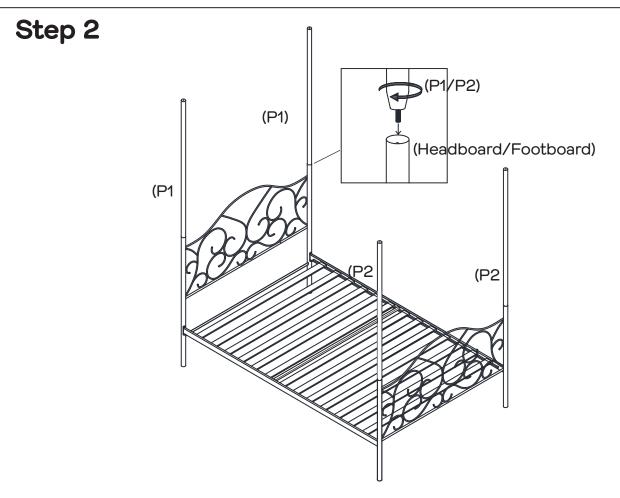

Screw in, by rotating clockwise 2 x short posts (P1) into the cornerposts of the headboard until secure.


Screw in 2 x long posts (P2) onto the cornerposts of the footboard until secure.



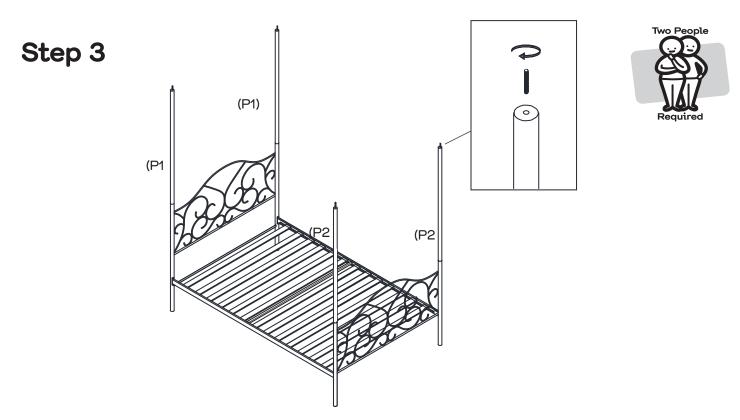

Screw in a headless bolt (H1) into the top of each of the 4 cornerposts by rotating clockwise.

#### Step 4

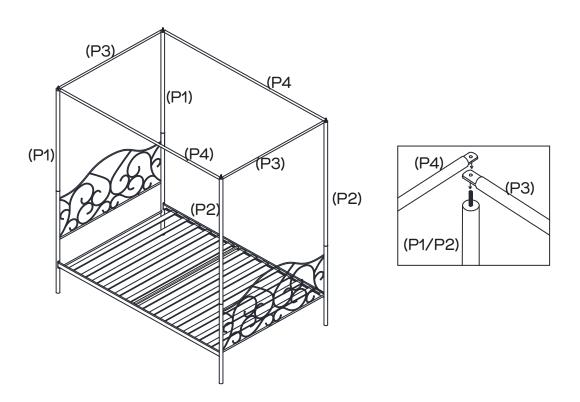


Place a short cross bar (P3) across each end of the bed, aligning the holes to the bolts on the cornerposts (P1 & P2).


Repeat this process along the sides of the bed with the long crossbars (P4), aligning the holes to the bolts on the cornerposts (P1 & P2).





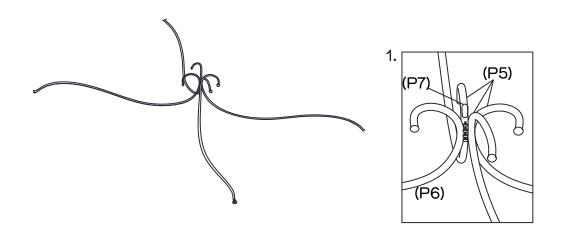

Assemble the canopy, beginning with canopy top (P6) with the thread bolt facing upwards. Place 3 x canopy top (P5) onto the thread bolt and secure them together by screwing the centre finial (P7) onto the top of the thread by turning in a clockwise direction.

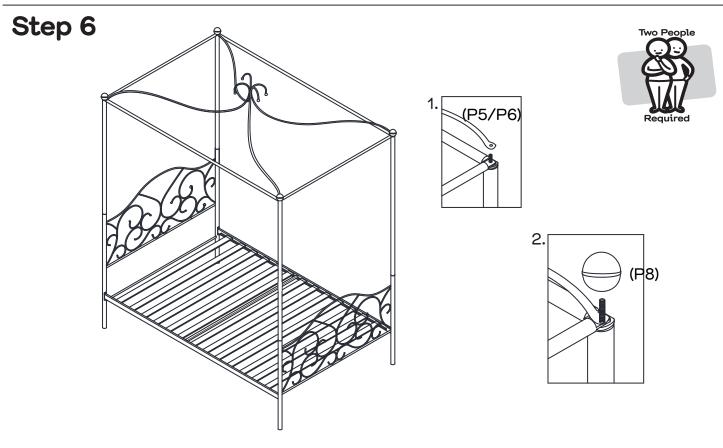


Carefully place the pre-assembled canopy top onto the exposed headless bolts on the cornerposts (P1 & P2).

Secure the canopy top to the cornerposts by screwing the 4 x finials (P8) onto the exposed headless bolts in the cornerposts until tight.



Step 7

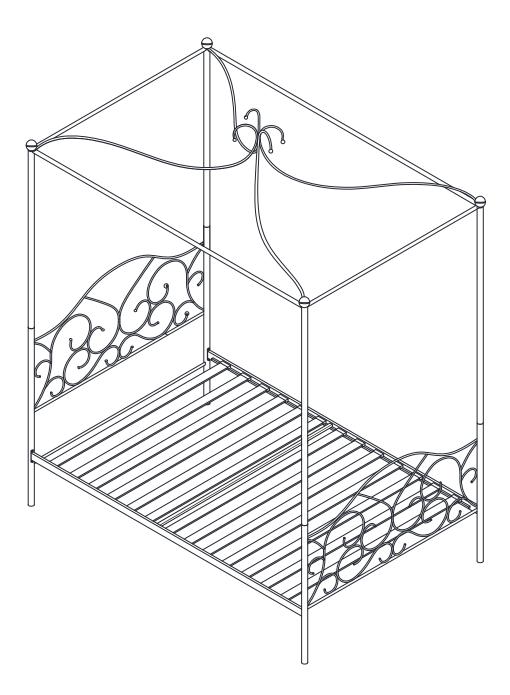

IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

# Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.





Version 1.0







# Look like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love!



# Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for your chance to win a \$250 Fantastic Furniture Gift Card! @fantasticfurniture



### Assembly checklist



Read through the instructions carefully before you begin.

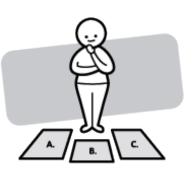



Make sure you have all the required tools. Never use power tools unless instructed.



before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

## **Useful Information**

! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.

The most common mistakes made during assembly are using the wrong hardware or getting components back to front.

! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.

! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.

! Never use any glue until you are certain that the parts belong together.

! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.


If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.

! Please see page 2 for any safety requirements or weight restrictions.



## What you need


to assemble the product

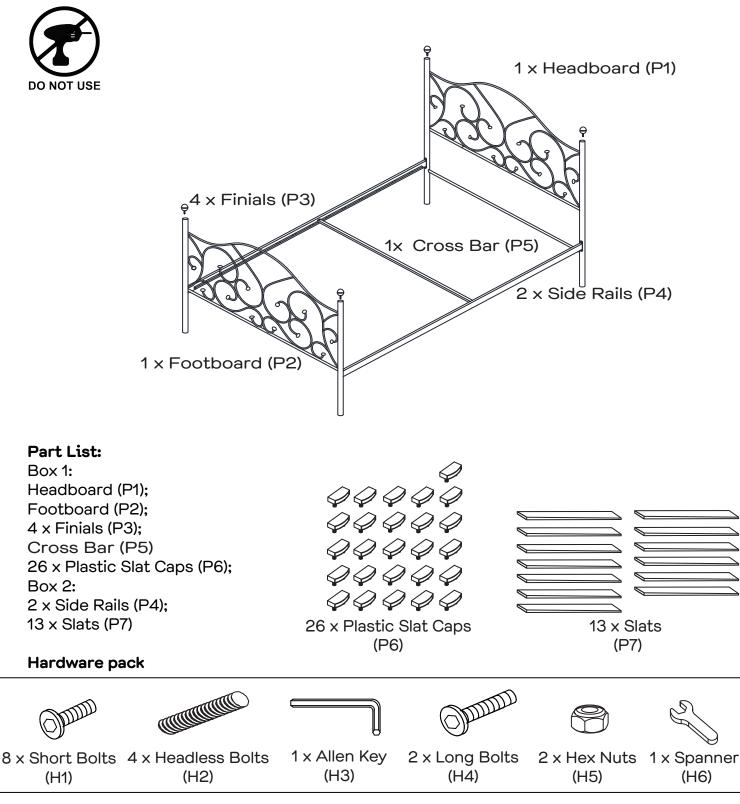


Please make sure you have all these parts before you start.



#### Step 1

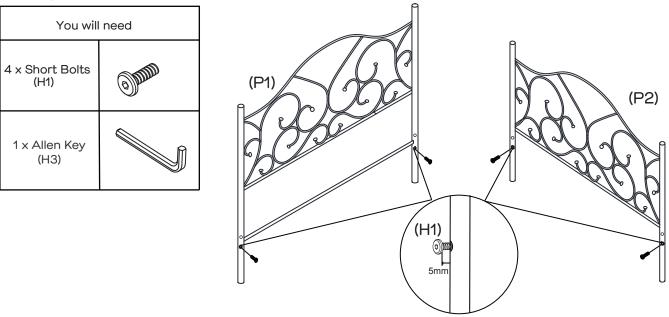

Insert 4  $\times$  short bolts (H1) into the bottom holes of the headboard (P1) and footboard (P2) using the allen key (H3). Do not fully tighten the bolts and leave a gap of 5mm as shown.

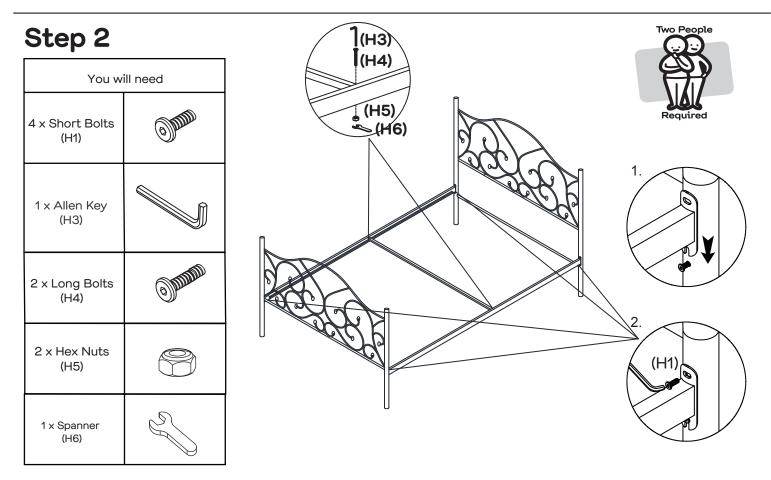


Attach the 2 x side rails (P4) to the headboard (P1) and footboard (P2). Slot the side rails onto the bolts as shown and insert 4 x short bolts (H1) into the top holes with the allen key (H3).


Attach the cross bar (P5) onto the 2 x side rails (P4) using  $2 \times 1000$  k (H4) and  $2 \times 1000$  k (H3).

Tighten with the allen key (H3) and spanner (H6) as shown. Now fully tighten all bolts.




### Step 3

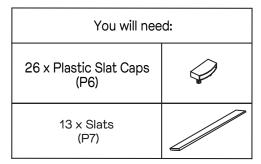

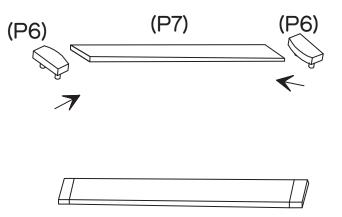

Push 26 x plastic slat caps (P6) firmly onto 13 x slats (P6).


#### Step 4

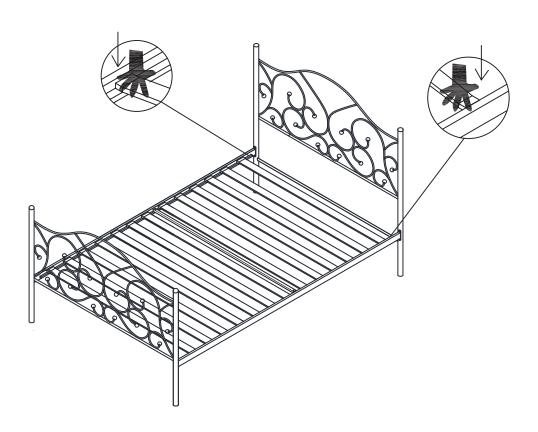


Lower the slat (P7) with the end connectors (P6) to the side rails (P4). Ensure the plastic slat caps are in place over the side rail holes and apply downward pressure until the plastic slat caps are fully inserted into the rails. Repeat for every bed slat until finished.





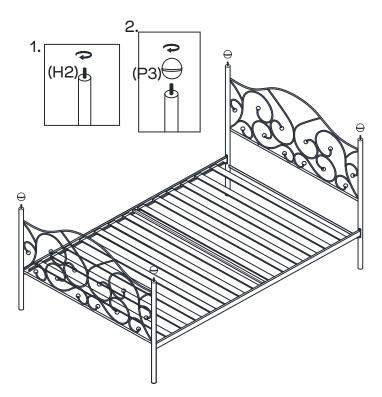

Screw 4 x headless bolts (H2) into the posts of the headboard (P1) and footboard (P2). Then attach the 4 x finials (P3) by rotating clockwise as shown.

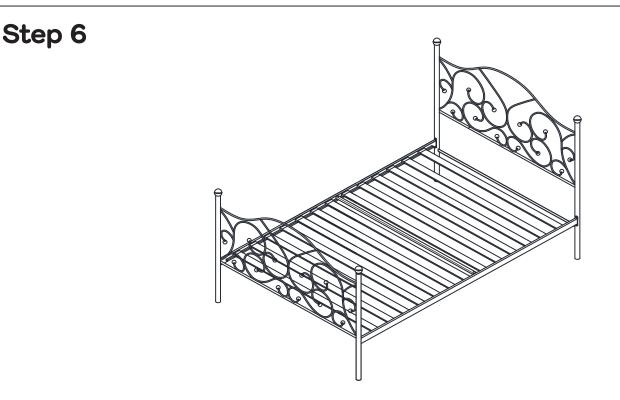

IMPORTANT: Fully tighten all bolts on bed. Periodically check to ensure all bolts remain tight.

# Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.

