




**Fantastic  
Furniture**

Version 1.0

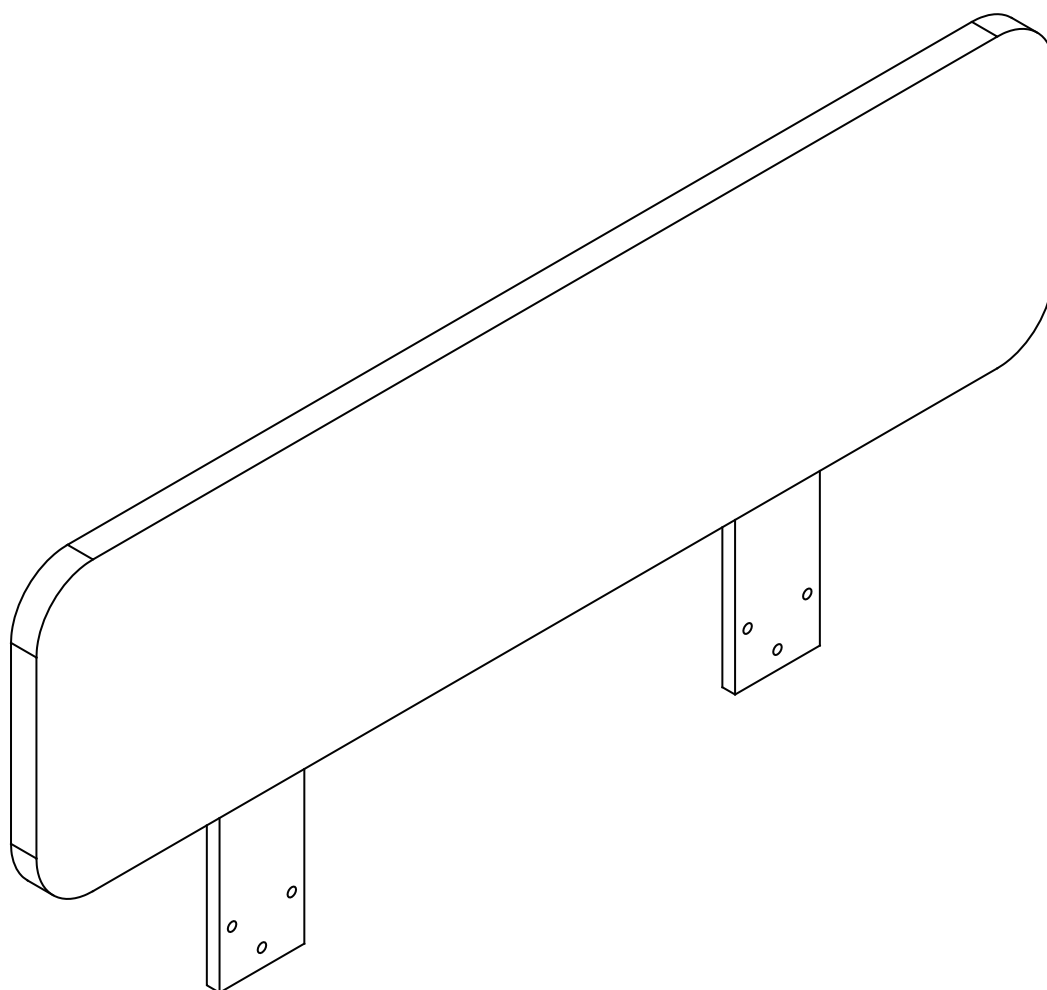

**Pod**  
Toddler Safety Rail

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)



**WARNING:**

Do not use the Pod Bed and Pod Toddler Safety Rail(s) together without having a mattress in the bed.

The mattress must have a height greater than 120mm and less than 250mm to be suitable for use with the Pod Toddler Safety Rail.

## Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



# Fantastic Furniture

### Love it? Share it!


Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!

**@fantasticfurniture**


# Assembly Checklist




Read through the instructions carefully before you begin.

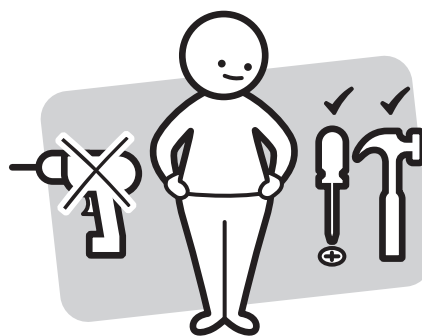

Make sure you have all the required tools. Never use power tools unless instructed.

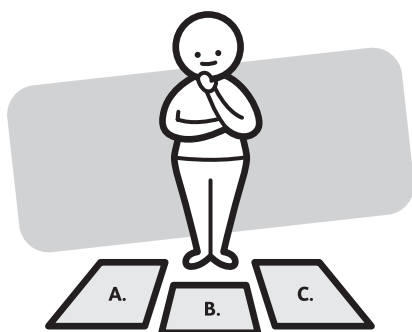

Identify and lay out all of the components before you begin assembly.

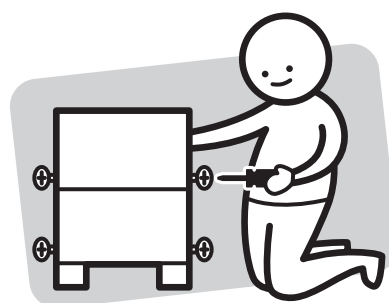

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need

to assemble the product



DO NOT USE

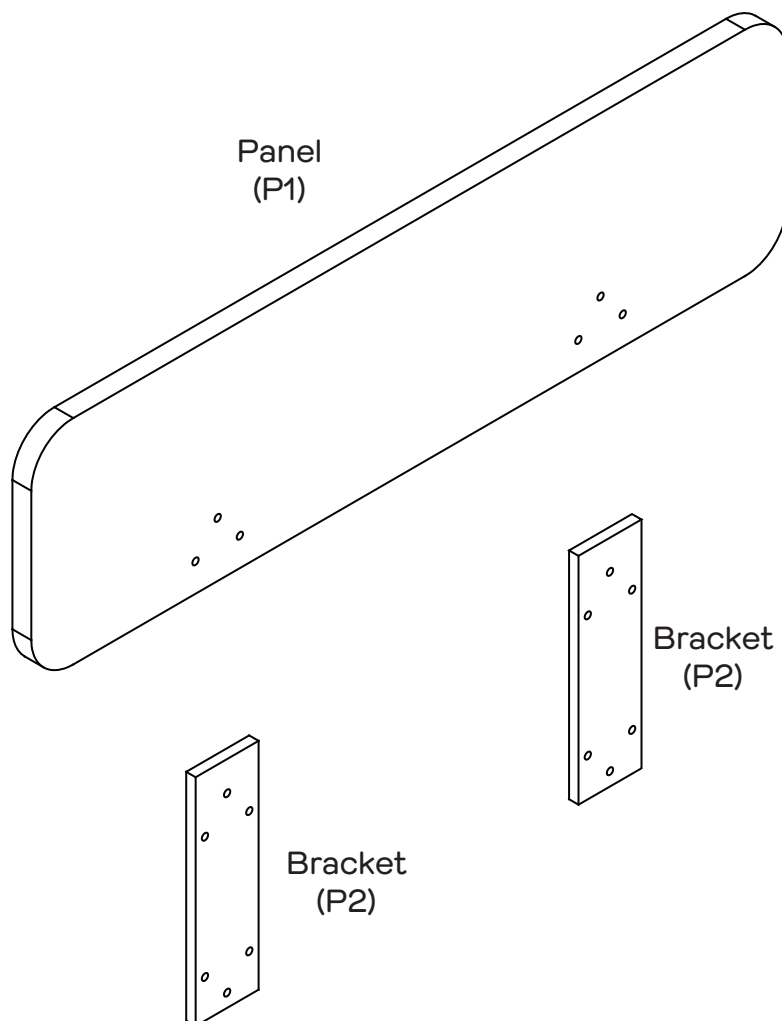

## Parts list

Panel (P1);  
2 x Brackets (P2);

## Hardware pack





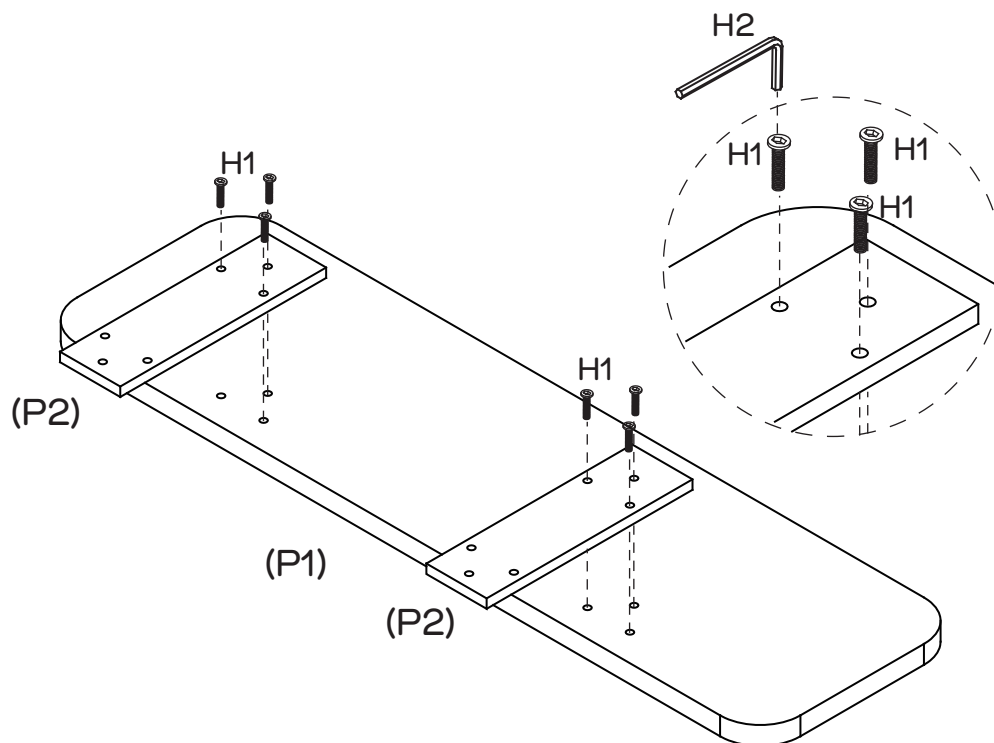
12 x Bolts  
(H1)



1 x Allen Key  
(H2)



## Step 1


You will need	
	
6 x Bolts (H1)	1 x Allen Key (H2)



Attach 2 x Brackets (P2) to Panel (P1) with 6 x Bolts (H1) by tightening with 1 x Allen Key (H2).

## Step 2


You will need	
	
6 x Bolts (H1)	1 x Allen Key (H2)

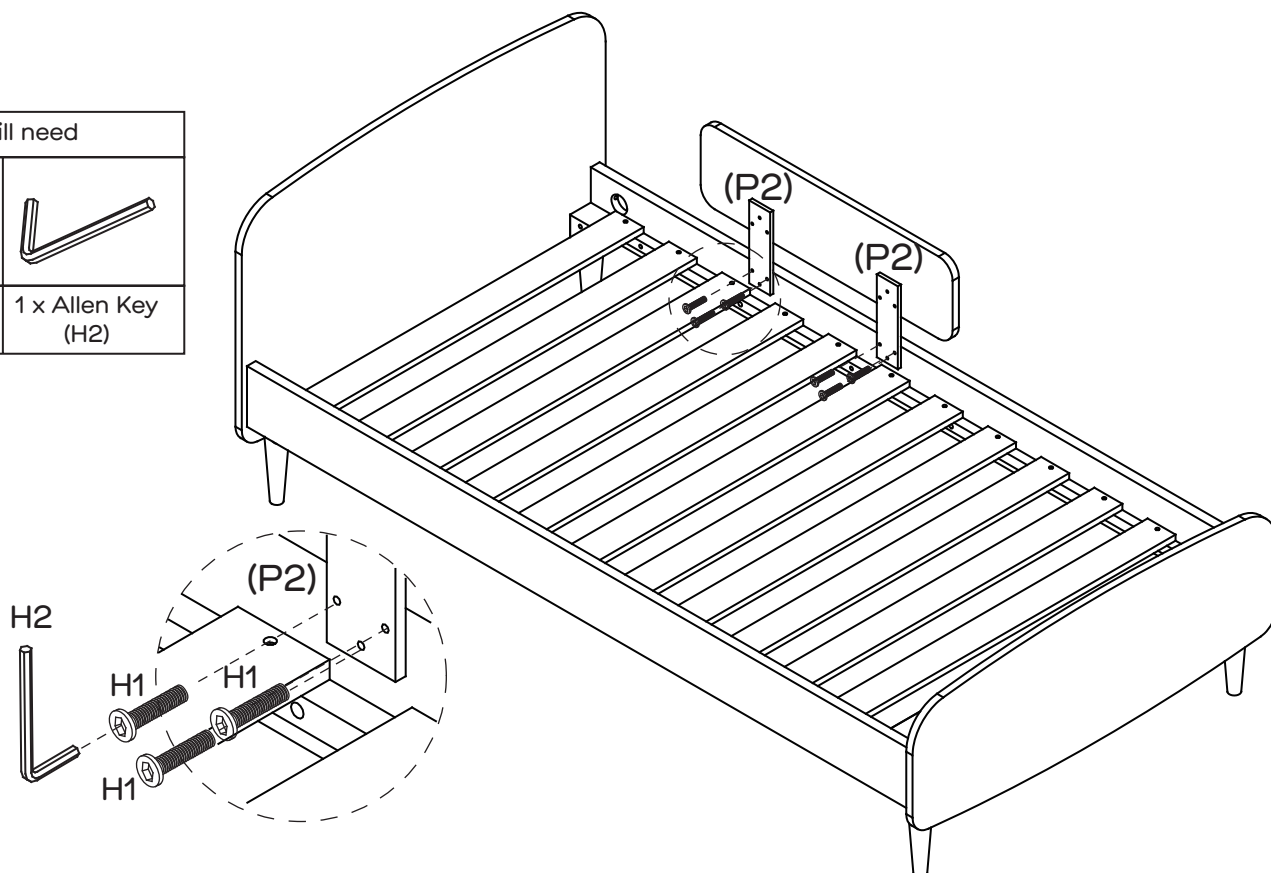

Attach 2 x Brackets (P2) to either the Right Side Rail (P4) or Left Side Rail (P3) of Pod Bed Single with 6 x Bolts (H1) by tightening with 1 x Allen Key (H2).

## Step 3

**Install an appropriate mattress (not included) in the Pod Single Bed before using the bed with the Toddler Safety Rail.**

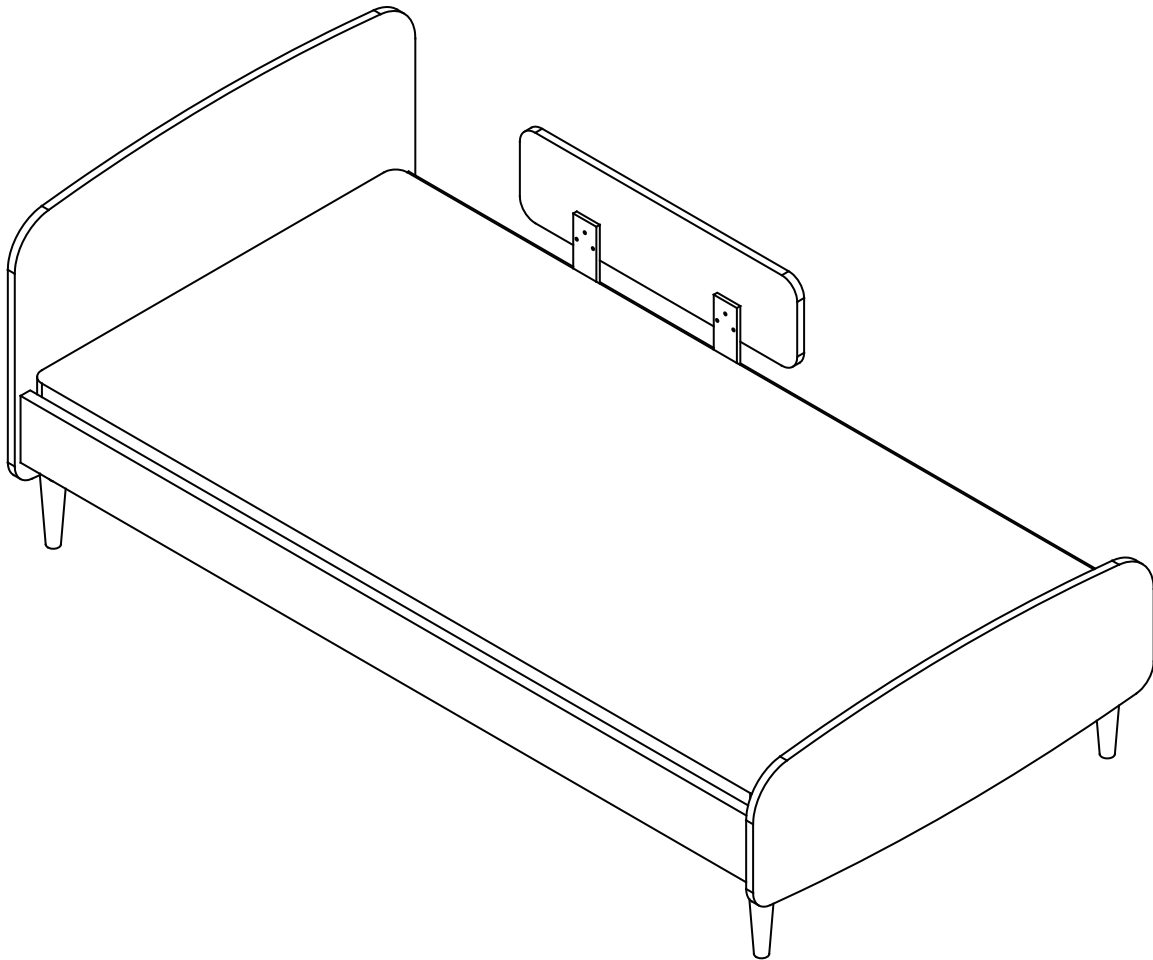


## Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.



**Fantastic  
Furniture**

Version 1.0

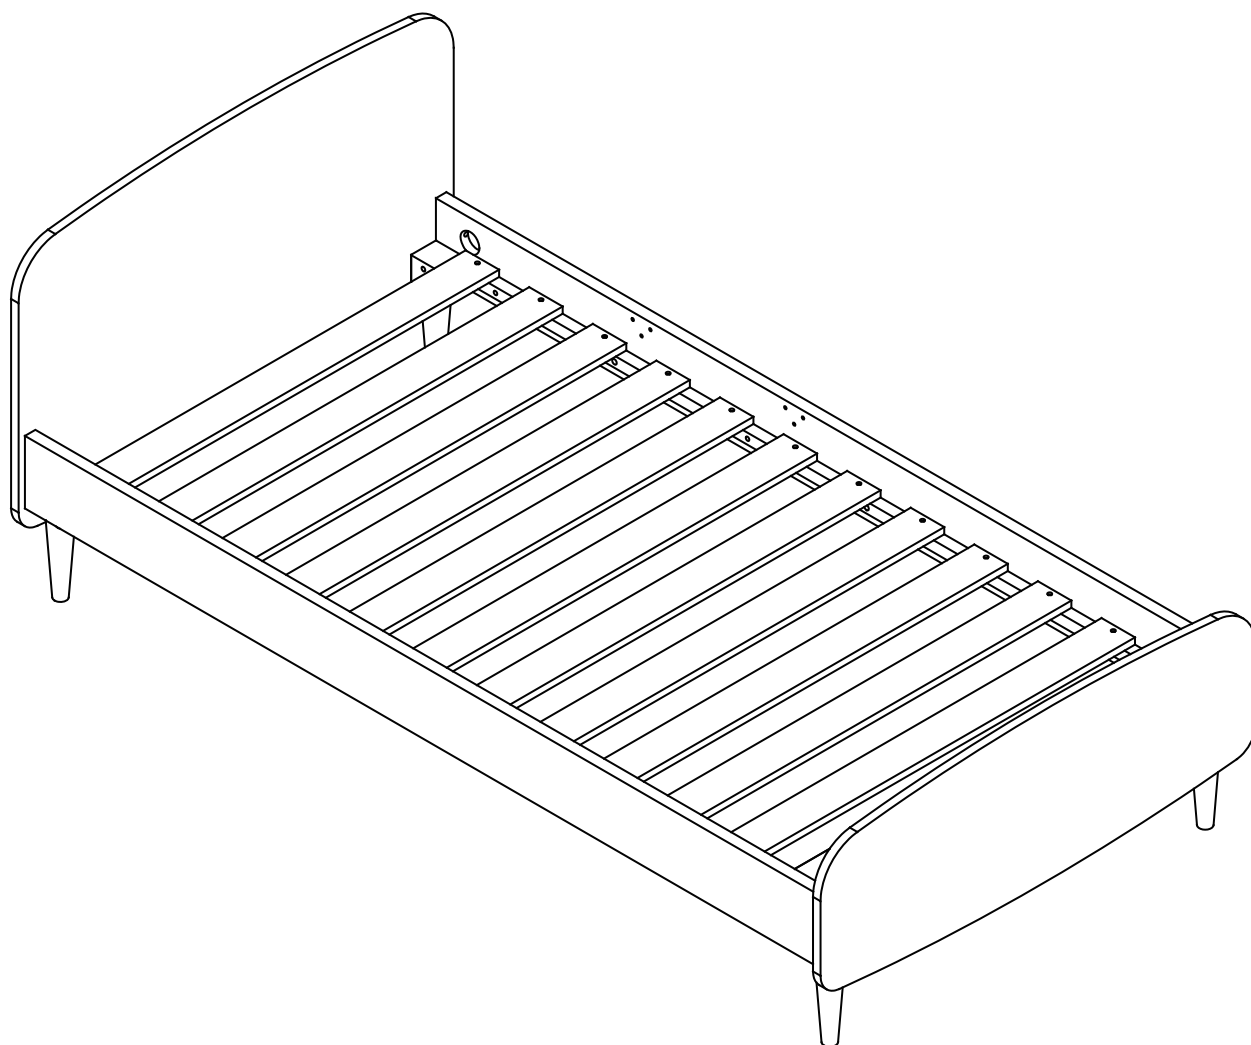

**Two People**



**Required**

**Pod**  
Bed Single

[fantasticfurniture.com.au](http://fantasticfurniture.com.au)

# Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture  
to help create a home you'll love!



## Fantastic Furniture

### Love it? Share it!

Fantastic buy! Share how it looks at home on Instagram for  
your chance to win a \$250 Fantastic Furniture Gift Card!


**@fantasticfurniture**




# Assembly Checklist




Read through the instructions carefully before you begin.

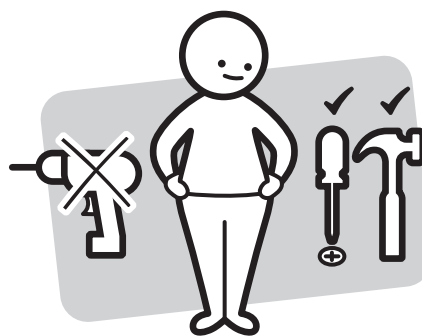

Make sure you have all the required tools. Never use power tools unless instructed.

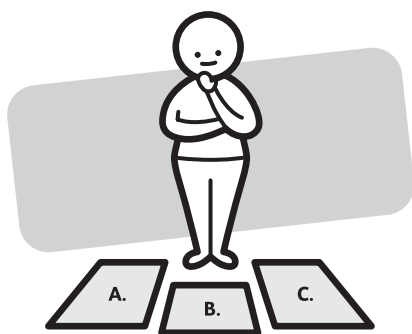

Identify and lay out all of the components before you begin assembly.

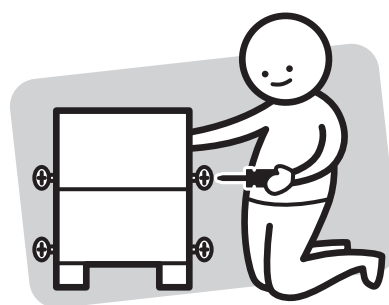

Unless instructed, do not fully tighten screws until the item is fully assembled.

## Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

# What you need

## to assemble the product




DO NOT USE




Headboard  
(P1)

**Other tools you need:**  
Phillips head screwdriver;  
Hammer

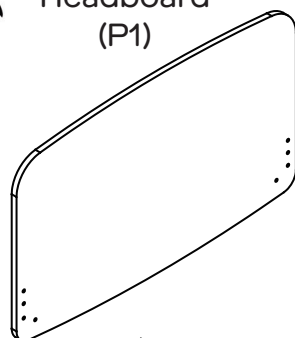


Leg  
(P5)

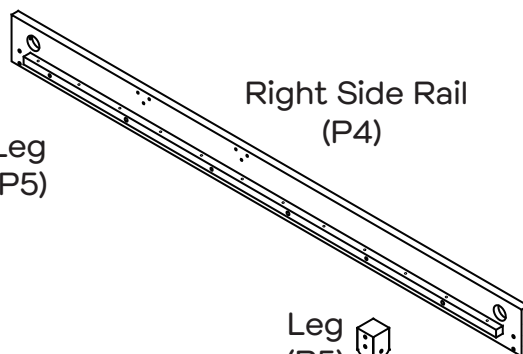

Right Side Rail  
(P4)



Leg  
(P5)

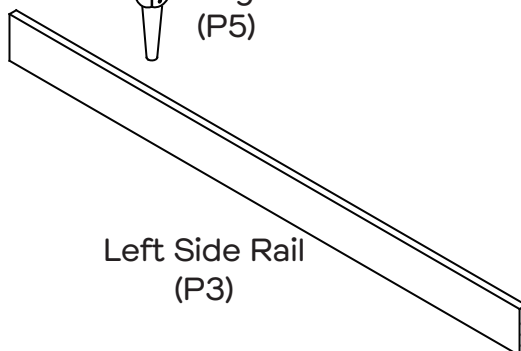


Left Side Rail  
(P3)

Leg  
(P5)



Leg  
(P5)

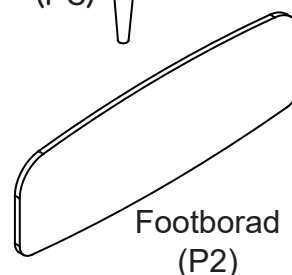


Footboard  
(P2)

### Parts list

Headboard (P1);  
Footboard (P2);  
Left Side Rail (P3);  
Right Side Rail (P4);  
4 x Legs (P5);  
12 x Slats (P6)

Slats  
(P6)

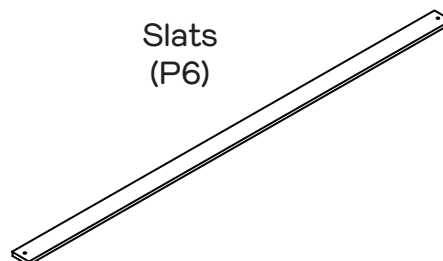


### Hardware pack



24 x Screws  
(H1)



8 x Dowels  
(H2)



12 x Long Bolts  
(H3)



4 x Hexagonal  
Nuts  
(H4)



4 x Half Moon  
Nuts  
(H5)



4 x Headless Bolts  
(H6)



1 x Allen Key  
(H7)










1 x Spanner  
(H8)



4 x Plastic  
Glides (H9)





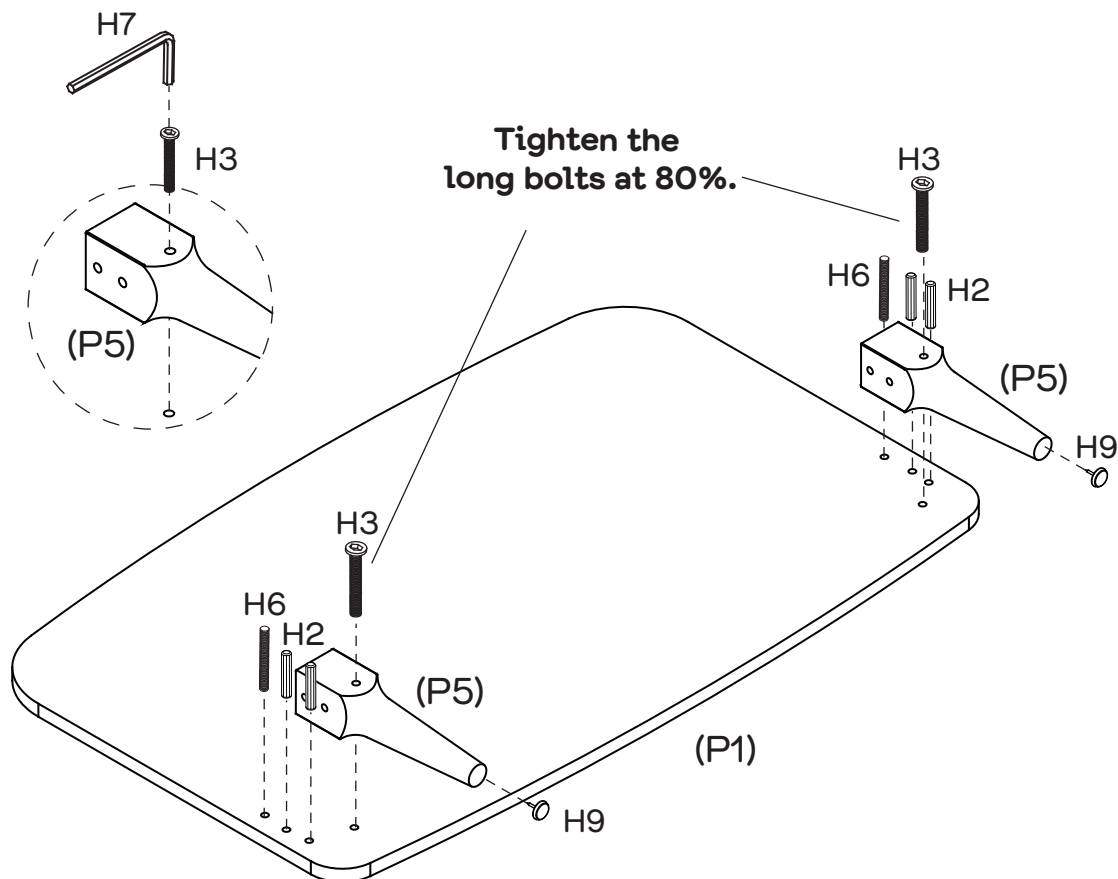

## Step 1


You will need	
	
4 x Dowels (H2)	2 x Long Bolts (H3)
	
2 x Headless Bolts (H6)	1 x Allen Key (H7)
	
2 x Plastic Glides (H9)	Hammer



Attach 2 x Plastic Glides (H9) to Legs (P5) with the Hammer. Insert 4 x Dowels (H2) into the Headboard (P1). Attach 2 x Headless Bolts (H6) into the Headboard (P1) by rotating clockwise. Attach 2 x Legs (P5) to the Headboard (P1) with 2 x Long Bolts (H3) by tightening at 80 percent with an Allen Key (H7), keep a little loose on this step.




## Step 2

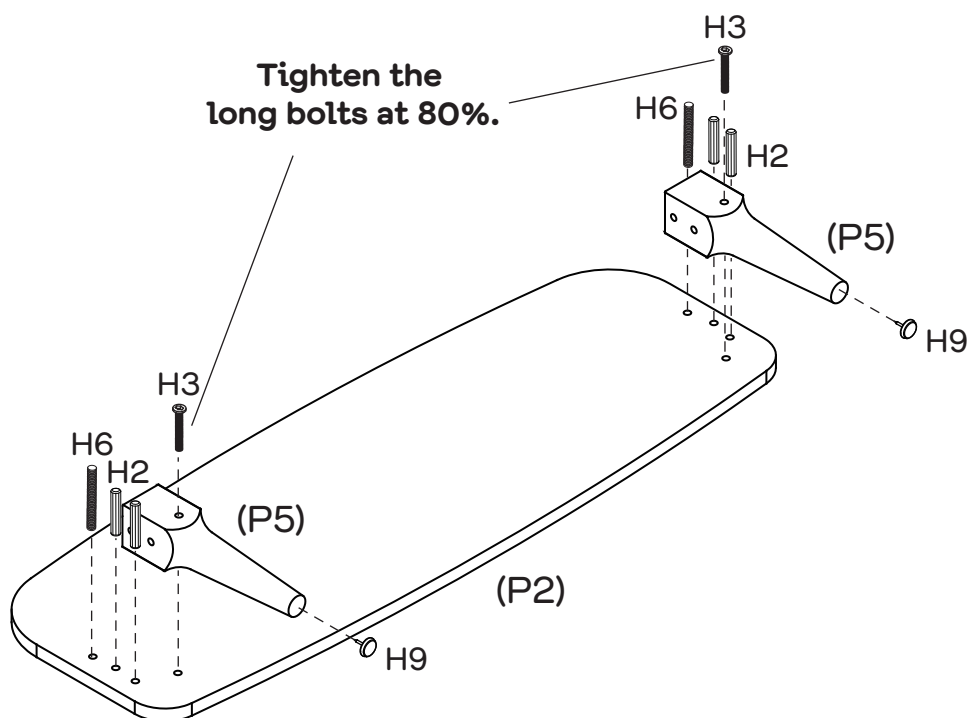You will need	
	
4 x Dowels (H2)	2 x Long Bolts (H3)
	
2 x Headless Bolts (H6)	1 x Allen Key (H7)
	
2 x Plastic Glides (H9)	Hammer



Attach 2 x Plastic Glides (H9) to Legs (P5) with the Hammer. Insert 4 x Dowels (H2) into the Footboard (P2). Attach 2 x Headless Bolts (H6) into the Footboard (P2) by rotating clockwise. Attach 2 x Legs (P5) to the Footboard (P2) with 2 x Long Bolts (H3) by tightening at 80 percent with an Allen Key (H7), keep a little loose on this step.


## Step 3

You will need	
	
2 x Hexagonal Nuts (H4)	2 x Half Moon Nuts (H5)
	
1 x Spanner (H8)	

Two People





Required

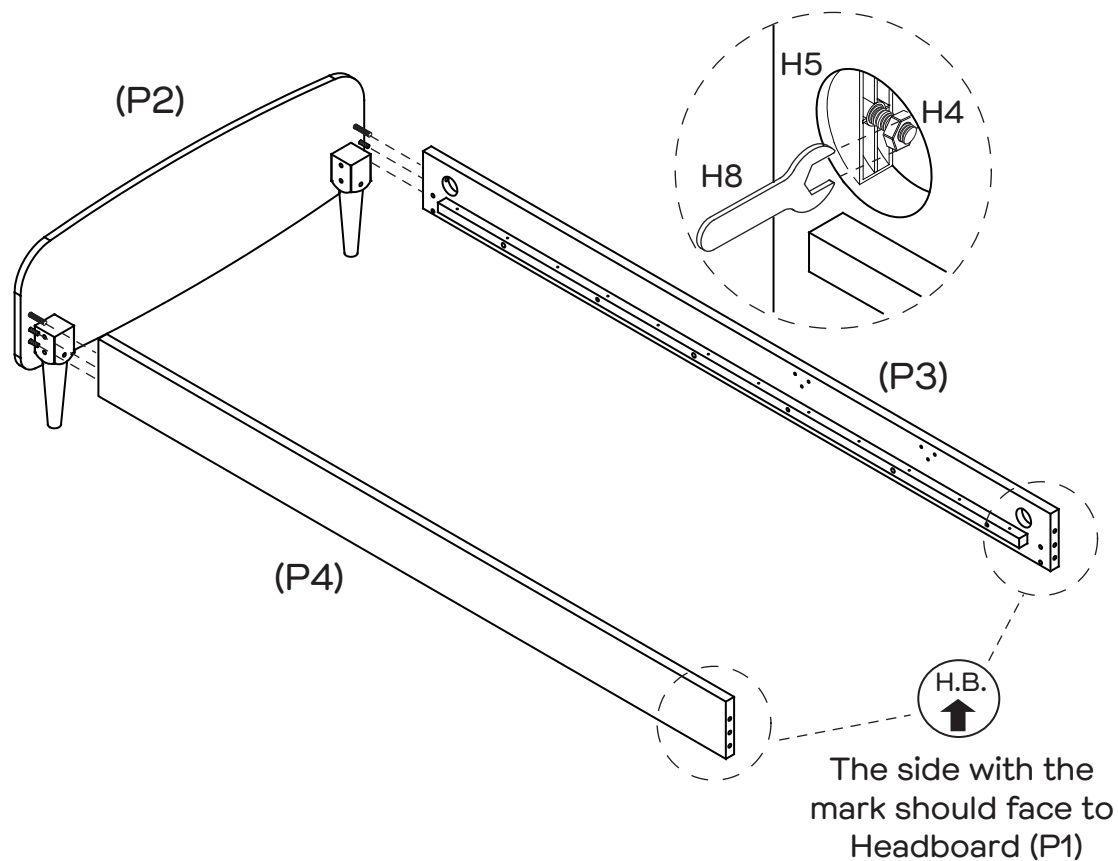

Attach the Footboard (P2) to the Left Side Rail (P3) with 1 x Half Moon Nut (H5) and 1 x Hexagonal Nut (H4) using a Spanner (H8) as shown. Repeat this process for the Right Side Rail (P4).


## Step 4

You will need	
	
4 x Long Bolts (H3)	1 x Allen Key (H7)

Two People



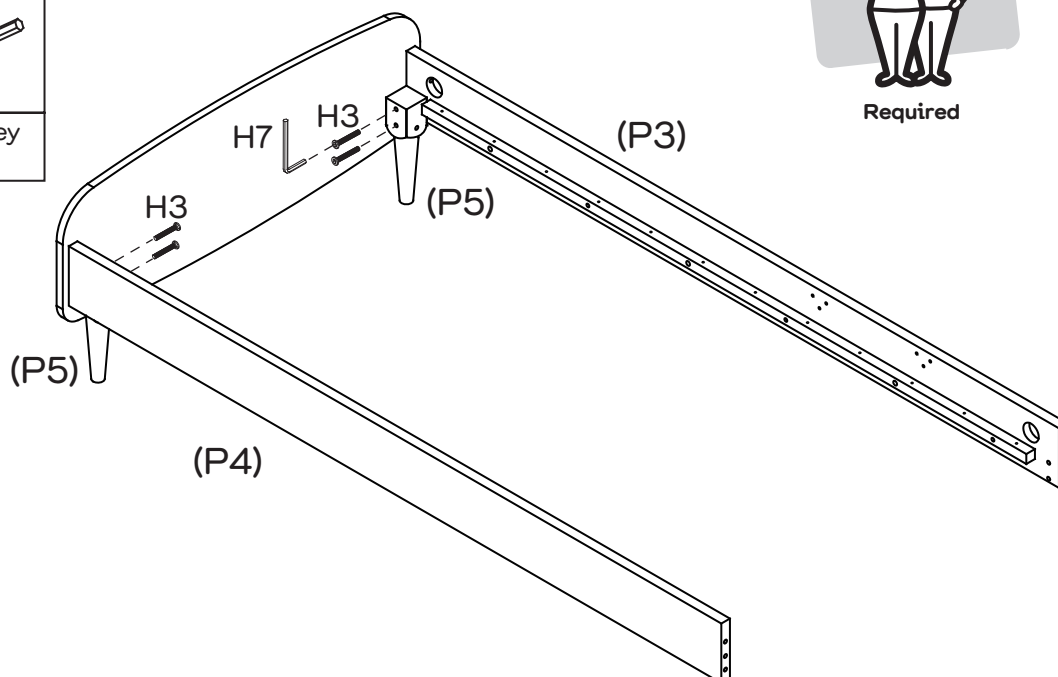


Required



Attach 2 x Legs (P5) to the Left and Right Side Rails (P3 & P4) with 4 x Long Bolts (H3) by tightening at 80 percent with an Allen Key (H7), keep a little loose on this step.


## Step 5

You will need	
	
2 x Hexagonal Nuts (H4)	2 x Half Moon Nuts (H5)
	
1 x Spanner (H8)	

Two People





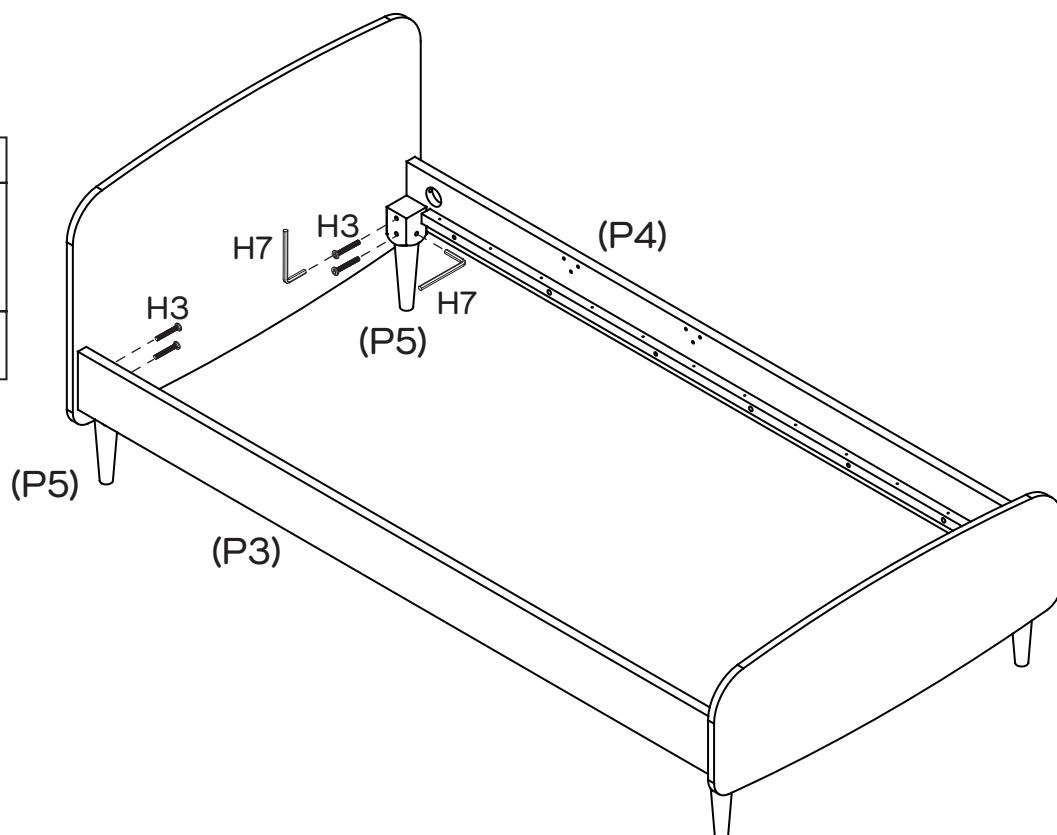
Required

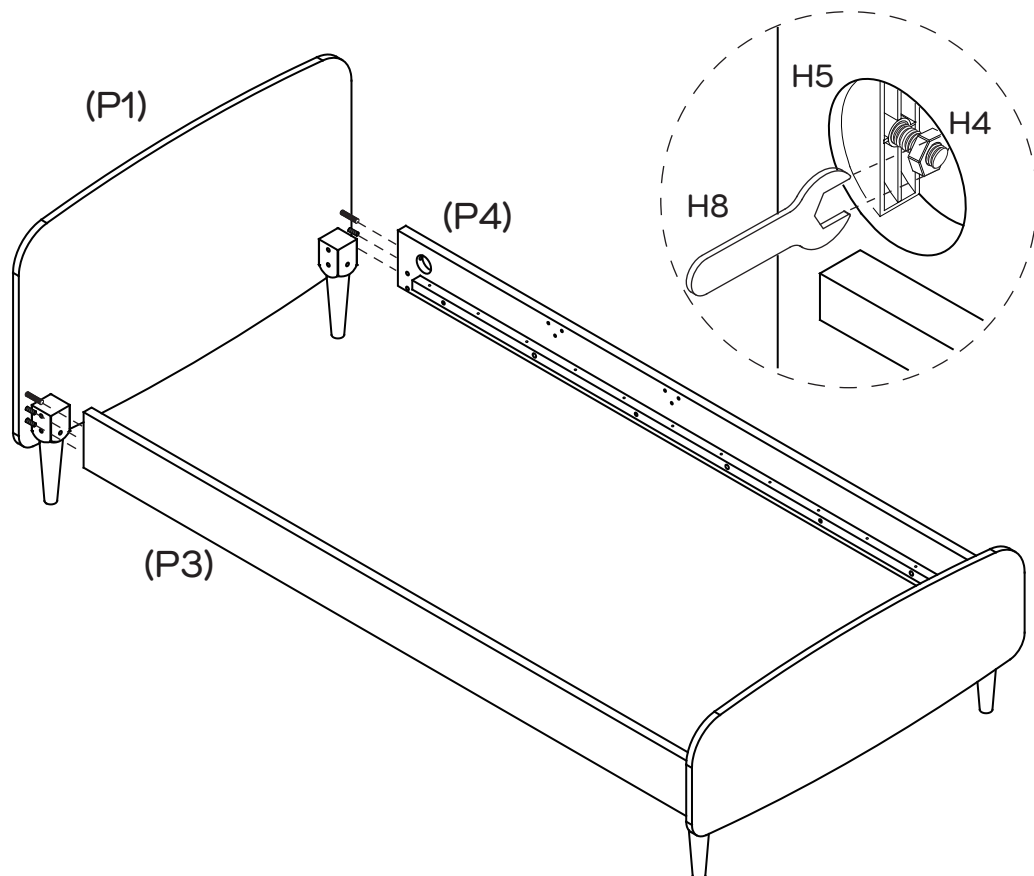

Attach the Headboard (P1) to the Left and Right Side Rails (P3 & P4) with 2 x Half Moon Nuts (H5), and 2 x Hexagonal Nuts (H4) using a Spanner (H8).



## Step 6


You will need	
	
4 x Long Bolts (H3)	1 x Allen Key (H7)




Attach 2 x Legs (P5) to the Left and Right Side Rails (P3 & P4) with 4 x Long Bolts (H3) by tightening with an Allen Key (H7). Make sure the inner space of the bed is square. Ensure to fully tighten all bolts (H3) for attaching legs (P5) with the Allen Key (H7).

## Step 7

You will need	
	
24 x Screws (H1)	Phillips head screwdriver

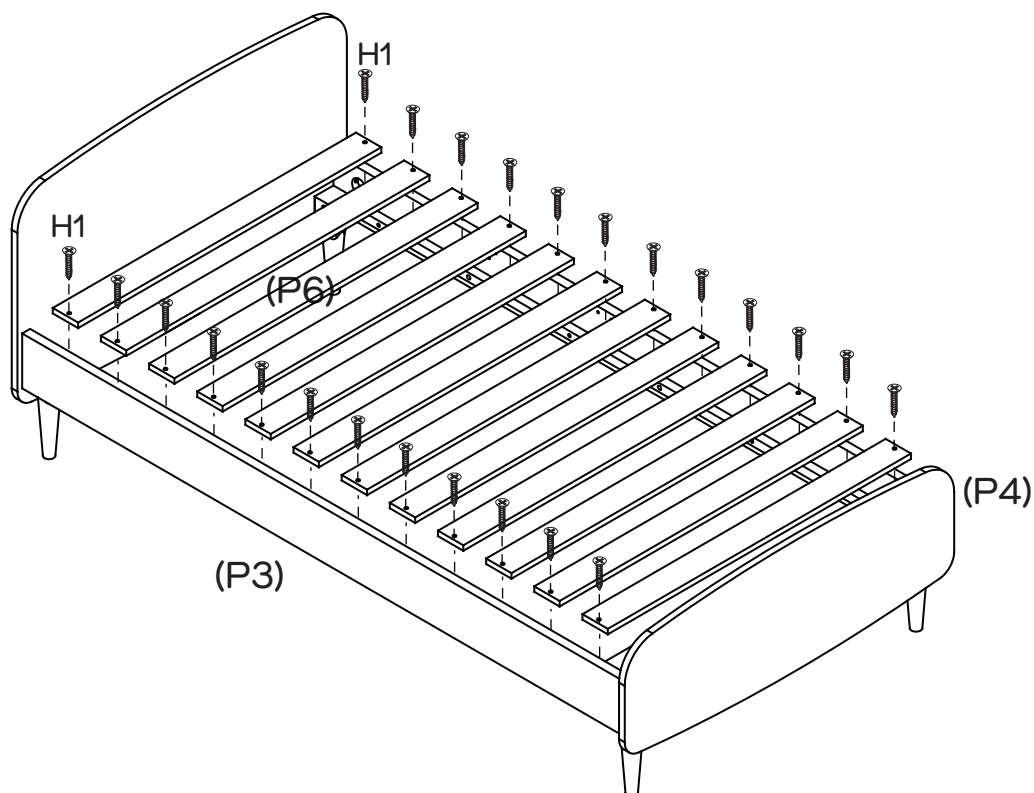

Attach 12 x Slats (P6) to the Side Rails (P3 & P4) with 24 x Screws (H1) and tighten with a Phillips head screwdriver.

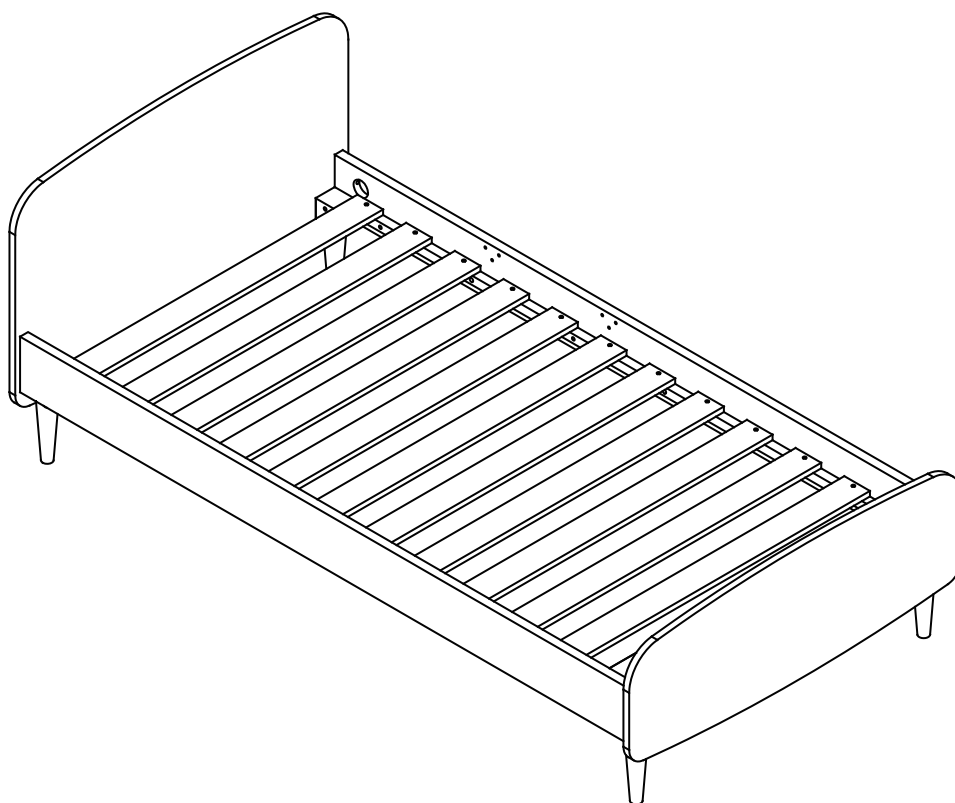

## Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.