



Assembly Instructions

WILLOW BED DOUBLE

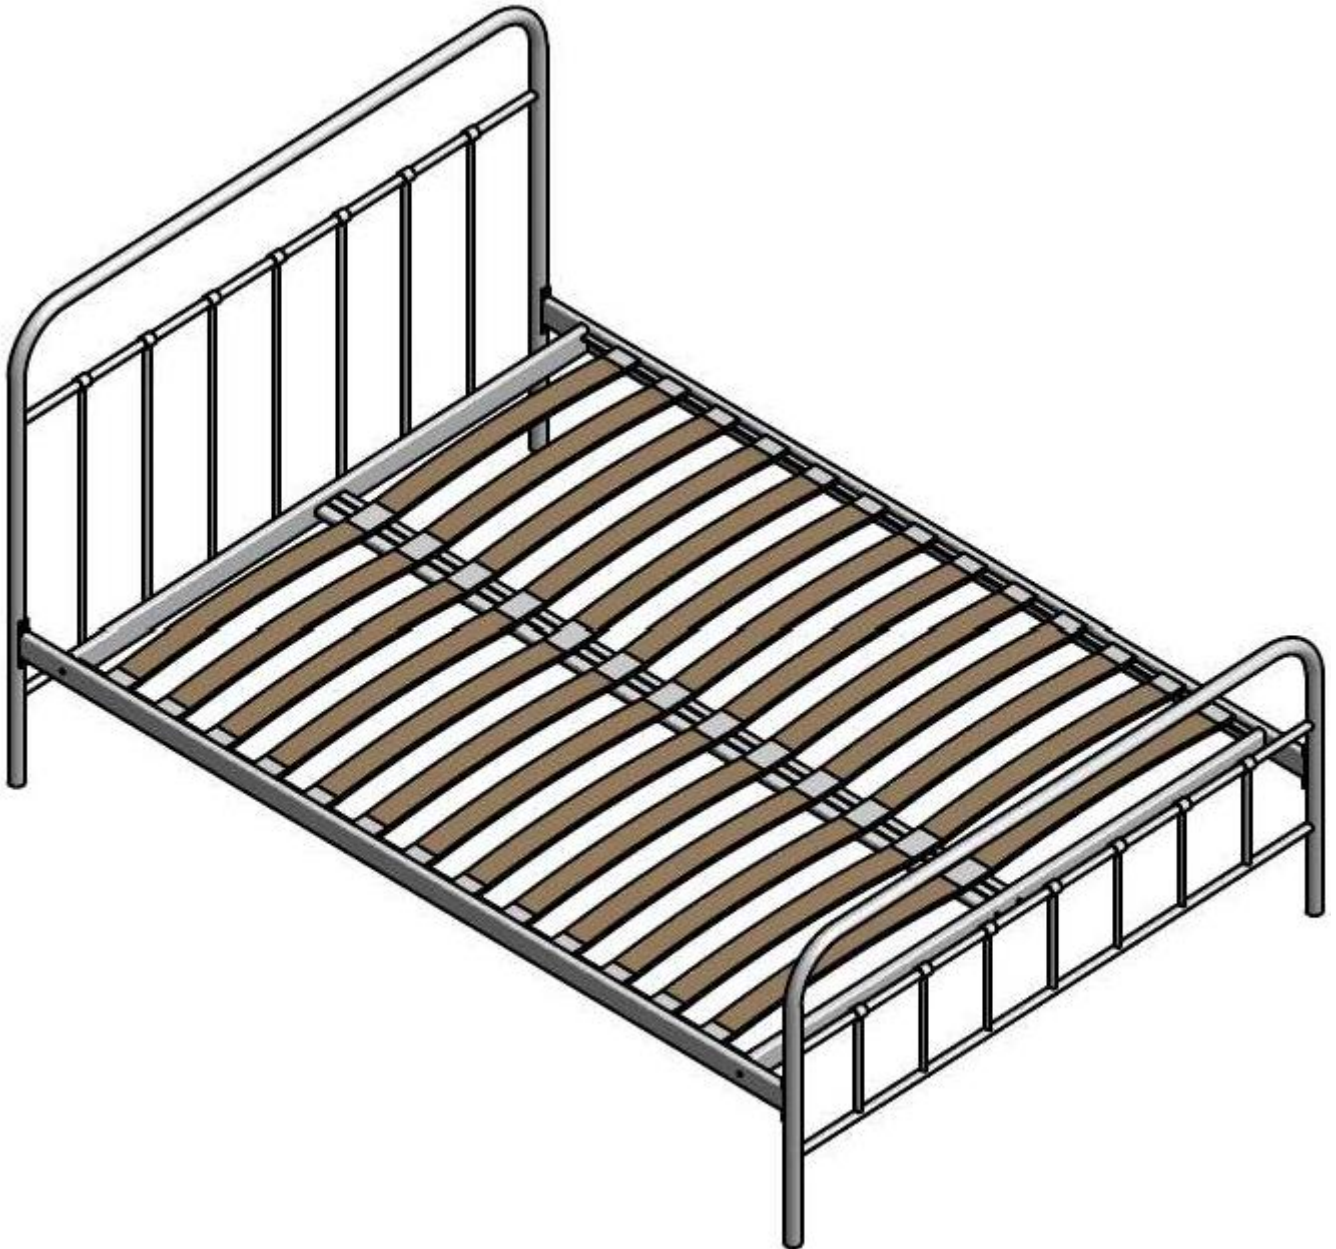


WHAT YOU NEED


To assemble the body

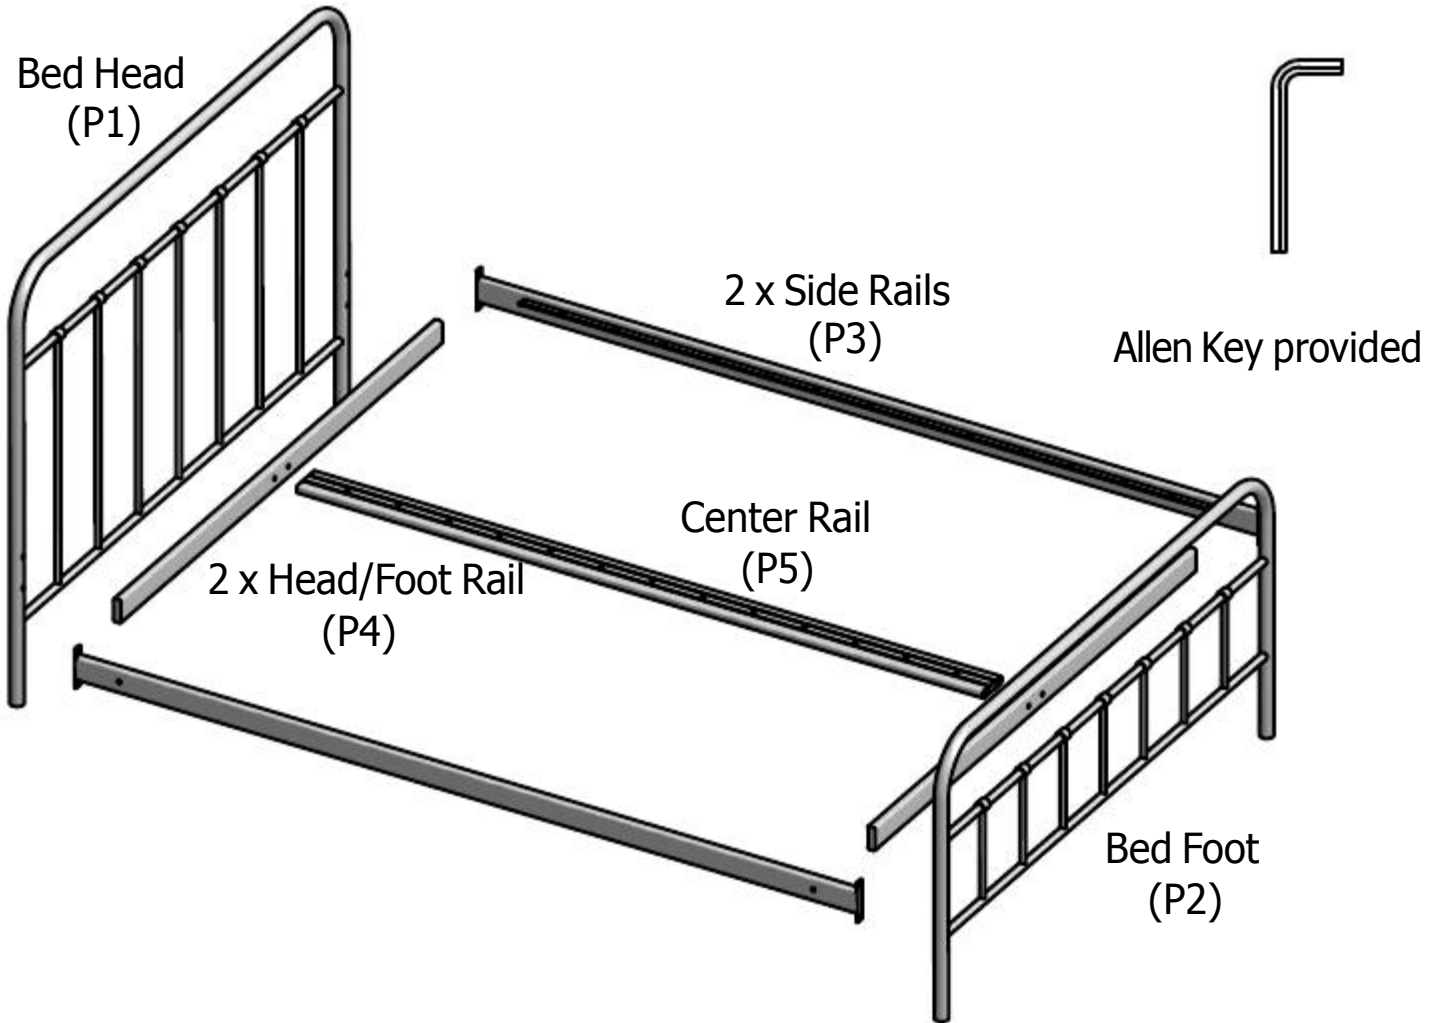

13 x Long Plastic Connectors (P7)

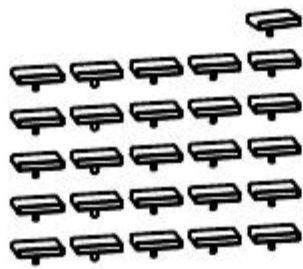

26 x Short Plastic Connectors (P6)

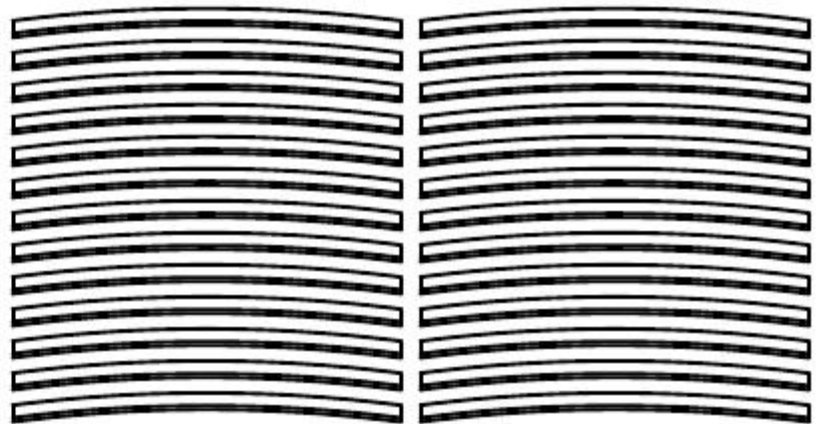

26 x Fantastic Furniture ComfortSlats (P8)



8 x Long Bolts (H1)




4 x Nylon nut (H2)



8 x Short Bolts (H3)

Please make sure you have all these parts before you start.

Step 1

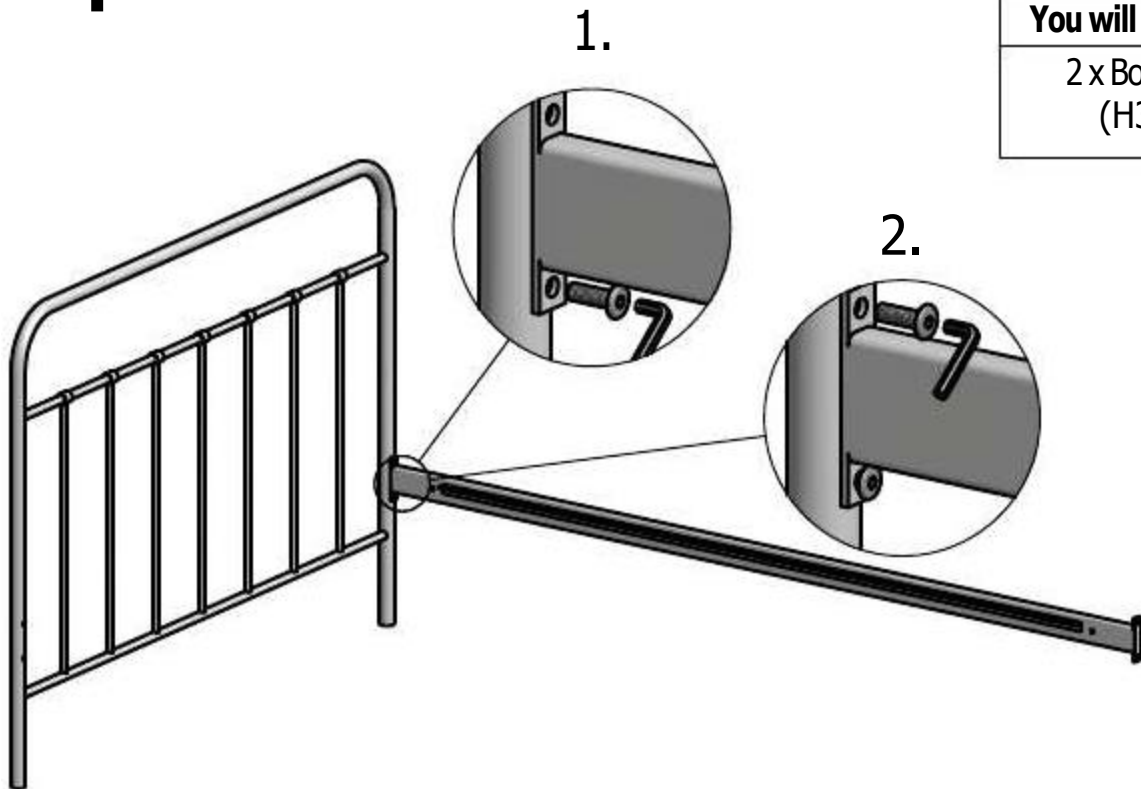


You will need	
2 x BoltS (H3)	



1 x Allen key

Attach one Side Rail (P3) to the Bed Head (P1) with Bolts (H1). Do not fully tighten Bolts

Step 2

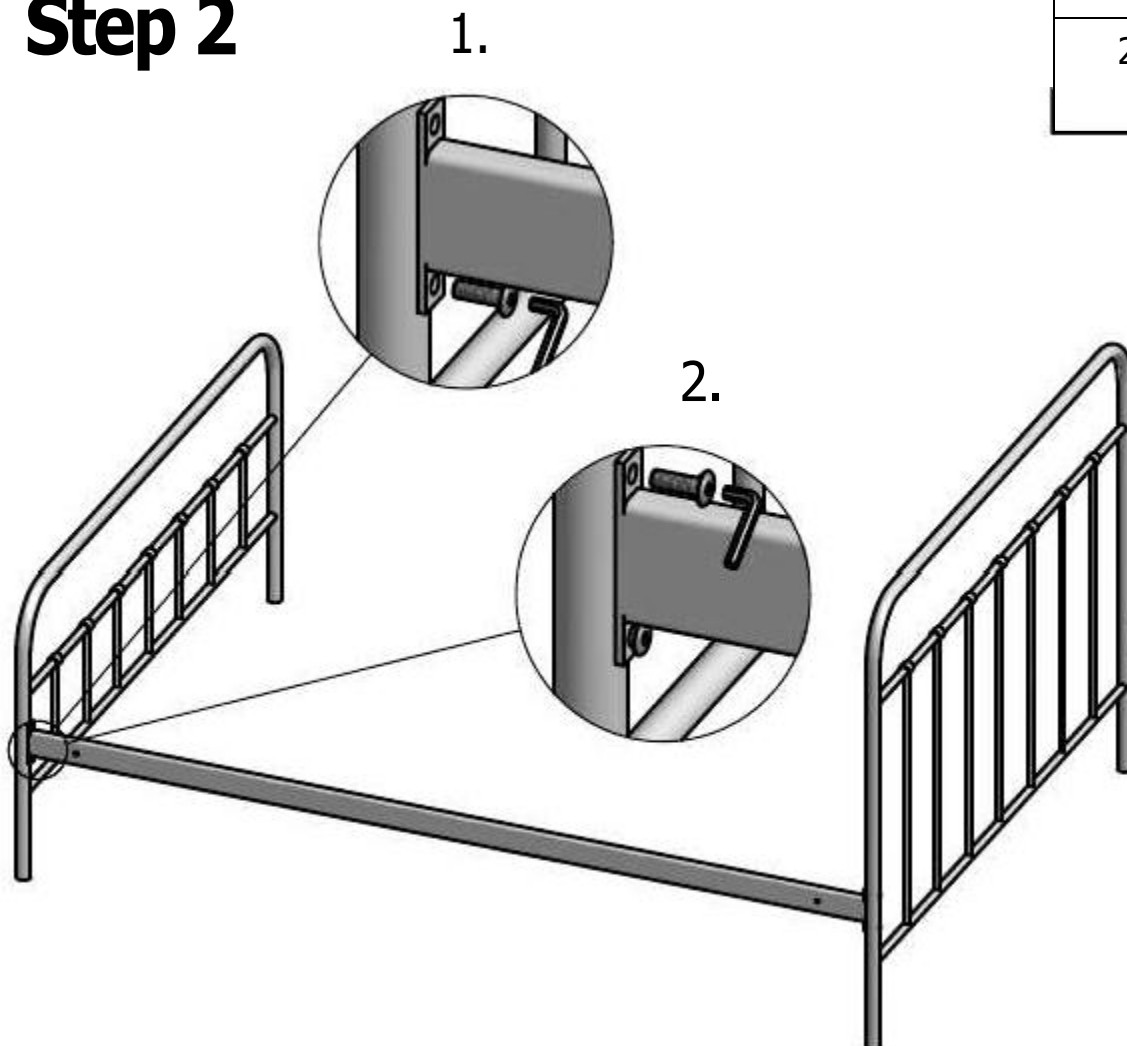


You will need	
2 x Bolts (H3)	




1 x Allen key

Attach one Side Rail (P3) to the Bed/Foot (P2) with Bolts (H3). Leave bolt loose.


Step 3


You will need	
4 x Bolts (H3)	

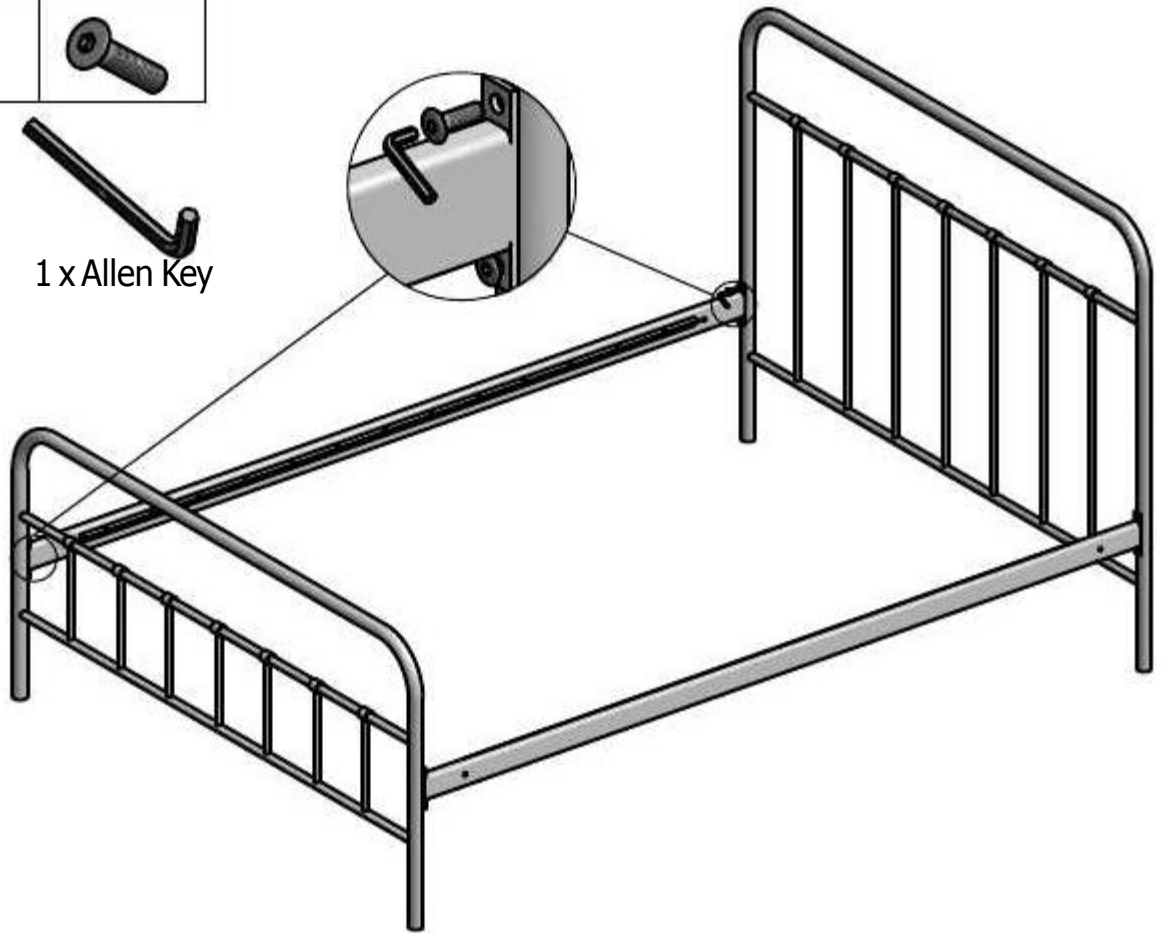

Attach the other Side Rail (P3) to the Bed Head and Bed/Foot with 4 x Bolts (H3) in the upper holes. Leave bolts loose



Step 4

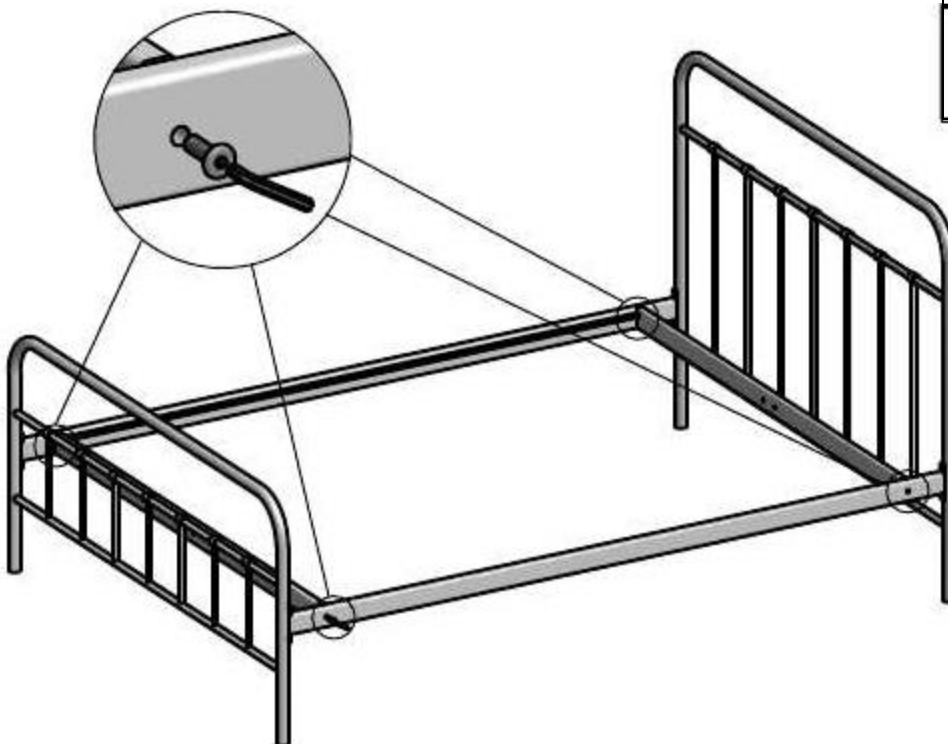
You will need	
4 x Bolts (H1)	



Attach two Head/Foot Rail (P4) to the Side Rail (P3) with 4 x Bolts (H1) in the upper holes. Leave bolts loose


Step 5

You will need	
4 x Bolts (H1)	
4 x Nylon nut (H2)	

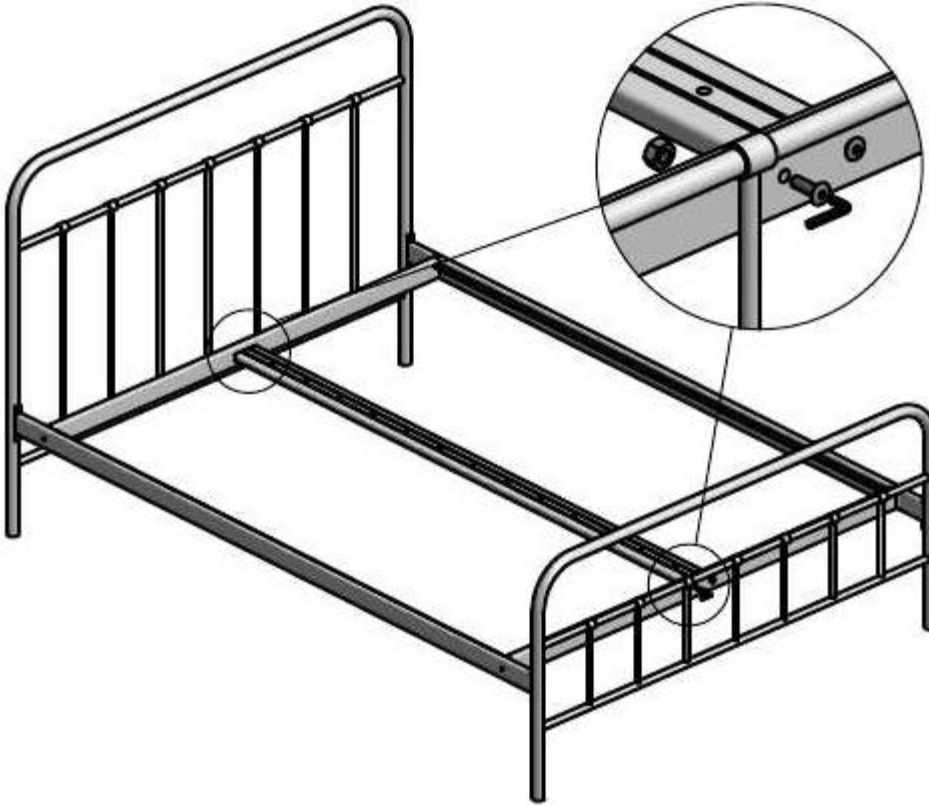

Attach the Center Rail (P5) to the Head/Foot Rail (P4) with 4 x Bolts (H1) and 4 x Nylon nut (H2) in the upper holes. Leave bolts loose


Step 6

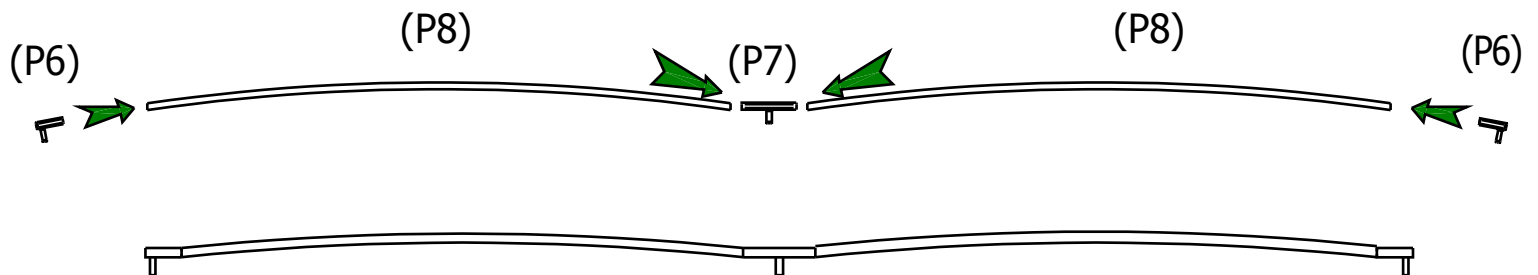

YOU WILL NEED	
26 X Short Plastic Connectors (P6)	
13 X Long Plastic Connectors (P7)	
26 x Fantastic Furniture ComfortSlats (P8)	


Push 26 x Short Plastic Connectors (P6) firmly onto 26 x Fantastic Furniture ComfortSlats (P8) . Then push 26 x Fantastic Furniture ComfortSlats (P8) firmly onto 13 x Long Plastic Connectors (P7)

Step 7a

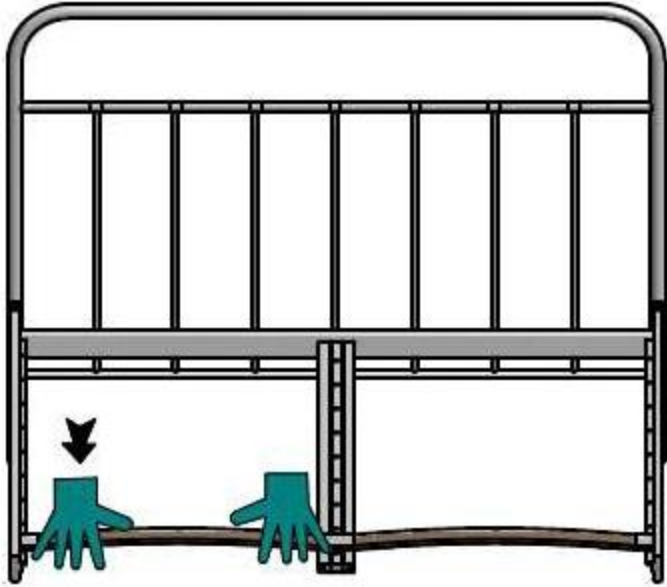


Place the slat in position then push down on the centre of the slat to flatten out the slat. Make sure the plastic prong lines up with the hole. Then push firmly

Step 7b

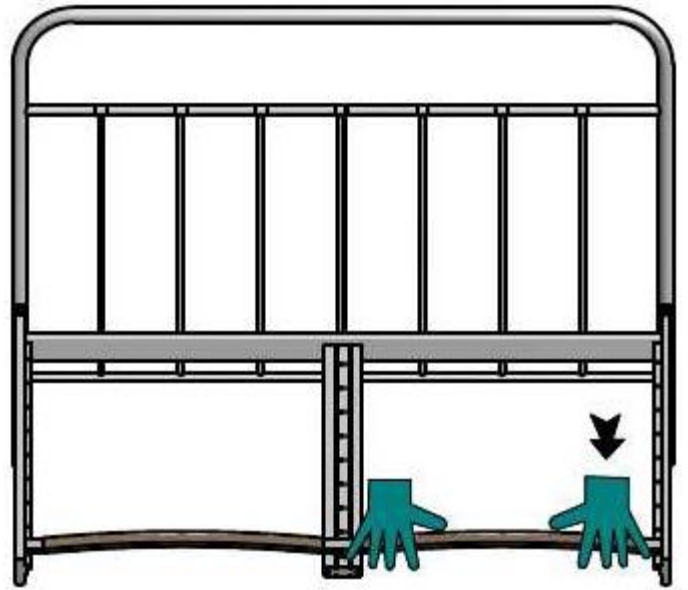


Repeat the same process for the other end of the slat

Step 7c

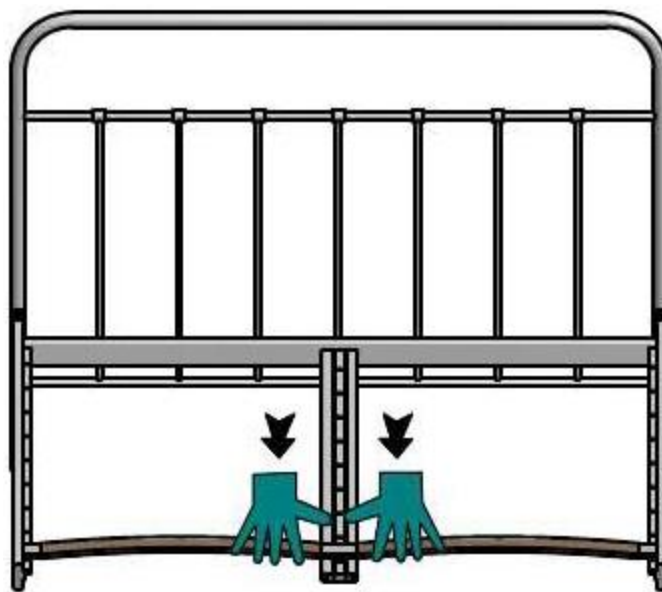


Then push down on the centre of the Long Plastic Connectors

Step 8

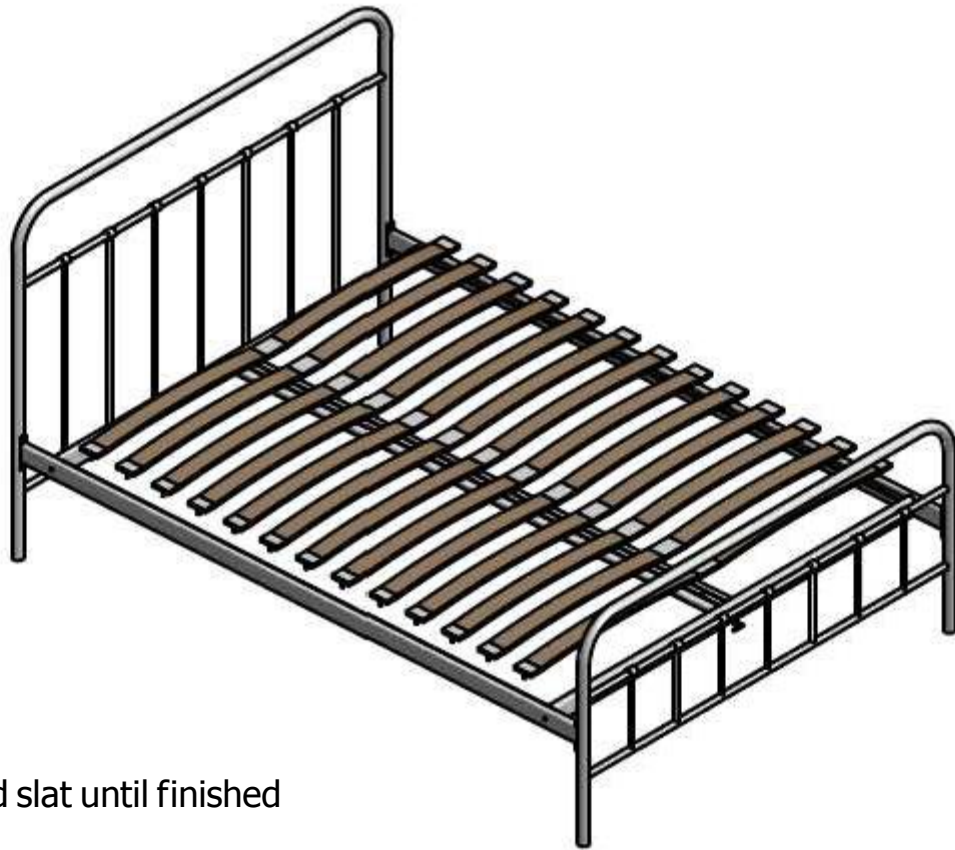

Repeat for every bed slat until finished

Step 9

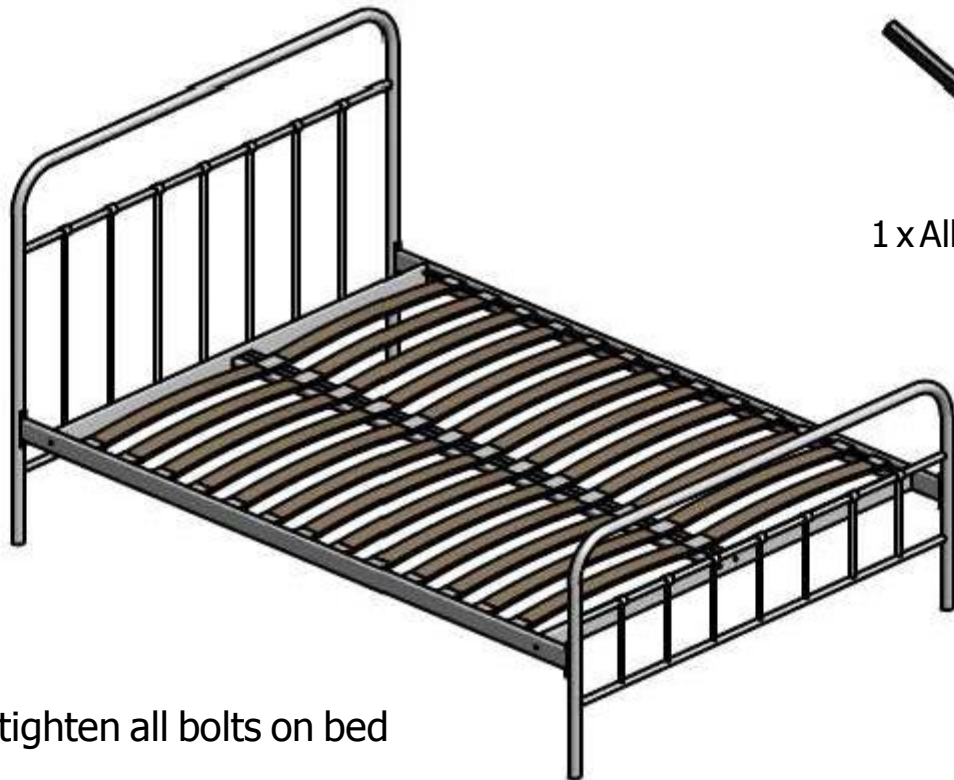

1 x Allen Key

IMPORTANT : Fully tighten all bolts on bed

The job is now complete !

In the interest of our environment
Please dispose of all packaging thoughtfully.