



Version 1.0

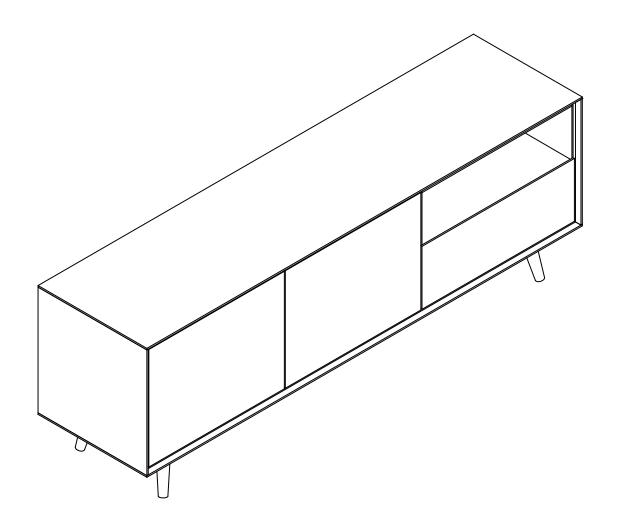

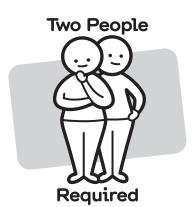

STOCKHOLM LOWLINE MEDIUM 1600MM

Recommended weight capacity: 10kgs/shelf.



WARNING: ENSURE THE WALL STRAP IS ATTACHED TO AVOID SERIOUS INJURY.

To avoid any serious or fatal injury, this product has been supplied with a wall strap to prevent toppling. We strongly recommend that this product is permanently fixed to the wall or other suitable surface. Connecting attachments for your wall are not included since different surface materials require different attachments. Please seek professional advice if you are in doubt of what wall connections to use.

Looks like you've found your Fantastic!

We're thrilled you've chosen Fantastic Furniture to help create a home you'll love



Love it? Share it!

Fantastic buy! Share how it looks at home for your chance to win a \$250 Fantastic Furniture Gift Card!

fantasticfurniture




Assembly Checklist




Read through the instructions carefully before you begin.



Make sure you have all the required tools. Never use power tools unless instructed.

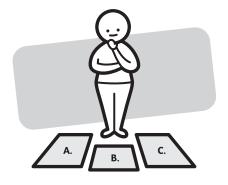

Identify and lay out all of the components before you begin assembly.

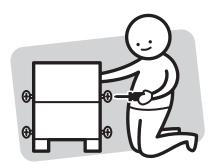

Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information

- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ! The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk beds should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.

What you need to assemble the product







Other tools you need:
Phillips head screwdriver;


Parts list


Top Panel (P1); Left Side Panel (P2); Right Side Panel (P3); Bottom Panel (P4); 2 x Shelf Panels (P5); Shelf Panel (P6): Shelf Panel (P7); Shelf Panel (P8); 2 x Back Panels (P9); Back Panel (P10); Rail (P11); Shelf Panel (P12); Door (P13); Door (P14); 4 x Legs (P15); 2 x Support Legs (P16); Drawer Fronts (P17); Drawer Backs (P18); Left Drawer Sides (P19); Right Drawer Sides (P20); Drawer Bases (P21);

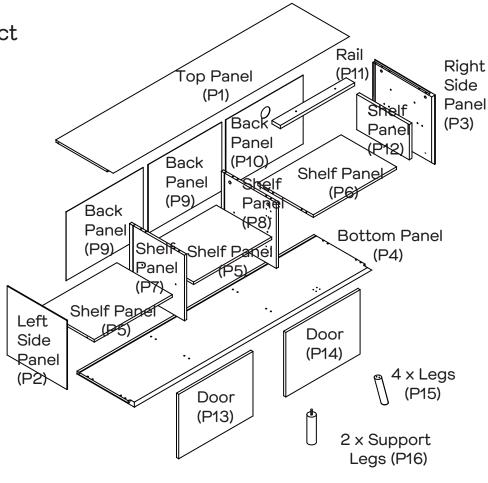

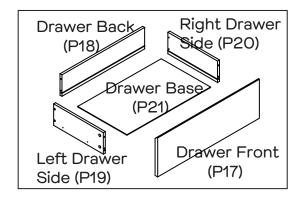


Hardware pack

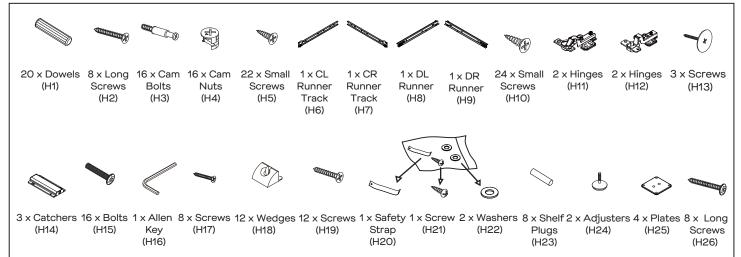

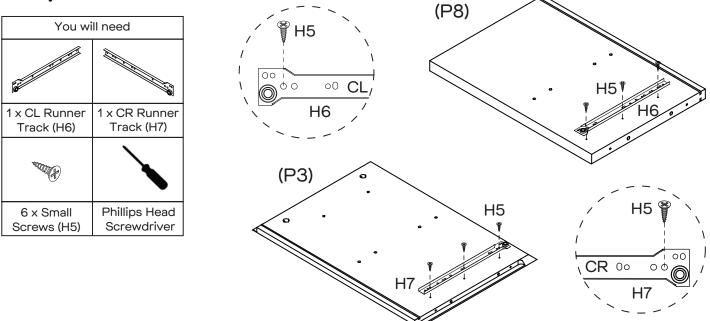


Attach 1 x CL Runner Track (H6) to Shelf Panel (P8) with 3 x Small Screws (H5). Attach 1 x CR Runner Track (H7) to Right Side Panel (P3) with 3 x Small Screws (H5). Tighten with a Phillips Head Screwdriver.

Step 2

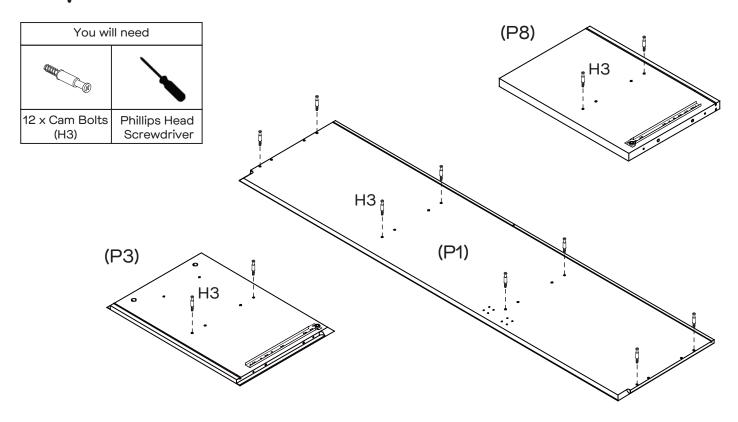


Attach 12 x Cam Bolts (H3) to Top Panel (P1), Right Side Panel (P3) and Shelf Panel (P8). Tighten with a Phillips Head Screwdriver.



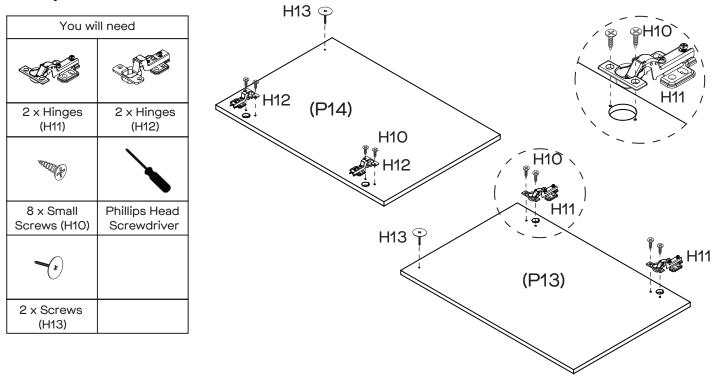

Attach 2 x Hinges (H11,H12) and 2 x Screws (H13) to Doors (P13,P14), securing with 8 x Small Screws (H10). Tighten with a Phillips Head Screwdriver.


Step 4

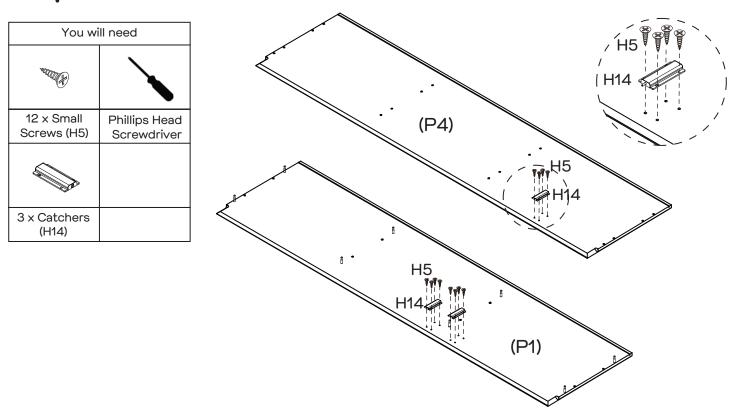


Attach 3 x Catchers (H14) to Top Panel (P1), Bottom Panel (P4) secure with 12 x Small Screws (H5). Tighten with a Phillips head screwdriver.






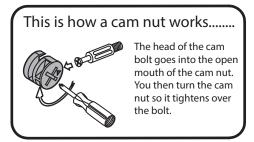


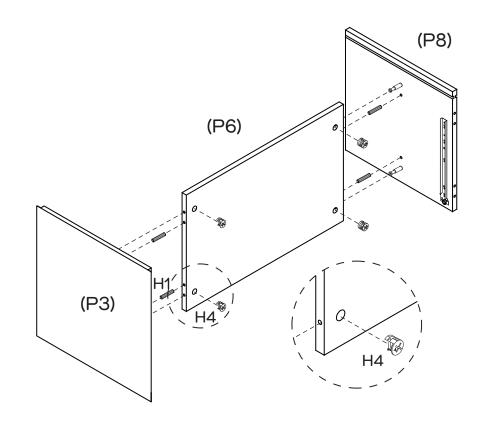

Attach Right Side Panel (P3) and Shelf Panel (P8) to Shelf Panel (P6) with 4×1 Dowels (H1) and secure with 4×1 Cam Nuts (H4). Tighten with a Phillips Head Screwdriver.


Step 6

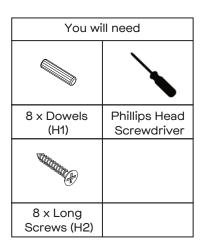


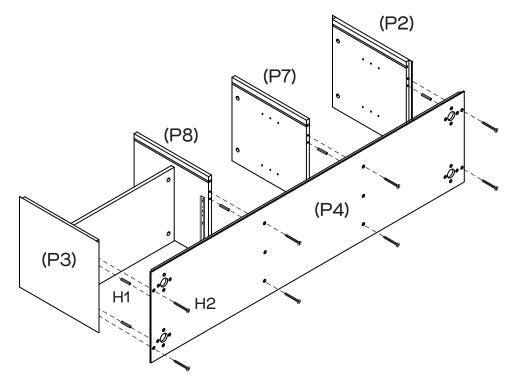

Attach Bottom Panel (P4) to Left Side Panel (P2), Right Side Panel (P3), Shelf Panel (P7) and Shelf Panel (P8) with 8 x Dowels (H1) and secure with 8 x Long Screws (H2). Tighten with a Phillips Head Screwdriver.




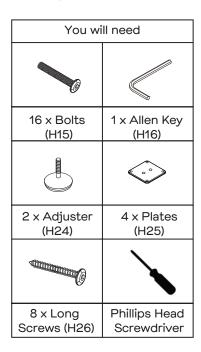

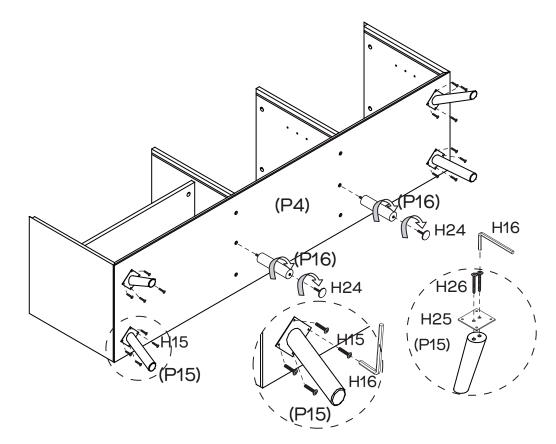

Attach 4 x Plates (H25) and 4 x Legs (P15) secure with 8 x Long Screws (H26), attach 4 x Legs (P15) and 2 x Support Legs (P16) to Bottom Panel (P4) and secure with 16 x Bolts (H15). Tighten with an Allen Key (H16). Insert the 2 x Adjusters (H24) into the middle Support Legs (P16).


Step 8

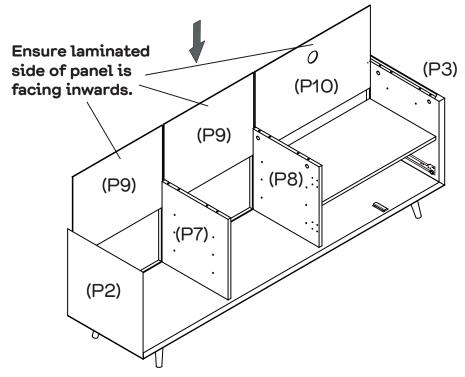


Slide remaining Back Panels (P9,P10) into the groovesof Left Side Panel (P2), Shelf Panel (P7), Shelf Panel (P8) and Right Side Panel (P3).






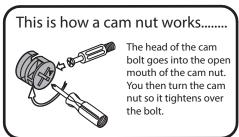

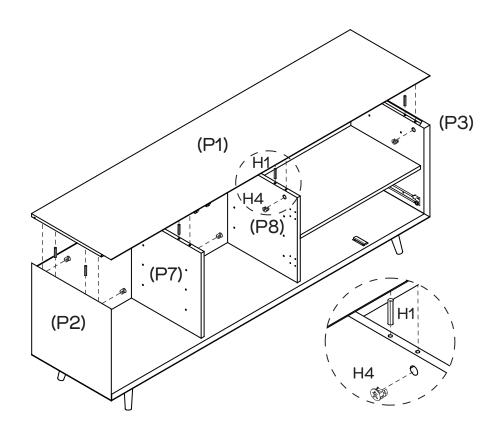


Attach Top Panel (P1) to Left Side Panel (P2), Right Side Panel (P3), Shelf Panel (P7) and Shelf Panel (P8) with 8 x Dowels (H1) and secure with 8 x Cam Nuts (H4). Tighten with a Phillips Head Screwdriver.



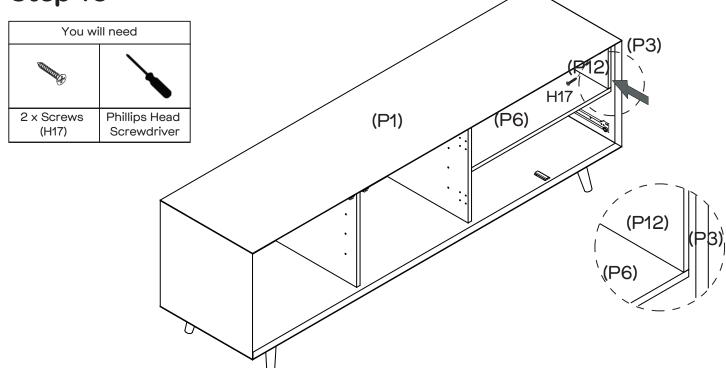


Press Shelf Panel (P12) against Right Side Panel (P3), then slide Shelf Panel (P12) between Shelf Panel (P6) and Top Panel (P1) to form the unit as shown. Attach Shelf Panel (P12) to Right Side Panel (P3) with 2 x Screws (H17). Tighten with a Phillips Head Screwdriver.



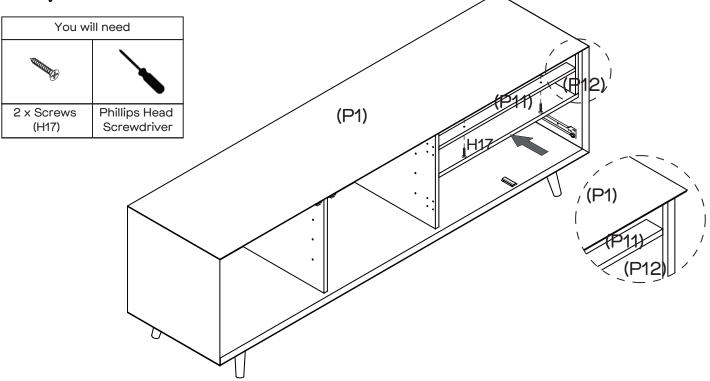

Press Rail (P11) against Top Panel (P1), then slide Rail (P11) between Shelf Panel (P12) and Top Panel (P1) to form the unit as shown. Attach Rail (P11) to Top Panel (P1) with 2 x Screws (H17). Tighten with a Phillips Head Screwdriver.


Step 12

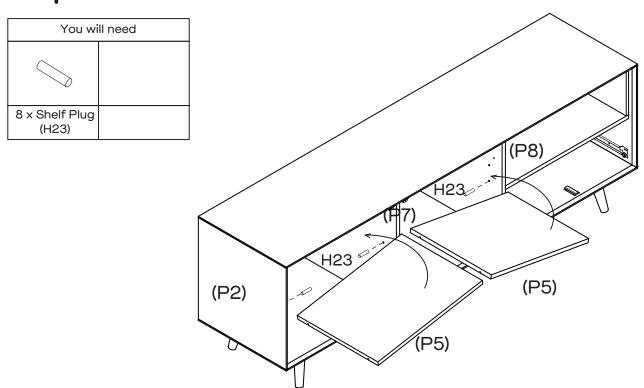

Insert 8 \times Shelf Plugs (H23) into the end cavities of the cabinet as shown. Insert the 2 \times Shelf Panels (P5) and balance on top of the plugs.






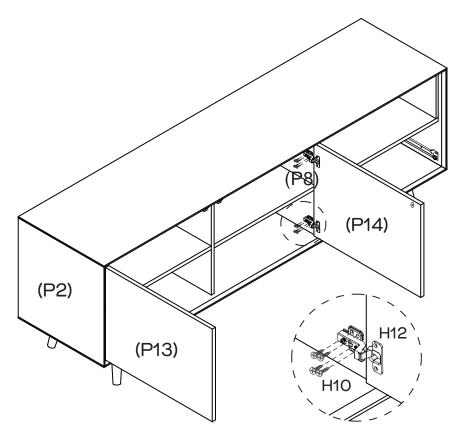

Secure Door Panels (P13, P14) to the main unit by attaching the other end of the 2 x Hinges (H11,H12) with 16 x Small Screws (H10) as shown. Tighten with a Phillips Head Screwdriver.


Step 14



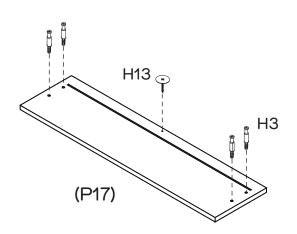


Attach $4 \times \text{Cam}$ Bolts (H3) and $1 \times \text{Screw}$ (H13) to Drawer Front (P17) as shown. Tighten with a Phillips Head Screwdriver.



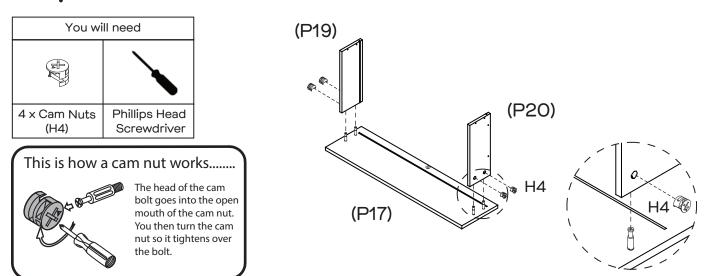


Attach Drawer Sides (P19, P20) to Drawer Front (P17). Insert 4 x Cam Nuts (H4) into the holes of Drawer Sides (P19, P20). Make sure the opening on cam nuts point towards the incoming cam bolts. Tighten with a Phillips Head Screwdriver.


Step 16

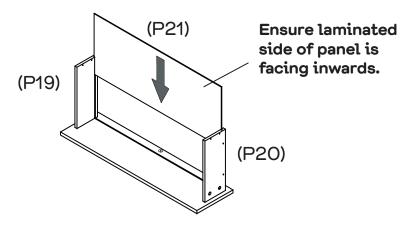

Slide the Drawer Base (P21) into the grooves between drawer sides as shown.

Step 17

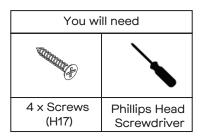


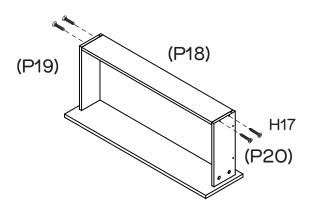

Attach Drawer Back (P18) to Drawer Sides (P19, P20) with 4×1 Screws (H17), make sure that the groove lines up the whole way around the drawer. Tighten with a Phillips Head Screwdriver.






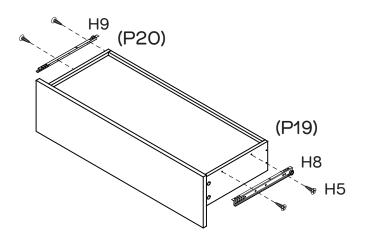


Attach 1 x DL Runner (H8) to Left Drawer Side (P19) and 1 x DR Runner (H9) to Right Drawer Side (P20) with $4 \times \text{Small Screws}$ (H5) using a Phillips Head Screwdriver.

Step 19

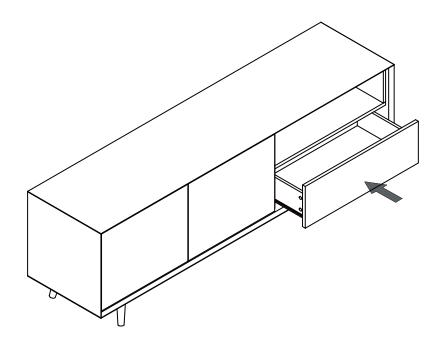



If the doors and drawer fronts are not flush or can't be bounced. Please adjust the head of Catcher accordingly.

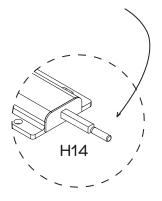

Insert the assembled drawers into the corresponding compartments as shown. Ensure the drawers slide easily along the rails.



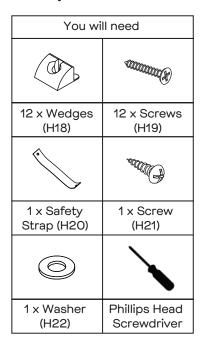

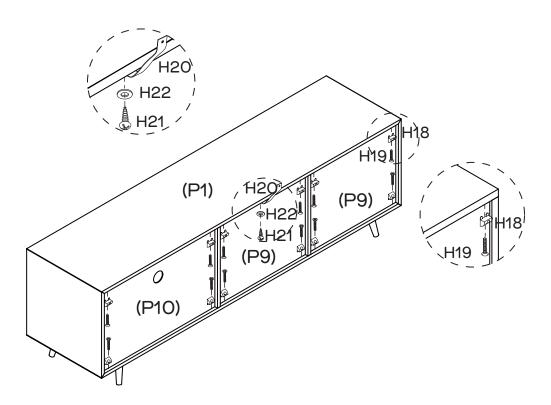

Use 1 \times Screw (H21) and 1 \times Washer (H22) to connect 1 \times Safety Strap (H20) on Top Panel (P1). Secure Back Panels (P9,P10) in place with 12 \times Wedges (H18) using 12 \times Screws (H19). Tighten with a Phillips Head Screwdriver.

Step 21




Screw and Wall Plug are not provided. Please use appropriate fixtures for your wall. trades person on how to attach this safety strap to your specific wall.

H22
Wall
Screw

Seek advice from a qualified

Move the entertainment unit to the final position, and attach the safety strap to the wall securely. Make sure it is firmly attached and snug fit.



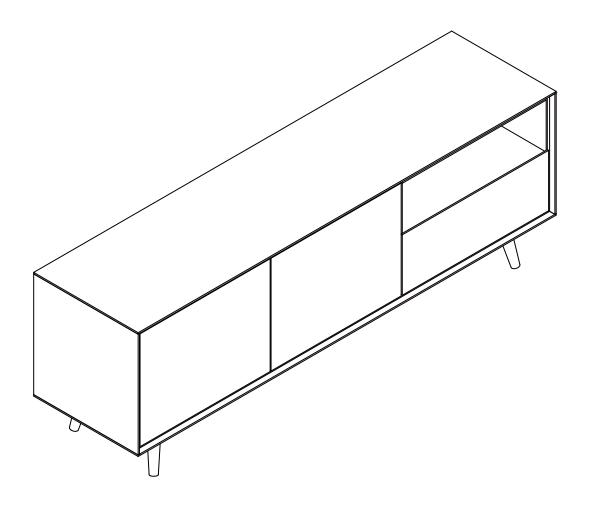

Job Complete!

In the interest of our environment please dispose of all packaging thoughtfully.