

Version 1.0









Assembly checklist





Read through the instructions carefully before you begin.





Make sure you have all the required tools. Never use power tools unless instructed.




before you begin assembly.

Identify and lay out all of the components Unless instructed, do not fully tighten screws until the item is fully assembled.

Useful Information


- ! Never use power tools unless specifically instructed. They can damage your components or hardware if used incorrectly.
- ¹ The most common mistakes made during assembly are using the wrong hardware or getting components back to front.
- ! Always use a soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface of the product.
- ! Bulky items such as wardrobes and bunk bed should be assembled in the room they will be used in as they may not fit through a door once assembled.
- ! Never use any glue until you are certain that the parts belong together.
- ! Periodically check and re-tighten all fasteners. Check the product care label or website for product care instructions.
- ! If you are having any difficulties assembling your product, missing any hardware or components please visit our website Help Centre for further assistance.
- ! Please see page 2 for any safety requirements or weight restrictions.



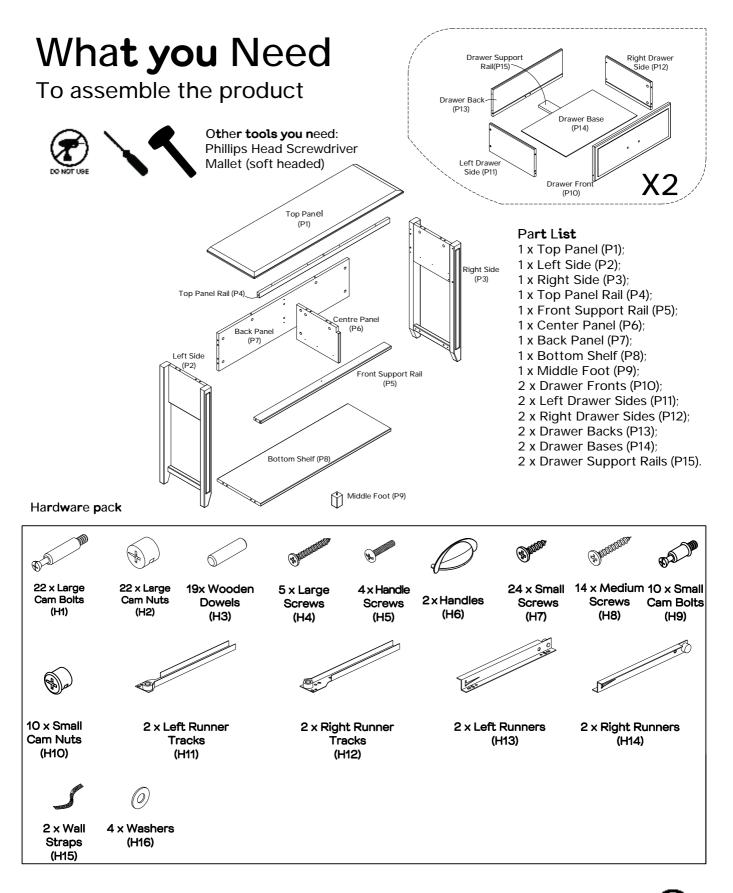


Fontastic Furniture



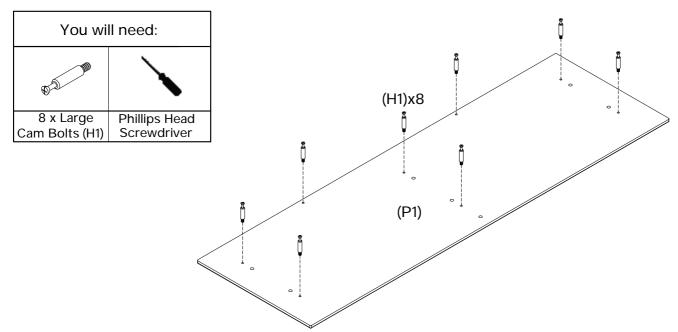


Attach 8 x large cam bolts (H1) to top panel (P1) using a phillips head screwdriver.

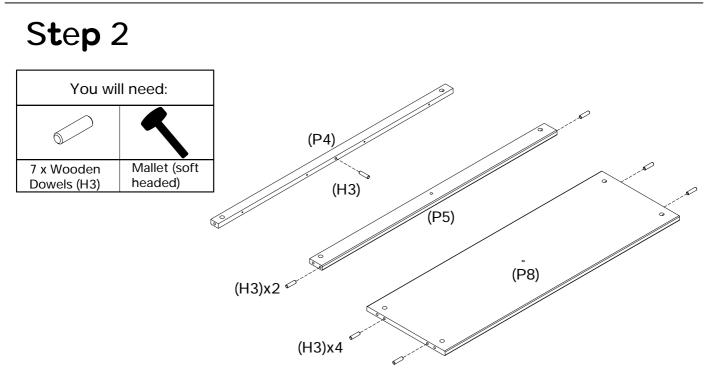


Insert 7 x wooden dowels (H3) into top panel rail (P4), front support rail (P5) and bottom shelf (P8) as shown.

Fantastic Furniture Page 5

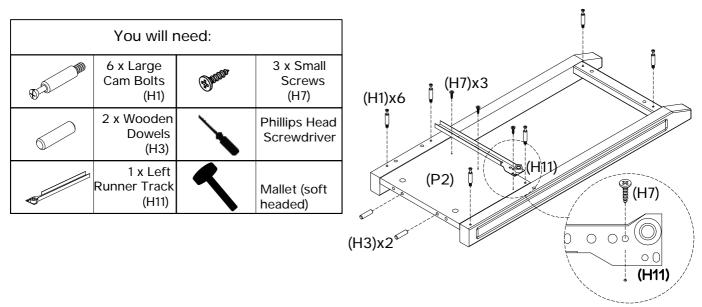

Attach 6 x large cam bolts (H1) to left side (P2) using a phillips head screwdriver. Insert 2 x wooden dowels (H3) into left side (P2).

Attach 1 x left runner track (H11) to left side (P2) using 3 x small screws (H7), tightening with a phillips head screwdriver. Ensure the screws are inserted into the holes shown in the image above.

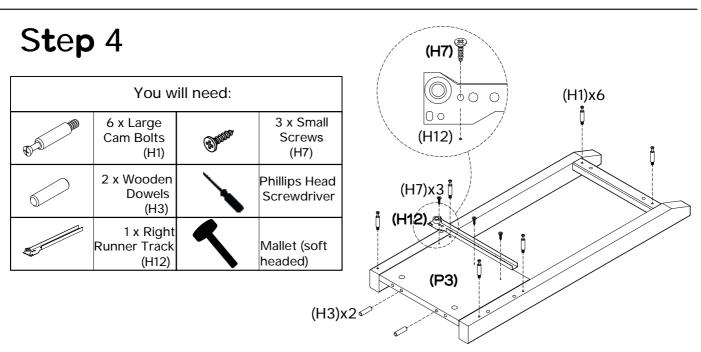

Attach 6 x large cam bolts (H1) to right side (P3) using a phillips head screwdriver. Insert 2 x wooden dowels (H3) into right side (P3).

Attach 1 x right runner track (H12) to right side (P3) using 3 x small screws (H7), tightening with a phillips head screwdriver. Ensure the screws are inserted into the holes shown in the image above.


fantasticfurniture.com.au

Furniture Page 6

Fantastic

Attach middle foot (P9) to bottom shelf (P8) by turning clockwise to fully lock.

Step 6

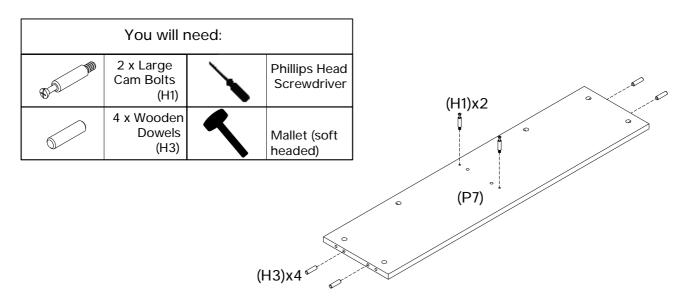


Attach 2 x large cam bolts (H1) to back panel (P7) using a phillips head screwdriver. Insert 4 x wooden dowels (H3) into back panel.



Note: the left side of the centre panel (P6) has cam nut holes at the top.


(P6)

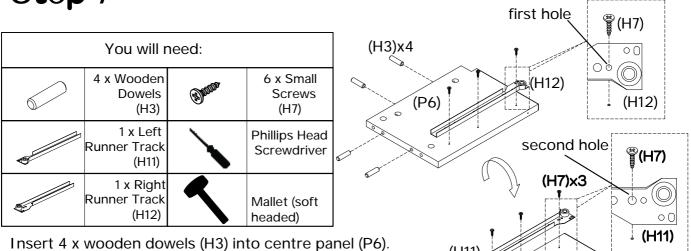

Insert 4 x wooden dowels (H3) into centre panel (P6). Attach 1 x right runner track (H12) to the left side of the centre panel (P6) using 3 x small screws (H7), tightening with a phillips head screwdriver.


Turn over the centre panel (P6) and attach 1 x left runner track (H11) using 3 x small screws (H7), tightening with a phillips head screwdriver.

Ensure the screws are inserted through the holes shown in the image above.

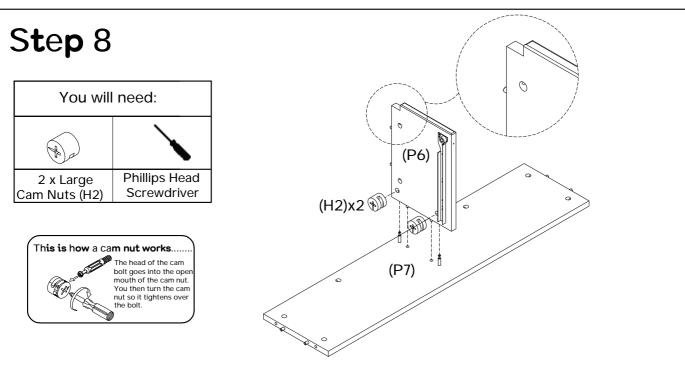


Attach centre panel (P6) to back panel (P7). Insert 2 x large cam nuts (H2) into the centre panel (P6). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards the incoming cam bolt. Turn clockwise to lock.

Fontastic Furniture Page 8

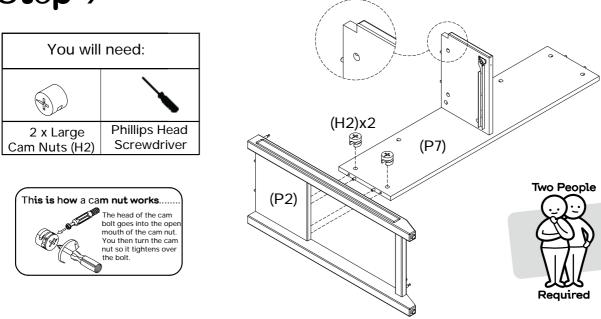


With assistance, attach back panel (P7) to left side (P2). Insert 2 x large cam nuts (H2) into back panel (P7). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards the incoming cam bolt. Turn clockwise to lock.

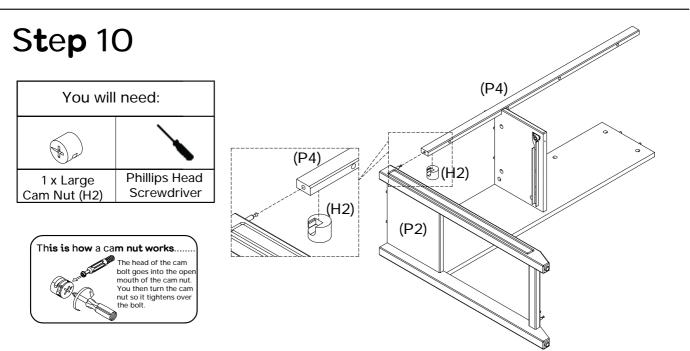


Attach top panel rail (P4) to left side (P2), ensuring the side with cam nut holes faces inwards. Insert 1 x large cam nut (H2) into top panel rail (P4). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards the incoming cam bolt. Turn clockwise to lock.



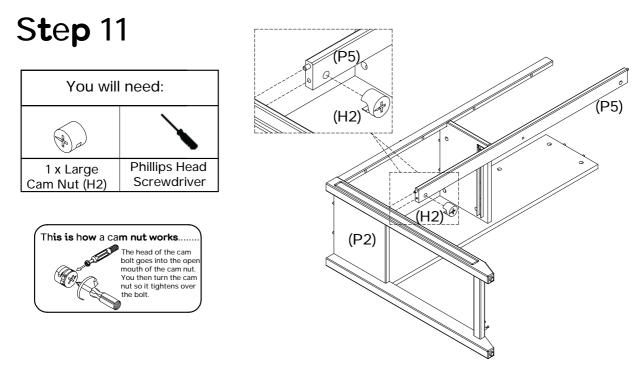

Attach front support rail (P5) to left side, ensuring the side with cam nut holes faces down. Insert 1 x large cam nut (H2) into support rail (P5). Using a phillips head screwdriver, rotate the cam nut so the arrow points towards the incoming cam bolt. Turn clockwise to lock.

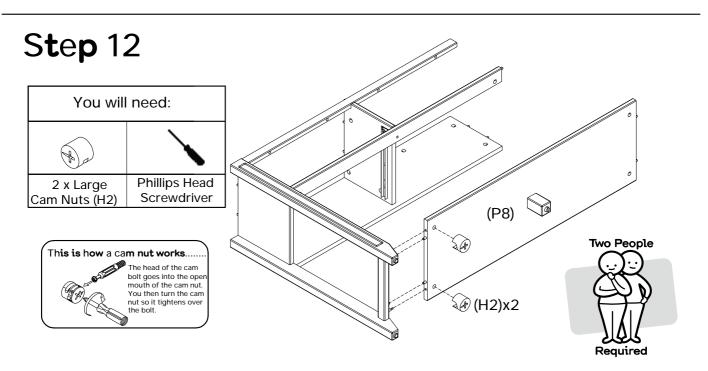


With assistance, attach bottom shelf (P8) to left side (P2). Insert 2 x large cam nuts (H2) into the bottom shelf (P8). Using a phillips head screwdriver, rotate the cam nut so the arrow points towards the incoming cam bolts. Turn clockwise to lock.

fantasticfurniture.com.au

Page 10


antastic

Furniture

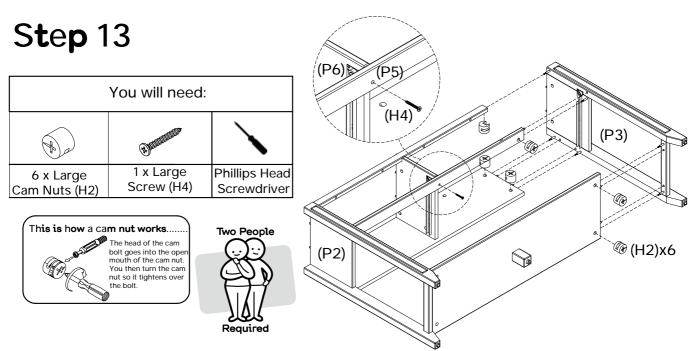

With assistance, attach right side (P3) to the assembled unit. Insert 6 x large cam nuts (H2) into the top panel rail (P4), front support rail (P5) and bottom shelf (P8). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards the incoming cam bolts. Turn clockwise to lock.

Attach front support rail (P5) to centre panel (P6) using 1 x large screw (H4), tightening with a phillips head screwdriver.

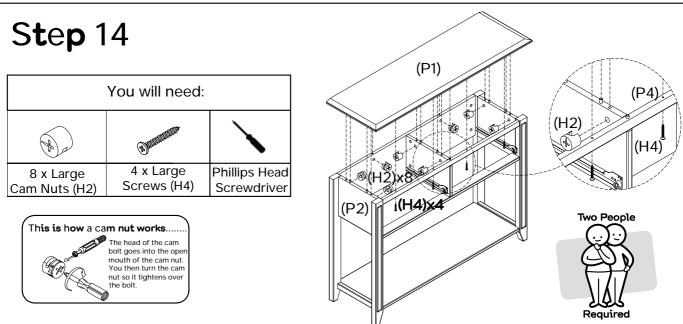


With assistance, carefully turn the assembled unit upright.


Attach top panel (P1) to the unit as shown. Insert 8 x large cam nuts (H2) into the left and right sides (P2, P3), back panel (P7) and centre panel (P6). Using a phillips head screwdriver, rotate the cam nut so the arrow points towards incoming cam bolt. Turn clockwise to lock. Attach top panel rail (P4) to top panel (P1) using 4 x large screws (H4), tightening with a phillips head screwdriver.





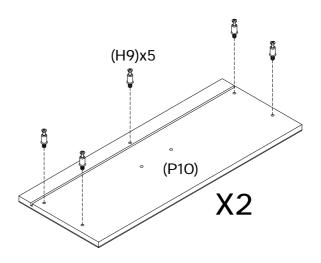


Attach 5 x small cam bolts (H9) to drawer front (P10) using a phillips head screwdriver. Repeat this process for the other drawer front.

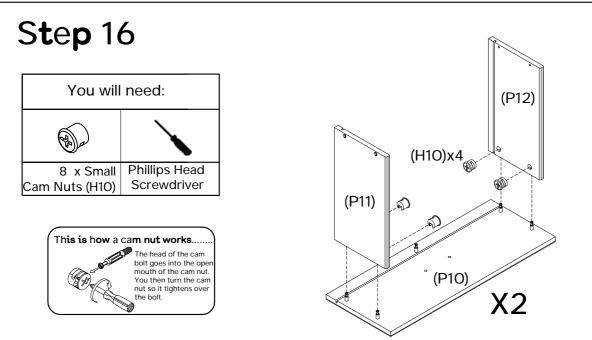


Attach 1 x left drawer side (P11) and 1 x right drawer side (P12) to drawer front, ensuring the grooves on all panels align. Insert 4 x small cam nuts (H10) into drawer sides (P11, P12). Using a phillips head screwdriver, rotate the cam nuts so the arrow points towards incoming cam bolt. Turn clockwise to lock. Repeat this process for the other drawer sides (P11, P12).



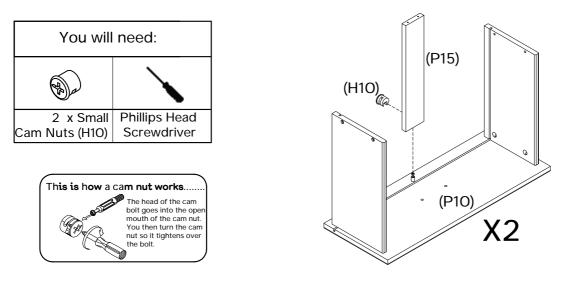

Attach 1 x drawer support rail (P15) to drawer front (P10), ensuring the side with the cam nut hole faces outwards. Insert 1 x small cam nut (H10) into drawer support rail (P15). Using a phillips head screwdriver, rotate the cam nut so the arrow points towards incoming cam bolt. Turn clockwise to lock.


Repeat this process for the other drawer support rail (P15).

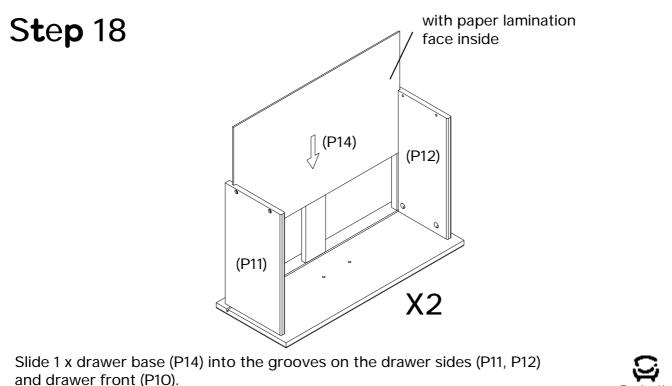

Repeat this process for the other drawer base (P14).






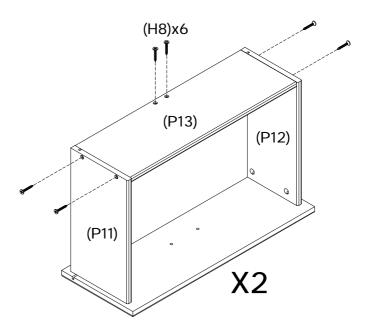


Attach 1 x drawer back panel (P13) to drawer sides (P11, P12) and drawer support rail (P15) using 6 x medium screws(H8), tightening with a phillips head screwdriver. Repeat this process for the other drawer back panel (P13).

Step 20

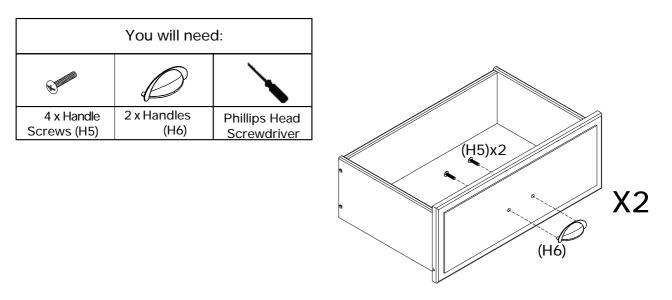



Attach 1 x handle (H6) to assembled drawer using 2 x handle screws (H5), tightening using a phillips head screwdriver. Repeat this process for the other handle (H6).



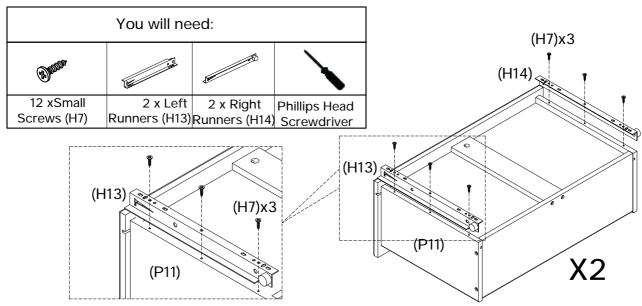


Attach 1 x left runner (H13) and 1 x right runner (H14) to the bottom of drawer sides (P11, P12), ensuring the stoppers are at the back of the assembled drawer, using 6 x small screws (H7) and tightening with a phillips head screwdriver. Repeat this process for the other set of runners (H13, H14).

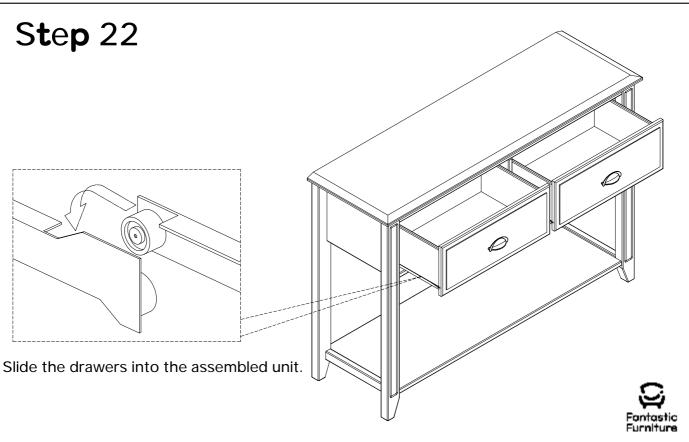

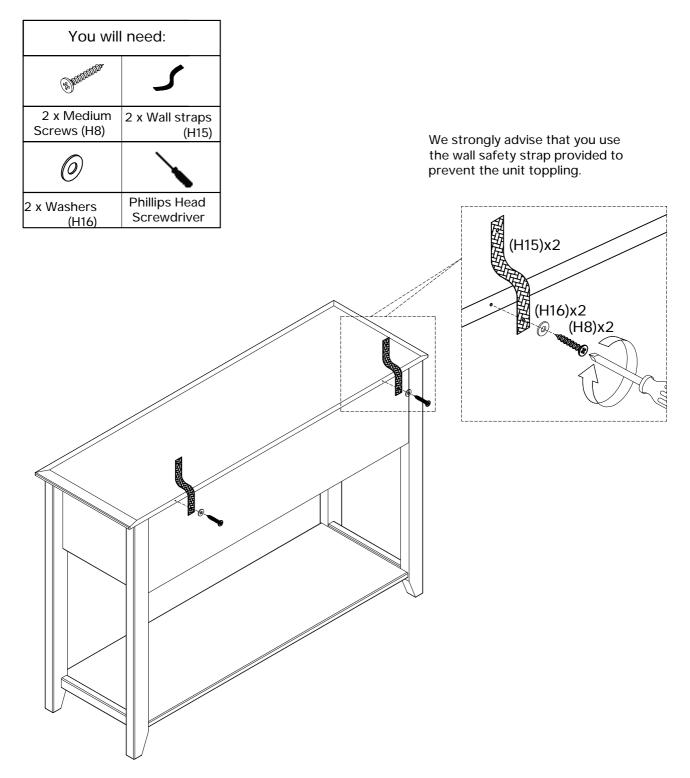

Attach 2 x wall straps (H15) to the back of the top panel (P1) using 2 x medium screws (H8) and 2 x washers (H16), tightening using a phillips head screwdriver.



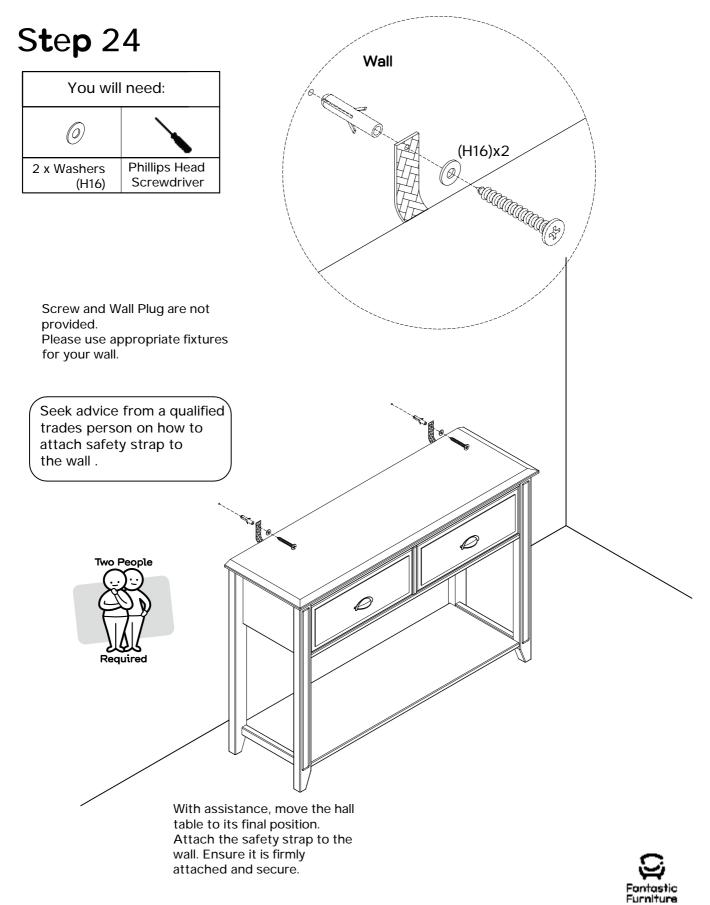

fantasticfurniture.com.au

Page 17



Job Complete!

In the interest of our environment please dispose of all packing thoughtfully.

